


Hisense

CanvasTV™

QUICK SETUP GUIDE

Before using the TV, please read this guide thoroughly and retain it for future reference.

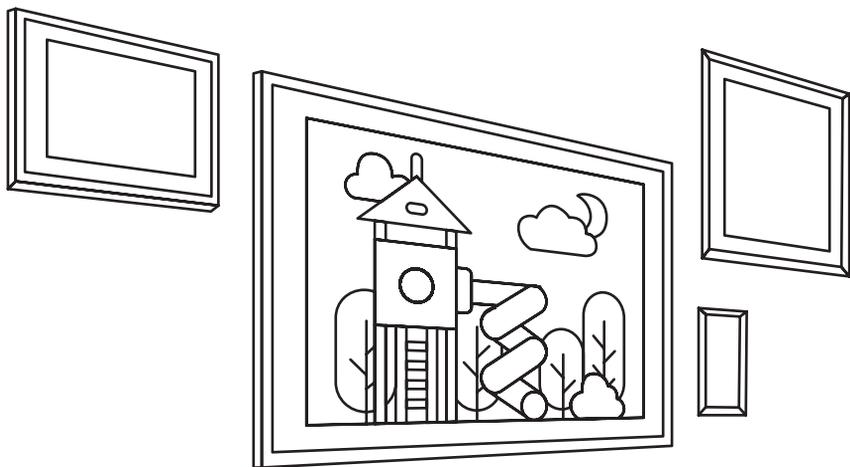

20205374

English

Congratulations on the purchase of your Hisense TV! If you would like to know 'all things Hisense', contact us using the support info:

The model and serial number of the TV is located on the back and/or on one side of the TV. We recommend that you record this if you ever need service.

Country	U.S.A	CANADA	MEXICO
Customer Care Center	<ul style="list-style-type: none"> • Phone: 1-888-935-8880 • Hours of Operation: Monday - Friday: 9 AM to 9 PM EST Saturday - Sunday: 9 AM to 6 PM EST • Service Email: Service@hisense-usa.com <p>USA: Hisense USA Corporation 105 Satellite BLVD Suite I, Suwanee, GA 30024</p>	<ul style="list-style-type: none"> • Phone: 1-855-344-7367 • Hours of Operation: Monday - Friday: 8 AM to 8 PM EST Saturday - Sunday: 9 AM to 6 PM EST, Federal holidays excluded • Service Email: canadasupport@hisense.com <p>CANADA: Hisense Canada Co., Ltd 2550 Meadowvale Boulevard, Unit 1 Mississauga, ON, Canada L5N 8C2</p>	<ul style="list-style-type: none"> • Phone: 800-008-8880 • Hours of Operation: Monday - Friday: 9 AM to 9 PM Saturday: 9 AM to 3 PM • Service Email: mxservicio@hisense.com <p>MEXICO IMPORTER: Hisense Mexico S. de R.L. de C.V. Blvd. Miguel de Cervantes Saavedra No 301 Torre Norte Piso 2, Col. Ampliación Granada Miguel Hidalgo, Ciudad de México, C.P. 11520</p>
Hisense Support Page	http://www.hisense-usa.com/support/ 	http://www.hisense-canada.com/support/ 	https://hisense.com.mx/support/  *Scan to download user manual
Register your TV	http://www.hisense-usa.com/support/register 	http://www.hisense-canada.com/support/productReg.asp 	https://hisense.com.mx/support/register 

Disclaimer: This Quick Setup Guide is intended as a general guideline to help you set up your TV. Images throughout this document are for illustrative purposes only and may differ from the actual product.

Disclaimer: Subscriptions or other payments may be required to access content through some applications. Some or all of the included or downloaded application services in this Hisense device may not function depending on the Internet connection, local limitations of included applications or other reasons outside of Hisense's control. HISENSE EXPRESSLY DISCLAIMS RESPONSIBILITY FOR ANY APPLICATION SERVICE FROM FUNCTIONING AT ANY TIME, FOR CONTENT IN ANY APPLICATION SERVICE, FOR DISRUPTIONS OF SERVICE, LOCAL OR REGIONAL LIMITATIONS, WARRANTIES OF TITLE, NO INFRINGEMENT, AND FOR IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. By purchasing this device, you accept such Disclaimer without any claim on Hisense at any time.

Find what you want

This TV is equipped with this quick setup guide and embedded E-Manual (⚙️ > **Settings > System > Advanced System > E-Manual**).

On the website (www.hisense.com), you can get the User Manual.

E-Manual support functions	
 Search Find the help you are looking for.	 QR Code Scan to open the E-Manual on your mobile device.

NOTE: If you encountered difficulty when setting up your TV, we suggest you refer to the troubleshooting tips in the User Manual or the E-Manual.

This Quick Setup Guide supports the following models:

50S7N / 50S75N / 50S7SG / 50S7SGD / 50S70SG / 50S75SG / 50S75SGB / 50S75SGC / 55S7N / 55S7SG / 55S7SGD / 55S70SG / 55S75SG / 55S75SGB / 55S75SGC / 65S7N / 65S7SG / 65S7SGD / 65S70SG / 65S75SG / 65S75SGB / 65S75SGC

What's in the box

Your Hisense TV comes with the following items:


- TV
- power cord
- remote control
- 2 base stands
- wall mount assembly
- 2 frame assemblies
- Quick Setup Guide (this document)
- 1 set of AA or AAA (1.5Vcc) batteries
- Important Safety Information and Warranty Card
- 4 screws (attach the TV stand)
- 8 cable clamps

NOTE:

- The accessories may be different from the list above due to different models, countries/ regions, please refer to the actual accessory bag.
- The power cord included with this TV is not rated for in-wall use. It is designed for standard use and should not be installed within walls.

IMPORTANT:

To prevent accidentally discarding items that came with your TV, be sure to **check ALL of the foam** in the carton box.

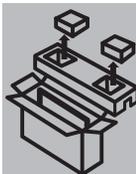

- Please check foam for accessories before discarding.
- Veuillez vérifier la mousse pour qu'il n'y ait pas d'accessoires avant de la jeter.
- Antes de desechar la espuma, asegúrese de retirar todos los accesorios.

Disclaimer: This Quick Setup Guide is intended as a general guideline to help you set up your TV. Images throughout this document are for illustrative purposes only and may differ from the actual product.

Getting started

Step 1. Attach stand, mount or frame

Before you start using your TV, attach your TV stand or mount it on the wall.


CAUTION:

- ⚠ Disconnect the AC power cord before installing a stand or a wall mount bracket.
- ⚠ The LED display on your TV is fragile. Make sure the TV screen is not scratched or damaged by hard objects or from pressure.
- ⚠ After the stand or mount installation is completed, make sure the TV is steady on a table or firmly attached to a wall mount, before removing all protective film, if any. If the protective film was not removed, the installation of the frame will be affected.
- ⚠ Before installing the frame, please install the TV stand or the wall mount.

Attach the TV stand

To attach the TV stands to your TV:

1. Carefully place your TV face down on a clean, soft and flat surface.
2. Insert the TV base stands into the TV back cover.
3. **Use the screws provided to secure each base stand tightly.**

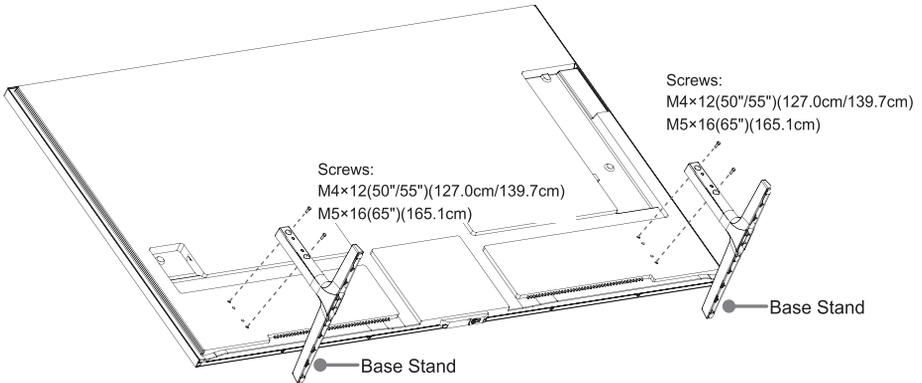

Attach cable clamps and manage cable

1. Tear off the sticker at the back of cable clamps, paste cable clamps into the holes in the cable raceway. (See Fig.1)

NOTE:

- Make sure the open-ended part of the cable clamp is positioned at the middle of cable raceway
 - The picture is only for reference, please refer to the actual product.
2. Manage cables and power cord with cable clamps. (See Fig.2)

CAUTION:

- ⚠ **Before installing the wall mount on the wall, make sure that you have connected and managed power cord and all cables you need.**

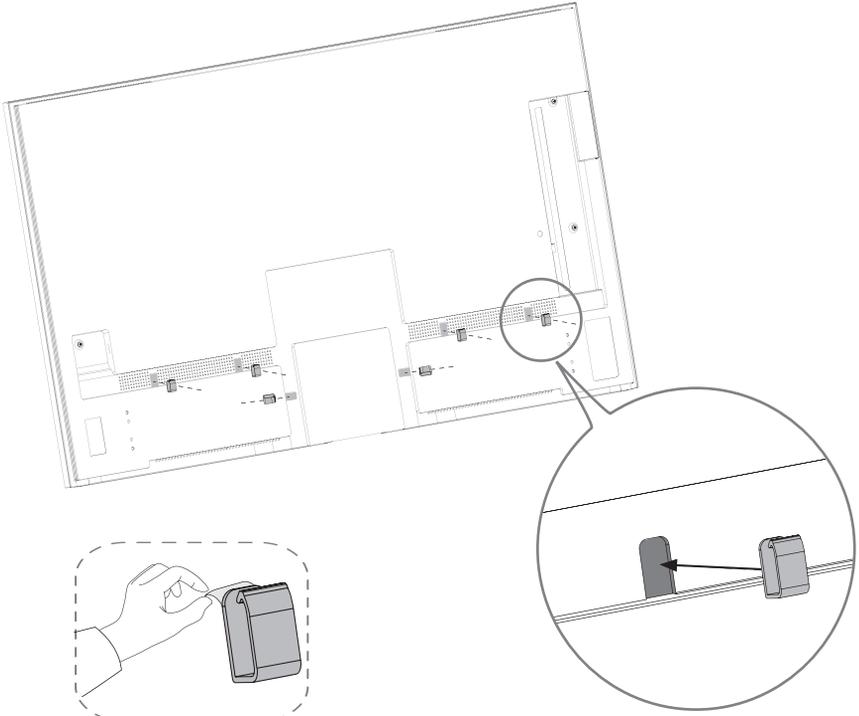


Fig.1

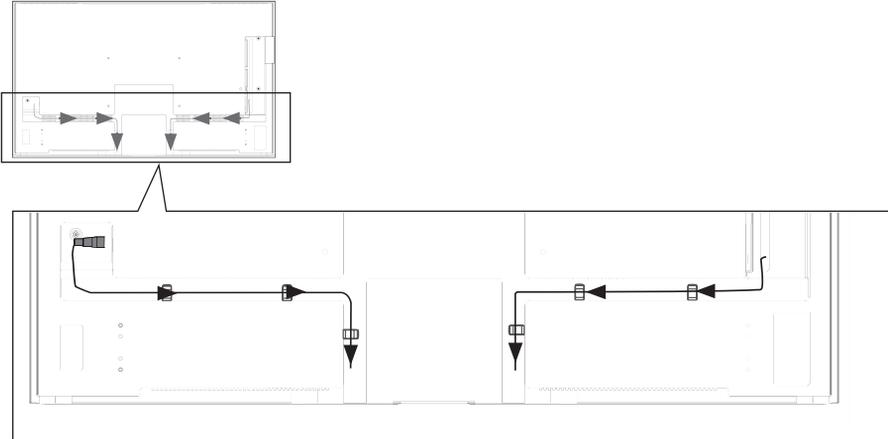


Fig.2


Attach the wall mount bracket (included)

Follow instructions provided with the wall mount bracket. If it is not correctly mounted, the TV may fall and cause property damage or personal injury.

NOTE: Before wall-mount installation, if there are screws in the bracket holes on the TV back cover, please remove them first. The removed screws cannot be used for attaching the wall mount.

To attach the wall mount bracket:


Wall mounting solution I : Use bracket holes A1, A2 and use standard wall bracket. The screws and wall bracket are in the wall mount assembly.

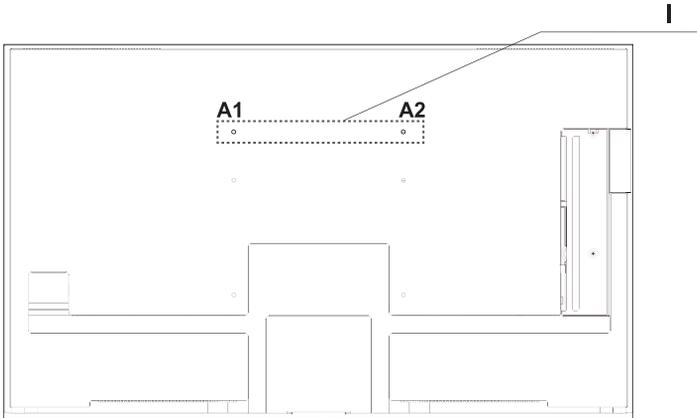

Attach the wall mount bracket (not included)


NOTE: Before wall-mount installation, if there are screws in the bracket holes on the TV back cover, please remove them first. The removed screws cannot be used for attaching the wall mount.

Wall mounting solution II : Use bracket holes B1, B2, C1, C2. It is compatible with 300×200 (50"/55"(127.0cm/139.7cm)) / 300×400(65"(165.1cm)) VESA wall mount, M6 screws, the screw length is 9.5 - 11.5 mm.

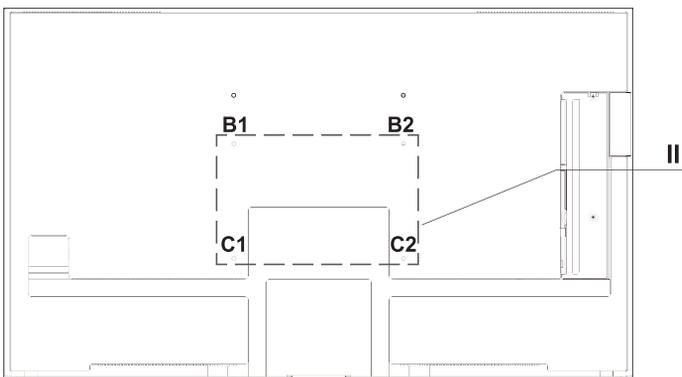


CAUTION:

- Follow instructions provided with the wall mount bracket. If it is not correctly mounted, the TV may fall and cause property damage or personal injury.
- To prevent internal damage to the TV and to ensure it is mounted securely, be sure to use fixing screws (not included) that are 9.5 - 11.5 mm in length when measured from the attaching surface of the rear cover.

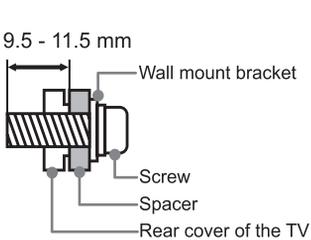

Wall mount hole pattern(mm)	300 × 200 (Wall mounting solution II)50"/55"(127.0cm/139.7cm) 300 × 400 (Wall mounting solution II)65"(165.1cm)
Wall mount screw size	M6
Number of wall mount screw	4

- We do not recommend hanging the TV on a slanted wall, and when wall mounting make sure your television remains parallel to the wall and does not lean forward.

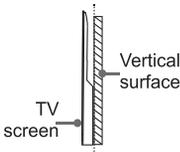

NOTE:

- If installed on a ceiling or slanted wall, or the television installed is not parallel to the wall, the television may fall and result in property damage or severe personal injury.
- If you have additional questions, please contact the wall mount manufacturer or the retailer from which you purchased the TV.
- The diameter and length of the screws differ depending on the wall mount bracket model.

Attach the frame


CAUTION:

- ⚠ Don't move the TV with the frame.
- ⚠ After installing each frame, do not strongly pull or shock it. Failing to do so may cause it fall off the TV.
- ⚠ Before installing the frame, please install the TV stand or the wall mount. If you want to remove the TV stand or the wall mount that has been installed, please remove the frames first.
- ⚠ **Before installing frames, remove the protective film first.** If the protective film was not removed, the installation of the frame will be affected.

After the TV stand or the wall mount installation, attach the frame to your TV. You can choose the frame provided in the accessories.

1. Install the upper frame.
2. Install the lower frame which is with holes.
3. Install the left and right side frames into the grooves on both sides of the upper frame, then push the bottom part of the side frames to match the lower frame. (⚠ **CAUTION: Avoid finger pinching during assembly!**)
4. Install the four plastic clips from the back of the TV.

NOTE: If you have installed the TV on the wall, two or more people are needed to lift the TV up slightly so that you can install the four plastic clips conveniently. (See Fig.3, Fig.4)

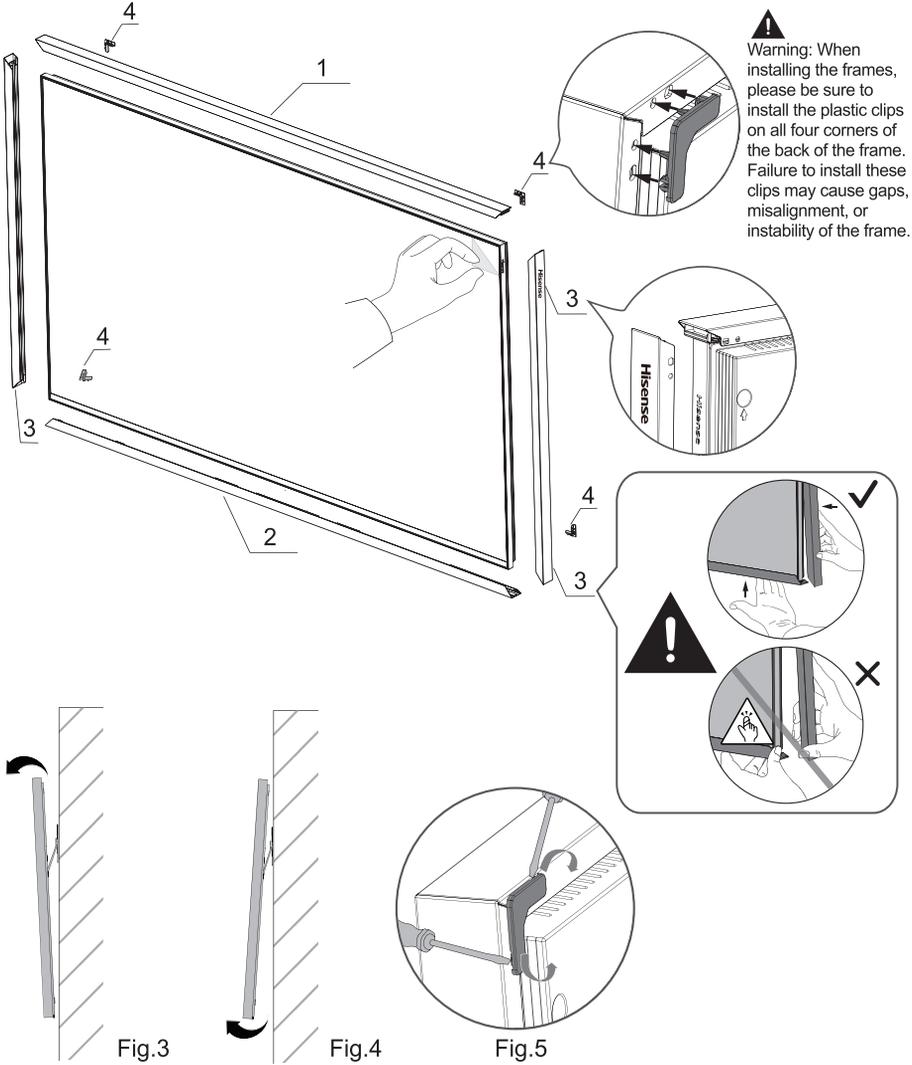

Warning: When installing the frames, please be sure to install the plastic clips on all four corners of the back of the frame. Failure to install these clips may cause gaps, misalignment, or instability of the frame.

Fig.3

Fig.4




Fig.5

NOTE:

- While removing the frames from the TV, remove them in the reverse order of the assembly. Use a flat-head screwdriver or other suitable tools to pry the plastic clips up along the groove.(See Fig.5)


Step 2. Connect devices to your TV

Check to ensure that you have connected right cables for right ports securely. Loose connections can affect the quality of the picture image and color.

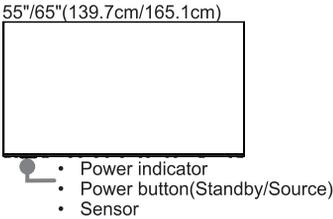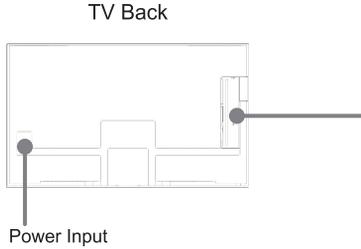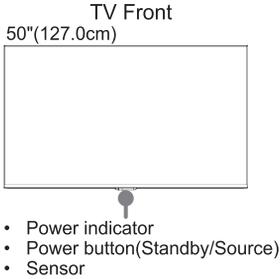

CAUTION:

- Do not block the sensor, otherwise the motion sensor and the brightness can be affected.

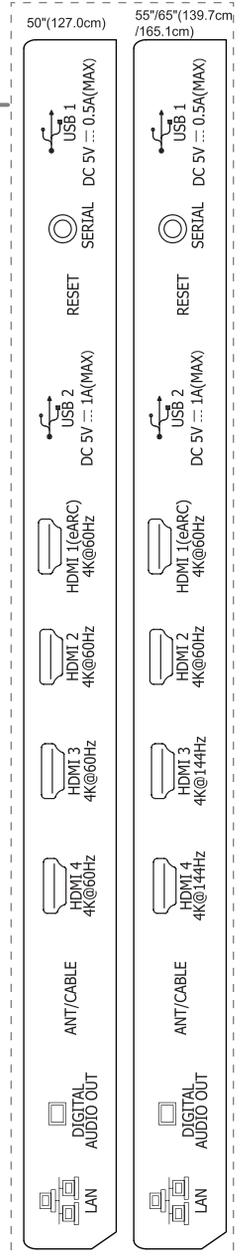

Power indicator	The light is white in standby mode.
Power button (Standby/Source)	When the TV is in standby mode, quick press the power button, and TV will be turned on. When the TV is on, quick press the power button to call up the menu: <ul style="list-style-type: none"> • Quick press to change the selection. • Long press to confirm your selection.
ANT/CABLE	Connect an outdoor VHF/UHF antenna or cable.
HDMI	Connect a High Definition Multimedia Interface (HDMI) cable from an external device.
RESET	Power off / restart (quick press) Reset your TV back to the factory setting (long press for 5 seconds)
SERIAL	Connect the serial cable to PC. You can input serial command on PC to control the TV, such as turn on/off the TV, select an input source or adjust the OSD menu, etc.
USB	Connect a USB device for browsing photos, music and movies. The rate of speed of USB 3.0 port 10 times faster than the USB 2.0 port. NOTE: You can still plug a USB 2.0 device into a USB 3.0 port; however, the rate of speed will not be as fast. USB 3.0 devices are also backwards compatible with USB 2.0 ports.
LAN	Connect an Ethernet cable to access a network or the Internet. The TV also has a wireless connectivity feature.
DIGITAL AUDIO OUT	Connect an optical cable from an external digital audio system.

Step 3. Get your remote ready

The following table shows the buttons on your remote control and describes what they are for.

BUTTON	DESCRIPTION
	Power on / Enter Art Gallery / Power off when the TV in Art Gallery
	Microphone / Indicator
	Change TV input source
	Google Assistant of TV
	Accounts & Sign In or switch profile
	Access the settings (direct or through the dashboard in GTV) from any place in the system
	D-pad (up/down/left/right navigation buttons)
OK	Confirmation button
	Return to the previous place in the menu or app
	Press to display the Home screen
	Enter to Live tab in launcher/Display the Electronic Program Guide(if support)/Return to Live TV*
+ VOL -	Volume (up/down)
^ CH v	Channel (up/down)
	Press to mute or restore sound Press and hold to display Accessibility menu
MENU	Press to enter Menu
	Media content control function buttons
	Enter Channels/input numbers and special function buttons
App	Quick access buttons to applications
	Custom button to launch input or apps quickly
	Press to enter Art Gallery

Free TV / Live TV Press to enter Freeplay or Live TV

NOTE

- Buttons listed here are for reference only. Actual remote control may vary depending on model, country/region.
- * Pressing the button in different scenarios will have different responses.

Insert the batteries

1. Take off the back cover to open the battery compartment of the remote control.
2. Insert two AA or AAA (1.5Vcc) size batteries. Make sure to match the (+) and (-) ends of the batteries with the (+) and (-) ends indicated in the battery compartment.
3. Restore the battery compartment cover.

Important information about the remote and batteries

- Discard batteries in a designated disposal area. Do not throw them into a fire.
- Remove old batteries immediately to prevent them from leaking into the battery compartment.
- If you do not intend to use the remote control for a long time, then remove the batteries.
- Battery chemicals can cause a rash. If the batteries leak, clean the battery compartment with a cloth. If chemicals touch your skin then wash it immediately.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (NiCd, NiMH, etc.) batteries.
- Do not continue using the remote if it gets warm or hot.
- Call our Support Center immediately on the support website.

Remote control range information

- The remote control can work at a distance of up to 26 feet (792.5 cm) in front of the TV set.
- The remote control angle: taking the remote sensor as an apex, 6 meters away, its controlled horizontal angle is within $\pm 30^\circ$, while the vertical angle is within $\pm 15^\circ$.

Pairing the remote control

1. Pair the remote to the TV after you power it on for the first time, there will be instructions on how to pair the remote.
2. If your remote fails to pair with TV, keep the remote within 10 feet (304.8 cm) from the TV, press and hold the [] button and [] button at the same time or [**MENU**] button at least 3 seconds to start pairing.
3. If the remote pairs successfully, a confirmation will display on the screen. If it does not pair successfully, an unsuccessful message will display. Repeat step 2, or you can press [] button to select **Settings** > **Remotes & Accessories** > **Bluetooth to On**.

NOTE:

- If an unknown error occurs with the remote, it could have been caused by interference. Try to remove what's causing the interference and pair the remote again.
- If an unknown error occurs with the remote control while the battery power is normal, you can take out the batteries and press any key for 1~2 seconds, and insert them back. The remote control can work normally.
- The remote cannot be paired to the TV while the TV is in the standby mode.

Step 4. Power on the TV

Connect your power cord to the TV and plug it into a power outlet. Your TV will display a launch screen showing the Hisense logo.

Step 5. Complete the first-time setup

The first time you turn on your TV, there is a guided setup to make it easy to connect your TV to the Internet and complete the setup of your TV.

And setup is done, congratulations!

Now that you've completed the first-time setup, enjoy your TV!

Product specifications

Model Name		50S7N / 50S75N / 50S7SG / 50S7SGD / 50S70SG / 50S75SG / 50S75SGB / 50S75SGC	55S7N / 55S7SG / 55S7SGD / 55S70SG / 55S75SG / 55S75SGB / 55S75SGC
Dimension (W × H × D)	Without Stand	43.8 × 25.7 × 1.1 inches (1 113 × 652 × 29 mm)	48.5 × 28.3 × 1.2 inches (1 231 × 719 × 30 mm)
	With Stand	43.8 × 27.8 × 11.7 inches (1 113 × 707 × 298 mm)	48.5 × 30.7 × 11.7 inches (1 231 × 781 × 298 mm)
Dimension (W × H × D) (with frame)	Without Stand	44.6 × 26.1 × 1.3 inches (1 134 × 662 × 32 mm)	49.2 × 28.7 × 1.3 inches (1 250 × 728 × 34 mm)
	With Stand	44.6 × 28.2 × 11.7 inches (1 134 × 717 × 298 mm)	49.2 × 31.1 × 11.7 inches (1 250 × 791 × 298 mm)
Weight	Without Stand	29.1 lbs (13.2 kg)	31.7 lbs (14.4 kg)
	With Stand	29.8 lbs (13.5 kg)	32.0 lbs (14.5 kg)
Weight (with frame)	Without Stand	31.1 lbs (14.1 kg)	34.0 lbs (15.4 kg)
	With Stand	31.7 lbs (14.4 kg)	34.2 lbs (15.5 kg)
TV Stand Width(W × D)		34.3 × 11.7 inches (871 × 298 mm)	36.6 × 11.7 inches (930 × 298 mm)
Active Screen Size (Diagonal)		49.5 inches (125.7 cm)	54.6 inches (138.7 cm)
Audio Power		2 × 10 W + 2 × 10 W	2 × 10 W + 2 × 8 W
Power consumption		135 W	150 W
Screen Resolution		3840 × 2160	
Power Supply		100-240 V~ 50/60 Hz	
Connectivity		Built-in Wireless feature (2x2, dual band)	
Receiving Channels		VHF: 2 - 13, UHF: 14 - 69, CATV: 1 - 125 Digital Terrestrial Broadcast (8VSB): 2 - 69 Digital cable (64/256 QAM): 1 - 135	
Tuner Type		Frequency synthesized	
Receiving Systems		Analog: NTSC, PAL M/N Digital: ATSC/QAM, ISDB-T, DVB-T2(6M)	
Wireless LAN Module specifications	Frequency Range	2.4-2.4835 GHz 5.15-5.85 GHz	
	Output Power (Max.)	2.4-2.4835 GHz 17 dBm 5.15-5.25 GHz 14 dBm 5.25-5.35 GHz(DFS Band) 14 dBm 5.49-5.71 GHz(DFS/TPC Band) 14 dBm 5.725-5.85 GHz(for Non EU) 14 dBm	
	Standards	IEEE802.11 a/b/g/n/ac	
Bluetooth Module specifications	Version/Profiles	Bluetooth 5.4	
	Frequency Range	2.4-2.4835 GHz	
	Output Power (Max.)	2.4-2.4835 GHz, Class1, 6 dBm	
	Modulation Type	GFSK, π/4-DQPSK and 8-DPSK	
Operating Temperature		41 °F - 95 °F(5 °C - 35 °C)	
Operating Humidity		20 % to 80 % non-condensing	
Storage Temperature		5 °F to 113 °F(-15 °C to 45 °C)	
Storage Humidity		10 % to 70 %, non-condensing	

NOTE: "Receiving Systems" may differ depending on your model/country/region.

Disclaimer: All products, product specifications, and data are subject to change without notice to improve reliability, function, design or otherwise.

Product specifications

Model Name		65S7N / 65S7SG / 65S7SGD / 65S70SG / 65S75SG / 65S75SGB / 65S75SGC
Dimension (W × H × D)	Without Stand	57.1 × 33.1 × 1.2 inches (1 450 × 841 × 30 mm)
	With Stand	57.1 × 35.2 × 15.0 inches (1 450 × 893 × 381 mm)
Dimension (W × H × D) (with frame)	Without Stand	57.8 × 33.5 × 1.3 inches (1 469 × 852 × 34 mm)
	With Stand	57.8 × 35.5 × 15.0 inches (1 469 × 903 × 381 mm)
Weight	Without Stand	47.4 lbs (21.5 kg)
	With Stand	48.4 lbs (22.0 kg)
Weight (with frame)	Without Stand	50.1 lbs (22.7 kg)
	With Stand	51.1 lbs (23.2 kg)
TV Stand Width(W × D)		39.0 × 15.0 inches (990 × 381 mm)
Active Screen Size (Diagonal)		64.5 inches (163.8 cm)
Audio Power		2 × 10 W + 2 × 8 W
Power consumption		180 W
Screen Resolution		3840 × 2160
Power Supply		100-240 V~ 50/60 Hz
Connectivity		Built-in Wireless feature (2x2, dual band)
Receiving Channels		VHF: 2 - 13, UHF: 14 - 69, CATV: 1 - 125 Digital Terrestrial Broadcast (8VSB): 2 - 69 Digital cable (64/256 QAM): 1 - 135
Tuner Type		Frequency synthesized
Receiving Systems		Analog: NTSC, PAL M/N Digital: ATSC/QAM, ISDB-T, DVB-T2(6M)
Wireless LAN Module specifications	Frequency Range	2.4-2.4835 GHz 5.15-5.85 GHz
	Output Power (Max.)	2.4-2.4835 GHz 17 dBm 5.15-5.25 GHz 14 dBm 5.25-5.35 GHz(DFS Band) 14 dBm 5.49-5.71 GHz(DFS/TPC Band) 14 dBm 5.725-5.85 GHz(for Non EU) 14 dBm
	Standards	IEEE802.11 a/b/g/n/ac
Bluetooth Module specifications	Version/Profiles	Bluetooth 5.4
	Frequency Range	2.4-2.4835 GHz
	Output Power (Max.)	2.4-2.4835 GHz,Class1,6 dBm
	Modulation Type	GFSK, π/4-DQPSK and 8-DPSK
Operating Temperature		41 °F - 95 °F(5 °C - 35 °C)
Operating Humidity		20 % to 80 % non-condensing
Storage Temperature		5 °F to 113 °F(-15 °C to 45 °C)
Storage Humidity		10 % to 70 %, non-condensing

NOTE: "Receiving Systems" may differ depending on your model/country/region.

Disclaimer: All products, product specifications, and data are subject to change without notice to improve reliability, function, design or otherwise.

Certification and compliance

NOTE: The following warnings only apply to products with such certification.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of [20] cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

This equipment complies with radio frequency exposure limits set forth by the Innovation, Science and Economic Development Canada for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 cm between the device and the user or bystanders.

This device must not be co-located or operating in conjunction with any other antenna or transmitter.

Declaration of conformity

Trade Name: Hisense

Model: 50S7N / 50S75N / 50S7SG / 50S7SGD / 50S70SG / 50S75SG / 50S75SGB / 50S75SGC / 55S7N / 55S7SG / 55S7SGD / 55S70SG / 55S75SG / 55S75SGB / 55S75SGC / 65S7N / 65S7SG / 65S7SGD / 65S70SG / 65S75SG / 65S75SGB / 65S75SGC

Responsible Party: Hisense USA Corporation

Service Address: 105 Satellite BLVD Suite I, Suwanee, GA 30024

Service Phone Number: 1-888-935-8880



Dolby, Dolby Vision, and the double-D symbol are registered trademarks of Dolby Laboratories Licensing Corporation. Dolby Vision IQ and Dolby Audio are trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories. Confidential unpublished works. Copyright © 1992-2024 Dolby Laboratories. All rights reserved.



Manufactured under license from DTS, Inc. and/or its affiliates. For patents, see <https://xperi.com/dts-patents/>. DTS, the DTS logo, DTS:X, the DTS:X logo, Virtual:X, and the DTS Virtual:X logo are trademarks or registered trademarks of DTS, Inc. and/or its affiliates in the U.S. and/or other countries. © DTS, Inc. and/or its affiliates. All rights reserved.



The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.



Environmental protection

This mark indicates that this product should not be disposed together with other domestic garbage, to avoid damage to the environment or human health due to the disposal of uncontrolled waste. Recycle it responsibly for promoting the sustainable reuse of material resources. To return your used device, please use the return systems available in your location or contact the vendor where you purchased your product they could take this product for recycling and protection of the environment.

©2026. All rights reserved. Hisense and the Hisense logo are registered trademarks of Hisense. Other brand and product names are registered trademarks of their respective owners.