

# SONANCE

## WIRELESS TRANSMITTER AND RECEIVER QUICKSTART GUIDE



### BOX CONTENTS

- Sonance Wireless Transmitter
- Sonance Wireless Receiver
- Rack Mounting Bar (x2)
  - Power Supply (x2)
- Quickstart Guide (this document)

## INSTALLATION

1. For mounting applications remove the provided mounting bars and screws from the bag and secure them to the transmitter and/or receiver (see Figure 1).

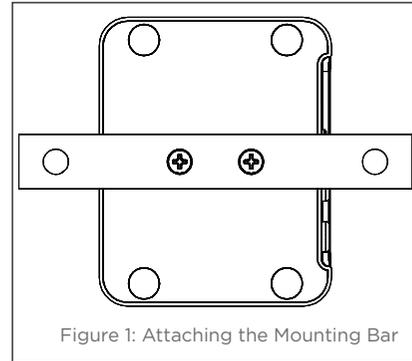


Figure 1: Attaching the Mounting Bar

2. Plug the provided power supply cables into the Sonance Wireless Transmitter and Receiver (see Figure 2).

**NOTE: THE 5 VOLT, 1 AMP POWER SUPPLY MUST BE PLUGGED INTO A NON-SWITCHED OUTLET.**  
AC 100 - 120V \* 60HZ  
AC 220 - 240V \* 50HZ

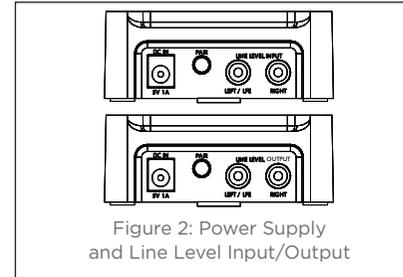


Figure 2: Power Supply and Line Level Input/Output

3. Connect RCA cables to the source's audio output. If you are using the transmitter and receiver with a subwoofer, connect RCA cables from your receiver/pre-amplifier's subwoofer/LFE output to the input of the Sonance Wireless Transmitter.
4. Connect RCA cables from the output of the Sonance Wireless Receiver to the input on the audio endpoint (AV receiver, preamp, powered speakers or subwoofer).

# SONANCE

## WIRELESS TRANSMITTER AND RECEIVER QUICKSTART GUIDE



## SET-UP

1. Once your Sonance Wireless Transmitter and your Sonance Wireless Receiver are powered on, press and hold the PAIR button located on the back of the Sonance Wireless Transmitter (see Figure 3).

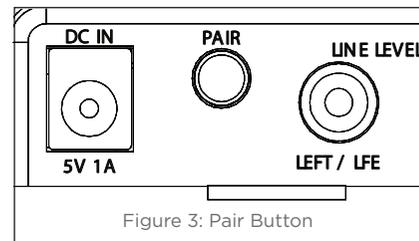


Figure 3: Pair Button

**NOTE: THE SONANCE WIRELESS TRANSMITTER HAS A RANGE OF 30'.**

2. Once your wireless transmitter is in PAIR mode, the LED light located on the front of the unit will blink (see Figure 4).

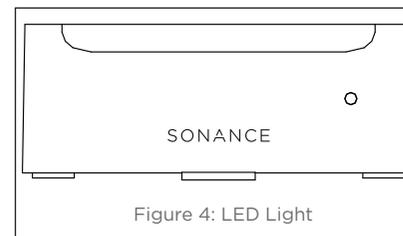


Figure 4: LED Light

3. Within 30 seconds, press and hold the wireless PAIR button located on the back of your Sonance Wireless Receiver.
4. When your Sonance Wireless Transmitter and Receiver are paired, the wireless status lights on the front of both units will turn solid blue. Your Sonance Wireless Transmitter and Receiver are now set up and ready to use.

## PRECAUTIONS

- Read these instructions.
- Keep these instructions.
- Clean only with dry cloth.
- Do not use this apparatus near water.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Heed all warnings.
- Follow all instructions.

- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally or has been dropped.
- **WARNING:** To reduce the risk of fire or electric shock, this apparatus should not be exposed to rain or moisture and objects filled with liquids, such as vases, should not be placed on this apparatus.
- To completely disconnect this equipment from the mains, disconnect the power supply cord plug from the receptacle.
- The mains plug of the power supply cord shall remain readily operable.

## WARNING



The lightning bolt with arrowhead symbol within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

## SONANCE WIRELESS TRANSMITTER & RECEIVER

The Sonance Wireless Transmitter and Receiver is designed to be compatible with select Sonance products. The transmitter provides a wireless link between the audio source and the wireless receiver/subwoofer.

## CAUTION



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

## LIMITED ONE (1) YEAR WARRANTY

Sonance warrants to the first end-user purchaser that this Sonance-brand product (product), when purchased from an authorized Sonance Dealer/Distributor, will be free from defective workmanship and materials for the period stated above. Sonance will at its option and expense during the warranty period, either repair the defect or replace the Product with a new or remanufactured Product or a reasonable equivalent.

## EXCLUSIONS

TO THE EXTENT PERMITTED BY LAW, THE WARRANTY SET FORTH TO THE LEFT IS IN LIEU OF, AND EXCLUSIVE OF, ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, AND IS THE SOLE AND EXCLUSIVE WARRANTY PROVIDED BY SONANCE. ALL OTHER EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY, IMPLIED WARRANTY OF FITNESS FOR USE, AND IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE ARE SPECIFICALLY EXCLUDED.

No one is authorized to make or modify any warranties on behalf of Sonance. The warranty stated to the left is the sole and exclusive remedy and Sonance's performance shall constitute full and final satisfaction of all obligations, liabilities and claims with respect to the Product.

IN ANY EVENT, SONANCE SHALL NOT BE LIABLE FOR CONSEQUENTIAL, INCIDENTAL, ECONOMIC, PROPERTY, BODILY INJURY, OR PERSONAL INJURY DAMAGES ARISING FROM THE PRODUCT, ANY BREACH OF THIS WARRANTY OR OTHERWISE.

This warranty statement gives you specific legal rights, and you may have other rights which vary from state to state. Some states do not allow the exclusion of implied warranties or limitations of remedies, so the above exclusions and limitations may not apply. If your state does not allow disclaimer of implied warranties, the duration of such implied warranties is limited to period of Sonance's express warranty.

Your Product Model and Description:  
MSWIRELESS - Wireless Transmitter and Receiver

Warranty Period for this Product: One (1) year from the date on the original sales receipt or invoice or other satisfactory proof of purchase.

Additional Limitations and Exclusions from Warranty Coverage: The warranty described to the left is non-transferable, applies only to the initial installation of the Product, does not include installation of any repaired or replaced Product, does not include damage to allied or associated equipment which may result for any reason from use with this Product, and does not include labor or parts caused by accident, disaster, negligence, improper installation, misuse (e.g. overdriving the amplifier or speaker, excessive heat, cold or humidity), or from service or repair which has not been authorized by Sonance.

Obtaining Authorized Service: To qualify for the warranty, you must contact your authorized Sonance Dealer/Installer or call Sonance Customer Service at (949) 492-7777 within the warranty period, must obtain a return merchandise number (RMA), and must deliver the Product to Sonance shipping prepaid during the warranty period, together with the original sales receipt, or invoice or other satisfactory proof of purchase.

©2019 Sonance. All rights reserved. Due to continuous product improvement, all features and specifications are subject to change without notice.

For the latest Sonance product specification information visit our website: [www.sonance.com](http://www.sonance.com)

## SONANCE

991 Calle Amanecer • San Clemente, CA 92673 USA  
Phone: (949) 492-7777 • FAX: (949) 361-5151  
Technical Support: (949) 492-7777