

QUICK SETUP GUIDE

 
Joy-Con Charging Station

For Nintendo Switch and
Switch OLED

NX-NSJCCS

PACKAGE CONTENTS

- Joy-Con Charging Station

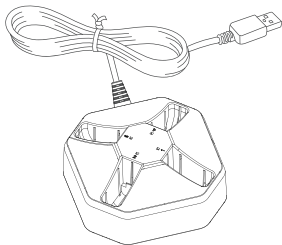

Before using your new product, please read these instructions to prevent any damage.

FEATURES

 
- Charges up to four Joy-Cons simultaneously
- Individual LEDs indicate the charge level for each controller
- Weighted base for stability
- Powered by USB cable

SAFETY INFORMATION

- Do not disassemble any of the components. Refer all services to qualified personnel only.
- Do not place or store the product in a humid area and do not expose it to water or rain.
- Use the product only as instructed. Read all instructions before operating the product.
- Failure to follow these directions may void the warranty.

SETTING UP THE CHARGING STATION




- 1 Plug the charge station cable into the USB port of the Switch /Switch OLED Dock or any compatible USB device.

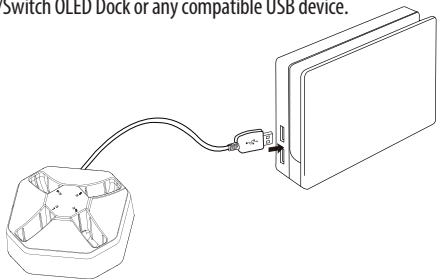

- 2 Slide the controller down into a charging slot to charge. The LED indicator lights red when the controller is properly seated.

Note: Make sure that the controller slides into the charging station in an upright position.

STATUS LED	DESCRIPTION
Red	Charging in process
Green	Charging complete

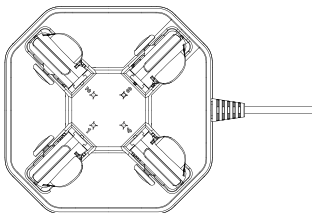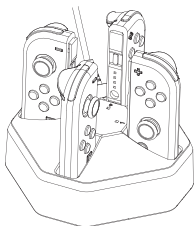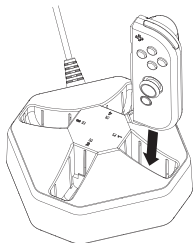   

STATUS LED	DESCRIPTION
Red	Charging in process
Green	Charging complete

SPECIFICATIONS

Dimensions (W×H×D)	4.5 x 4.5 x 1.8in. (11.5 x 11.5x 5cm)
Cable length	2.6ft (80cm)
Input	USB 5V,3A
Output - Charging station:	5V 200mA x 4
Operating temperature	32°F~104°F (0°C~40°C)

TROUBLESHOOTING

The charging station doesn't charge?

- Align the bottom of the Joy-Con controller rail with the channel on the side of the charging station.
- Verify that the charge station is plugged into a powered USB port.
- Unplug the charging station's USB power cable and plug it back in.

LEGAL NOTICES

FCC Information

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

ONE-YEAR LIMITED WARRANTY

Visit www.next-accessories.com for details.

This product is not approved, endorsed or affiliated with Sony.

©2025. All Rights Reserved.

Made in China

English V1-24-0912