



Always Comfortable.



ASSEMBLY INSTRUCTIONS

Mia Chair

WARNING:

FAILURE TO FOLLOW THESE WARNINGS COULD RESULT IN INJURY

- Do not stand on the chair or use as a step ladder.
- Do not use chair unless all bolts and screws are firmly secured and fastened.
- Check all bolts and screws every 90 days. As necessary tighten if any are loose.
- Pushing over or dragging this chair can result in an injury or cause damage to some floor types and the chair itself. To move this chair lift and then move it.
- Do not let children play in or around the chair due to the possible risk of injury.

PRE ASSEMBLY

- Clear a space for the assembly of the chair.
- Lay out all parts on the Parts List. A clear space will allow you to easily determine if all the pieces are available.
- Save all packing materials until assembly is complete to avoid accidentally discarding smaller parts or hardware.
- Keep small parts and pieces away from children and pets.
- Please check the chair for any loose screws and tighten them before use.





Number of people required to assemble
2

 


Time to assemble
35min.


Parts List




A Casters (5)



B Star Base (1)

 

C Gas Lift (1)

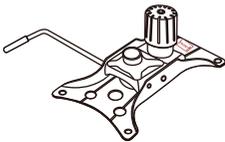

D Seat Plate (1)



E Seat and Back (1)



F Screws
5/16" x 1" (4)





Parts List



G Allen Key (1)

Step 1

Place the Star Base (B) upside down and insert 5 Casters (A) into the holes on the Star Base (B). Turn the Star Base (B) over and insert the Gas Lift (C) through the center hole on top of Star Base (B).

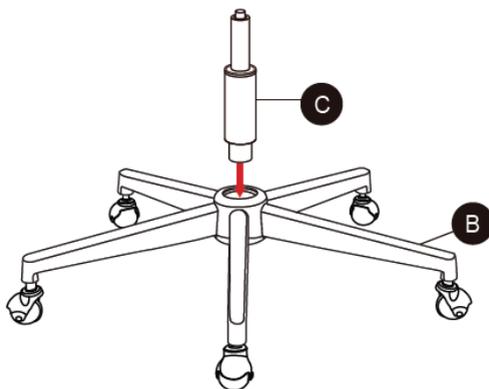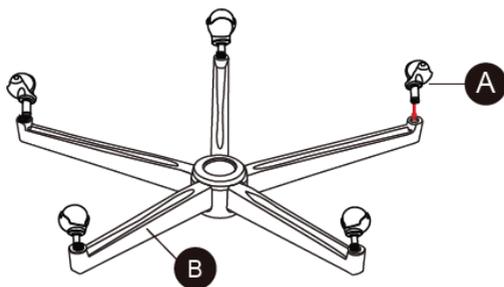


Step 2



Attach Seat Plate (D) to the bottom of the Seat and Back (E) (with the front of the seat plate facing the front of seat cushion). Attach by using 1" Screws (F) for the holes of the Seat Plate (D) with the Allen Key (G).


*Note: Align the Seat Plate so the FRONT on the seat plate matches the FRONT label on the bottom of the seat cushion. Tighten the screws completely.

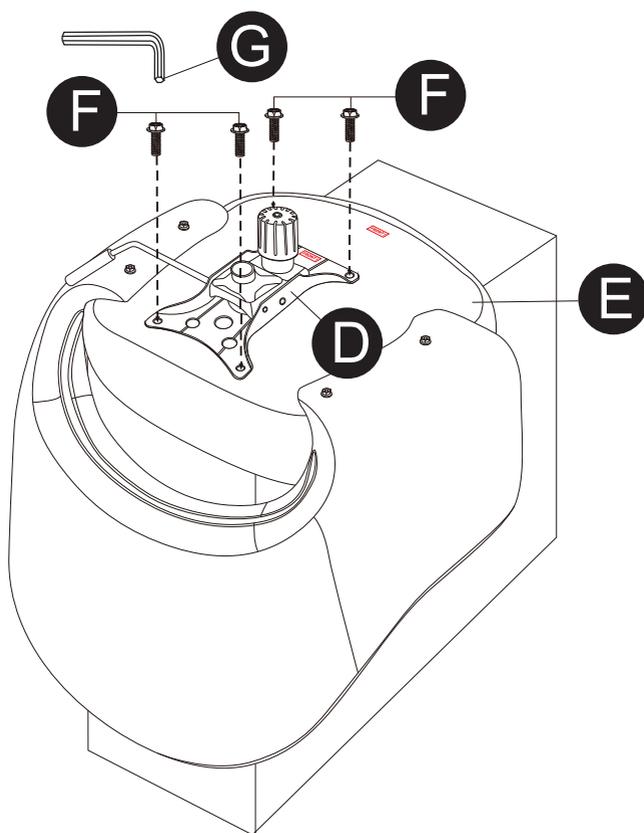

Step 3



Position the assembled chair upright with the seat plate facing down. Insert the Gas Lift (C) into the center hole of the Seat Plate (D).

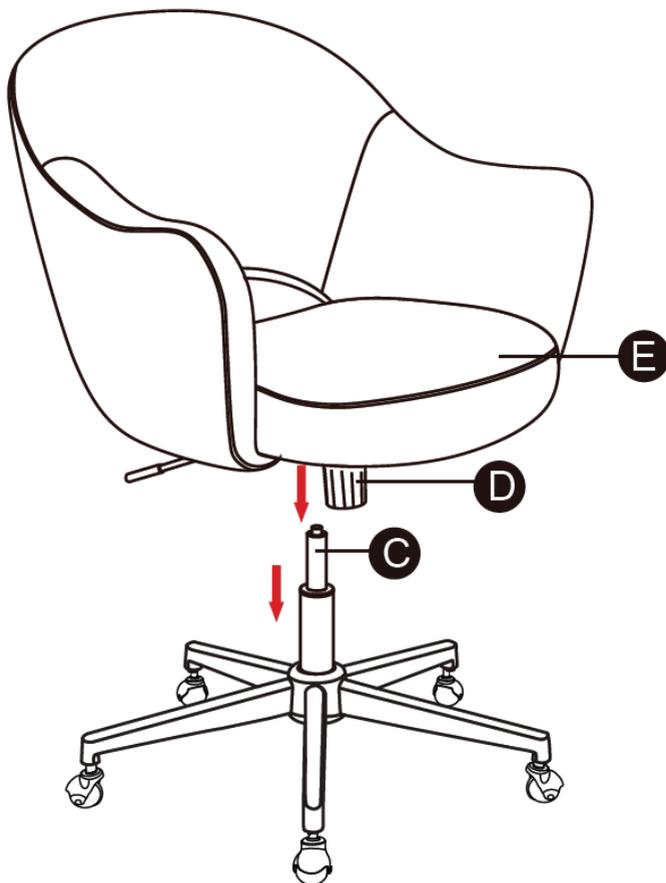


Product Features & Instructions

Seat Height Adjustment



While seated, reach under the right side of the chair to find the handle. Lift the handle and raise your body up slightly to allow the chair to rise to the desired height. To lower the seat, lift the handle while applying more weight downward on the seat. The chair will descend until the handle is released or the chair reaches the bottom position.

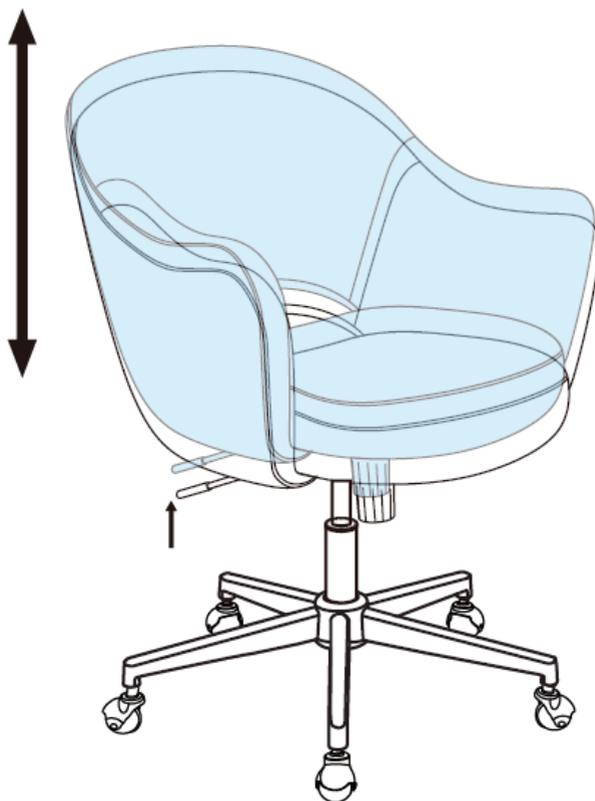


Product Features & Instructions

Upright Seat Tilt Lock



While seated, reach under the right side of the chair to find the height adjustment handle. Pull the handle all the way out (away from the seat plate) to allow the chair to tilt backwards. To lock the chair in the upright or vertical position, sit upright and push the handle in towards the seat plate.

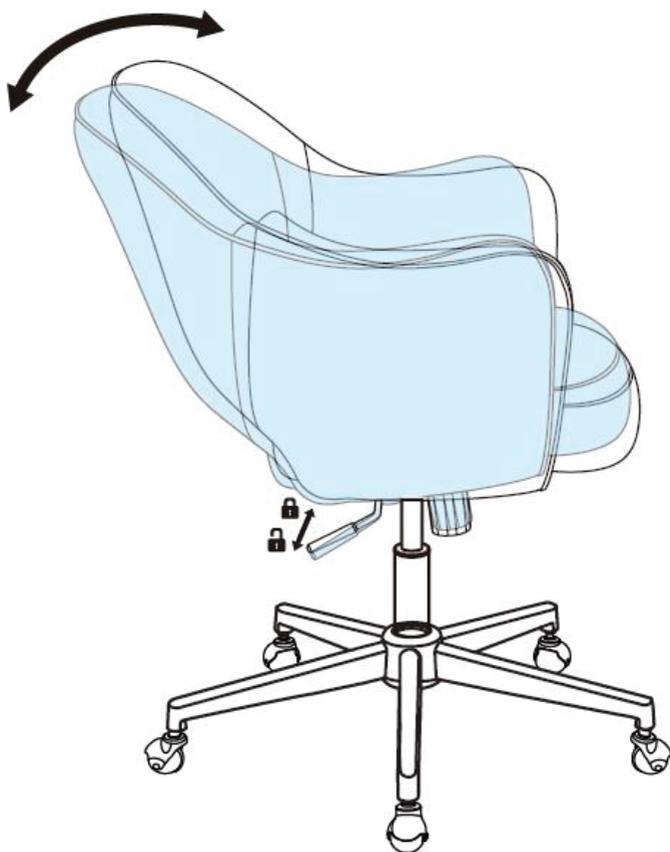

Product Features & Instructions

Tilt Tension



Reach under the front center of the chair, grasp the round knob (R) and turn it counter-clockwise to loosen the tilt mechanism for a lighter user. Turn the knob (R) clockwise to stiffen the tilt mechanism for a heavier user. Rotate the knob (R) until the desired resistance is reached.



Limited Warranty



The manufacturer's products are warranted against defects in material and workmanship while owned by the "Original Purchaser". The term "Original Purchaser" is defined as the party or entity which purchases this manufacturer's furniture from an authorized retailer as shown by the original sales receipt. This warranty does not apply to "as is" or previously owned products.

The manufacturer warrants its products to be free from defects in materials and workmanship (normal wear and tear, fading and stretching excepted), for one year from the date of purchase, except as provided below under the limited warranty.

The exceptions or exclusions to this warranty are as follows:


1. Any warranty claim that is submitted after the limited warranty period, or without proper proof of purchase will not include the cost of parts, labor, or delivery.
2. This warranty shall not apply to the manufacturer's products which have been subjected to misuse, neglect, alteration, modification, or attachments, either caused by the Original Purchaser, shipping, storage, accident, fire, flood, or acts of God.

In the event of a defect in material or workmanship covered by this warranty, the manufacturer will repair or replace, at their discretion, without charge the warranted parts within a reasonable amount of time. We reserve the right to require damaged parts be returned to us upon request. Natural markings such as scars, brands, grain variations, wrinkles, color variations, etc. will be considered normal characteristics and not construed as defects.

For claims or questions concerning this warranty, please reach us by email at service@clickdecor.com. Be prepared to provide your name, address, daytime phone number, the model and purchase order number of the product, date of purchase, and the website where it was purchased. The manufacturer requires that the original sales receipt be submitted with all requests to confirm that you are the Original Purchaser according to our written warranty.

This warranty gives you specific rights, and you may also have other rights, which vary from state to state. All warranties are limited to the Original Purchaser for normal use.



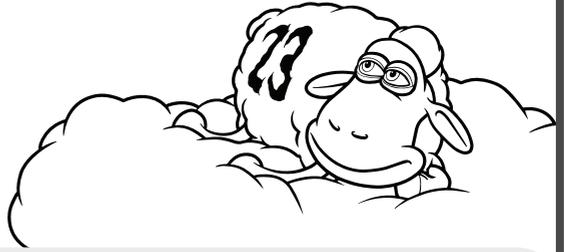

Always Comfortable.

