

INSIGNIA™

16" Retro Fan with Tripod Stand

NS-F16F7-CH



Before using your new product, please read these instructions to prevent any damage.

NS-F16F7-CH

16" Retro Fan with Tripod Stand

Contents

Introduction	2
IMPORTANT SAFEGUARDS.....	2
Features	4
Package contents	4
Main features	5
Assembling your fan	6
Assembling the tripod	6
Assembling the fan head.....	6
Fuse protection	9
Using your fan	10
Cleaning and maintaining your electric fan	10
Troubleshooting	10
Specifications	11
ONE-YEAR LIMITED WARRANTY.....	12

Introduction

Congratulations on your purchase of a high-quality Insignia product. Your NS-F16F7-CH represents the state of the art in electric fans and is designed for reliable and trouble-free performance.

IMPORTANT SAFEGUARDS

READ AND SAVE THESE INSTRUCTIONS

	<p>CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN</p>	
---	--	---



This symbol indicates that dangerous voltage constituting a risk of electric shock is present within your electric fan.



This symbol indicates that there are important operating and maintenance instructions in the literature accompanying your electric fan.

When using electrical appliances, follow these basic precautions;

- 1** Read all instructions.
- 2** To protect against fire, electric shock, and injury to persons, do not immerse the cord, the plugs, or the fan in water or other liquid.
- 3** Close supervision is necessary when any appliance is used by or near children.
- 4** Unplug from the electrical outlet when not in use and before cleaning.
- 5** Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair, or adjustment.
- 6** The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- 7** Do not use outdoors.
- 8** Do not place on or near a hot gas or electric burner, or in a heated oven.
- 9** Do not use the appliance for other than its intended use.
- 10** Do not attempt to modify or extend the power cord of this appliance.
- 11** Do not handle the plug with wet hands. This could result in an electric shock.
- 12** Unplug the power cord by holding the plug, never by pulling the cord.
- 13** This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded or returned to an authorized service facility for examination and/or repair.
- 14** Do not run the power cord under carpeting. Do not cover the cord with throw rugs, runners, or similar coverings. Do not route the cord under furniture or appliances. Arrange the cord away from traffic areas, where it will not be tripped over.



WARNING

Electric Shock Hazard

Failure to follow these instructions can result in electric shock, fire, or death.

Additional safety concerns

- 1** To reduce the risk of electric shock, do not use this fan with any solid-state speed control device.
- 2** To reduce the risk of electric shock of injury to persons, make sure that the fan is turned off and unplugged from the electrical outlet before cleaning.
- 3** Do not leave the fan running unattended.
- 4** Never insert fingers, pencils, or any other object through the grille when fan is running.
- 5** Disconnect the fan when moving from one location to another.
- 6** Disconnect the fan when removing grilles for cleaning.
- 7** To avoid the fan overturning, make sure that the fan is on a stable, even surface.
- 8** DO NOT use the fan in a window. Rain may create an electrical hazard. Do not leave the fan operating adjacent to an area where water has been collected to avoid the potential of electrical hazard.
- 9** Do not leave the fan plugged in or running in a place where young children could have access to it without supervision.


Features

- Three speeds
- A swivel action head for smooth oscillating action and low noise levels
- Reliability with safety
- Efficient air flow

Package contents

- Chrome 16-inch Floor Tripod Fan
- *User Guide*

Main features

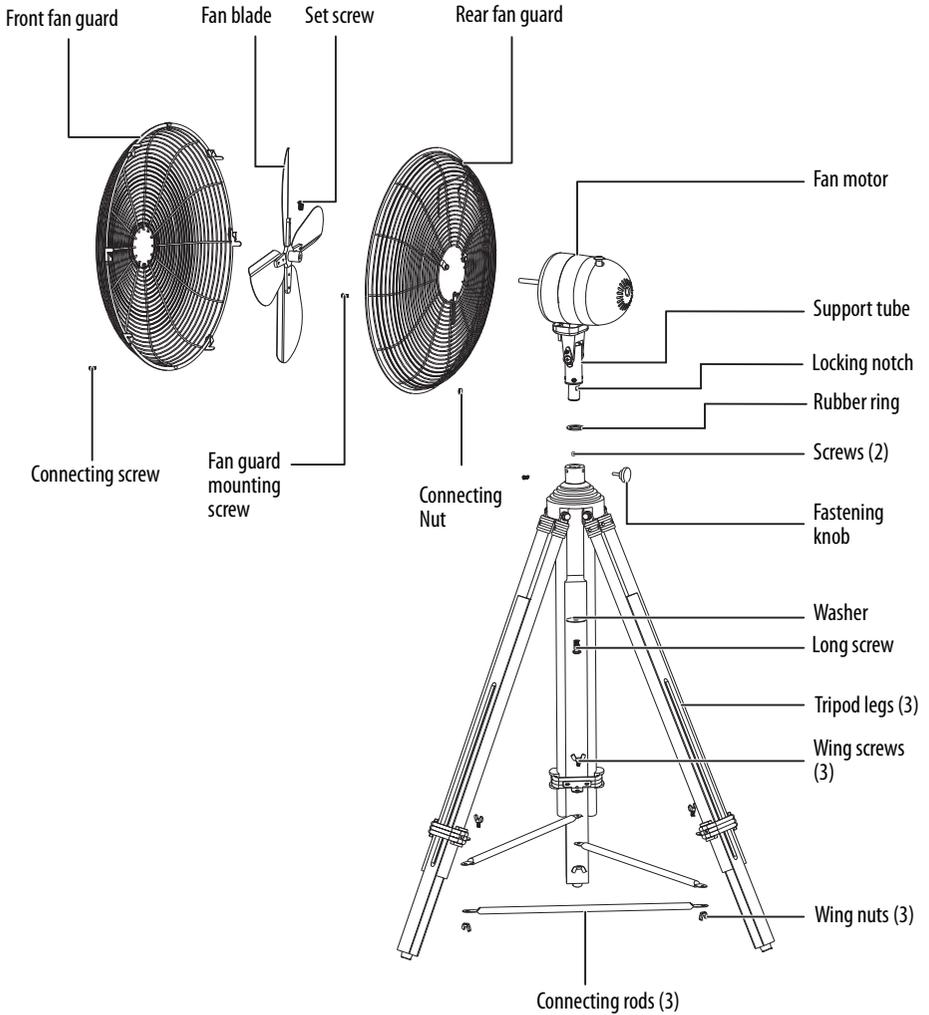

Assembling your fan


Tools needed but not included in the package



Phillips screwdriver

Assembling the tripod

- 1 Remove the tripod legs and connecting rods from the box.
- 2 Remove the wing nuts from the plastic bag attached to the front page of the instruction manual.
- 3 Attach the connecting rods to the tripod legs by placing the holes on the ends of the rods onto the wing screws attached to the tripod legs (as shown below), then secure with the wing nuts.

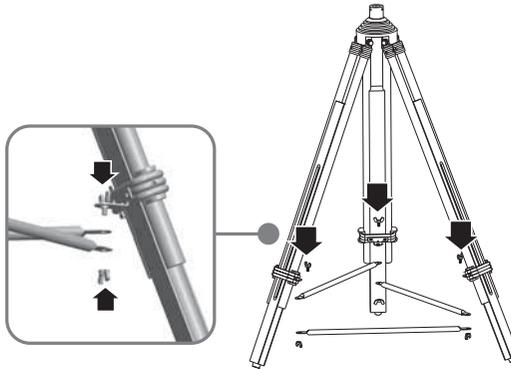


Assembling the fan head

- 1 Separate the front and rear guards if they are connected.
- 2 Remove the two screws from the top of the tripod and the long screw and washer from the fan neck.


Important

There is a rubber ring on the support tube when you remove the fan head from the package. Keep the rubber ring on the tube when you assemble the fan.


- 3 Insert the support tube into the hole on the top of the tripod. Make sure the locking notch on the support tube is aligned with the fastening knob.

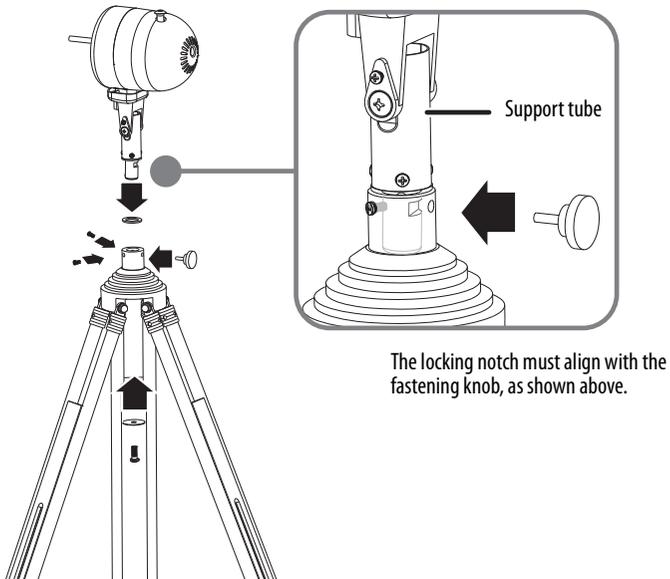


- 4 Reinstall the two screws you removed in step 2.
- 5 Tighten the fastening knob and the two screws to secure the fan head assembly to the tripod.
- 6 Reinstall the washer and long screw you removed in step 2 and make sure that the fan head is secured.

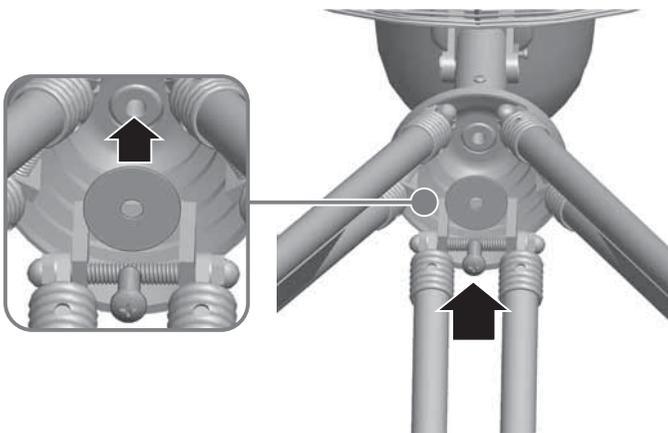


- 7** Remove the screw from the fan motor housing, then align the two upper hangars (without holes) with the upper holes on the fan motor housing.

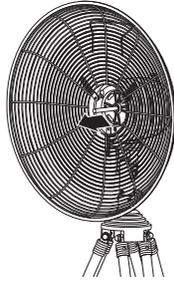

- 8** Align the third (bottom) hanger on the rear fan guard with the screw hole in the motor, then tighten it to secure the rear fan guard to the fan motor housing.

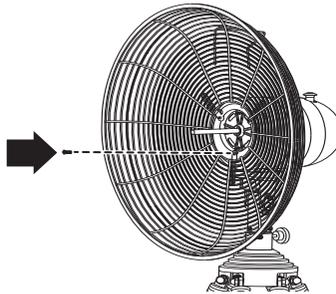


- 9** Loosen the set screw in the middle of the fan blade, then slide the blade onto the motor shaft and tighten the set screw to secure the blade. Make sure that the blade does not hit the rear guard.

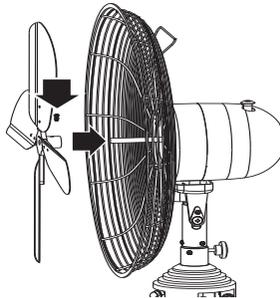

- 10** Attach the front fan guard to the rear fan guard by inserting (but not tightening) the connecting screw and nut.


- 11 Secure the front fan guard with the lock clips (6), then tighten the connecting screw and nut.

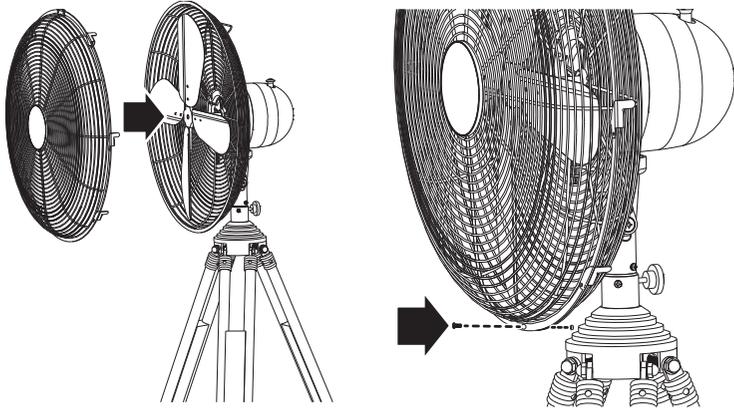

Fuse protection

There is an electrical fuse built into the plug for overcurrent protection. If the fan draws too much current, the fuse blows to shut off the motor automatically. Follow the steps below to replace the fuse.

- 1 Unplug the fan. Do not unplug it by pulling on the cord.
- 2 Open the fuse access cover on top of the plug by sliding it towards the blades.

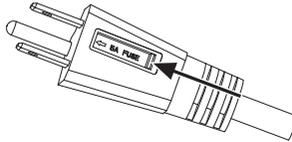

- 3 Carefully turn the plug over to remove the fuse, then replace the fuse.

Warning

Risk of fire. Replace the fuse only with a 5A, 125 Volt fuse.

- 4 Close the fuse access cover.

Warning

Risk of fire. Do not replace the plug. It contains a safety device (fuse) that should not be removed. Discard the product if the fan motor cord plug is damaged.

Using your fan

Turn the speed control fan switch to the setting you want:

- 0 - Off
- 1 - Low
- 2 - Medium
- 3 - High



- To oscillate the fan, push the oscillation knob down. Pull it up to stop oscillation.
- To tilt the fan up or down, loosen the adjustment knob, adjust the fan to the position you prefer, then re-tighten the adjustment knob.

Cleaning and maintaining your electric fan

- Always unplug the power cord before cleaning.
- Plastic parts should be cleaned with mild soap and a damp cloth or sponge. Thoroughly remove soap film with clean water.
- To disassemble each part, reverse the order of assembly.
- Do not splash water or other liquid into the fan motor.

Troubleshooting

Caution

Do not try to repair your fan yourself. Doing so invalidates the warranty.

Problem	Possible solution
The fan is not working	<ul style="list-style-type: none"> • Make sure the speed control switch is not set to the off position. • Make sure the power cord is connected to a working outlet. • Unplug the fan, then remove built-up dust and dirt from the blades and the motor.
The fan is not oscillating	<ul style="list-style-type: none"> • Pull up and fully extend the oscillating knob. Press back down on the knob, firmly but carefully.

Specifications

Dimensions	27.9 x 24.6 x 50 inches (710 x 625 x 1270 mm)
Power requirements	0.45 A at 120V ~ 60 Hz

ONE-YEAR LIMITED WARRANTY

Definitions:

The Distributor* of Insignia branded products warrants to you, the original purchaser of this new Insignia-branded product ("Product"), that the Product shall be free of defects in the original manufacturer of the material or workmanship for a period of one (1) year from the date of your purchase of the Product ("Warranty Period").

For this warranty to apply, your Product must be purchased in the United States or Canada from a Best Buy branded retail store or online at www.bestbuy.com or www.bestbuy.ca and is packaged with this warranty statement.

How long does the coverage last?

The Warranty Period lasts for 1 year (365 days) from the date you purchased the Product. Your purchase date is printed on the receipt you received with the Product.

What does this warranty cover?

During the Warranty Period, if the original manufacture of the material or workmanship of the Product is determined to be defective by an authorized Insignia repair center or store personnel, Insignia will (at its sole option): (1) repair the Product with new or rebuilt parts; or (2) replace the Product at no charge with new or rebuilt comparable products or parts. Products and parts replaced under this warranty become the property of Insignia and are not returned to you. If service of Products or parts are required after the Warranty Period expires, you must pay all labor and parts charges. This warranty lasts as long as you own your Insignia Product during the Warranty Period. Warranty coverage terminates if you sell or otherwise transfer the Product.

How to obtain warranty service?

If you purchased the Product at a Best Buy retail store location, please take your original receipt and the Product to any Best Buy store. Make sure that you place the Product in its original packaging or packaging that provides the same amount of protection as the original packaging. If you purchased the Product from a Best Buy online web site (www.bestbuy.com or www.bestbuy.ca), mail your original receipt and the Product to the address listed on the web site. Make sure that you put the Product in its original packaging or packaging that provides the same amount of protection as the original packaging.

To obtain warranty service, in the United States call 1-888-BESTBU or in Canada call 1-866-BESTBUY. Call agents may diagnose and correct the issue over the phone.

Where is the warranty valid?

This warranty is valid only in the United States and Canada at Best Buy branded retail stores or websites to the original purchaser of the product in the county where the original purchase was made.

What does the warranty not cover?

This warranty does not cover:

- Customer instruction/education
- Installation
- Set up adjustments
- Cosmetic damage
- Damage due to weather, lightning, and other acts of God, such as power surges
- Accidental damage
- Misuse
- Abuse
- Negligence
- Commercial purposes/use, including but not limited to use in a place of business or in communal areas of a multiple dwelling condominium or apartment complex, or otherwise used in a place of other than a private home.

- Modification of any part of the Product, including the antenna
- Display panel damaged by static (non-moving) images applied for lengthy periods (burn-in).
- Damage due to incorrect operation or maintenance
- Connection to an incorrect voltage or power supply
- Attempted repair by any person not authorized by Insignia to service the Product
- Products sold "as is" or "with all faults"
- Consumables, including but not limited to batteries (i.e. AA, AAA, C etc.)
- Products where the factory applied serial number has been altered or removed
- Loss or Theft of this product or any part of the product
- Display panels containing up to three (3) pixel failures (dots that are dark or incorrectly illuminated) grouped in an area smaller than one tenth (1/10) of the display size or up to five (5) pixel failures throughout the display. (Pixel based displays may contain a limited number of pixels that may not function normally.)
- Failures or Damage caused by any contact including but not limited to liquids, gels or pastes.

REPAIR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS YOUR EXCLUSIVE REMEDY FOR BREACH OF WARRANTY. INSIGNIA SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, INCLUDING, BUT NOT LIMITED TO, LOST DATA, LOSS OF USE OF YOUR PRODUCT, LOST BUSINESS OR LOST PROFITS. INSIGNIA PRODUCTS MAKES NO OTHER EXPRESS WARRANTIES WITH RESPECT TO THE PRODUCT, ALL EXPRESS AND IMPLIED WARRANTIES FOR THE PRODUCT, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE WARRANTY PERIOD SET FORTH ABOVE AND NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, WILL APPLY AFTER THE WARRANTY PERIOD. SOME STATES, PROVINCES AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE.

Contact Insignia:

For customer service please call 1-877-467-4289

www.insigniaproducts.com

INSIGNIA is a trademark of Best Buy and its affiliated companies.

Distributed by Best Buy Purchasing, LLC

©2016 Best Buy. All rights reserved.

Made in China

INSIGNIA™

www.insigniaproducts.com

1-877-467-4289 (U.S. and Canada) or 01-800-926-3000 (Mexico)

INSIGNIA is a trademark of Best Buy and its affiliated companies.

Distributed by Best Buy Purchasing, LLC

©2016 Best Buy. All rights reserved.

Made in China.

V1 ENGLISH
15-0900