 


Ice Maker

Instruction Manual

ZBJ-X10D

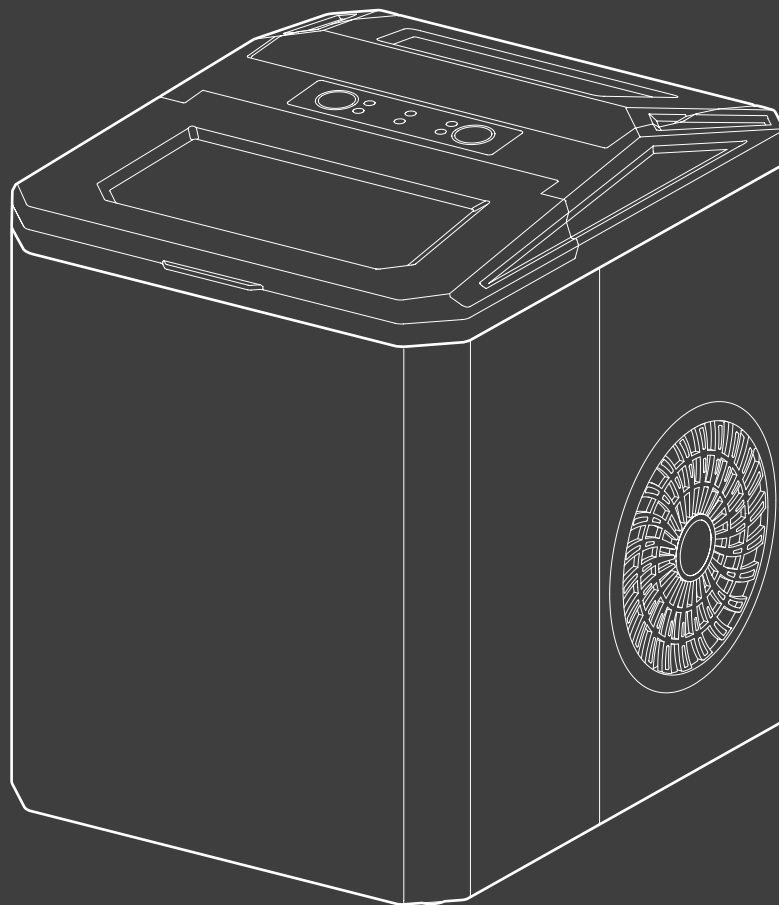

✉ HJ-Customer-Service@outlook.com

☎ (909)637-7665 | (909)637-7593

EST 9:00AM--17:00PM

KIND REMINDER

- Thank you for choosing our ice maker.
- Please make sure your items have arrived in good condition and confirmation of goods receipt.
- If you have any questions or problems, please feel free to contact us for assistance.
- Please take a few minutes to read this manual carefully.
- Proper maintenance and operation of this machine can provide better service.

PAGE CONTENT

IMPORTANT SAFETY INFORMATION.....	1
PRODUCT INTRODUCTION.....	3
CONTROL PANEL INTRODUCTION.....	4
USING YOUR ICE MAKER.....	5
CLEANING AND MAINTENANCE.....	7
PRODUCT SPECIFICATIONS.....	9
TROUBLESHOOTING.....	10
WARRANTY INFORMATION.....	12
SAFETY TIPS AND WARNINGS.....	13

IMPORTANT SAFETY INFORMATION

To reduce the risk of injury or property damage, please follow these safety precautions.



WARNING



- Voltage power from outlet must match specifications on appliance nameplate.



- This appliance must be grounded.



- Using an extension cord may cause overheating and increase the risk of fire.

If an extension cord MUST be used:

- 1) Only use an extension cord with grounding plug.
- 2) The marked rating of an extension cord or greater than the rating of this appliance.

- Do not operate if any component, including the cord or plug, is damaged.
- Unplug the unit before cleaning by hand.



- Only responsible and capable adults should operate the ice maker.
- Do not place the power cord where it could be pulled by children or pose a tripping hazard.



- Children should not be left unattended near the ice maker during operation.

- Do not use water that is micro-biologically unsafe or of unknown quality.



- Do not remove any safety, warning, or product information labels from the unit.



- Do not touch the evaporator with your hands while the ice maker is operating.



- Do not plug in or unplug the unit with wet hands.



- The unit must be placed and set up according to installation instructions before use. The unit is for indoor house hold use only.



- Do not store or use flammable vapors or liquids near the unit.



- Do not immerse any part of the unit in water.
- Do not attempt to disassemble, repair, modify or replace any part of the ice maker unless permitted by the manufacturer.

WARNING



FIRE OR EXPLOSION HAZARD Flammable Refrigerant

This unit contains an isobutane refrigerant, also known as R600a, a natural gas with high environmental compatibility. However, it is also combustible. Adhere to the warnings below to reduce the risk of injury or property damage.



1. When handling, installing, and operating the unit, care should be taken to avoid damage to the refrigerant tubing.



2. Only dispose of the unit according to Federal and Local Regulations. Contact your local authorities for the environmentally safe disposal of the unit.



3. Keep ventilation openings around the unit's enclosure clear of obstruction.



4. Do not place the unit near heat sources such as an oven.

 


5. Ensure a minimum of three inches of clearance around the side and back walls of the unit for proper air circulation.



6. Do not place the unit in direct sunlight.


PRODUCT INTRODUCTION

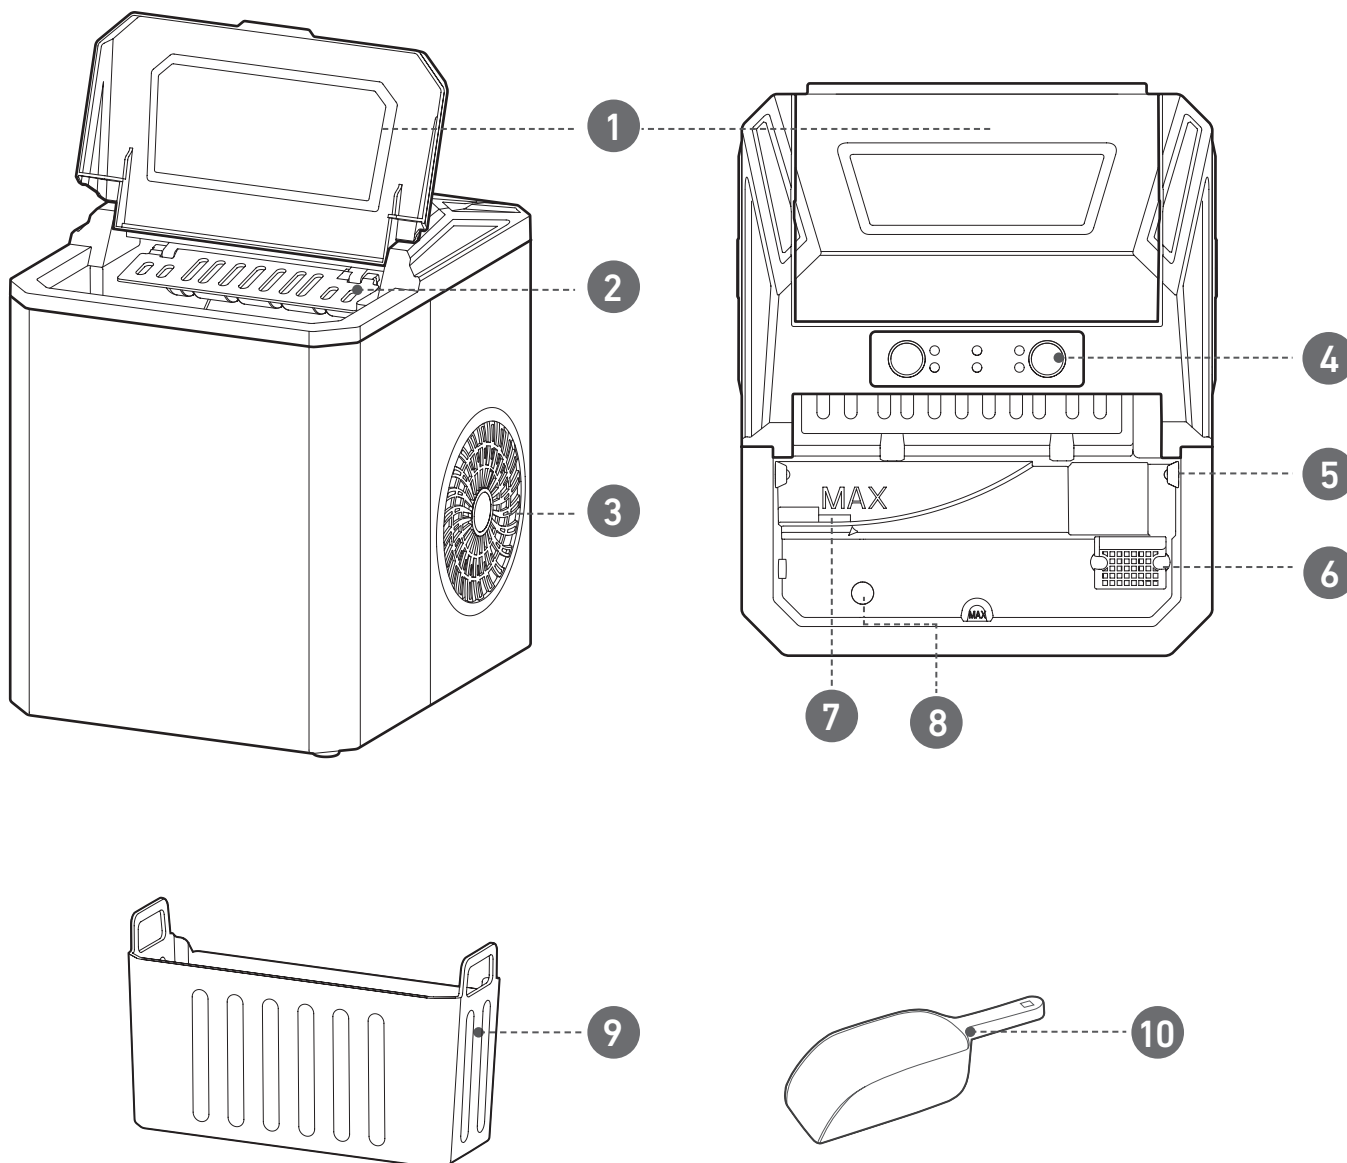

1. Large Viewing Window
2. Ice Shovel
3. Air Exhaust Fan
4. Control Panel
5. Ice Full Sensor

6. Filter
7. Maximum Water Fill Line
8. Drain Plug
9. Ice Basket
10. Ice Scoop

 CONTROL PANEL INTRODUCTION

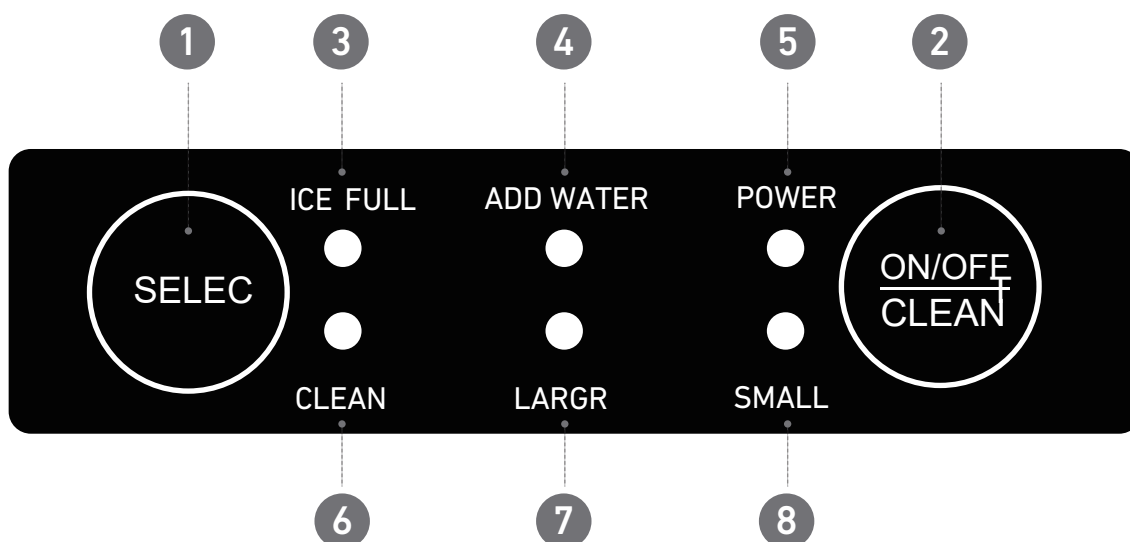


	Key (with indicator)	Function
①	SELEC	Confirms large ice mode or small ice mode.
②	ON/OFF CLEAN	Short press the ON/OFF/CLEAN button to turn the ice maker on.
		Short press the ON/OFF/CLEAN button to turn the ice maker off.
		In Standby mode, press and hold the ON/OFF/CLEAN button for 5 seconds and the ice maker will switch to self-cleaning mode.
③	ICE FULL	The indicator light turns red when the ice basket is full.
④	ADD WATER	The indicator light turns red when the water reservoir is low.
⑤	POWER	The indicator light turns green when on and flashes when powering up or down.
⑥	CLEAN	The indicator light turns red when the ice maker enters self-cleaning mode.
⑦	LARGE	The indicator light turns green when large ice mode is selected.
⑧	SMALL	The indicator light turns green when small ice mode is selected.

USING YOUR ICE MAKER



BEFORE FIRST USE

 1. Stand upright for 24hrs.

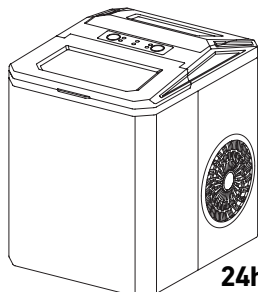

24hrs

  Check for accessories.

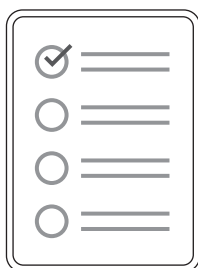


**Missing parts?
Contact us.**



Customer Service

 **2. Clean the ice maker thoroughly
before first use.**

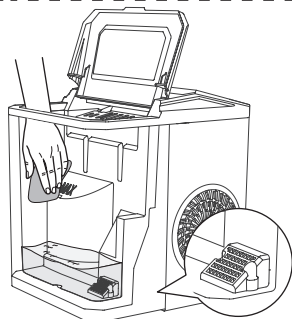


Discard first 4 cycles of ice.




Note: If not used in a long period, discard first 4 cycles of ice.

 Use in locations 50°F ~ 90°F.

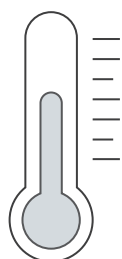

50°F ~ 90°F
(10°C ~ 32°C)

 
Perfect ice shape.

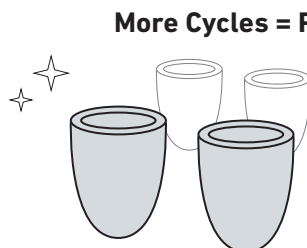


More Cycles = Perfect Shape

Due to temperature variations and other factors, ice quality should become stable after the first 1-3 cycles.

 
3. What Not To Do!
Unstable base.

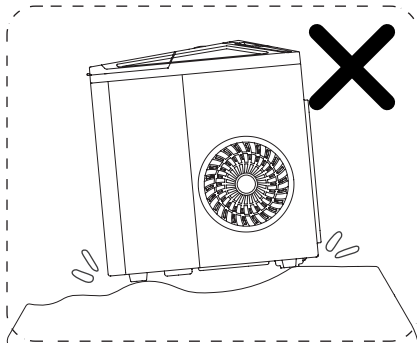

 **No other liquids
(Drinking water only).**

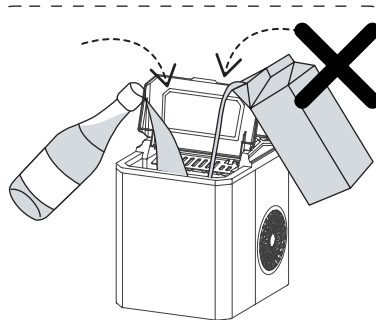


**Do not use in
high or low temps.**

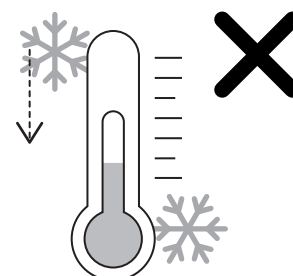 


lower than 41°F/5°C

HOW TO USE YOUR ICE MAKER

 
Open cover and remove basket.

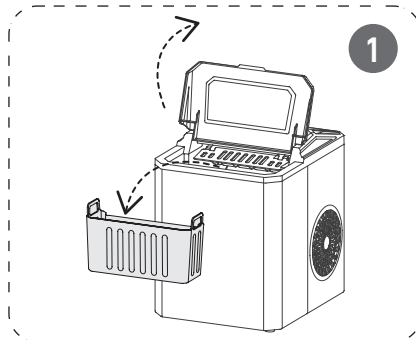

 
Pour water, do not exceed the "MAX" water mark.

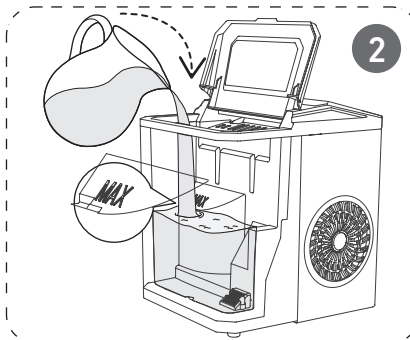


Press the **ON/OFF** button.

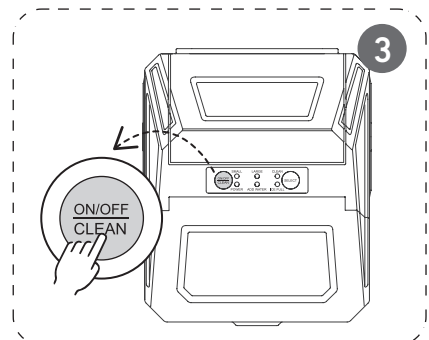 

 
Press **SELECT** button to choose ice cube size.

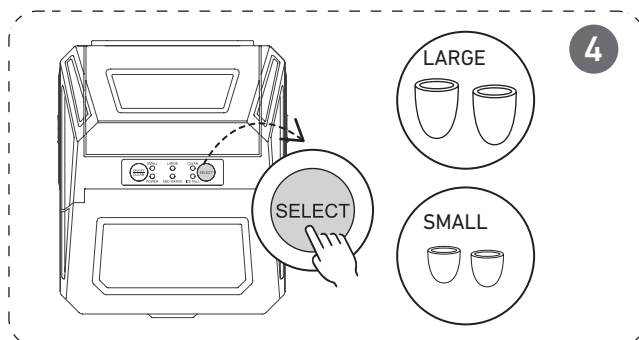


Wait for 6min-8min.

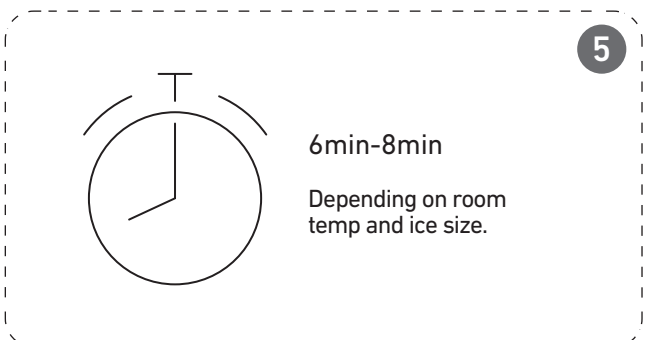 

 
Ice full and ready when " **ICE FULL** " indicator turns red.

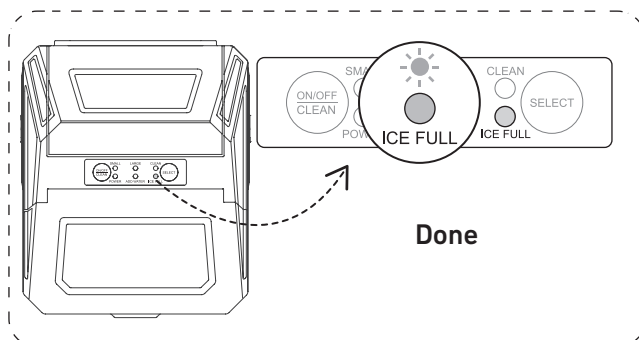

 When "ADD WATER" indicator turns red, add water and press **ON/OFF** button.

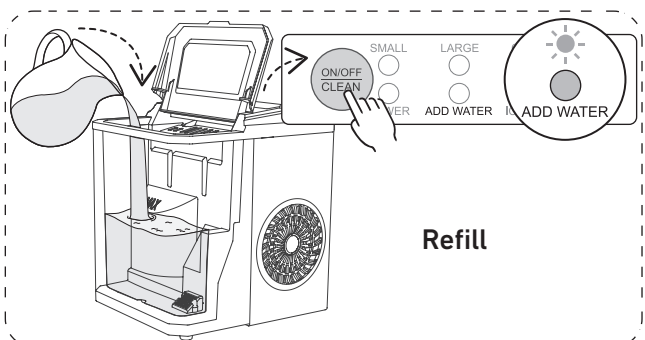

 Take ice cubes out in time to avoid melting.

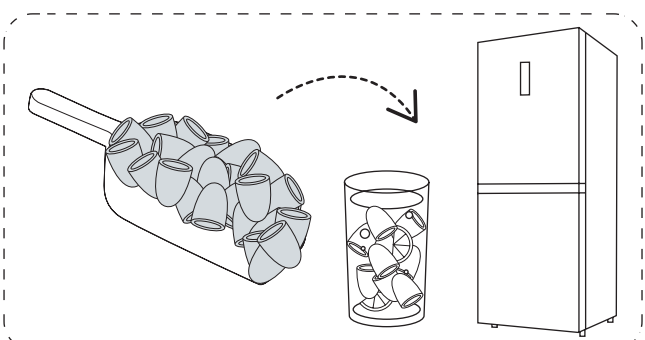


CLEANING AND MAINTENANCE


To keep your ice tasting fresh and the unit looking great, we recommend cleaning the unit once per week.

SELF-CLEANING (15-MIN PROCESS)

 
1. Remove the basket and add water.

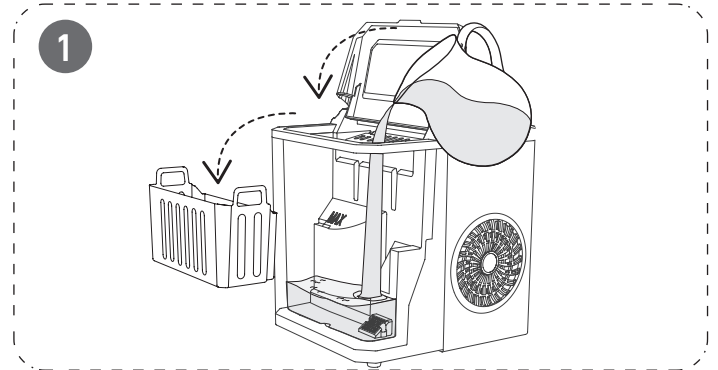

 
2. Hold for 5 sec to start self-cleaning.

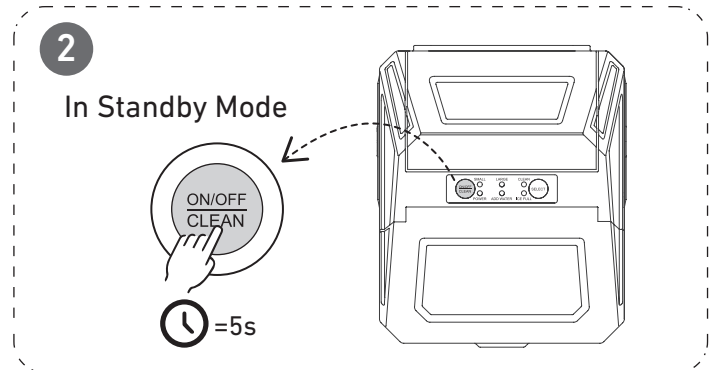

 3. Drain water reservoir.

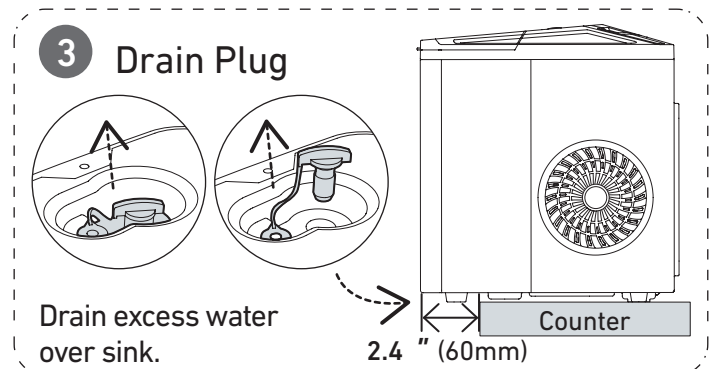

 
4. Clean exterior with cloth and mild dishwashing soap.

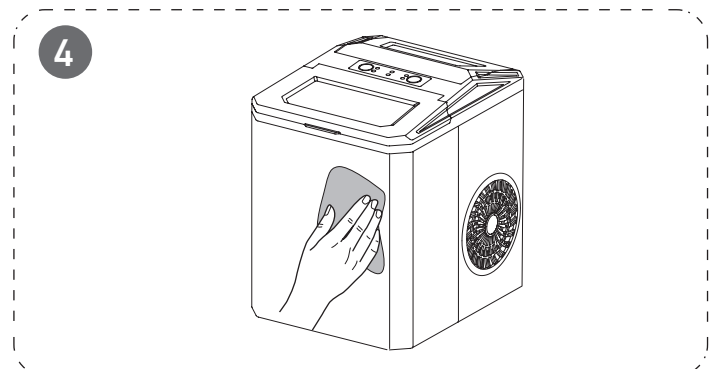


MANUAL CLEANING

Turn off the unit and disconnect from power outlet before cleaning.

 
1. Remove the basket.

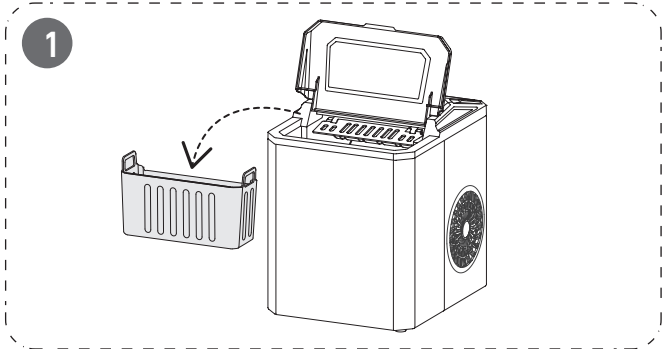

 
2. Clean using a soft cloth with warm water and vinegar. Clean the water filter, ice shovel and the evaporator to avoid dirt buildup.

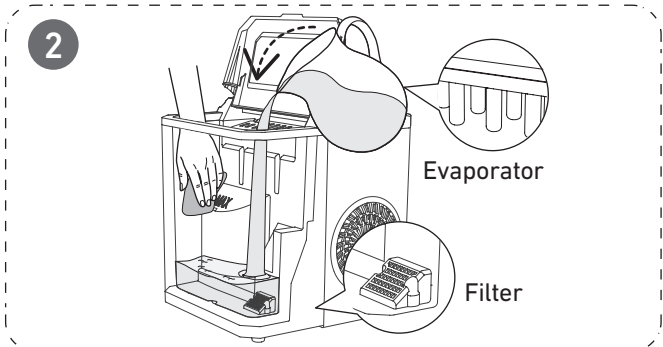

 3. Drain water reservoir.

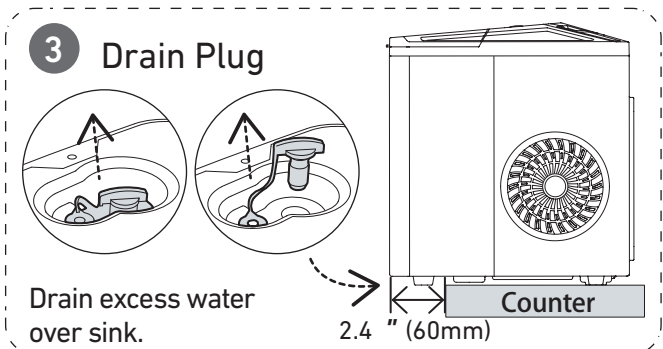

 4. Clean exterior with cloth and mild dishwashing soap.

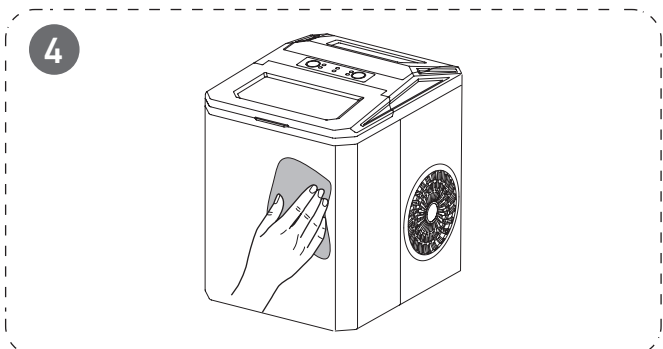

⚠ DO's & DON'Ts while cleaning and maintaining

- Do not use organic solvent, boiled water, detergent, strong acid and strong alkali etc. for cleaning.
- When the unit is not to be used for a long duration, drain the water completely & dry the interior.
- Store in a well-ventilated area.

PRODUCT SPECIFICATIONS

Model	ZBJ-X10D
Voltage/Frequency	110-120V/60Hz
Working Power	≤160W
Electric Current	2A
Water Reservoir	0.26 gal (1L)
Ice Basket Capacity	1.1 lbs (0.5kg)
Ice-Making Rate	26 lbs per Day
Ice Shape	Bullet
Ice Size	Small or Large
Material	ABS, PP
Net Weight	15.4 lbs (7kg)
Unit Size	8.9 x 10.6 x 11.4 inch (225 × 270 × 290 mm)

TROUBLESHOOTING

Problem	Possible Causes	Solution
Poor ice shape or quality.	Poor heat dissipation.	Leave a 6-inch clearance on all sides of the ice maker for ventilation.
	The water temperature is too high.	Fill with water temperature between 46°F and 77°F.
	The ambient temperature is too high.	Use the ice maker in room temperatures between 50°F and 90°F.
	Evaporator deformation.	Please contact customer service.
Ice maker creating loud noise.	Ice maker has not been cleaned for a long time, which will form a sticky substance around the inlet of the water pump.	Clean every 1 to 2 weeks, using some neutral cleaning agents (such as mild vinegar solution and soapy water).
	Lack of water to pump will create noise when pumping water.	Add more water.
	Fan or ice maker is damaged.	Please contact customer service.
	Water pump is damaged.	

Problem	Possible Causes	Solution
“ICE FULL” indicator light is on.	Ice is blocking the infrared sensor.	Empty the ice basket.
	Infrared sensors do not work.	1. Wipe the infrared sensors clean. 2. Contact customer service if the infrared sensors still don't work.
Ice sticks together.	Making ice takes too long.	Stop making ice. After the ice melts, restart and try again.
	The water temperature is too low.	Fill with water temperatures between 46°F and 77°F.
	Evaporator deformation.	Please contact customer service.
Not making ice.	Ambient or water temperature is too high.	Keep ambient temperature less than 90°F and fill with cold water.
	Water pump is damaged.	Please contact customer service.
	Refrigerating system leaking.	
	Refrigerating system blocked.	
	The fan stopped working.	
	The wires are loose.	
	The gears in the motor are broken.	

Problem	Possible Causes	Solution
“ADD WATER” indicator light is on	Low water level or not enough water.	Stop making ice, refill water, press ON/OFF button, then restart and try again.
	Water screen blocked at the bottom of the water reservoir.	Start the self-cleaning function.
	Water sensor malfunction.	Power off for 2 minutes and restart the machine.
	Pump malfunction.	Please contact customer service.

WARRANTY INFORMATION

30-DAY LIMITED WARRANTY

To provide customers with a quality shopping and user experience, the unit can be replaced or returned for a full refund within the 30- day period from the date of purchase.

30-DAY TO 1-YEAR LIMITED WARRANTY

After the 30-day warranty has expired, a 1-year warranty from the date of purchase that covers product replacement is automatically activated. Please note that proof of purchase is required for all warranty claims.

30-DAY TO 1-YEAR WARRANTY LIMITATIONS

This warranty does not cover:

 
- Any condition resulting from incorrect or inadequate maintenance or care.
- Damage resulting from misuse, abuse, negligence, accidents, or shipping damage.
- Dissatisfaction due to buyer's remorse.
- Normal wear and tear.
- Damages incurred after initial transportation.

SAFETY TIPS AND WARNINGS

- 1.** Do not plug and unplug the machine with wet hands.
- 2.** Do not attempt to repair or replace any part of the ice machine unless under manufacturer's guide, otherwise inspections should be performed under the direction of a technician.
- 3.** Use the machine in a well-ventilated area with a temperature between 50°F and 100°F.
- 4.** Do not install or operate the machine in a sealed space, such as a closed room.
- 5.** Install the machine away from the following factors, such as wind, rain, water mist or the electromagnetic environment.
- 6.** Do not place it next to high-temperature sources such as ovens and grills.
- 7.** The use of ice makers must comply with national and local standards.
- 8.** Do not squeeze or twist the power cord of the ice machine.
- 9.** In order for the machine to work properly, please lay it flat during use.
- 10.** Check if there is any water leakage after adding water to the ice machine.
- 11.** Children or people with mental disorders are not allowed to operate the ice machine.
- 12.** Although the machine has been tested and cleaned at the factory, due to long-term transportation and storage, please dump the ice cubes made in the first 4 cycles.
- 13.** If the machine has not been used for a long time, please clean it thoroughly before use. Please follow the instructions provided to clean and disinfect. Do not leave any solution after cleaning.
- 14.** This machine is suitable for household or similar purposes, such as family, bar, tea shop, KTV, coffee shop, etc. Do not use the machine beyond its intended use.
- 15.** If the service life is exceeded, please hand over the machine to the manufacturer, service agent or similar qualified organization.
- 16.** This machine can only be filled with drinking water.
- 17.** If the power cord is damaged, it must be replaced by a manufacturer, service agent or similar qualified person to avoid danger.
- 18.** This device may not be used by persons who have physical, sensory or mental abilities, or who lack experience and knowledge, including children, unless they are supervised or prompted by the person responsible for their safety.

- 19.** At least 6 inches space is left around the ice machine to ensure free circulation of the cooling air.
- 20.** Do not use mechanical equipment or other means to accelerate the defrosting process except the method recommended by the manufacturer.
- 21.** Do not damage the ice machine refrigeration tube.
- 22.** Except for the type recommended by the manufacturer, the appliance shall not be used in the ice storage room of the appliance.
- 23.** It is forbidden to clean the ice machine with flammable liquid. Failure to do so may result in fire or explosion
- 24.** It is forbidden to store explosives such as gasoline, combustion-supporting sprays or other flammable gases or liquids in this appliance.
- 25.** Under no circumstances should the ice machine be inclined more than 45 degrees.
- 26.** When the machine is working, it is strictly forbidden to touch the evaporator by hand.

Thank You
For choosing our ice maker!

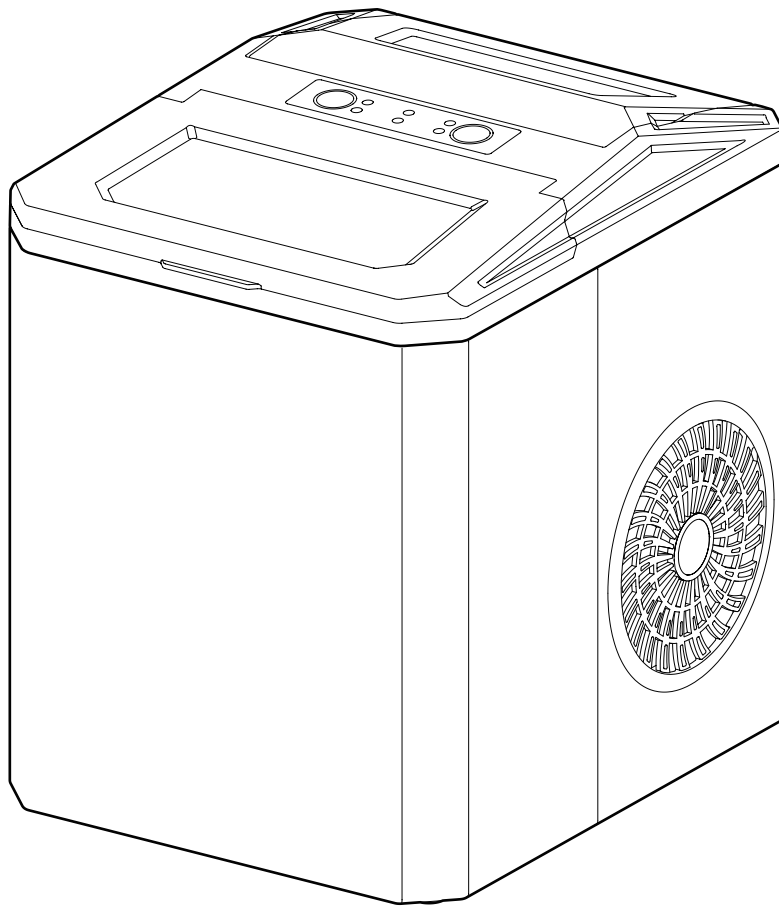

Technical Support

(909)637-7665 | (909)637-7593

HJ-Customer-Service@outlook.com

Thank you for choosing this product. We strive to provide you with the best quality products and services in the industry. Should you have any issues, please don't hesitate to contact us.