

Nc3快速指引

尺寸：70*82mm

4 Reset

 
If only one earbud is working, please follow these steps:

1. Check if there is dirt on the charging pins of the earbuds. If so, please clean them.
2. If the issue of one earbud not working persists after cleaning, place the earbuds in the charging case and close the lid. Hold down the reset button on the charging case for 10 seconds, and then wait for another 10 seconds for the reset to complete.

After the reset, take out the earbuds and they should be ready for normal use.

If this method does not work, repeat the steps above once again.

10"

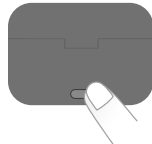


5 Charging

Charge the case via USB-C connector. (USB-C cable included)

Charging case battery level

Earbuds battery level

 Don't put wet earbuds into the charging case, fully dry off the earbuds before charging.

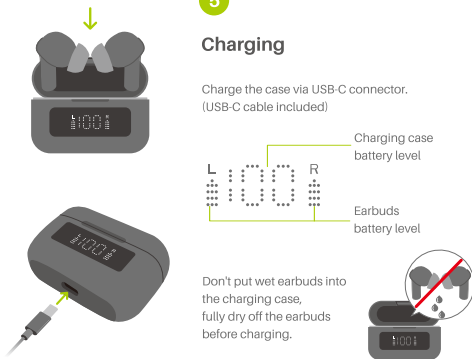


Thank you for purchasing the TOZO authentic product.
For more latest products, parts and accessories, please visit: www.tozostore.com
For any assistance please contact Email: info@tozostore.com

FC RoHS CE

TOZO®

 www.tozostore.com

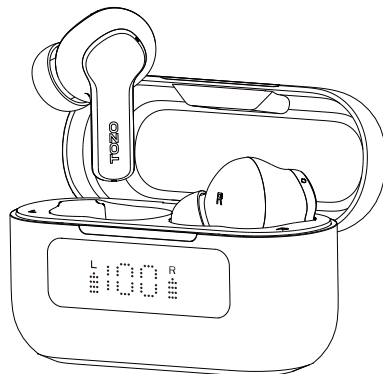

NC3 ACTIVE NOISE CANCELLATION

Quick Guide

 
1 Bluetooth Pairing and Wearing

Bluetooth Pairing

Remove the earbuds from the case. They'll reconnect to the last paired device if paired before.


If not paired or pairing canceled, the earbuds enter pairing mode with a slow white light blink.

Search [TOZO NC3] on your phone and connect.

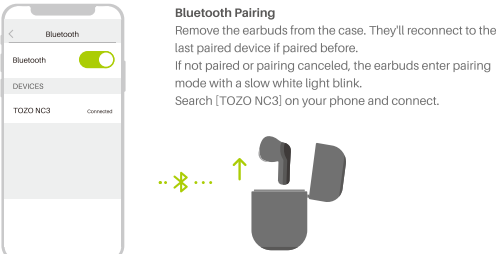

Wearing

 1. Ensure the eartip is facing downwards, and then place the earbuds into your ears.
2. Rotate the earbuds towards the side of your auricle to fit snugly.

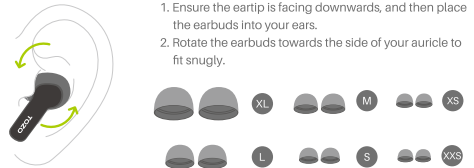

2 Smart touch control

EN | JP | DE | FR | IT | ES | NL | SE

X1: Press once X2: Press twice X3: Press three times Hold: Press and hold for 2 seconds

X2 L Previous song 前の曲 Vorheriges lied Chanson précédente Canzone precedente Cancion anterior Vorig nummer Föregående låt	X1 R Play/Pause 再生/一時停止 Spielen/Pause Jouer/Pause Giocare a/Pausa Tocar/Pausa Toneelstuk/Pauze Spela/Paus
Hold L Volume down 音量を下げる Lautstärke runter Baisser le volume Volume basso Bajar volumen Volume vermindern Sänk volymen	X2 R Next song 次の曲 Nächstes lied Chanson prochaine Canzone prossima Canción siguiente Volgende nummer Nästa låt
X3 L Normal mode ノーマルモード Normaler Modus Mode normal Modalità normale Modo normal Normale modus Normalt läge	Hold R Volume up 音量を上げる Lauter Monter le son Alza il volume Sube el volumen Volume omhoog Høj volymen
X1 L Active Noise Cancellation mode/Transparent mode アクティブノイズキャンセルモード/透過モード Aktiver Geräuschunterdrückungsmodus/Transparenter Modus Mode d'annulation active du bruit/Mode transparent Modalità di cancellazione attiva del rumore/Modalità trasparente Modo de cancelación activa de ruido/Modo transparente Activeve ruisonderdrukingsmodus/Transparente modus Aktiv brusreduceringsläge/Transparent läge	X3 R Voice assistant 音声アシスタント Sprachassistent Assistant vocal Assistente vocale Asistente de voz Spraakassistent Röstassistent
X1 L Answer 答え Antworten Réponse Rispondere Responder Antwoorden Svar	Hold L Reject 拒絶 Ablehnen Rejeter Rifiutare Rechazar Afwijzen Avvisa
X1 L Reject 拒絶 Ablehnen Rejeter Rifiutare Rechazar Afwijzen Avvisa	Hold R Hang up 電話を切る Auflegen Raccrocher Appendere Colgar Ophangen Lagg på

3 Power on/off

Power on Power off

EN Power on: Take out the earbuds from the charging case; or press and hold 3 seconds. Power off: Place the earbuds back into the charging case; or press and hold 5 seconds.

DE Power on: Entnehmen Sie die Ohrhörer aus der Ladebox oder halten Sie für 3 Sekunden gedrückt. Power off: Setzen Sie die Ohrhörer zurück in die Ladebox oder halten Sie für 5 Sekunden gedrückt.

IT Accensione: Estrai gli auricolari dalla custodia di ricarica oppure tieni premuto per 3 secondi. Spegnimento: Rimetti gli auricolari nella custodia di ricarica oppure tieni premuto per 5 secondi.

NL Aanzetten: Haal de oordopjes uit de oplaadkast of houd 3 seconden ingedrukt. Uitschakelen: Plaats de oordopjes terug in de oplaadkast of houd 5 seconden ingedrukt.

JP 電源を入れる: イヤフォンを充電ケースから取り出すか、3秒押し続けてください。電源を切る: イヤフォンを充電ケースに戻すか、5秒押し続けてください。

FR Allumer: Sortez les écouteurs du boîtier de charge ou maintenez les enfoncés pendant 3 secondes. Éteindre: Remettez les écouteurs dans le boîtier de charge ou maintenez les enfoncés pendant 5 secondes.

ES Encendido: Saque los auriculares del estuche de carga o manténgalos presionados por 3 segundos. Apagado: Vuelve a colocar los auriculares en el estuche de carga o manténgalos presionados por 5 segundos.

SE Ström på: Ta ut öronlådorna från laddningsfodralet eller håll ned 3 sekunder. Stäng av: Placera tillbaka öronsnäckorna i laddningsfodralet eller håll ned 5 sekunder.