


INSIGNIA™

USER GUIDE

7 Cu. Ft. Gas Dryer with Sensor Dry

NS-DRT70GWA5

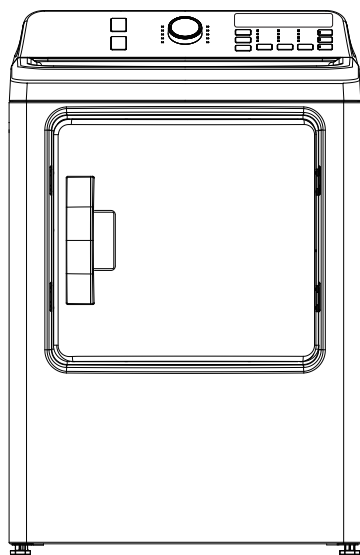

Before using your new product, please read these instructions to prevent any damage.

Contents

Introduction	2
IMPORTANT SAFETY INSTRUCTIONS	3
Features	8
Package contents	8
Main components.....	8
Unpacking your dryer	9
Choosing a location	9
Venting requirements	12
Duct requirements	13
Gas requirements	14
Electrical requirements.....	15
Grounding requirements.....	16
Reversing the door.....	16
Changing the dryer vent location (optional).....	18
Installing your dryer	22
Tools you will need.....	22
Materials you will need	22
Before you start	22
Step-by-step instructions.....	23
Using your dryer	27
Control panel	27
Drying a load of clothes	29
Unloading your dryer	29
Cleaning the lint filter or lint screens (when supplied)	30
Saving your favorite drying cycle	30
Using the control lock	30
Dryer options and settings	30
Special laundry tips	32
Maintaining your dryer	34
Cleaning the exterior.....	34
Cleaning the drum	34
Cleaning the control panel	34
Cleaning and inspecting the exhaust system.....	34
Troubleshooting	35
Specifications	37
ONE-YEAR LIMITED WARRANTY	38

Introduction

Congratulations on the purchase of your new Insignia dryer. Insignia dryers feature the latest in design and capabilities and will provide reliable and trouble-free performance.

IMPORTANT SAFETY INSTRUCTIONS

READ AND KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE

This *User Guide* contains important information on the installation, use, and care of your appliance. Please read this manual carefully before installation and operation of this machine to prevent injury and property damage.

Warnings and Important Safety Instructions in this manual DO NOT cover all possible conditions and situations that may occur. It is your responsibility to use common sense, caution, and care when installing, maintaining, and operating your dryer.

DRYER SAFETY

YOUR SAFETY AND THE SAFETY OF OTHERS ARE VERY IMPORTANT

To prevent injury to the user or other people and property damage, the instructions shown here must be followed. Incorrect operation due to ignoring of instructions may cause harm or damage, including death.

The level of risk is shown by the following indications.



WARNING

This symbol indicates the possibility of death or serious injury.



CAUTION

This symbol indicates the possibility of injury or damage to property.



WARNING

This symbol indicates the possibility of dangerous voltage constituting a risk of electrical shock is present that could result in death or serious injury.



WARNING

For your safety, the information in this manual must be followed to minimize the risk of fire or explosion, or to prevent property damage, personal injury, or death.

- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.
- Installation and service must be performed by a qualified installer or service agency.

What to do if you smell gas:

- Do not try to light any appliance.
- Do not touch any electrical switch and do not use any phone in your building.
- Clear the room, building, or area of all occupants.
- Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
- If you cannot reach your gas supplier, call the fire department.



WARNING

Fire Hazard

- Failure to follow safety warnings exactly could result in serious injury, death, or property damage.
- Do not install a booster fan in the exhaust duct.
- Install all clothes dryers in accordance with the installation instructions of the manufacturer of the dryer.



WARNING

To reduce the risk of fire, electric shock, or injury to persons when using your appliance, follow basic precautions, including the following:

- Read all instructions before using the appliance.
- Use this appliance only for its intended purpose as described in this *User Guide*.
- Before use, the dryer must be properly installed as described in this *User Guide*.
- ALWAYS follow the fabric care instructions supplied by the garment manufacturer.
- Do not dry articles that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, dry-cleaning solvents, or other flammable or explosive substances as they give off vapors that could ignite or explode.
- Do not use the dryer to dry cloths which have traces of any flammable substance, such as vegetable oil, cooking oil, machine oil, flammable chemicals, thinner, etc., or anything containing wax or chemicals, such as mops and cleaning cloths. Flammable substances may cause the fabric to catch fire by itself.

- Do not store or use gasoline or other flammable vapors and liquids near this or any other appliance.
- Risk of Suffocation and Injury from Entrapment: Do not allow children to play on or in the appliance. Close supervision of children is necessary when the appliance is used near children.
- Before the appliance is removed from service or discarded, remove the door of the drying compartment.
- Do not reach into the appliance if the drum is moving.
- Do not install or store this appliance where it will be exposed to the weather or freezing temperatures below 33° F (.6° C).
- Do not tamper with the controls and latch.
- Do not install a booster fan in the exhaust duct. The additional booster fan will change the original air flow of the dryer, which will affect the drying performance of the dryer. It may even lead to safety risks.
- Do not repair or replace any part of the appliance or attempt any servicing unless it is specifically recommended in the user maintenance instructions or in published user-repair instructions that you understand and have the skills to carry out.
- Keep the area underneath and around your appliances free of combustible materials (lint, paper, rags, etc.), gasoline, chemicals, and other flammable vapors and liquids.
- Do not place items exposed to cooking oils in your dryer. Items contaminated with cooking oils may contribute to a chemical reaction that could cause a load to catch fire. To reduce the risk of fire due to contaminated loads, the final part of a tumble dryer cycle occurs without heat (cool down period). Avoid stopping a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.
- Unplug the dryer if the machine is to be left for an extended period of time, such as during vacations.
- Packaging material can be dangerous for children. There is a risk of suffocation! Keep all packaging from children.
- Always check the inside of the dryer for foreign objects before loading laundry. Keep the door closed when not in use.
- **Clean the lint filter before or after each load.**
- Keep the area around the exhaust opening and surrounding areas free from lint, dust, and dirt.
- The interior of the dryer and exhaust duct should be cleaned periodically by qualified service personnel.
- This appliance must be properly grounded. See [Gas requirements](#) on page 14, [Electrical requirements](#) on page 15, and [Grounding requirements](#) on page 16.
- Never plug the power cord into a receptacle that is not grounded adequately and in accordance with local and national codes. Refer to installation instructions for grounding this appliance.
- Ensure pockets are free from foreign material (such as coins, knives, or pins). These objects could damage your dryer.
- Do not use heat to dry articles containing foam rubber or similarly textured rubber-like materials.
- Do not use replacement parts that have not been recommended by the manufacturer (e.g., parts made at home using a 3D printer).



WARNING

To reduce the risk of fire or explosion:

- Do not dry items that have been previously cleaned, washed, soaked, or spotted with gasoline, dry cleaning solvents, or other flammable or explosive substances. They emit vapors that could ignite or explode. Any material that has been in contact with a cleaning solvent or flammable liquids or solids should not be placed in the dryer until all traces of these flammable liquids or solids and their fumes have been removed.
- There are many highly flammable items used in homes, such as acetone, denatured alcohol, gasoline, kerosene, some liquid household cleaners, some spot removers, turpentine, waxes, and wax removers.
- Do not dry items containing foam rubber (may be labeled latex foam) or similarly textured rubber-like materials on a heat setting. Heated foam rubber materials can, under certain circumstances, produce fire by spontaneous combustion.



CAUTION

- Do not sit on top of the dryer.
- Because of continuing product improvements, Insignia reserves the right of change specifications without notice. For complete details, see [Installing your dryer](#) on page 22 before selecting cabinetry, making cutouts, or beginning installation.
- Install and use in accordance with the manufacturer's instructions.
- Do not place items in your dryer that have been spotted or soaked with vegetable oil or cooking oil. Even after being washed, these items may contain significant amounts of these oils.
- Residual oil on clothing can ignite spontaneously. The potential for spontaneous combustion increases when items containing vegetable oil or cooking oil are exposed to heat. Heat sources such as your dryer can warm these items, allowing an oxidation reaction in the oil to occur.
- Oxidation creates heat. If this heat cannot escape, the items can become hot enough to catch fire. Piling, stacking, or storing these kinds of items may prevent heat from escaping and can create a fire hazard.
- Take care that fingers are not caught in door when closing it. This may result in injury.
- Gas leaks may occur in your system, resulting in a dangerous situation.
- Gas leaks may not be detected by smell alone.
- Gas suppliers recommend you purchase and install a UL approved gas detector.

Basic Requirements

Make sure you have everything necessary for the proper installation.

- A GROUNDED ELECTRICAL OUTLET is required. Refer to the [Electrical requirements](#) section on page 15.
- GAS LINES must meet national and local codes.
- The EXHAUST SYSTEM must be made of rigid metal or flexible stiff-walled metal exhaust ducting.

Location Requirements

The dryer should be located where there is enough space at the front for loading the dryer, and enough space behind for the exhaust system.

- This dryer is factory-ready for the rear exhaust option. If you want to change the vent location, see Changing the dryer vent location (optional) section on page 18.
- Make sure the room in which the dryer is located has enough fresh air.
- The dryer must be located where there are no air-flow obstructions.
- Ambient temperature shall not be lower than 33° F (.6° C).
- For gas dryers, adequate clearance must be maintained as noted on the warning label on the back of your dryer to ensure adequate air for combustion and the proper dryer operation.
- The dryer must not be installed or stored in an area where it will be exposed to water and/or weather. The dryer area must be kept clear of combustible materials, gasoline, and other flammable vapors and liquids. A dryer produces combustible lint. The area around the dryer should be kept lint-free.

SAVE THESE INSTRUCTIONS

THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY.


Features

Package contents


- 7 Cu. Ft. Gas Dryer
- User Guide

Main components

Front components

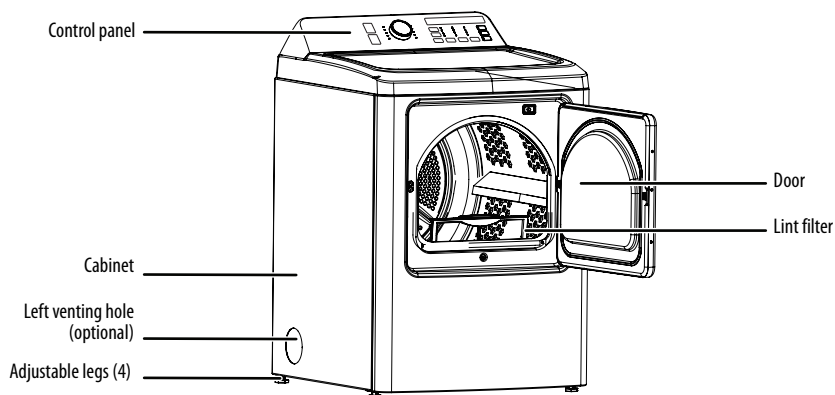

Back components

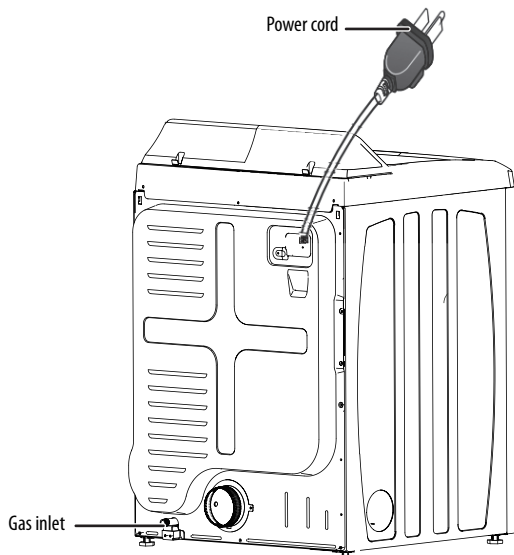

Unpacking your dryer

WARNING:

- Packing materials can be dangerous to children. Keep all packing materials (such as plastic bags and polystyrene) out of the reach of children.
- Unpack your dryer and inspect it for shipping damage. Make sure that you have received all the items shown in [Package contents](#) on page 8.
- To prevent personal injury or strain, wear protective gloves and use a furniture mover whenever lifting or carrying your dryer.

Choosing a location

**WARNING****Fire Hazard**

- Clothes dryer installation must be performed by a qualified installer.
- Install the clothes dryer according to the manufacturer's instructions and local codes.
- Do not install a clothes dryer with flexible plastic venting materials. If flexible metal (foil type) duct is installed, it must be of a specific type identified by the appliance manufacturer as suitable for use with a clothes dryer. Flexible venting materials are known to collapse, be easily crushed, and trap lint. These conditions will obstruct the clothes dryer's airflow and increase the risk of fire.
- To reduce the risk of severe injury or death, follow all installation instructions.
- Save these instructions.

**CAUTION****Important to installer**

Read the following instructions carefully before installing the dryer. These instructions should be kept for future reference.


- The dryer is not suitable for installation in a mobile home.
- Remove the door from all discarded appliances to avoid the danger of a child being trapped and suffocating.

WARNING: Your dryer must be exhausted to the outside to reduce the risk of fire when installed any place inside the house.

- You should locate your dryer where there is enough space at the front for loading the dryer and enough space behind for the exhaust system.
- Your dryer is factory-ready for the rear exhaust option. To ensure safety and product performance, changing the dryer vent location should only be done by a qualified professional. Instructions for making this change can be found here: [Changing the dryer vent location \(optional\)](#) on page 18.
- Make sure that the room you install your dryer in has enough fresh air and that there are no air-flow obstructions. The ambient temperature should not be lower than 33° F (.6° C).
- For gas dryers, adequate clearance must be maintained as noted on the warning label located on the back of your dryer, to ensure adequate air for combustion and the proper dryer operation.

- Do not install or store your dryer in an area where it will be exposed to water or weather. Keep the dryer area clear of combustible materials, gasoline, and other flammable vapors and liquids. Your dryer produces combustible lint. Keep the area around your dryer lint-free.

Dimensions

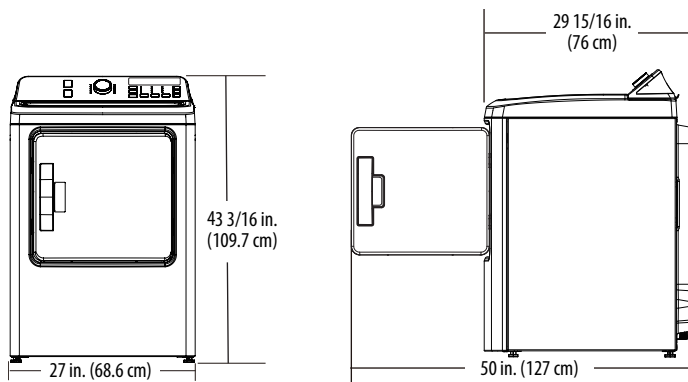

Installing side-by-side, or in an alcove, closet, or other recessed area

WARNING:


- You must exhaust your dryer to the outside to reduce the risk of fire when installed any place inside the house.
- Do NOT install another fuel-burning appliance in the same closet as your dryer.
- For information about how to select and install exhaust ducts, see [Venting requirements](#) on page 12.

Installing in a closed cabinet


Minimum clearances between your dryer and adjacent walls or other surfaces are:

- **Either side:** 1 in. (2.5 cm)
- **Rear:** 5 in. (12.7 cm)
- **Top:** 24 in. (61 cm)
- **Front:** 2 in. (5.1 cm)

Note: Your dryer can be installed in either the left or right side of the cabinet.

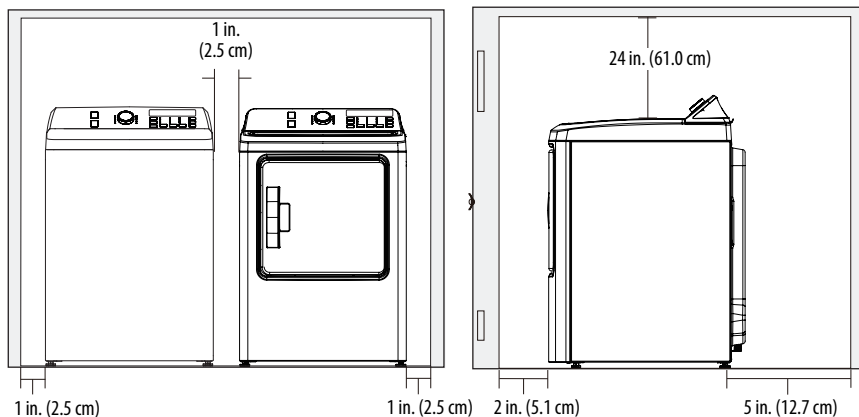

Note: The front of the closet must have two unobstructed air openings for a combined minimum total area of 72 sq. in. (465 sq. cm) with a minimum clearance of 3 in. (7.6 cm) at the top and bottom. A slatted door with equivalent space clearance is acceptable.

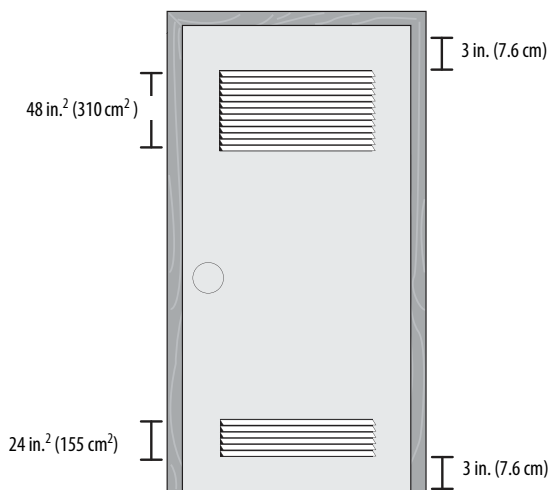

Venting requirements

WARNING:

- Do not exhaust your dryer into a chimney, a wall, a ceiling, an attic, a crawl space, or a concealed space in a building.
- Your dryer must be exhausted to the outside to reduce the risk of fire when installed in an alcove or closet.

Exhausting the dryer to the outside will prevent large amounts of lint and moisture from being blown into the room.

WARNING:**NEVER USE A PLASTIC OR NON-METAL FLEXIBLE DUCT**

If your existing duct work is plastic, non-metal, or combustible, replace it with metal before installing this dryer.

Use only a metal exhaust duct that is non-flammable to ensure containment of the exhaust air heat and lint.

See [Duct requirements](#) on page 13 for the maximum duct length and number of elbows.

- All dryers must be exhausted outside.
- Do not assemble the duct with screws or other fasteners that extend into the duct or that catch lint.
- The exhaust duct should be 4 in. (10.2 cm) in diameter.
- The total length of flexible metal duct should not exceed 7.8 ft. (2.4 m).

Duct requirements

WARNING:**You are responsible for correctly installing the exhaust system.**

- Use a 4 in. (10.2 cm) diameter rigid aluminum or rigid galvanized steel duct. Do not use a smaller duct.
- Ducts larger than 4 in. (10.2 cm) in diameter can result in increased accumulation of lint and changes in performance.
- Lint should be removed regularly (from the lint filter every cycle). Removing lint from ducts is recommended at least once each year.
- If you must use a flexible metal duct, use the type with a stiff sheet metal wall. Do not use a flexible duct with a thin foil wall. A serious blockage can result if the flexible metal duct is bent too sharply.
- Never install any type of flexible duct in walls, ceilings, or other concealed spaces.
- Keep the exhaust duct as straight and short as possible.
- Secure joints with duct tape. Do not use screws.
- Plastic, flexible ducts can kink, sag, be punctured, reduce airflow, extend drying times, and affect your dryer's operation. Do not use plastic ducts.
- Do not use non-metallic flexible ducting.
- The length of the exhaust duct should not exceed 90 ft. (27.4 m), otherwise it will extend drying times, affect dryer operations, and collect lint.
- The exhaust duct should end with an exhaust hood that has a swing-out damper to prevent back drafts and entry of wildlife. Never use an exhaust hood with a magnetic damper.
- The hood should have at least 12 in. (30.5 cm) of clearance between the bottom of the hood and the ground or other obstruction. The hood opening should point down.
- Never install a screen over the exhaust outlet.
- To avoid lint buildup, do not exhaust your dryer directly into a window well.
- Do not exhaust under a house or porch.
- If the exhaust duct must run through an unheated area, the duct should be insulated and slope slightly down towards the exhaust hood to reduce condensation and lint buildup.
- Inspect and clean the interior of the exhaust system at least once a year. Unplug the power cord before cleaning.
- Check frequently to make sure that the exhaust hood damper opens and closes freely.
- Check the condition of the exhaust vent system once per month, and clean at least once per year.

Note: If your clothes are not getting dry, check the ducting for obstructions.



- Do not exhaust your dryer into a wall, ceiling, crawl space, or concealed space of a building, gas vent, or any other common duct or chimney. This could create a fire hazard from the lint expelled by your dryer.
- To reduce the risk of fire, your dryer **MUST BE EXHAUSTED OUTDOORS**.
- The exhaust duct must not be connected to or secured with screws or other fastening devices which extend into the interior of the duct and catch lint.

Exhaust hood types

If you install your dryer into an existing exhaust system you must make sure that:

- The exhaust system meets all local, state, and national codes.
- You do not use a flexible plastic duct.
- You inspect and clean all lint buildup from inside the existing duct.
- The duct is not dented or crushed.
- The exhaust hood damper opens and closes freely.

For best results, the static pressure in any exhaust system should be between 5/16 in. (7.6 mm) to 13/16 in. (20.3 mm) of water column, and it cannot be less than 0 under any circumstances with an installed duct with a 4 in. (10.2 cm) diameter. Measurement must be done with the empty dryer working with a manometer at the point where the exhaust duct connects to your dryer. A no-heat setting should be used. The lint filter must be clean.

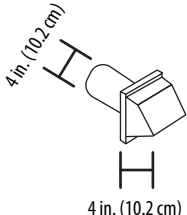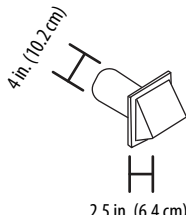WEATHER HOOD TYPES		
	Recommended	Use only for short-run installation
	 <p>4 in. (10.2 cm)</p> <p>4 in. (10.2 cm)</p>	 <p>4 in. (10.2 cm)</p> <p>2.5 in. (6.4 cm)</p>
# of 90° elbows	Rigid Metallic Maximum Distance	Rigid Metallic Maximum Distance
0	90 ft. (27.4 m)	60 ft. (18.3 m)
1	60 ft. (18.3 m)	45 ft. (13.7 m)
2	45 ft. (13.7 m)	35 ft. (10.7 m)
3	35 ft. (10.7 m)	25 ft. (7.6 m)

Gas requirements

Use only natural or LP (liquid propane) gases.

WARNING:

- Gas leaks may occur in your system, creating a dangerous situation.
- Gas leaks may not be detected by smell alone.
- Gas suppliers recommend that you purchase and install a UL approved gas detector.
- Install and use your dryer in accordance with the manufacturer's instructions.

THE INSTALLATION MUST CONFORM WITH LOCAL CODES, OR IN THE ABSENCE OF LOCAL CODES, WITH THE NATIONAL FUEL GAS CODE, ANSI Z223.1/NFPA 54, LATEST REVISION (FOR THE UNITED STATES), OR THE NATURAL GAS AND PROPANE INSTALLATION CODE, CSA B149.1, LATEST REVISION (FOR CANADA).

Gas dryers are equipped with a brass orifice for use with natural gas. If you plan to use your dryer with LP (liquid propane) gas, it must be converted for safe and proper performance by a qualified service technician.

A 1/2 in. (1.27 cm) gas supply line is recommended and must be reduced to connect to the 3/8 in. (1 cm) gas line on your dryer. The National Fuel Gas Code requires that an accessible, approved manual gas shut-off valve be installed within 6 in. (15.24 cm) of your dryer.

Gas dryers installed in residential garages must be raised 18 in. (46cm) above the floor.

Additionally, a 1/8 in. (0.3 cm) N.P.T. (National Pipe Thread) plugged tapping, accessible for test gauge connection, must be installed immediately upstream of your dryer's gas supply connection. Your dryer must be disconnected from the gas supply pipe system during any pressure testing of the system.

This dryer must be connected to the gas supply piping with a listed flexible gas connector that complies with the standard for connectors for gas appliances, ANSI Z21.24 or CSA 6.10.

DO NOT reuse old flexible metal gas lines. Flexible gas lines must be design certified by the American Gas Association (CGA in Canada).

- Any pipe joint compound used must be resistant to the action of any liquefied petroleum gas.
- As a courtesy, most local gas utilities will inspect a gas appliance installation.

GAS IGNITION - Your dryer uses an automatic ignition system to ignite the burner. There is no constant burning pilot.

COMMONWEALTH OF MASSACHUSETTS INSTALLATION INSTRUCTIONS

Your dryer must be installed by a licensed plumber or gas fitter. A "T" handle manual gas valve must be installed in the gas supply line to installed dryer at location of operation. If a flexible gas connector is used to connect your dryer, the connector may not be longer than 3 ft. (91.5 cm).

Electrical requirements

WARNING:

- The improper connection of the equipment grounding conductor can result in the risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether your dryer is properly grounded. Do not modify the plug provided with your dryer - if it doesn't fit the outlet, have a proper outlet installed by a qualified electrician.
- To prevent unnecessary risk of fire, electrical shock, or personal injury, all wiring and grounding must be done in accordance with local codes, or in the absence of local codes, with the National Electrical Code, ANSI/NFPA No. 70 - Latest Revision (for the U.S.) or the Canadian Electrical Code CSA C22.1 - Latest Revisions and local codes and ordinances. It is your responsibility to provide adequate electrical services for your dryer.

Electrical connections

DO NOT USE AN EXTENSION CORD.

U.S. and Canada

A 120Volt, 60Hz AC approved electrical service, with a 15 ampere fuse or circuit breaker is required.

Grounding requirements

Your dryer must be grounded. If a malfunction or breakdown occurs, the grounding reduces the risk of electrical shock by providing a path of least resistance for the electrical current.

WARNING:

- Certain internal parts are intentionally not grounded and may present a risk of electric shock only during servicing. Service Personnel – Do not contact the following parts while the appliance is energized: inlet valve, control board and temperature-regulating thermistor (located on blower housing).
- This dryer is equipped with a three-prong (grounding) plug for your protection against shock hazard and should be plugged directly into a properly grounded three-prong receptacle. Do not cut or remove the grounding prong from this plug.
- The plug must be plugged into an appropriate individual outlet that is properly installed and grounded in accordance with all local codes and ordinances.

Reversing the door


Your dryer is shipped with the door mounted on the right side. If you need to change it, proceed with the following:

Tools you will need




Phillips-head screwdriver


- 1 Make sure that the power cord is unplugged.
- 2 While supporting the door, remove the four hinge screws from the door, then remove it and set it aside.

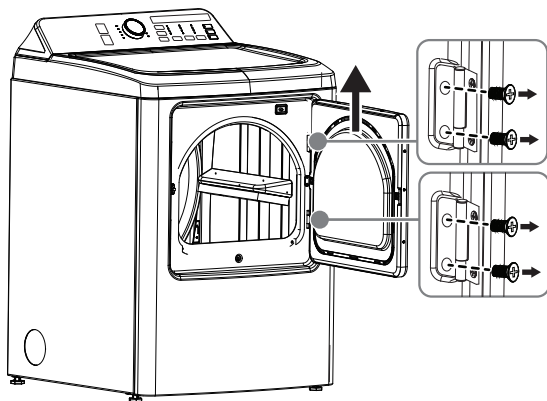


- 3 Remove the latch cover screws on the right side of your dryer, then remove the latch screws on the left side of your dryer.

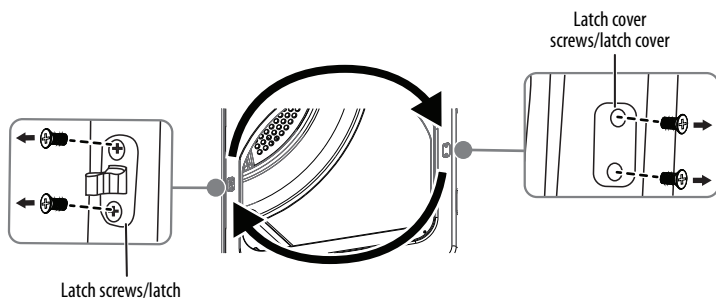


- 4 Using the screws you just removed, install the latch onto the right side of your dryer, then install the latch cover on the left side of your dryer.
- 5 Remove the 12 screws around the perimeter of the door, then remove the inside door panel from the door. Do not remove the door hinges.

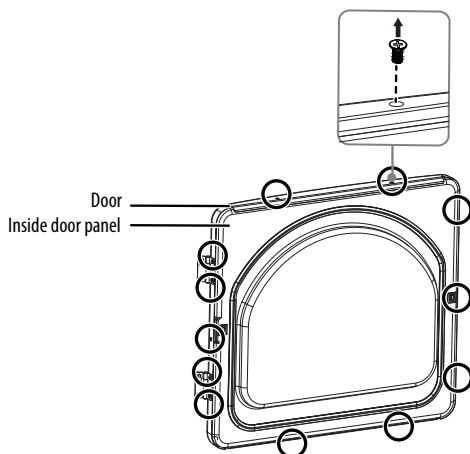

- 6 Rotate the outside door panel 180°, then reinstall the inside door panel with the screws you removed previously.

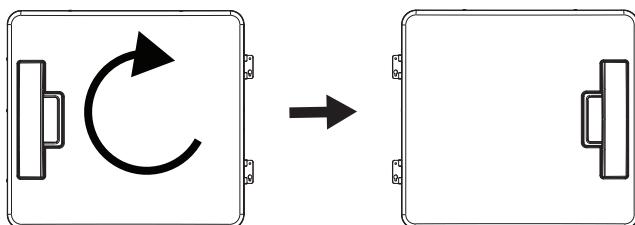

- 7 Align the hinges on the door with the hinge screw holes on the left front of your dryer, then secure the door with the four screws you previously removed.

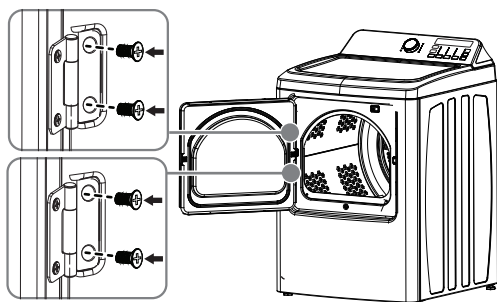

Changing the dryer vent location (optional)




CAUTION


To ensure safety and product performance, changing the dryer vent location should only be done by a qualified professional.

This dryer is shipped to vent from the back. It can also be configured to vent to the bottom or left side.

Dimensions for the installation


Rear vent (default)

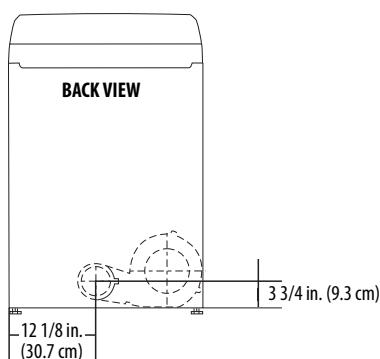

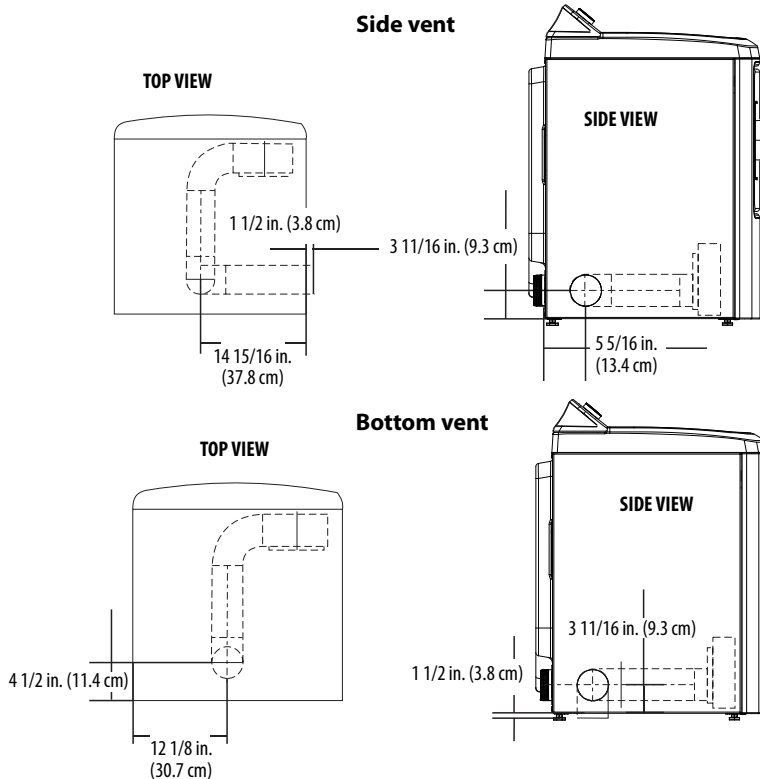

Tools you will need

 Adapter kits are standard components and can be purchased from any retailer.



Phillips-head
screwdriver



Duct tape



Gloves

Materials you will need




Adapter duct - 4 in. (10.2 cm)
rigid or semi-rigid UL listed duct
(not included)




4 in. (10.2 cm) elbow
(not included)

Option 1: Side venting


- 1 Remove the screws from the rear panel and top cover first, then remove the rear panel and rear exhaust ducts.

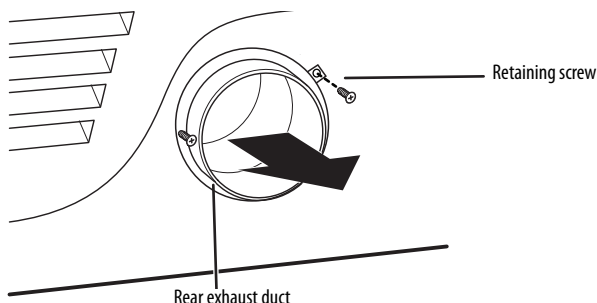

- 2 Press the tabs on the knockout, then carefully remove the knockout for the desired vent opening.
- 3 Push the adapter duct onto the blower housing of your dryer. The rear panel must be disassembled for correct installation.

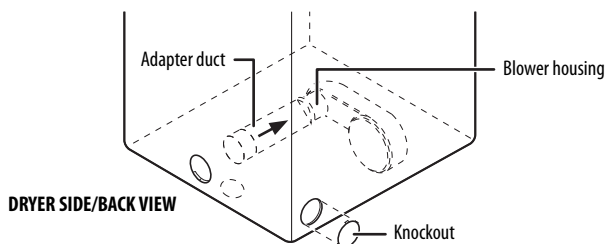


- 4 Connect a 4 in. (10.2 cm) elbow to the 4 in. (10.2 cm) duct section, and secure all joints with duct tape. Make sure that the male end of the elbow faces away from your dryer.
- 5 Insert the elbow/duct assembly through the side opening and press it onto the adapter duct. Secure in place with duct tape. The male end of the duct should protrude 1.5 in. (3.8 cm) out of your dryer to connect to the remaining ductwork.
- 6 Cover the opening in the back of your dryer with duct tape to seal the original dryer vent hole.

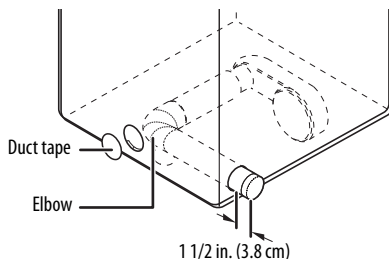


Option 2: Bottom venting


- 1 Remove the screws from the rear panel and top cover first, then remove the rear panel and rear exhaust duct.

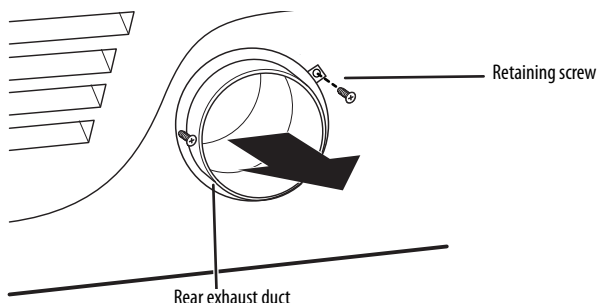

- 2 Press the tabs on the bottom vent knockout, then carefully remove it.
- 3 Push the adapter duct onto the blower housing of your dryer. The rear panel must be disassembled for correct installation.

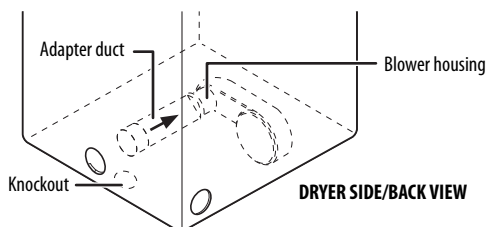


- 4 Connect a 4 in. (10.2 cm) elbow to the 4 in. (10.2 cm) duct section, and secure all joints with duct tape. Make sure that the male end of the elbow faces down through the hole in the bottom from your dryer.
- 5 Insert the elbow/duct assembly through the rear opening and press it onto the adapter duct. Secure in place with duct tape. The male end of the duct should protrude 1.5 in. (3.8 cm) out of your dryer to connect to the remaining ductwork.

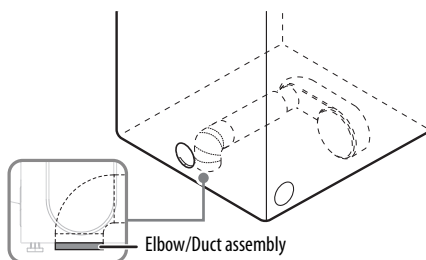

- 6 Reinstall the back panel with the screws you removed.


- 7 Cover the opening in the back of your dryer with duct tape to seal the original dryer vent hole.

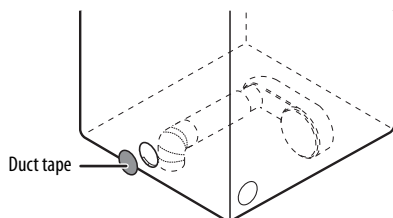

Installing your dryer

Important: We recommend that you use a qualified installer to install your dryer.

 Tools you will need



Phillips-head
screwdriver



Level



Flathead screwdriver



Duct tape



Pliers



Pipe wrench



Adjustable wrench
(opens to 1" [2.5 cm])



Utility knife



Teflon tape or joint
compound

Materials you will need

- Dryer exhaust vent kit (not included)

Before you start

Before you start installing your dryer, make sure that:

- The location you selected has a grounded electrical outlet. See [Electrical requirements](#) on page 15.
- You have the correct type of gas line. See [Gas requirements](#) on page 14.
- Your dryer vent is in the correct location. See [Changing the dryer vent location \(optional\)](#) on page 18 to change where your dryer vents.
- Your exhaust ducting (not included) is made of rigid metal or semi-rigid metal. See [Duct requirements](#) on page 13.

Step-by-step instructions

Step 1: Move your dryer to the location you selected

- Move your dryer to the location you selected, but do not push your dryer all the way in. You need to connect the ducting before you move your dryer into its final position.

Tip: For information about space requirements see [Choosing a location](#) on page 9.


Step 2: Connect the exhaust ducting

Important: Before you connect the exhaust ducting, review ducting requirements in [Duct requirements](#) on page 13.




WARNING

- Make sure that your dryer is installed properly so it exhausts air easily.
 - Keep ducts as straight as possible.
 - DO NOT restrict your dryer with a poor exhaust system.
 - DO NOT use unnecessarily long ducts that have many elbows.
 - Use a 4 in. (10.2 cm) diameter rigid metal duct. Tape all joints, including at the dryer. Never use lint-trapping screws.
 - Clean all old ducts before installing your new dryer. Be sure the vent flap opens and closes freely. Inspect and clean the exhaust system annually.
 - DO NOT use a plastic, thin foil, or non-metal flexible duct.
 - DO NOT use sheet metal screws that can accumulate lint when assembling the ducting. Joints should be taped.
 - DO NOT let the duct tape cover the ventilation slots on the back of your dryer.
 - DO NOT use dented or clogged ducts and vent.
- 1 Make sure that the exhaust hood flapper or louvers move freely.
If you do not have an exhaust hood installed, see [Exhaust hood types](#) on page 13 for information about recommended hood types. **We recommend that you have a professional install the exhaust hood.**
 - 2 Connect one end of the exhaust ducting to the exhaust duct on the back of your dryer, then use duct tape to secure the ducting to your dryer. The crimped ends of the duct section must point away from your dryer. Use a 4 in. (10.2 cm) diameter duct.

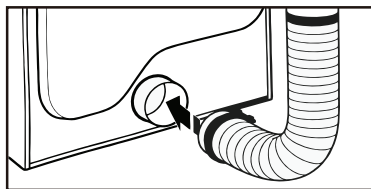


- 3 Connect the other end of the ducting to the exhaust hood, then tighten the hose clamp to secure it in place. Tape all joints with duct tape, including at the dryer.

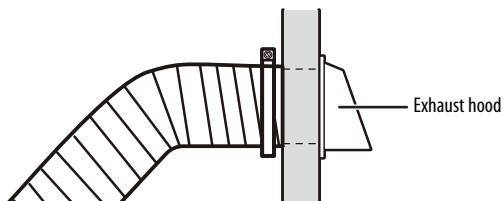

Step 3: Connect the gas line


Important: Before you connect the gas line, review the gas line requirements in [Gas requirements](#) on page 14.

- 1 Remove the pipe thread protective cap from the gas inlet.

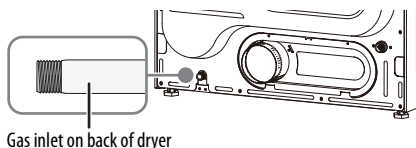


- 2 Apply a pipe joint compound or approximately two layers of Teflon tape over all threaded connections. The pipe joint compound must be resistant to the actions of any liquefied petroleum gas.
- 3 Connect all the pipe joints and tighten with a wrench (do not overtighten).


Note: An additional fitting is required to connect the 3/4 in. (1.9 cm) female thread end of a flexible connector to the 3/8 in. (1 cm) male threaded end on your dryer. Use only new AGA or CSA certified gas supply line with SS flexible connectors. The National Fuel Gas Code requires that an accessible, approved manual gas shutoff valve be installed within 6 in. (15 cm) of your dryer.

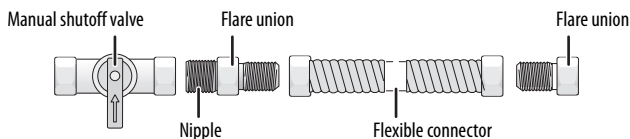

- 4 Connect the gas supply to your dryer.

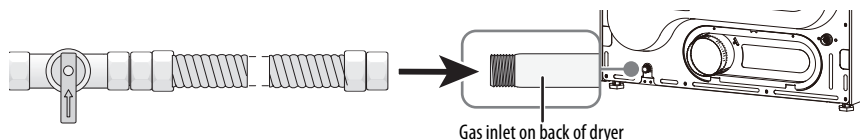

- 5 Securely tighten the gas line fitting over the threads.
- 6 Turn on the gas supply.

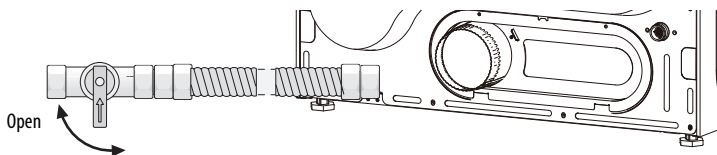


WARNING:

- All gas installations of the dryer must be equipped with a manual shut-off valve.
- Uncoated copper tubing will corrode when subjected to natural gas, causing gas leaks. Use ONLY black iron, stainless steel, or plastic-coated brass piping for the gas supply.
- Check all gas connections for leaks using a soap solution.
- If bubbles appear, tighten the connections and recheck. DO NOT use an open flame to check for gas leaks.

Step 4: Level your dryer

- To level your dryer, carefully tilt your dryer just enough to adjust the leveling feet on the bottom of your dryer. Extend the feet only as much as is necessary. If the feet are extended too much, your dryer may vibrate.

Tip: Use an adjustable wrench to adjust the leveling feet to level your dryer.

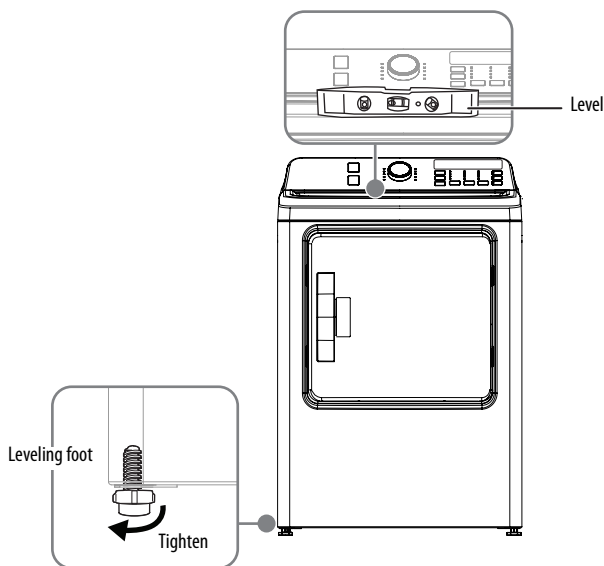

Step 5: Plug in your dryer**Important:**

- Before testing or operating your dryer, make sure that the exhaust connection is complete.
- Make sure you have read and understand the Grounding requirements on page 16.

- Make sure that all exhaust and electrical connections are complete, then plug your dryer into the electrical outlet.

Step 6: Check the final installation

- Before you use your dryer, make sure that:
 - Your dryer is plugged into an electrical outlet and is properly grounded.
 - Rigid or semi-rigid metal vent material is installed. Do not use a plastic flexible ducting.
 - The exhaust duct work is hooked up and the joints are taped.
 - Your dryer is level and sits firmly on the floor.
 - The gas is turned on with no gas leakage.
- Start your dryer to confirm that it runs, heats, and shuts off.


CAUTION: The burner may not ignite initially due to air in the gas line. Allowing your dryer to operate on a heat setting will purge the line. If the gas does not ignite within five minutes, turn your dryer off and wait five minutes. Be sure the gas supply to your dryer has been turned on. In order to confirm the gas ignition, check the exhaust for heat.

Note: When discarding or storing your old clothes dryer, remove the door.


 

Using your dryer

WARNING: To reduce the risk of fire, electric shock, or injury to persons, read the **IMPORTANT SAFETY INSTRUCTIONS** on page 3 before operating this appliance. Do not allow children to play on or in the appliance. Close supervision of children is necessary when the appliance is used near children.

Control panel

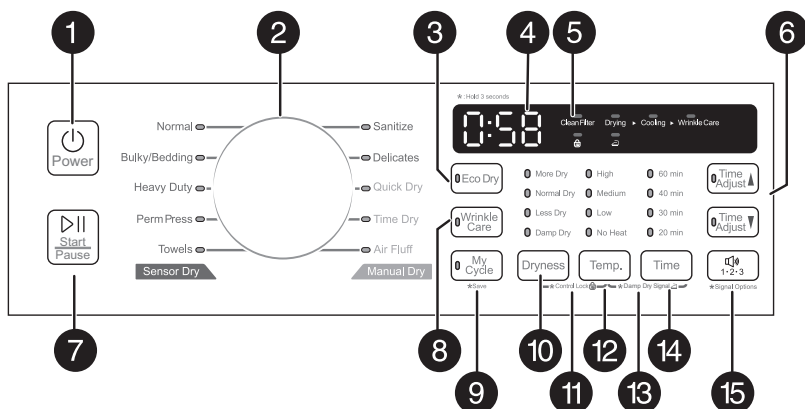

#	ITEM	DESCRIPTION
1	Power	Press to turn your dryer on or off. If your dryer is on and idle for more than 10 minutes without any buttons being pressed, it automatically turns off.
2	Cycle selector	Turn to select the cycle for the type of load. The cycle you select determines the heat control for the cycle. The Normal , Bulky/Bedding , Heavy Duty , Towels , Perm Press , Sanitize , and Delicates cycles are Sensor Dry cycles. The Quick Dry , Time Dry (20, 30, 40, or 60 min.), and Air Fluff cycles are Manual Dry cycles. For more information, see Dryer options and settings on page 30.
3	Eco Dry	Press to turn the Eco Dry cycle on or off. When turned on, the Eco Dry indicator lights up, and the dryer switches to lower power. Available only for Normal and Time Dry cycles.
4	Digital display	Sensor Dry cycle: The digital display shows the estimated remaining cycle time. Manual Dry cycle: The display shows how long the cycle will run.
5	Cycle status display	The cycle indicators light up to show which step of the cycle your dryer is in. The Clean Filter indicator lights up when the dryer is powered on to remind you to clean the lint filter.
6	Time Adjust ▲ / ▼	Press these buttons repeatedly, or press and hold, to adjust the drying time for Manual Dry cycles. (These buttons do not work for Sensor Dry cycles.)

#	ITEM	DESCRIPTION
7	 Start/ Pause	Press to start or pause the drying cycle. When you pause the cycle, you can add items to your dryer, but you cannot change any settings.
8	Wrinkle Care	Press to turn the Wrinkle Care program on or off. When turned on, the Wrinkle Care indicator lights up. Wrinkle Care provides approximately 90 minutes of intermittent tumbling in unheated air at the end of the cycle to help prevent wrinkling. The load is already dry and can be removed at any time during the Wrinkle Care cycle.
9	My Cycle	Press and hold for three seconds to save the current drying settings as your favorite. Press once to load your favorite cycle settings.
10	Dryness	Press to select the dryness level. Different dryness levels result in different drying times. For clothes to be ironed manually, select a lower dryness level. For more information, see <u>Dryer options and settings</u> on page 30. A different dryness level will result in different drying time. For clothes to be ironed manually, a lower dryness level should be selected.
11	Control Lock	Press and hold the Dryness and Temp. buttons at the same time for three seconds to turn on the Control Lock function. All buttons except  Power will not work when the control lock is activated. Press and hold again for another three seconds to turn off the function.
12	Temp.	Press Temp. repeatedly to select the drying temperature. <ul style="list-style-type: none"> • High: For sturdy cottons or those labeled Tumble Dry. • Medium: For permanent press, synthetics, lightweight cottons, or items labeled Tumble Dry Medium. • Low: For synthetic or washable knit fabrics or items labeled Tumble Dry Low. • No Heat: Provides only the air cycle without any heat.
13	Damp Dry Signal	Press and hold the Temp. and Time buttons at the same time for three seconds to turn on the Damp Dry Signal function. Damp Dry lets you know when the moisture in garments is ideal for ironing. When your dryer beeps eight times, take out the clothes you want to iron, then press  Start/ Pause to continue drying the rest of the clothes. The dryer will continue operating if items are not removed.
14	Time	Press Time repeatedly to quickly select the drying time setting (60 min. , 40 min. , 30 min. , or 20 min.).
15	Signal Options	Press and hold the button for three seconds to select one of the following three modes: <ul style="list-style-type: none"> • Option 1 (default): All three signals (Control Panel Notification Sounds, End of Cycle Signal, and Damp Dry Signal*) are on. • Option 2: End of Cycle Signal and Damp Dry Signal* are on, Control Panel Notification Sounds are off. • Option 3: Damp Dry Signal* is on, End of Cycle Signal and ControlPanel Notification Sounds are off. *when optional Damp Dry Signal is selected.

Drying a load of clothes

Step 1: Turn on your dryer

Press the **Power** button to turn on your dryer. The **Clean Filter** light in the cycle status display will blink 10 times when your dryer is turned on.

Note: You should clean the lint filter before your dryer is loaded.


Step 2: Load your dryer

- Place only one wash load in your dryer at a time.
- Heavy and light weight fabrics take different amounts of time to dry. If you mix heavy and light weight fabrics in a load, lightweight fabrics may be dry at the end of the cycle while heavy fabrics may still be damp.
- If you only need to dry one or two items, you can improve the tumbling action and drying efficiency by adding a couple of similar items to the load.
- Overloading restricts tumbling action which results in uneven drying and excessive wrinkling of some fabrics.

Step 3: Select the dryer cycle and options

- 1 Turn the cycle selector to select a drying cycle. For more information, see [Dryer options and settings](#) on page 30.

Note: You can use the **My Cycle** button to save time and quickly select your favorite settings. See [Saving your favorite drying cycle](#) on page 30 for more information.

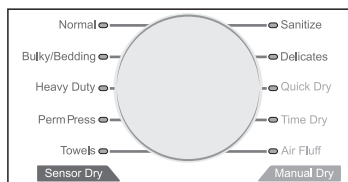

- 2 **Optional:** Use the control panel buttons to customize the drying cycle. For descriptions of the buttons, see [Control panel](#) on page 27. For information about which buttons are available for each cycle type, see [Dryer options and settings](#) on page 30.

Step 4: Start your dryer

- 1 Press the **Start/Pause** button to begin the selected cycle.
- 2 If you need to pause the cycle (for example to add or remove items or adjust the load), press the **Start/Pause** button, then open the door. Your dryer stops tumbling. When you are ready to start drying again, close the door, then press the **Start/Pause** button.

Unloading your dryer

- 1 When the drying cycle is over, your dryer beeps and then turns off.
- 2 Open the door and remove the items.

CAUTION: When you use high drying temperatures, your clothes may be hot.

Cleaning the lint filter or lint screens (when supplied)


CAUTION:

- Do not operate your dryer without the lint filter in place.
- Do not use a damaged or broken lint filter. This may reduce performance or cause a fire.

Note:

- You should clean the lint filter before every load to shorten the drying time and to make sure that your dryer is running efficiently.
- If the lint is difficult to wipe away, you can gently wash the filter in mild, soapy water. Make sure that you rinse all the soap off the filter and that the filter is dry before you put it back into your dryer.

- 1 Gently pull the lint filter out of the slot at the bottom of the drum.
- 2 Remove the accumulated lint.
- 3 Insert the lint filter back into the slot.

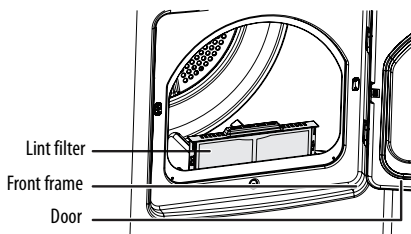


Saving your favorite drying cycle

- 1 Set the cycle selector and option functions to your favorite settings.
- 2 Press and hold the **My Cycle** button for three seconds to save these settings as your favorite cycle. The light on the **My Cycle** button flashes to confirm that the settings are saved.
- 3 To select this saved program, press the **My Cycle** button. Your dryer automatically selects your favorite settings. You can make additional changes if desired.




Using the control lock








The control lock prevents children from playing with your dryer. When turned on, the only functions that work are the  **Power** button and turning off the control lock.

To lock or unlock the dryer controls, press and hold the **Dryness** and **Temp.** buttons at the same time for three seconds. The **Control Lock** icon  on the digital screen turns on when the controls are locked.

Dryer options and settings

- Settings in **bold** are initial/default settings.
- The **Normal**, **Bulky/Bedding**, **Heavy Duty**, **Perm Press**, **Towels**, **Sanitize**, and **Delicates** cycles are Sensor Dry cycles. The **Quick Dry**, **Time Dry**, and **Air Fluff** cycles are Manual Dry cycles.

- For best results, follow the wet load size recommendations noted for each cycle:
-  **Small load:** Fill the dryer drum with three to four items, not more than ¼ full.
-  **Medium load:** Fill the dryer drum up to about ½ full.
-  **Large load:** Fill the dryer drum up to about ¾ full. Do not overload. Items need to tumble freely.

CYCLE	ITEM TYPE	TEMP	DRYNESS	WRINKLE CARE	DAMP DRY SIGNAL	TIME 	ECO DRY	MY CYCLE	MAX AMT 
Normal	<ul style="list-style-type: none"> Cotton Underwear Linen 	Medium	More Dry Normal Dry Less Dry	Y	Y	N	Y	Y	
			Damp Dry		N				
Bulky/ Bedding	<ul style="list-style-type: none"> Blankets Sheets Comforter 	Low	More Dry Normal Dry Less Dry	Y	Y	N	N	Y	
			Damp Dry		N				
Heavy Duty	<ul style="list-style-type: none"> Jeans Corduroys Work clothes 	High	More Dry Normal Dry Less Dry	Y	Y	N	N	Y	
			Damp Dry		N				
Perm Press	<ul style="list-style-type: none"> Wrinkle free cottons Synthetic fabrics Knits 	Medium Low	More Dry Normal Dry Less Dry	Y	Y	N	N	Y	
			Damp Dry		N				
Towels	<ul style="list-style-type: none"> Towels Heavy cottons 	High	More Dry Normal Dry Less Dry	Y	Y	N	N	Y	
			Damp Dry		N				
Sanitize	<ul style="list-style-type: none"> Towels Bedding Children's clothes 	High	More Dry	Y	Y	N	N	Y	
Delicates	<ul style="list-style-type: none"> Undergarments Delicate fabrics 	Low	More Dry Normal Dry Less Dry	Y	Y	N	N	Y	
			Damp Dry		N				
Quick Dry	n/a	High Medium Low	n/a	Y	n/a	Y	N	Y	
Time Dry	n/a	High Medium Low No Heat	n/a	Y	n/a	Y	Y	Y	
Air Fluff	n/a	No Heat	n/a	Y	n/a	Y	N	Y	

Notes:

- The function "TIME" is only available for Manual Dry cycles.
- For improved drying performance of bulky items, stop mid-cycle and unroll the item, then resume drying.

Special laundry tips

ITEMS	DRYING GUIDE
Blankets	<ul style="list-style-type: none"> Follow the care label instructions. Use the Bulky/Bedding or Heavy Duty cycle and dry only one blanket at a time for best tumbling action. Make sure that the item is thoroughly dry before using or storing. During the drying cycle, you may need to reposition the item to make sure that it is completely dried. Add clean sneakers or tennis balls to the load.
Curtains and draperies	<ul style="list-style-type: none"> Use the cycle recommended on the care instructions. A Medium temperature with the Normal dry cycle helps minimize wrinkling. Dry these in small loads for best results and remove as soon as possible.
Cloth diapers	<ul style="list-style-type: none"> Use the Normal cycle on the Medium temperature setting for soft fluffy diapers.
Down filled items (like jackets, sleeping bags, or comforters)	<ul style="list-style-type: none"> Use the Normal cycle on the Medium temperature setting. Add a couple of dry towels to absorb moisture and shorten drying time.
Foam rubber (like rug backs, stuffed toys, or shoulder pads)	<ul style="list-style-type: none"> DO NOT dry on a heat setting. Use the Air Fluff cycle (no heat). WARNING: Drying a rubber item with heat may damage it or create a fire hazard.
Pillows	<ul style="list-style-type: none"> Use the Normal cycle. Add a couple of dry towels and a pair of clean sneakers or tennis balls to help the tumbling action and to fluff the item. DO NOT dry kapok or foam pillows in your dryer.
Plastics (like shower curtains or outdoor furniture covers)	<ul style="list-style-type: none"> Use the Air Fluff or a Time Dry cycle on the Low temperature setting depending on the care label instructions.

CAUTION:

Items NOT to dry:

- Fiberglass items (curtains, draperies, etc.)
- Woolens, unless recommended on the label.
- Items spotted or soaked with vegetable or cooking oils.

**WARNING:****FIRE OR EXPLOSION HAZARD**

Failure to follow safety warnings exactly could result in serious injury, death or property damage.

Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

WHAT TO DO IF YOU SMELL GAS

- Do not try to light any appliance.
- Do not touch any electrical switch; do not use any phone in your building.
- Clear the room, building or area of all occupants.
- Immediately call your gas supplier from a neighbor's phone.
- Follow the gas supplier's instructions.
- If you cannot reach your gas supplier, call the fire department.

Installation and service must be performed by a qualified installer, service agency or the gas supplier

Maintaining your dryer

Cleaning the exterior

- Clean with a soft, damp cloth. Do not use abrasive substances.
- Protect the surface from sharp objects.
- Do not place any heavy or sharp objects or a detergent box on your dryer. Keep them in a separate storage area. These items may scratch or damage the top cover of your dryer.
- Because the entire dryer has a high-gloss finish, the surface can be scratched or damaged.

Cleaning the drum

- Clean with a cloth dampened with a mild, non-abrasive cleaner suitable for stainless steel and anodized surfaces.
- Remove the cleaner residue and dry with a clean cloth.

Cleaning the control panel

- Clean with a soft, damp cloth. Do not use abrasive substances.
- Do not spray cleaners directly on the panel. The control panel finish may be damaged by some laundry pre-treatment soil and stain remover products. Apply such products away from your dryer and wipe up any spills or over-spray immediately.

Cleaning and inspecting the exhaust system

Inspect and clean the exhaust yearly to maintain optimum performance.

- 1 Disconnect the exhaust duct from your dryer and from the exhaust hood (at the exhaust outlet) outside of the building.
- 2 Check the interior of the duct and remove any lint.
- 3 Make sure that lint is removed from the exhaust hood. Lint may collect in the exhaust hood so that the flappers or louvers will not open or close completely.
- 4 After cleaning the exhaust hood, make sure that the flapper or louvers move freely.
- 5 Reassemble the exhaust duct and hood, making sure that the joints are secure and sealed.
- 6 Operate your dryer and make sure that the exhaust air is not obstructed in the vent and that there are no leaks in the system.

Note: Check and clean the outside exhaust hood frequently to ensure a proper air flow.



Certain internal parts are intentionally not grounded and may present a risk of electric shock only during servicing. Service Personal: Do not contact the following parts while the appliance is energized: Control Board and Temperature-Regulating Thermistor (located on the Blower Housing).

Troubleshooting

Check this table for solutions to common questions or problems. If your issue is not listed here, contact customer service at 1-877-467-4289 (U.S. and Canada).

PROBLEM	SOLUTION
My dryer does not start.	<ul style="list-style-type: none"> • Make sure that the dryer door is closed completely. • If you opened the door during the drying cycle, press the ► Start/Pause button again. • Make sure that the power cord is plugged into a working electrical outlet. • Check the circuit breaker and fuses for your dryer's electrical connection.
My dryer does not heat or dry.	<ul style="list-style-type: none"> • Select a cycle other than Air Fluff and a temperature setting that is not "No Heat." • Make sure that the gas supply is turned on. • Do not overload your dryer. Depending on the size of your washer, one wash load should equal one dry load. • Dry heavy items and lightweight items separately. • If you are drying large, bulky items, like blankets or comforters, try repositioning the load to ensure even drying. This may need to be done a few times throughout the cycle. • The load may be too small to tumble correctly. Add a few towels or use the Time Dry cycles. • Clean the lint filter and exhaust duct. • Check the circuit breaker and fuses for your dryer's electrical connection. • Make sure that the outside exhaust hood opens and closes freely. • Check the exhaust system for lint buildup. Ducting should be inspected and cleaned annually. • Make sure that your exhaust duct is a 4 in. (10.2 cm) rigid or semi-rigid metal duct.
My dryer is noisy.	<ul style="list-style-type: none"> • It is normal for your dryer to hum due to the high velocity of air moving through the dryer drum and exhaust system. • It is normal to hear the dryer gas valve cycle on and off during the drying cycle. • Check the load for objects, like coins, loose buttons, nails, or broken zippers. • Remove loose snaps or buckles. • Make sure that your dryer is level.
My clothes are unevenly dried.	<ul style="list-style-type: none"> • Seams, pockets, and other similarly heavy areas may not be completely dry when the rest of the load has reached the selected dryness level. This is normal. Select the More Dry dryness level if desired. • If you dry one heavy item with a lightweight load (such as one towel with sheets), the heavy item may not be completely dry when the rest of the load has reached the selected dryness level. For best drying results, dry heavy items and lightweight items separately. • Items that are not dry enough may be placed back in your dryer using a Time Dry cycle until your desired dryness is reached.
My dryer shuts off before the clothes are dried.	<ul style="list-style-type: none"> • The dryer load is too small. Add more items or a few washed towels and restart the cycle. • The dryer load is too large. Remove some items or reposition items, and restart the cycle. • Make sure that your dryer is level. • Consider using a Time Dry cycle.
My dryer has an odd odor.	<ul style="list-style-type: none"> • Your dryer draws air from the surrounding room air. Household odors from paint, varnish, strong cleaners, and so forth, may enter your dryer with the surrounding room air. This is normal. When these odors linger in the air, ventilate the room completely before using your dryer.

PROBLEM	SOLUTION
My clothing is wrinkled after using the Wrinkle Care setting.	<ul style="list-style-type: none"> • If the dryer load is too large, items cannot tumble freely. Try loading fewer items. • Make sure that the items in the dryer load are similar. The Wrinkle Care setting works best when the items in the dryer load are similar-type items.
There is lint on my clothing.	<ul style="list-style-type: none"> • Check pockets thoroughly before washing and drying clothes. Items like paper or tissue can break up into small pieces that turn into lint. • Clean the lint filter before every cycle. Some loads that produce high amounts of lint can clog the filter. • Some fabrics are lint producers (like a fuzzy white cotton towel) and they should be dried separately from clothes that are lint trappers (like a pair of black linen pants). • Divide larger loads into smaller loads for drying.

Note: If you notice that the program light is flashing rapidly but the machine is not running, it may be due to a power outage. If you want to continue running the dryer, restart the program.

Understanding the error codes

Your dryer is equipped with an automatic error-monitoring system to detect and diagnose problems at an early stage. When an error occurs, your dryer beeps for 10 seconds every 15 minutes.

ERROR CODE	POSSIBLE CAUSE	SOLUTIONS
C9	The PCB failed.	Call customer service for help. Do not use your dryer.
E4	The humidity sensor failed.	Your dryer will complete the current operating cycle but garments could be over dried. Your dryer can still operate using the Time Dry cycles. Call the service center for help.
E5	The temperature sensor failed.	Call customer service for help. Do not use your dryer.

Specifications

Dimensions (H × W × D)	43 3/16 × 27 × 29 15/16 in. (109.7 × 68.6 × 76 cm)
Weight	Net: 115.7 lbs. (52.5 kg) Gross: 131.2 lbs. (59.5 kg)
Capacity	7 cu. ft.
Power Supply	Electric: 120V at 60Hz
Heating rating	16,000 Btu/h
Noise level	<69 dB

ONE-YEAR LIMITED WARRANTY

Best Buy, or its Authorized Partner of Insignia branded products, warrants to you, the original purchaser of this new Insignia branded product ("Product"), that the Product shall be free of defects in the original manufacture of the material or workmanship for a period of one (1) year from the date of your purchase of the Product or the date of delivery (if later than the date of purchase) ("Warranty Period").

For this warranty to apply, your Product must be (i) purchased in the United States or Canada from a Best Buy branded retail store, online at www.bestbuy.com or www.bestbuy.ca, or from Best Buy's Authorized Partner, and (ii) packaged or sold with this warranty statement.

The term "Best Buy", as used in this warranty, refers to Best Buy branded retail stores, www.bestbuy.com, www.bestbuy.ca, and Best Buy's Authorized Partner.

Because Insignia cannot control the quality of products sold by unauthorized sellers, this warranty applies only to Products that were purchased from Best Buy or an Insignia Authorized Partner, unless otherwise prohibited by law. Insignia reserves the right to reject warranty claims for Products purchased from unauthorized sellers, including unauthorized websites.

REPAIR OR REPLACEMENT, AS PROVIDED UNDER THIS WARRANTY, IS YOUR EXCLUSIVE REMEDY FOR BREACH OF WARRANTY. INSIGNIA SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR THE BREACH OF ANY EXPRESSED OR IMPLIED WARRANTY ON THIS PRODUCT, INCLUDING, BUT NOT LIMITED TO, LOST DATA, LOSS OF USE OF YOUR PRODUCT, LOST BUSINESS, OR LOST PROFITS. INSIGNIA PRODUCTS MAKES NO OTHER EXPRESS WARRANTIES WITH RESPECT TO THE PRODUCT. ALL EXPRESSED AND IMPLIED WARRANTIES FOR THE PRODUCT, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE WARRANTY PERIOD SET FORTH ABOVE AND NO WARRANTIES, WHETHER EXPRESSED OR IMPLIED, WILL APPLY AFTER THE WARRANTY PERIOD. SOME STATES, PROVINCES, AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON (i) HOW LONG AN IMPLIED WARRANTY LASTS, (ii) EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, or (iii) LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE.

How long does the coverage last?

The Warranty Period lasts for 1 year (365 days) from the date you purchased the Product or the date of delivery (if later than the date of purchase). Your purchase date is printed on the receipt you received with the Product. In the event that Authorized Partner ceases to sell the covered Insignia branded product, this warranty shall terminate for that product and there shall be no repair or replacement of the Product.

What does this warranty cover?

During the Warranty Period, if the original manufacture of the material or workmanship of the Product is determined to be defective by an authorized Insignia repair center or store personnel, Insignia will (at its sole option): (1) repair the Product with new or rebuilt parts; or (2) replace the Product at no charge with new or rebuilt comparable products or parts. Products and parts replaced under this warranty become the property of Insignia and are not returned to you. If service of Products or parts are required after the Warranty Period expires, you must pay all labor and parts charges. This warranty lasts as long as you own your Insignia Product during the Warranty Period. Warranty coverage terminates if you sell or otherwise transfer the Product.

How to obtain warranty service?

If you purchased the Product at a Best Buy retail store location or from a Best Buy online website (www.bestbuy.com or www.bestbuy.ca), please take your original receipt and the Product to any Best Buy store. Make sure that you place the Product in its original packaging or packaging that provides the same amount of protection as the original packaging. If you purchased your Product from an Authorized Partner, call Insignia at 1-877-467-4289.

To obtain warranty service, in the United States and Canada call 1-877-467-4289. Call agents may diagnose and correct the issue over the phone.

If you purchased the Product from an Authorized Partner other than Best Buy, please call 1-888-BESTBUY in the United States or 1-866-BESTBUY in Canada. You will be asked to provide proof of purchase and to return your Product to Best Buy. Make sure that you put the Product in its original packaging or packaging that provides the same amount of protection as the original packaging.

Where is the warranty valid?

This warranty is valid only in the United States and Canada to the original purchaser of the product from an Authorized Partner, in the country where the original purchase was made.

What does the warranty not cover?

This warranty does not cover:

- Food, beverage, and or medicine loss/spoilage.
- Damage to other products caused by a power surge or other similar issue while connected to the Product.
- Customer instruction/education.
- Installation.
- Set up adjustments.
- Cosmetic damage.
- Damage due to weather, lightning, and other acts of God, such as power surges.
- Accidental damage.
- Misuse.
- Abuse.
- Negligence.
- Commercial purposes/use, including but not limited to use in a place of business or in communal areas of a multiple dwelling condominium or apartment complex, or otherwise used in a place of other than a private home.
- Modification of any part of the Product, including the antenna.
- Display panel damaged by static (non-moving) images applied for lengthy periods (burn-in).
- Damage due to incorrect operation or maintenance.
- Connection to an incorrect voltage or power supply.
- Damage due to attempted repair by any person not authorized by Insignia to service the Product.
- Products sold "as is" or "with all faults".
- Consumables, including but not limited to batteries (i.e. AA, AAA, C etc.).
- Products where the factory applied serial number has been altered or removed.
- Loss or Theft of this product or any part of the product.
- Display panels containing up to three (3) pixel failures (dots that are dark or incorrectly illuminated) grouped in an area smaller than one tenth (1/10) of the display size or up to five (5) pixel failures throughout the display. (Pixel based displays may contain a limited number of pixels that may not function normally.).
- Failures or Damage caused by any contact including but not limited to liquids, gels or pastes.

Contact Insignia:

1-877-467-4289

www.insigniaproducts.com

INSIGNIA is a trademark of Best Buy and its affiliated companies.

*Distributed by Best Buy Purchasing, LLC

7601 Penn Ave South, Richfield, MN 55423 U.S.A.

©2025 Best Buy. All rights reserved.

INSIGNIA™

www.insigniaproducts.com

1-877-467-4289 (U.S. and Canada)

INSIGNIA is a trademark of Best Buy and its affiliated companies.

Distributed by Best Buy Purchasing, LLC

7601 Penn Ave South, Richfield, MN 55423 U.S.A.

©2025 Best Buy. All rights reserved.

V3 ENGLISH
25-0276