




DIGITAL WALL CLOCK

AC-WC165A

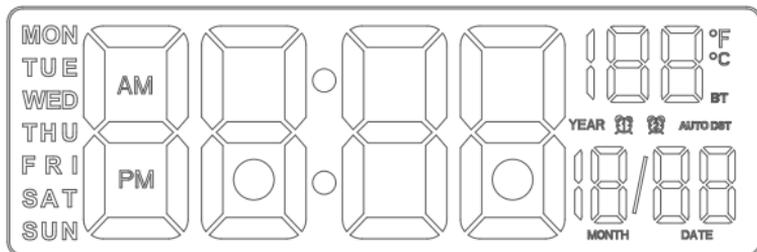

User Manual

- Email: support@easy-era.com -

ENGLISH



Thank you for choosing our product.
If you have any questions, concerns or need any help,
please contact us at
support@easy-era.com.

PACKING LIST

Digital Wall Clock x 1

Remote Control x 1

User Manual x 1

Power Adapter x 1



Charging Cable x 1

Hole Alignment Tool x 1

Hanging Nails x 2

PRODUCT OVERVIEW

Digital Wall Clock

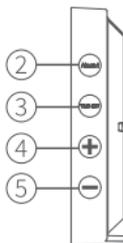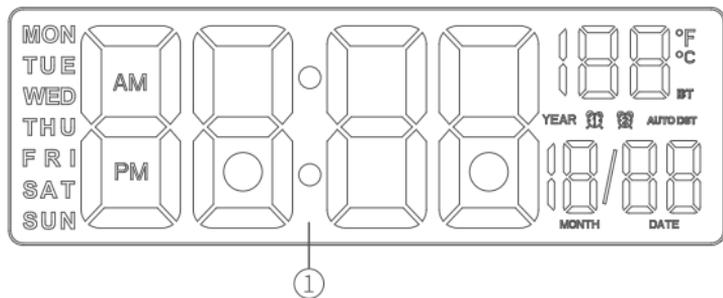


① Time Display

② Alarm Setting Button

③ Time Setting Button

④ + Button


⑤ - Button

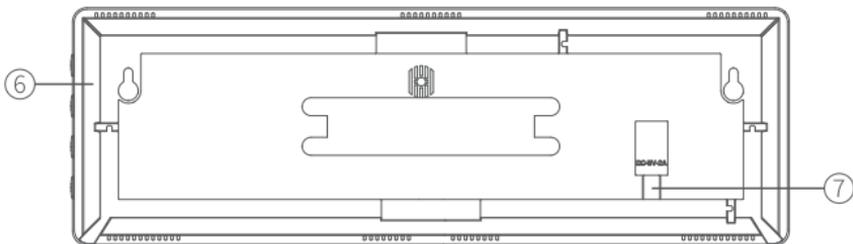

⑥ Wraparound RGB Light

⑦ Power Input

Remote Control

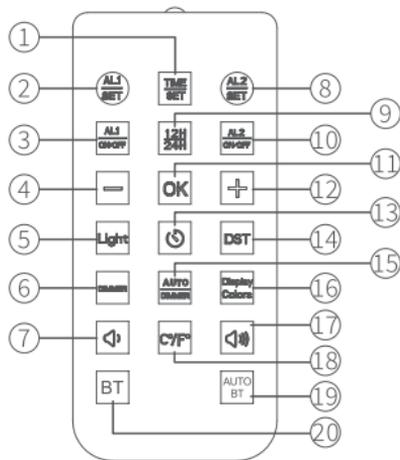

① Time setting

② Alarm 1 setting

③ Alarm 1 on/off

④ Setting -

⑤ Wraparound RGB light on/off

⑥ Screen brightness setting

⑦ Volume -

⑧ Alarm 2 setting

⑨ 12H/24H switching

⑩ Alarm 2 on/off


⑪ OK

⑫ Setting +

- ⑬ Timer setting
- ⑭ Daylight saving time mode
- ⑮ Automatic brightness
- ⑯ Display color switching
- ⑰ Volume +
- ⑱ Temperature unit switching
- ⑲ AUTO BT (for auto time sync)
- ⑳ BT (for time sync)

QUICK START


Installation

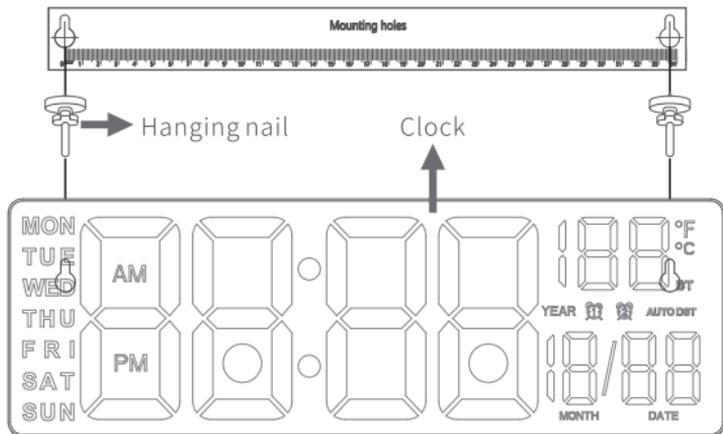

1. Place the hole alignment tool on the wall and align the hanging nails with the holes.
2. Nail the nails into the wall.
3. Hang the clock on the nails securely.

Power Connection

Connect the provided power adapter and charging cable, and then plug the clock into a 100V-240V power supply.

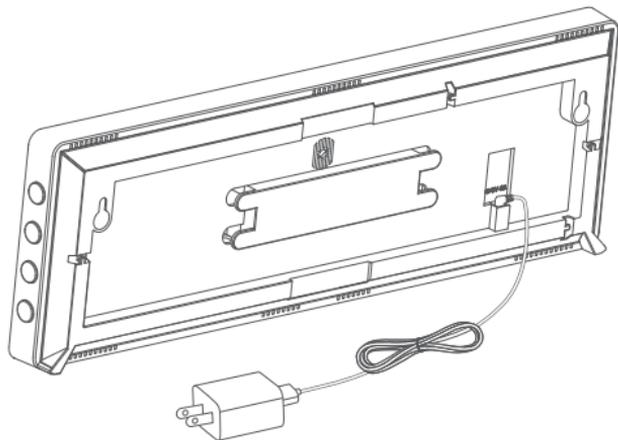

SET UP THE CLOCK

Tip:

When using the remote control, ensure it is directly pointed at the clock.

Time Setting

Option 1: Using Clock Buttons

To set the time, press the  button to navigate through the hour, minute, year, month, and date settings. Use the  and  buttons to make adjustments. After making changes, press the  button once more to confirm and exit.

Option 2: Using the Remote Control

To set the time, press the  button to enter the time setting. Use the  and  buttons to make adjustments and press the  button to proceed. After making changes, press the  button once more to confirm and exit.

Time Sync via BT

Press the **BT** button on the remote to enter **BT** pairing mode. The “**BT**” indicator will flash on the clock. Then, enable the **BT** function on your mobile phone.

Select **EASYERA CLOCK** from the search list and pair with it.

After successful pairing, the clock's time will automatically sync with your device. Afterward, the clock will exit **BT** pairing mode.

Tip:

You can press the **AUTO BT** button on the remote to turn the auto time sync feature on/off.

ON: The clock automatically enables **BT** pairing at 10:00 AM and 10:00 PM each day to sync the time when the previously paired device is within 10 meters.

OFF: Auto time sync is disabled.

Alarm Setting

Tips:

* You can use the clock buttons to set alarm 1 and the remote control to set alarm 1 and alarm 2.

* While setting the time, if you don't make any adjustments within 10 seconds, the setting will automatically exit.

Option 1: Using Clock Buttons

Press and hold the  button to enter the alarm setting. Use the  and  buttons to adjust the time, and press the  button to proceed. Then, select the repeated cycle from Monday to Friday, Saturday to Sunday, or Monday to Sunday using the  or  button. Finally, press the  button to finish the setting.

Option 2: Using the Remote Control

Press the  or  button to enter the alarm setting. Use the  and  buttons to adjust the time, and press the  button to proceed. Then, select the repeated cycle from Monday to Friday, Saturday to Sunday, or Monday to Sunday using the  or  button. Finally, press the  button to finish the setting.

Tips:

- * Once the alarm is activated, it will ring at the scheduled time. When the alarm goes off, you can stop it by pressing any button. If there is no operation within 20 minutes, the alarm will automatically stop. The subsequent alarms will not be affected.
- * To cancel the alarm, press the  button once on the clock or use the  or  button on the remote control. Press the same button once again to enable the alarm.

Wraparound RGB Light

To turn on the wraparound RGB light, press the  button on the remote control. You can cycle through different light modes by pressing the  button repeatedly. Adjust the brightness level using the  and  buttons (range: L01-L10). To turn off the wraparound RGB light, press the  button multiple times until it is off.

Screen Brightness

To adjust the screen brightness, press the  button on the remote control. Each press will cycle through different brightness levels, including high brightness, medium brightness, low brightness, very low brightness, and finally turning off the screen.

Timer

To enter the timer setting, press the  button on the remote control. Use the  and  buttons to set the countdown time and press the  button to confirm. To turn off the countdown, press and hold the  button.

Tips:

- * Once the countdown reaches zero, the clock will ring for 10 seconds.
- * While setting the time, if you don't make any adjustments within 10 seconds, the setting will automatically exit.

Volume

Use the   buttons to adjust the volume (range: V01-V05).

Display Color

To change the display color, press the  button on the remote control. Each press will cycle through different color options, including green, blue, yellow, red, white, pink, purple, gradient, magic color, up and down gradient, and left and right gradient.

Tips:

- * When setting the wraparound RGB light mode to C01, it will automatically synchronize with the display color.
- * When the time display is in colorful mode (gradient or magic color), you can press and hold the  button on the remote control to quickly adjust the color. Release the button when the display changes to your desired color.

12H/24H Switching

Press the  button on the remote control to switch between 12-hour and 24-hour time format.

Daylight Saving Time

Press the  button on the remote control to enable/disable daylight saving time. Press and hold the  button on the remote control to switch the daylight saving time region between the US and Australia (indicated as US or AUS on the display).

Automatic Brightness

Press the  button on the remote control to enable/disable automatic brightness.

Temperature Unit Switching

Press the  button on the remote control to switch the temperature unit.

MAINTENANCE

1. Store the clock in a display cabinet or keep it in a box in a cool and dry location.
2. To clean, use a soft damp cloth to wipe off dust. Avoid using liquids or abrasive cleaners.

Please aim at this product when using the remote control.

- ***"This device complies with the Australian/New Zealand Radiocommunications Standards under RCM. Operation is subject to the following two conditions:**

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation."**

