


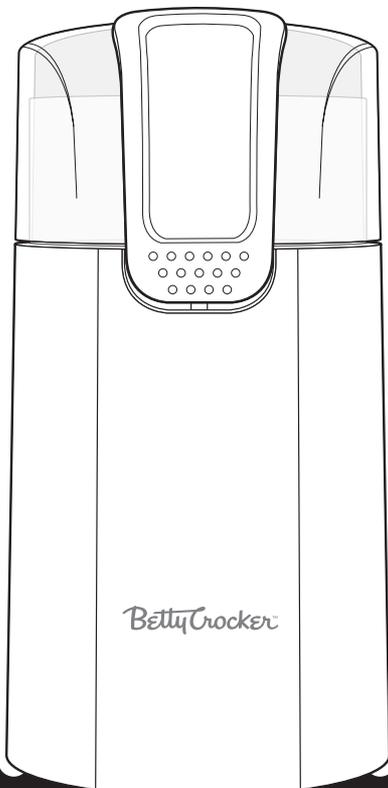

Betty Crocker™ Coffee Grinder



HOUSEHOLD USE ONLY

BC-4821W

Table of Contents

Important Safeguards.....	3
Before Your First Use	5
Know the Parts of Your Coffee Grinder	6
Using Your Coffee Grinder	7
Cleaning Your Coffee Grinder	9
Limited Warranty	10
To Return for Service	11
Replacement Parts	12

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock and personal injury, including the following:

1. **Read all instructions carefully before use.**
2. To protect against risk of electric shock, do not immerse motor base, cord, or plug in water or other liquid. See instructions for cleaning.
3. Unplug cord from outlet when not in use, before putting on or taking off parts, and before cleaning.
4. Avoid contact with moving parts.
5. Never operate this product if it has a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
6. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are closely supervised and instructed concerning use of the appliance by a person responsible for their safety. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
7. Use this product only for its intended use as described in this manual.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner or in a heated oven.
11. Only process small quantities of coffee beans for immediate consumption. This appliance is not intended to prepare large quantities of ground coffee at one time.

12. Check bowl for foreign objects before using. Never drop or insert any object into any opening.
13. Blades are sharp. Handle carefully.
14. Be certain lid is securely locked in place before operating appliance.
15. Do not attempt to modify the lid interlock mechanism in any way.
16. The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock or injury.
17. Do not remove lid until blades have completely stopped rotating.
18. Do not twist, kink or wrap the power cord around the appliance, as this may cause the insulation to weaken and split, particularly in the location where it enters the unit.
19. **Do not leave appliance unattended while in use.**

SAVE THESE INSTRUCTIONS

HOUSEHOLD USE ONLY

POWER CORD INSTRUCTIONS

1. A short power-supply cord is provided to reduce the hazard resulting from entanglement or tripping over a long cord.
2. Extension cords may be used if care is exercised. If it is necessary to use an extension cord, it should be positioned so that it does not drape over the counter or tabletop where it can be pulled on by children or tripped over unintentionally.
3. The electrical rating of the extension cord must be the same or more than the wattage of the appliance (the wattage is shown on the rating label located on the underside or back of the appliance).
4. Avoid pulling or straining the power cord at outlet or appliance connections.

POLARIZED PLUG

1. Your appliance is equipped with a polarized plug (one blade is wider than the other).
2. To reduce the risk of electrical shock, this plug is intended to fit into a polarized outlet only one way.
3. If the plug does not fit fully into the outlet, reverse the plug. If it does not fit, please consult a qualified electrician. Do not attempt to defeat this safety feature by modifying the plug in any way.


WARNING: Improper use of the power cord may result in electric shock. Consult a qualified electrician if necessary.

Before Your First Use

Carefully unpack the grinder and remove all packaging materials from in and around the unit. To remove any dust that may have accumulated during packaging, wipe the unit with a cloth or sponge moistened in warm water. Dry thoroughly.

WARNING: Do not immerse the main body of the unit, cord or plug in water or any other liquid. Do not pour or run water into the main body of the appliance. Do not use harsh or abrasive cleansers on any part of the appliance.

Know the Parts of Your Coffee Grinder

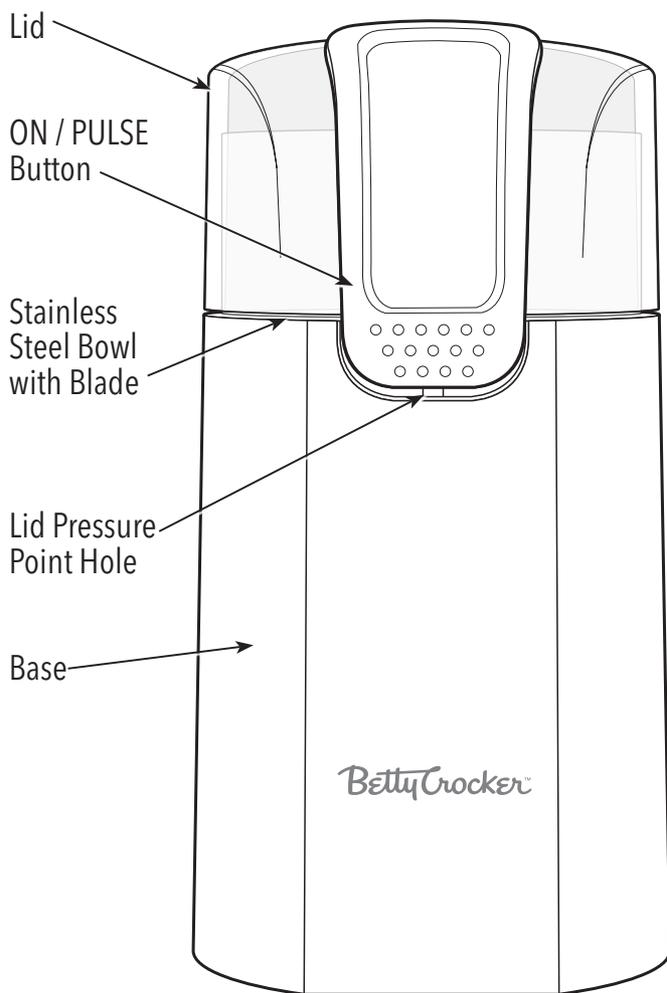

RATING: 120V, 60Hz, 150W, AC ONLY

Using Your Coffee Grinder

1. Remove all packaging materials before using.
2. Before using, wipe blades and stainless steel bowl with a damp, lint-free cloth. Wash and dry lid. Ensure the lid pressure point hole is clean and free of any debris/grounds, prior to every use.

CAUTION: BLADES ARE SHARP. HANDLE CAREFULLY.

CAUTION: NEVER PLACE BASE OF APPLIANCE IN WATER OR OTHER LIQUIDS.


3. Fill the bowl with desired quantity of beans, spices or herbs. Do not fill the bowl above the 'MAX' fill line that is indicated in the bowl. If a larger quantity is needed, grind in several small batches.
4. Place the lid on top of the base.

NOTE: The appliance will not operate unless the lid is correctly placed on the base.

CAUTION:

DO NOT ATTEMPT TO OPERATE WITHOUT THE LID PROPERLY IN PLACE.

5. Plug into 120V, 60Hz outlet.
6. To start grinder, depress the on/pulse button for 10-30 seconds until the beans, spices or herbs are finely ground. Grinding time will vary with capacity and personal preference.

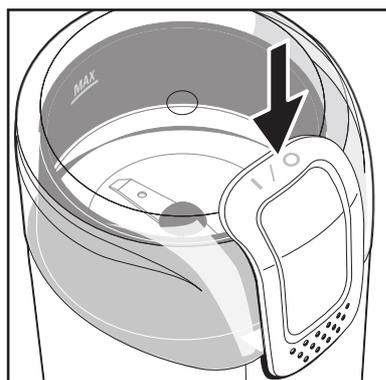

NOTE: To further lengthen the life span of the Grinder, DO NOT run it for longer than 60 seconds; use it in short bursts until the material is ground to your preference. Between each 60 second run, the Grinder should stay off for at least three (3) minutes between two continuous cycles. Most grinding tasks can be finished within seconds.

7. When finished grinding, unplug the base.
8. Wait until the blades stop rotating, then remove lid.
9. Remove ground coffee, spices or herbs from stainless steel bowl.

RECOMMENDED AMOUNTS OF COFFEE

NUMBER OF CUPS	RECOMMENDED GROUND COFFEE
2	2 Tablespoons
4	4 Tablespoons
6	6 Tablespoons
8	1/4 cup
10	1/4 cup & 2 Tablespoons
12	1/2 cup

Hints for Grinding Coffee Beans

- Most beans require only 10-30 seconds to grind.
- The maximum capacity of approximately 3/4 cup of coffee beans will yield ground coffee for 10-12 cups of brewed coffee.
- Store coffee beans in an airtight container inside the freezer for up to two months. Coffee beans can be ground while frozen.

Grinding Herbs, Spices and Nuts

You may use your grinder for grinding most herbs, spices, and nuts. Follow directions for grinding coffee beans and grind for 5-10 seconds. For large pieces, pulse the grinder. However, you may want to consider purchasing a separate grinder for herbs, spices and nuts since the flavour of the coffee may be affected.

Hints For Grinding Herbs, Spices and Nuts

- Do not attempt to grind anything oily or extremely hard such as chocolate, cinnamon, whole cloves or nutmeg.
- Do not use to puree soft foods or attempt to make pastes from seeds, such as sesame or sunflower.
- Do not attempt to grind grains such as corn, wheat, rice, rye, or barley.
- Rinse and pat dry herbs before grinding.

Cleaning Your Coffee Grinder

Remove all excess grounds from the stainless steel bowl to prevent stale coffee grounds from affecting the flavour of freshly ground beans.

1. Unplug the grinder.
2. Remove lid, wash in warm sudsy water, rinse and dry thoroughly.

CAUTION: BLADES ARE SHARP. HANDLE CAREFULLY.

CAUTION: NEVER PLACE BASE OF APPLIANCE IN WATER OR OTHER LIQUIDS.

3. **Use a stiff brush to remove any remaining coffee grounds or other ground food from inside the stainless steel bowl and the lid pressure point hole.**
4. Turn upside down and wrap cord for storage.
5. Clean exterior of base with a soft damp cloth and dry. Place lid on base for storing.

LIMITED WARRANTY ONE (1) YEAR

This warranty is the only warranty for this product. This product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of original purchase, as evidenced by the receipt of purchase, and provided it is used for the purpose for which the product is intended. During this period, your exclusive remedy is repair or replacement of this product or any component found to be defective, at our option. If the product should become defective within the warranty period, we will repair it or replace it free of charge. If the product or component is no longer available, we will replace with a similar one of equal or greater value. We will return your product, transportation charges prepaid provided it is delivered prepaid to Formula Brands Inc. Any and all remedies relating to this warranty are limited to the amount of the purchase price of the product. This warranty extends only to the original purchaser, consumer or gift recipient.

This warranty does not cover failure caused by food build-up, water deposits, normal cosmetic discoloration, and inadequate maintenance of the product. This warranty will not cover damage or failure to function if the product has been dismantled or tampered with, if it has been damaged due to exposure to water or any other liquid, if it is not used in conformity with the printed directions of this product or if it has been accidentally or intentionally damaged.

This warranty does not cover the following parts which may be supplied with the appliance: plastic parts, glass parts, glass containers, ceramic containers, cutter/strainer, filters or non-stick surfaces.

This product is intended for use in a single-family household. This warranty will become null and void if the product is used for commercial purposes or any other purpose other than for single-family household use.

We exclude all claims for special, incidental and consequential damages caused by breach of any express or implied warranty. All liability is limited to the amount of the purchase price. Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty. This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental or consequential damages, so the foregoing limitations may not apply to you.

TO RETURN FOR SERVICE:

1. Securely package and return the product PREPAID to:
FORMULA BRANDS INC.
45 Mural Street, Unit #7, Richmond Hill, Ontario, Canada L4B 1J4

NOTE: We recommend you insure your parcel for your protection.


2. Please enclose your name, return address, postal code, telephone number and a description of the defect.
3. To ensure prompt 'In-Warranty' service, be sure to include a proof of purchase (a copy of your store receipt).
4. For repairs not covered under warranty, you will be advised of the cost of the repair in advance, and upon receipt of your cheque or money order the repairs will be completed and the product returned to you.

If at any time you order parts or inquire about service, please quote the "MODEL NUMBER" stamped on the appliance nameplate.

For assistance regarding this appliance, please call
1-877-244-1110
between 9:00 am and 5:00 pm (EST) Monday to Friday
or write
FORMULA BRANDS INC.
45 Mural Street, Unit #7, Richmond Hill, Ontario, Canada L4B 1J4
or email:
customerservice@formulabrands.com

© General Mills. Betty Crocker and designs are trademarks of General Mills used under license.

REPLACEMENT PARTS

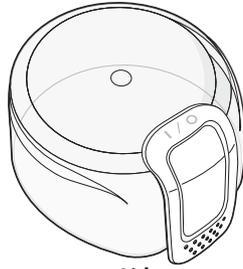

Lid



PLEASE WRITE MODEL NUMBER HERE:

PART	QTY	PRICE	TOTAL
Lid		\$4.99	
TOTAL			
SHIPPING AND HANDLING TO CANADA:			\$9.00*
SHIPPING AND HANDLING TO USA:			\$15.00*
SUBTOTAL			
ADD 13% H.S.T. - CANADA ONLY			
TOTAL			

If you would like to order replacement or spare parts for this appliance, please complete and mail this form, along with a cheque or money order made payable to:
FORMULA BRANDS INC.

FORMULA BRANDS INC.
Parts Department
45 Mural Street, Unit #7,
Richmond Hill, Ontario
Canada L4B 1J4

NAME _____

ADDRESS _____

CITY _____

PROVINCE/STATE _____

POSTAL/ZIP CODE _____

Prices are subject to change without notice.

PLEASE NOTE: WHEN ORDERING FROM USA, AN 'INTERNATIONAL' MONEY ORDER MUST BE USED.

* Shipping costs may vary based on fuel surcharges and postage rates. Please call toll-free 1-877-244-1110 or email customerservice@formulabrands.com to confirm shipping and handling charges.

Allow 3 to 6 weeks
for delivery.

BC-4821W
07/25