



QUICK SETUP GUIDE

RF-WHTIB-A, Universal Wireless Rear Speaker Kit


PACKAGE CONTENTS

- Wireless sender
- Wireless receiver
- 2-foot speaker wires (2)
- Power adapter (wireless sender)
- Power cord (wireless receiver)
- User Guide
- Quick Setup Guide

FEATURES


- 2.4 GHz wireless sender and wireless receiver
- Transmits high quality audio over a radio frequency communication link
- Compact size
- Hidden antennas
- Low power consumption

Wireless sender

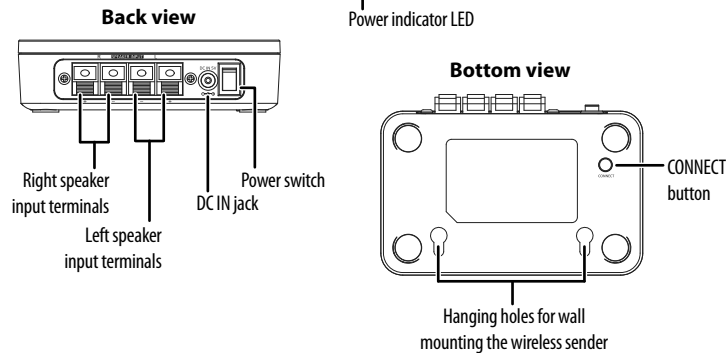


Before using your new product, please read these instructions to prevent any damage.


Wireless receiver

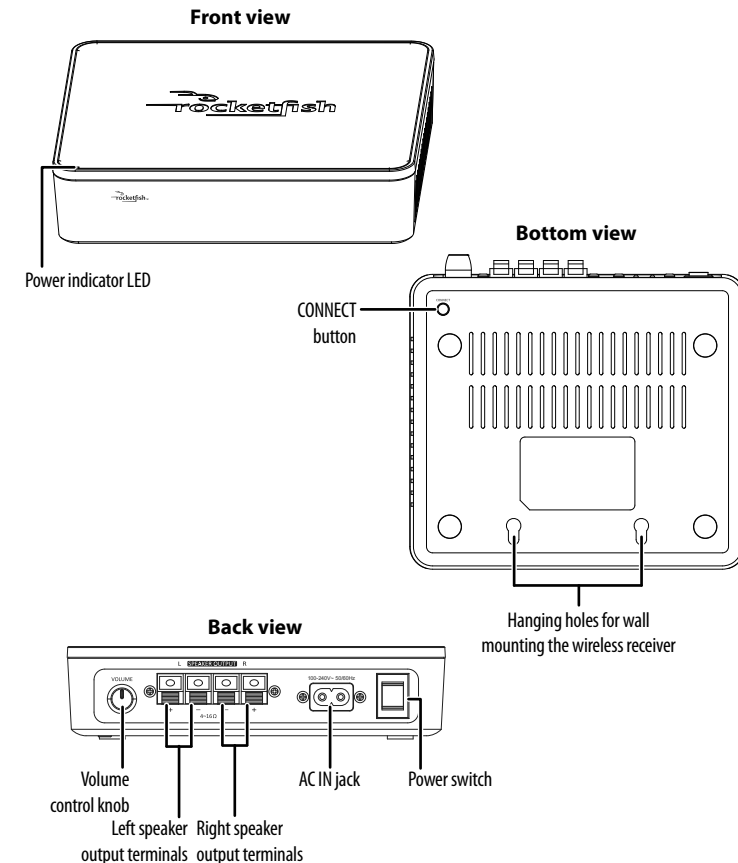

SETTING UP YOUR WIRELESS REAR SPEAKER KIT

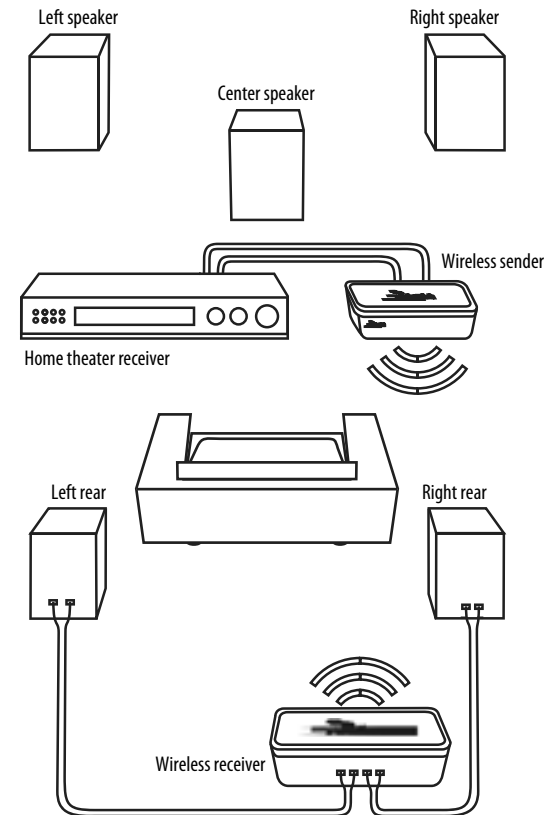


CONNECTING THE WIRELESS SENDER TO YOUR HOME THEATER RECEIVER

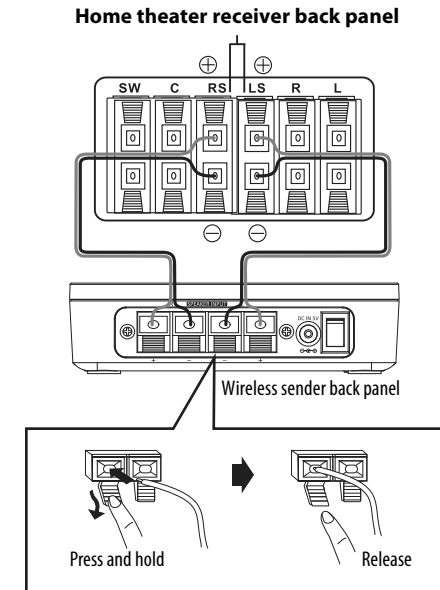

Caution: Turn off your home theater receiver while connecting the units.

- 1 Using the included 2-foot speaker cords, connect the right rear speaker terminals of your home theater receiver to the right speaker terminals of the wireless sender by connecting the red wire to the red (+) terminals, and the black wire to the black (-) terminals.
- 2 Connect the left rear speaker terminals of the home theater receiver the same way.

CONNECTING THE WIRELESS RECEIVER TO YOUR REAR SPEAKERS

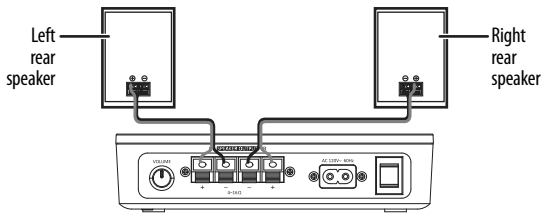


Left rear speaker

Right rear speaker

- 1 Connect the right speaker to the right speaker terminals of the wireless receiver, and the left speaker to the left speaker terminals.
- 2 If the speakers have wires instead of terminals, connect the positive (+) wire from the right speaker to the red (+) terminal for the right speaker on the wireless receiver and the negative (-) wire from the right speaker to the black (-) terminal for the right speaker on the wireless receiver.
- 3 Connect the left speaker the same way.

CONNECTING THE WIRELESS SENDER AND WIRELESS RECEIVER TO A POWER OUTLET

To connect the wireless sender to the power adapter:
The power adapter can be connected to a power outlet or the SWITCHED AC outlet of your home theater receiver. If you connect it to the SWITCHED AC outlet of your home theater receiver, each time you turn your home theater receiver on or off, the wireless sender is also turned on or off.

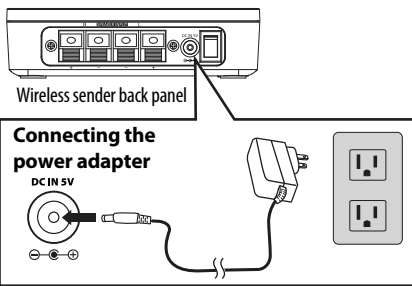

Wireless sender back panel


Connecting the power adapter

DC IN 5V

Caution: To avoid risk of fire, and to prevent damage, only use the power adapter supplied with your wireless rear speaker kit.

To connect the wireless receiver to a power outlet:
Note: Plug the power cord in only after all speakers are connected to the wireless receiver.

- 1 Plug the small (female) end of the power cord into the AC 100-240V~ 50/60Hz jack on the back of the wireless receiver.
- 2 Plug the large (male) end of the power cord into a power outlet.

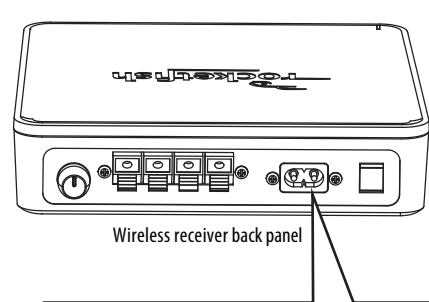

Wireless receiver back panel

Connecting the power cord

100-240V~ 50/60Hz

Plug the power cord in only after all speakers are connected to the receiver.

USING YOUR UNIVERSAL WIRELESS REAR SPEAKER KIT

Establishing communications between the wireless sender and wireless receiver
To turn on the system:

- 1 Turn on the power switch on the back panel of the wireless sender. The LED indicator blinks to indicate that the wireless sender is plugged in.
- 2 Turn on the power switch on the back panel of the wireless receiver. The LED indicator blinks to indicate that the wireless receiver is plugged in.
The wireless sender and wireless receiver were pre-paired at the factory. When an active link is established between them, the LED indicators turn solid.

Note: In case the indicators continue to blink after 30 seconds, it means there is no active link between the wireless sender and wireless receiver. Try to connect the system manually using the CONNECT button. For more information, see your *User Guide*.


LISTENING TO THE SYSTEM

- 1 Turn on the system. Make sure that there is an active link between the wireless sender and wireless receiver.
- 2 Turn on your home theater receiver, then play the audio or video source through your home theater receiver.

The volume control on the wireless receiver is only used to adjust the balance of the volume between the front and rear speakers. After the system is set up, we recommend that you adjust the volume balance one time.

ONE-YEAR LIMITED WARRANTY
Visit www.rocketfishproducts.com for details.

CONTACT ROCKETFISH:
For customer service please call 1-800-620-2790
www.rocketfishproducts.com

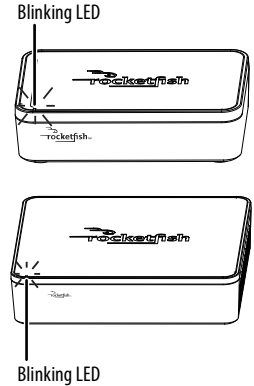

ROCKETFISH is a trademark of Best Buy and its affiliated companies
Distributed by Best Buy Purchasing, LLC
7601 Penn Ave South, Richfield, MN 55423 U.S.A.
©2016 Best Buy. All rights reserved
Made in China