 


INSIGNIA™

## ASSEMBLY GUIDE

# Universal TV Feet Replacement Kit

NS-HTRTVF25

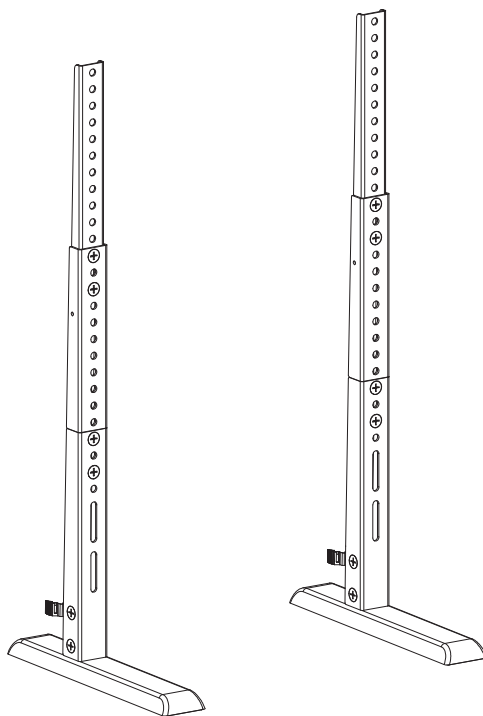

Before using your new product, please read these instructions to prevent any damage.

## Important safety information and specifications

### Read all instructions before use

### Keep these instructions



**IMPORTANT  
SAFETY  
INSTRUCTIONS  
- SAVE THESE  
INSTRUCTIONS**

**CAUTION:** This mount is intended for use with weights not exceeding "maximum weight capacity 100 lbs.

(45.3 kg.)" The placement itself must be able to support four times the standard weight. Please don't over-tighten screws in order to avoid any

injury. Use with products heavier than the maximum weights indicated may result in collapse of the mount and its accessories causing possible injury.



**WARNINGS:**

- Never let children climb on the product or play with the product.
- Do not sit or stand on the product.
- Do not fasten a TV that is heavier than the recommended load rating to the mount.
- The manufacturer is not liable for damage or injury caused by incorrect mounting, assembly, or use.
- Improper handling can result in cuts and lacerations.
- Pictures are for reference only, subject to our available products.
- Keep these instructions for future reference.

**Maximum TV weight:** 100 lbs. (45.3 kg)

**Screen size:** 49 to 77 in. (124.46 to 195.58 cm) diagonal

**Overall dimensions (H × W × D):**

28.98 × 2.36 × 12.6 in. (73.61 × 6 × 32 cm)

**Net Weight:** 9.58 lbs. (4.35 kg)


**We're here for you**

[www.insigniaproducts.com](http://www.insigniaproducts.com)

For customer service, call:

1-877-467-4289


## Dimensions

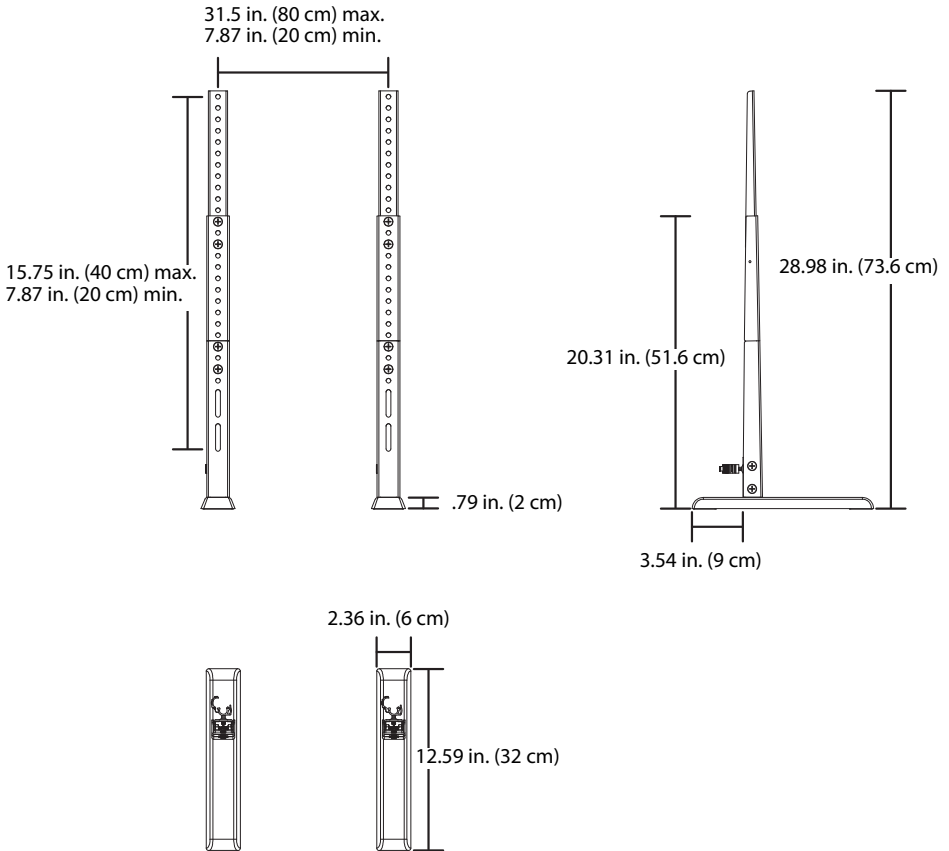


## Features

- Compatible with TVs from 49 – 77 in. (124.5 - 195.6 cm) and up to 100 lbs. (45.3 kg)
- Supports VESA patterns from 200 × 200 to 800 × 400
- Height adjusts 20.31 - 28.98 in. (51.6 - 73.6 cm) for your viewing comfort
- Cable management system keeps your cords free of tangles
- Anti-slip feet provide stability and reduce movement
- Anti-tip system protects your TV from getting knocked down


Tools needed (not provided)




Tape measure

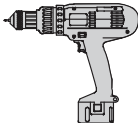


Electric drill




- 1/4 in. (6.35 mm)  
Masonry drill bit  
or  
- 1/16 in. (2 mm)  
Wood drill bit




Phillips screwdriver




Rubber mallet



Stud finder




Scissors




Pencil


Package contents

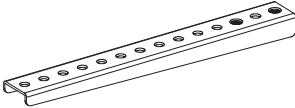


**A** - Extension bracket (2)

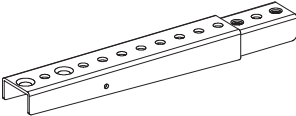


**B** - Upper bracket (2)

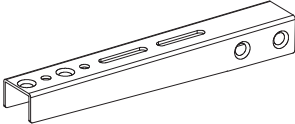


**C** - Lower bracket (2)

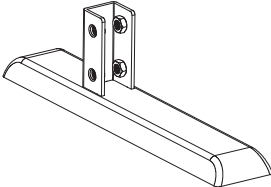

**D** - Supporting leg (2)

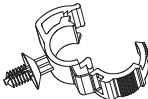


**E** - Cable clip (2)



 
 
 



Assembly Guide

TV bracket assembly hardware:




 



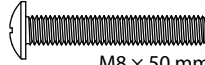
Label	Hardware	Qty.
F	 M8 × 14 mm screw	16









## Anti-tip safety strap kit (packaged in a self-sealing bag):

  Label	Hardware	Qty.
<b>G</b>	 Safety belt	<b>2</b>
<b>H</b>	 Concrete anchor	<b>2</b>
<b>I</b>	 M5 × 8 mm screw	<b>2</b>
<b>J</b>	 M4 × 35 mm self-tapping screw	<b>2</b>
<b>K</b>	 M4 × 12 mm self-tapping screw	<b>2</b>
<b>L</b>	 M4 washer	<b>2</b>

## TV mounting hardware:


Label	Hardware	Qty.
<b>M</b>	 M4 × 12 mm screw	<b>4</b>
<b>N</b>	 M6 × 12 mm screw	<b>4</b>
<b>O</b>	 M6 × 20 mm screw	<b>4</b>
<b>P</b>	 M8 × 20 mm screw	<b>4</b>
<b>Q</b>	 M4 × 35 mm screw	<b>4</b>
<b>R</b>	 M6 × 35 mm screw	<b>4</b>
<b>S</b>	 M8 × 35 mm screw	<b>4</b>
<b>T</b>	 M8 × 50 mm screw	<b>4</b>

Label	Hardware	Qty.
<b>U</b>	 M6 × 17 mm spacer	<b>4</b>
<b>V</b>	 M8 × 22 mm spacer	<b>4</b>
<b>W</b>	 M8 × 10 mm spacer	<b>4</b>
<b>X</b>	 2.5 mm spacer	<b>8</b>
<b>Y</b>	 M4/M5 washer	<b>4</b>
<b>Z</b>	 M6 washer	<b>4</b>


## Assembling your replacement feet

### STEP 1: Determining whether your TV has a flat back or an irregular or obstructed back


- 1 Carefully place your TV screen face-down on a cushioned, clean surface to protect the screen from damages and scratches.
- 2 If your TV has a table-top stand attached, remove the stand. See the documentation that came with your TV for instructions.
- 3 Lay the TV brackets, oriented vertically, on the back of your TV.
- 4 Align the screw holes in the TV brackets with the mounting screw holes on your TV.
- 5 Identify which type of back your TV has:
  - **Flat back:** The brackets lay flush against the back of your TV and do not block any jacks. You do not need spacers when assembling the wall mount.

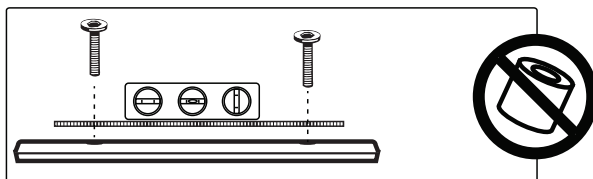

- **Obstructed back:** The brackets block one or more of the jacks on the back of your TV. You will need spacers when assembling the wall mount.

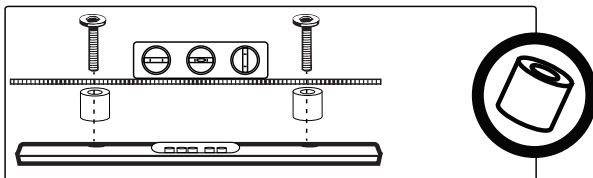

- **Irregularly-shaped back:** There is a gap between a bracket and some part of the back of your TV. You will need spacers when assembling the wall mount.

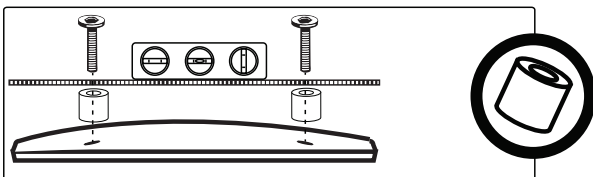

- 6 Remove the TV brackets.

## STEP 2: Selecting screws, washers, and spacers

- 1 Select the hardware for your TV (screws, washers, and spacers). A limited number of TVs come with mounting hardware included (if there are screws that came your TV, they are almost always in the holes on the back of your TV). If you do not know the correct length of the mounting screws your TV requires, test various sizes by hand-threading the screws.

### For a TV with a flat back:

M4 X 12 mm screws (**M**)

M6 X 12 mm screws (**N**)

M6 X 20 mm screws (**O**)

M8 X 20 mm screws (**P**)

### For a TV with an irregular/obstructed back:

M4 X 35 mm screws (**Q**)

M6 X 35 mm screws (**R**)

M8 X 35 mm screws (**S**)

M8 X 50 mm screws (**T**)


Select either an M4/M5 washer (**Y**) or an M6 washer (**Z**) for the corresponding types of screws. For an irregular or obstructed TV back, also use the spacers (**U**, **V**, **W**, or **X**).

**Note:** If the included hardware does not work for your TV, call 1-877-467-4289, for Insignia Customer Support, and we will work to determine the necessary parts required and ship them to you without charge.

**CAUTION:** To avoid potential personal injuries and property damage, make sure that there are adequate threads to secure the brackets to your TV. If you encounter resistance, stop immediately and contact customer service. Use the shortest screw and spacer combination to accommodate your TV. Using hardware that is too long may damage your TV. However, using a screw that is too short may cause your TV to fall from the mount.



Screw fits correctly

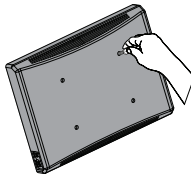

Screw is too long




Screw is too short

- 2 Remove the screws from the holes in the back of your TV.


## STEP 3: Assembling the TV feet

### You will need:

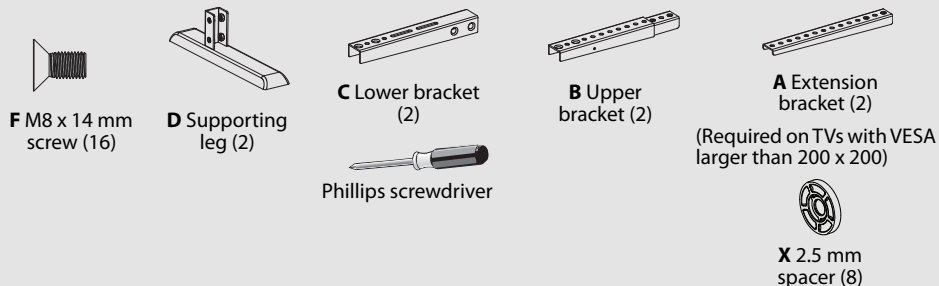


- 1 Using a Phillips screwdriver, attach the supporting leg (**D**) to the lower bracket (**C**) with four M8 x 14 mm screws (**F**), completing bracket assembly (**1**).

**Important:** Make sure that the lower brackets (**C**) face the correct direction (front to back), as shown below.

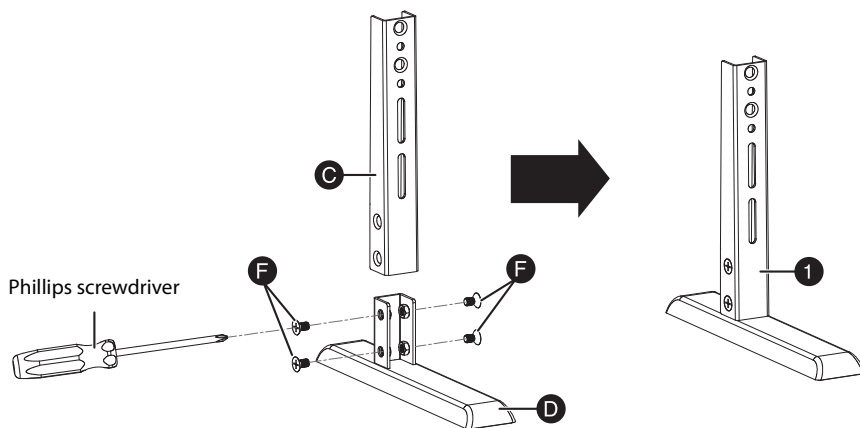


- 2 Using a Phillips screwdriver, attach the upper bracket (B) to the bracket assembly 1 with two M8 x 14 mm screws (F), completing bracket assembly (2).

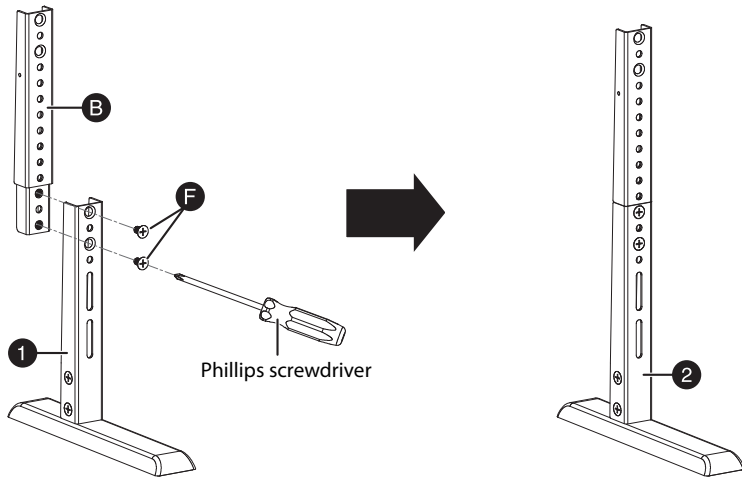



- 3 Tighten the screws with a screwdriver until they are snug against the TV brackets. Do not over tighten.
- 4 Repeat for the other TV bracket.

**Note:** It may be necessary to add extensions (A) to the bracket assembly (2) if the bracket assemblies are too short for your TV (VESA larger than 200 x 200 mm) with only the lower and upper brackets in place. If you determine that this is necessary, proceed with step 5 below.


- 5 Optional - Using a Phillips screwdriver, attach the extension bracket (A) to the bracket assembly (2) with two M8 x 14 mm screws (F).

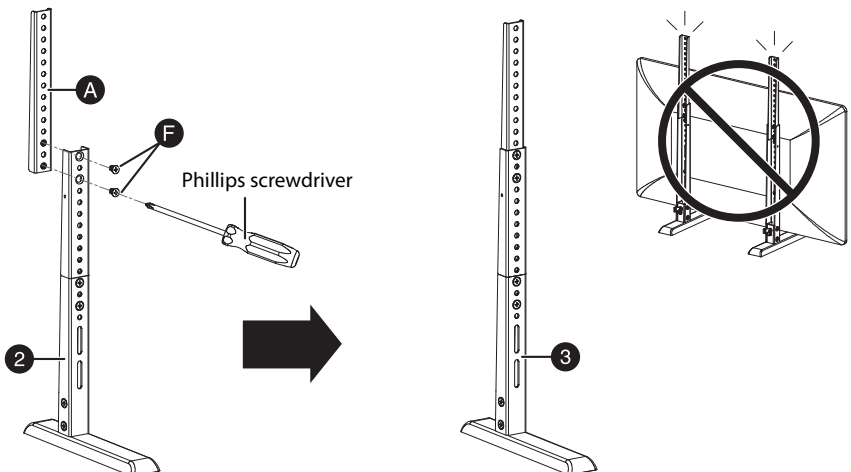

- 6 Add 2.5 mm spacers (X) to the top attachment screws to make up for the difference in bracket thickness between the lower bracket (C) and the extension bracket (A).

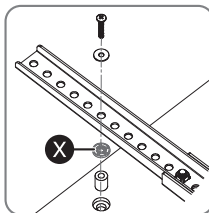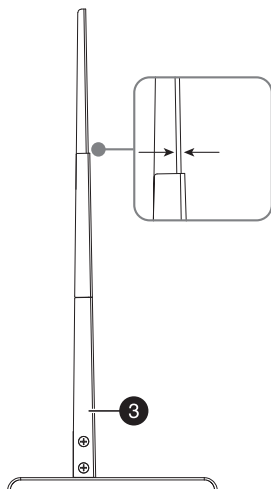

**CAUTION:** Do not use an electric drill

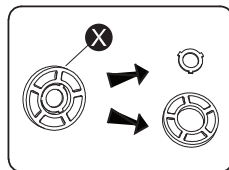

**Tip:** If you need to combine an M6 or M8 screw with a 2.5 mm spacer (X), you must remove the inner circle from the spacer.

- 7 Using a Phillips screwdriver, tighten the screws until they are snug against the TV feet. Do not over tighten.
  - 8 For a flat back TV, go to "STEP 4: Option 1 - Attaching brackets to a TV with a flat back" on page 11.
- OR-
- For an irregular or obstructed back, go to "STEP 4: Option 2 - Attaching brackets to a TV with an irregular or obstructed back" on page 12.

## STEP 4: Option 1 - Attaching brackets to a TV with a flat back

### You will need:

#### Screws



or



or



or



**M** M4 x 12 mm  
screw (4)

**N** M6 x 12 mm  
screw (4)

**O** M6 x 20 mm  
screw (4)

**P** M8 x 20 mm  
screw (4)

#### Spacers



**X** 2.5 mm  
spacer (8)



Phillips screwdriver

#### Washers



or



**Y** M4/M5  
washer (4)


**Z** M6  
washer (4)

- 1 Align the left and right TV feet (2) with the screw holes on the back of the TV. Make sure that the brackets are level.
- 2 Place washers (**Y** or **Z**) over the holes in the TV stands. Insert screws (**M**, **N**, **O**, or **P**) through the washers and TV feet.

**Note:** No washers are required if you use the M8 x 20 mm screws (**P**).




**CAUTION:** Do not  
use an electric drill

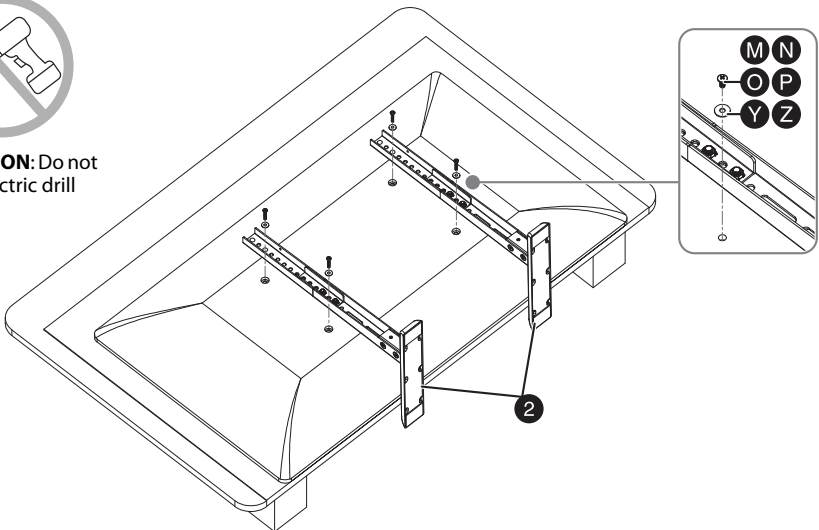

## STEP 4: Option 2 - Attaching brackets to a TV with an irregular or obstructed back

### You will need:


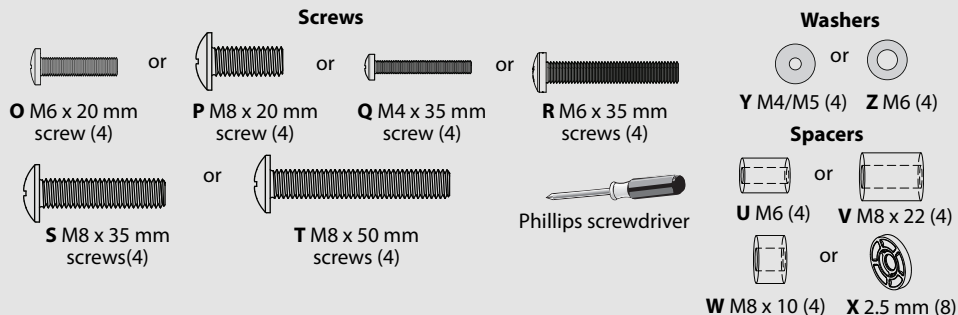


- 1 Place spacers (**U**, **V**, **W**, or **X**) over the holes on the back of the TV.
- 2 Align the left and right TV feet (2) with the screw holes on the back of the TV. Make sure that the brackets are level.
- 3 Place washers (**Y** or **Z**) over the holes in the TV feet (except for M8 screws **O**, **P**, **S**, or **T**). Insert screws (**O**, **P**, **Q**, **R**, **S**, or **T**) through the washers, TV brackets, and spacers.


**Note:** No washers are required if you use the M8 screws (**O**, **P**, **S**, or **T**).




**CAUTION:** Do not use an electric drill

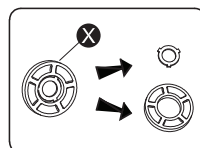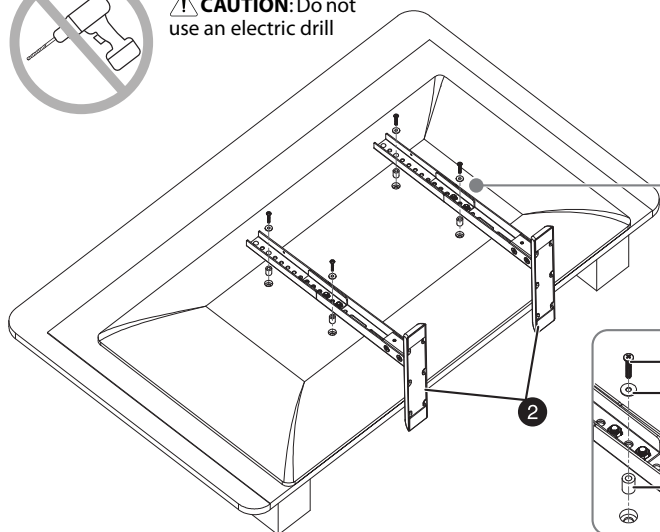

**Tip:** If you need to combine an M6 or M8 screw with a 2.5 mm spacer (**X**), you must remove the inner circle from the spacer.

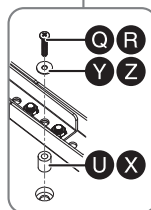

OR

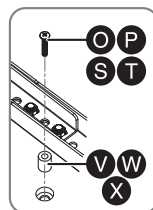


- 4 Using a Phillips screwdriver, tighten the screws until they are snug against the TV stands. Do not over tighten.




## STEP 5 - Attaching the cable clips and securing the cables

### You will need


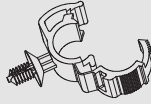


E - Cable clip (2)

- 1 Put a cable clip (E) into the hole in each of the lower backs of the TV feet (as shown below).

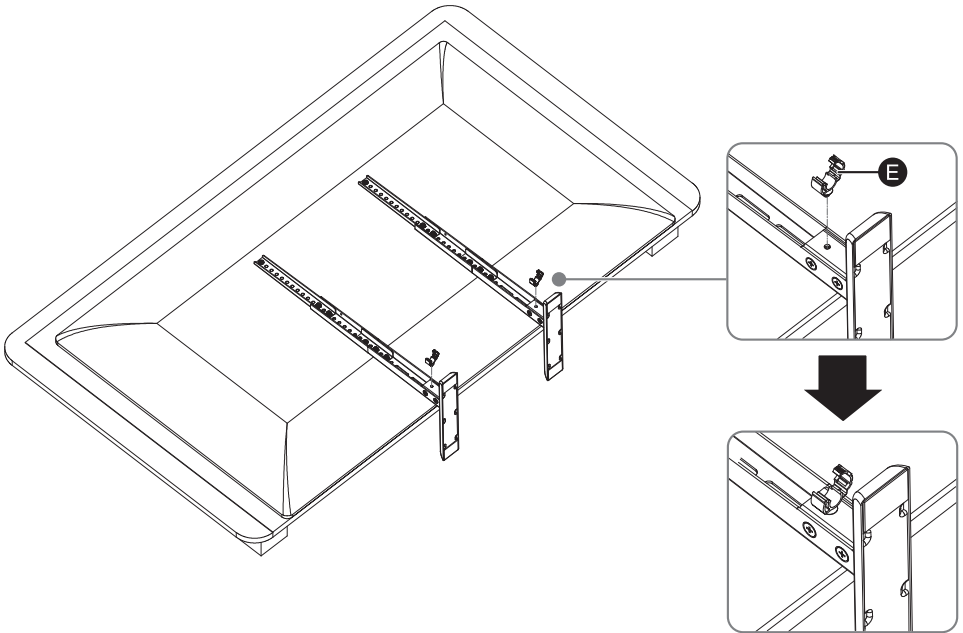

- 2 Insert the power cord and video cable into the cable clips, then fasten the cable clips (E).

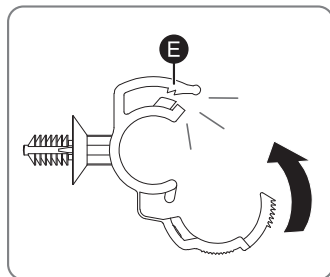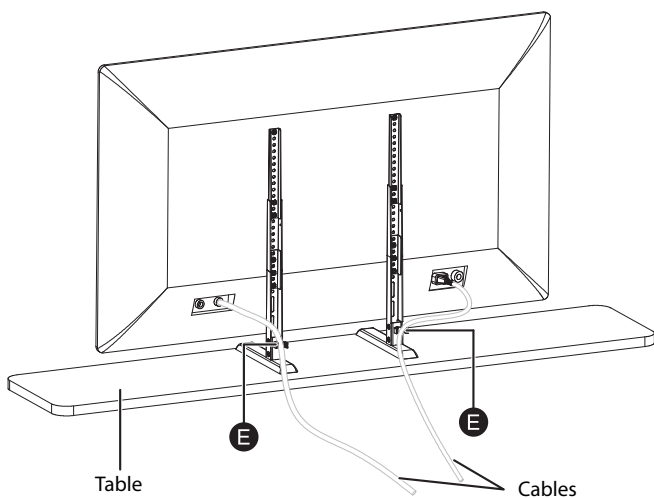

## STEP 6 - Installing the anti-tip safety strap

The safety belt (G) can be attached to a table top (Option 1), if the table is made of wood and you don't mind installing screws into the wood. It can also be attached to a wall (Option 2) behind your TV.

### Option 1 - Table-top installation:

#### You will need:



G Safety belt (2)



K M4 x 12 mm self-tapping screws (2)



L M4 washer (2)



I M5 x 8 mm screw (2)



Phillips screwdriver




Scissors

**CAUTION:** Serious damage may result if your TV tips forward and falls from a table. To avoid this, we recommend installing the safety belt (G) to stabilize your TV.


**Note:** This installation is suitable for wooden tables that are at least 0.6 in. (15 mm) thick. Before installing the Anti-tip safety strap, make sure that the table's strength can support it.

- 1 Using scissors, cut the safety belt (G) into lengths suitable to go from the table top to the installation holes on your TV feet. If the safety belt (G) obstructs the chassis, you can cut off the excess length with scissors.
- 2 Using a Phillips screwdriver, connect the safety belt lengths (G) to the table top with M4 x 12 mm self-tapping screws (K) and M4 washers (L) directly behind the TV feet.
- 3 Using a Phillips screwdriver, connect the other ends of the safety belt (G) to the mounting holes in the TV feet with M5 x 8 mm screws (I).

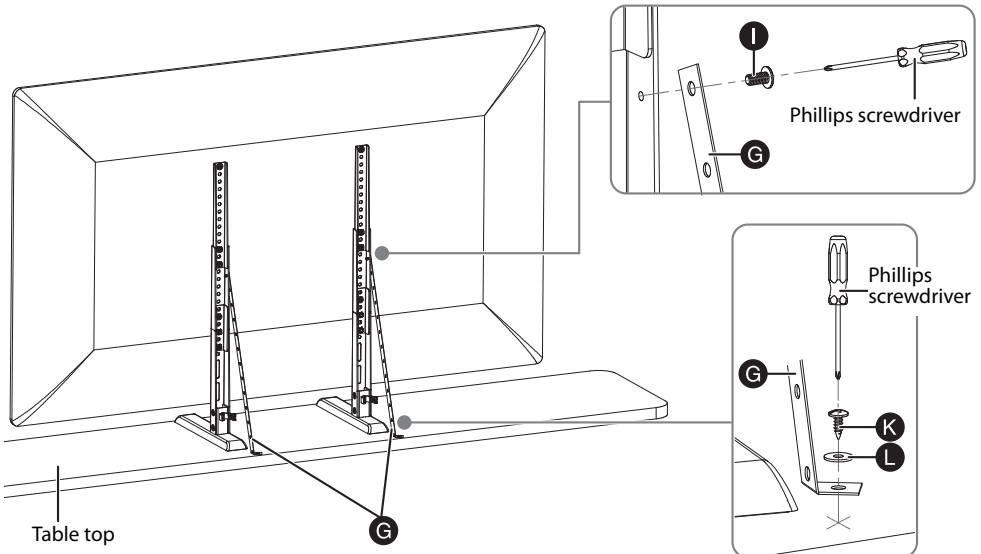



## Option 2 - Wallboard installation:

### You will need:

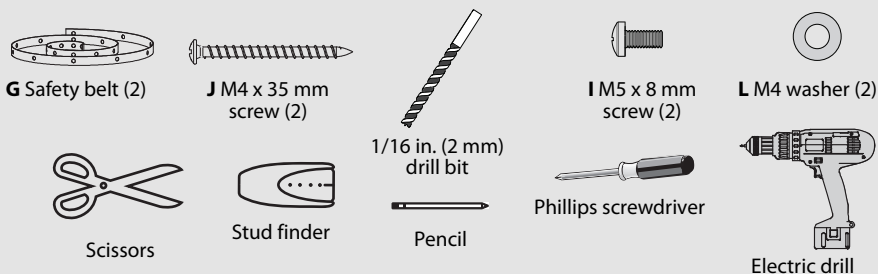


**⚠ CAUTION:** Nominal wood stud size is 2 x 4 in. and the wallboard thickness should be no more than 5/8 in. thick. If the wall isn't strong enough to hold up your TV, it could still tip over and be damaged.


- 1 Using scissors, cut the safety belt (**G**) into lengths suitable to go from the wall to the installation holes on your TV feet.
- 2 Using a stud finder, determine the middle of the studs in the wall you will be using, corresponding to the locations of the installation holes in the TV feet, then mark the spots with a pencil.

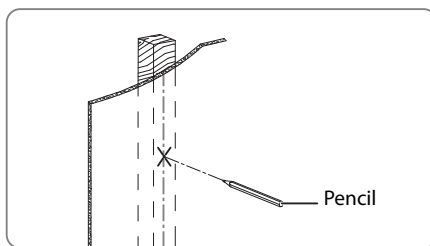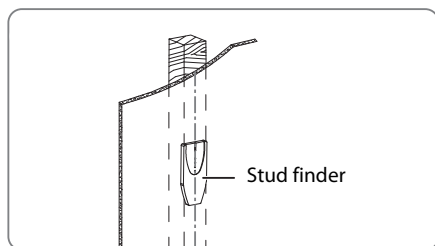


- 3 Using an electric drill and a 1/16 in. (2 mm) drill bit, drill two 1/4 in. (35 mm) holes where indicated by the pencil marks.

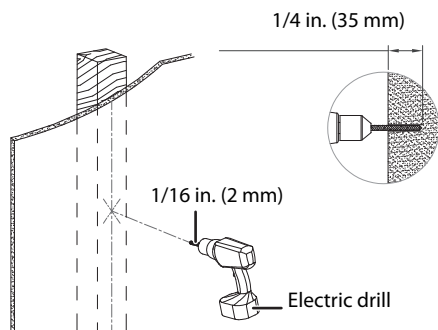

- 4** Using a Phillips screwdriver, connect the safety belt lengths (**G**) to the wall with M4 x 35 mm self-tapping screws (**J**) and M4 washers (**L**).

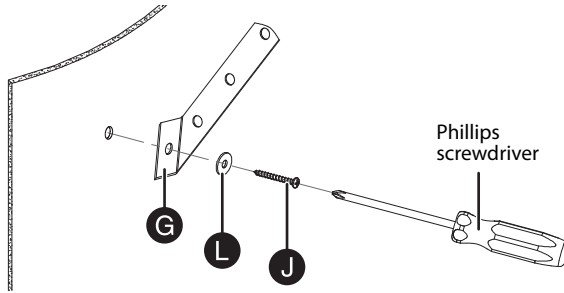


- 5** Connect the other ends of the safety belt lengths (**G**) to the mounting holes in the TV feet with M5 x 8 mm screws (**I**).

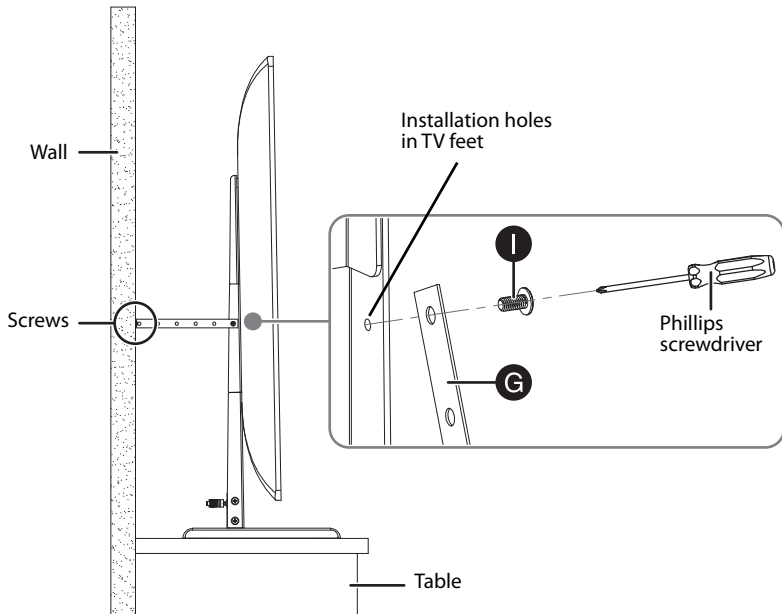


## Option 3 - Installing on a solid concrete or concrete block wall:

### You will need:

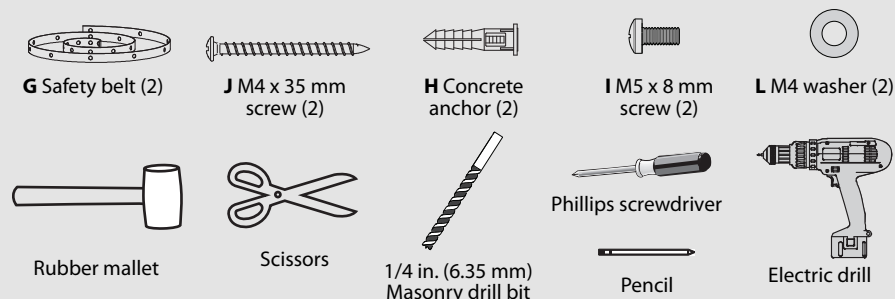


**⚠ CAUTION:** Determine the strength of the wall you intend to use to prevent your TV from tipping. If the wall isn't strong enough to hold up your TV, it could still tip over and be damaged.

- 1 Using scissors, cut the safety belt (**G**) into lengths suitable to go from the wall to the installation holes on your TV feet.
- 2 Using a pencil, mark the wall in two places that correspond to the locations of the installation holes in the TV feet.


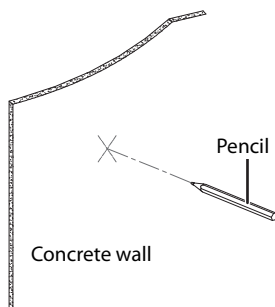


- 3 Using an electric drill and a 1/4 in. (6.35 mm) masonry drill bit, drill two 1.4 in. (35 mm) holes where indicated by the pencil marks.

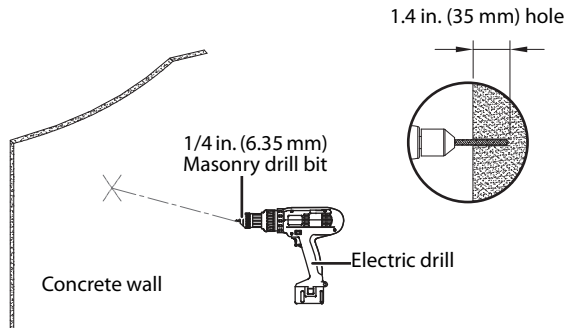


- 4 Using a rubber mallet, gently tap the concrete anchors (H) into both holes until flush with the wall.


**Note:** If you have trouble inserting the anchor in the hole, squeeze the indicated portion of the anchor.

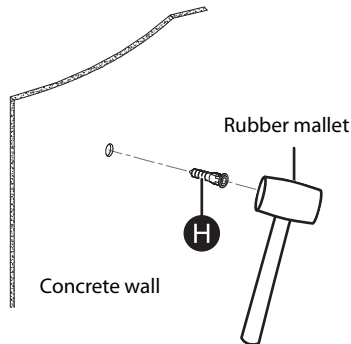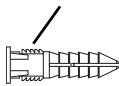

- 5 Using a Phillips screwdriver, connect the safety belt lengths (G) to the concrete anchors (H) in the wall with M4 x 35 mm self-tapping screws (J) and M4 washers (L).

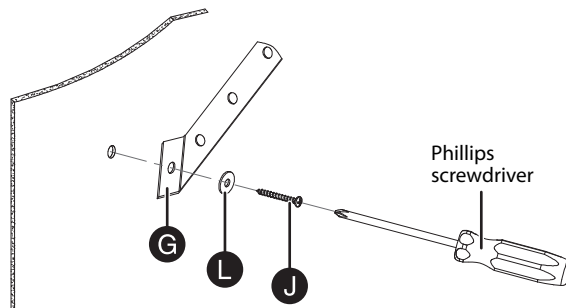

- 6 Connect the other ends of the safety belt lengths (**G**) to the mounting holes in the TV feet with M5 x 8 mm screws (**I**).

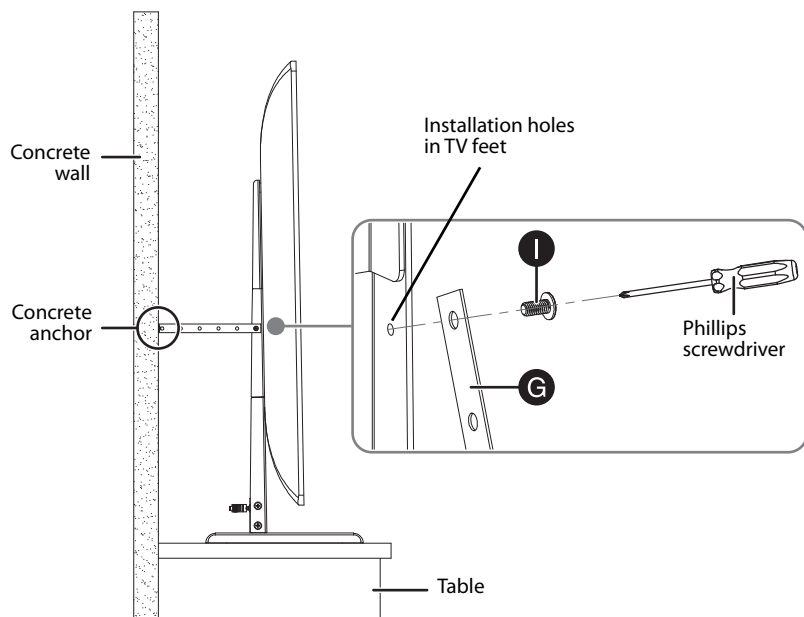



# ONE-YEAR LIMITED WARRANTY

Best Buy, or its Authorized Partner of Insignia branded products, warrants to you, the original purchaser of this new Insignia branded product ("Product"), that the Product shall be free of defects in the original manufacture of the material or workmanship for a period of one (1) year from the date of your purchase of the Product or the date of delivery (if later than the date of purchase) ("Warranty Period").

For this warranty to apply, your Product must be (i) purchased in the United States or Canada from a Best Buy branded retail store, online at [www.bestbuy.com](http://www.bestbuy.com) or [www.bestbuy.ca](http://www.bestbuy.ca), or from Best Buy's Authorized Partner, and (ii) packaged or sold with this warranty statement.

The term "Best Buy", as used in this warranty, refers to Best Buy branded retail stores, [www.bestbuy.com](http://www.bestbuy.com), [www.bestbuy.ca](http://www.bestbuy.ca), and Best Buy's Authorized Partner.

Because Insignia cannot control the quality of products sold by unauthorized sellers, this warranty applies only to Products that were purchased from Best Buy or an Insignia Authorized Partner, unless otherwise prohibited by law. Insignia reserves the right to reject warranty claims for Products purchased from unauthorized sellers, including unauthorized websites.

REPAIR OR REPLACEMENT, AS PROVIDED UNDER THIS WARRANTY, IS YOUR EXCLUSIVE REMEDY FOR BREACH OF WARRANTY. INSIGNIA SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR THE BREACH OF ANY EXPRESSED OR IMPLIED WARRANTY ON THIS PRODUCT, INCLUDING, BUT NOT LIMITED TO, LOST DATA, LOSS OF USE OF YOUR PRODUCT, LOST BUSINESS, OR LOST PROFITS. INSIGNIA PRODUCTS MAKES NO OTHER EXPRESS WARRANTIES WITH RESPECT TO THE PRODUCT. ALL EXPRESSED AND IMPLIED WARRANTIES FOR THE PRODUCT, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE WARRANTY PERIOD SET FORTH ABOVE AND NO WARRANTIES, WHETHER EXPRESSED OR IMPLIED, WILL APPLY AFTER THE WARRANTY PERIOD. SOME STATES, PROVINCES, AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON (i) HOW LONG AN IMPLIED WARRANTY LASTS, (ii) EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, or (iii) LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE.

## How long does the coverage last?

The Warranty Period lasts for 1 year (365 days) from the date you purchased the Product or the date of delivery (if later than the date of purchase). Your purchase date is printed on the receipt you received with the Product. In the event that Authorized Partner ceases to sell the covered Insignia branded product, this warranty shall terminate for that product and there shall be no repair or replacement of the Product.

## What does this warranty cover?

During the Warranty Period, if the original manufacture of the material or workmanship of the Product is determined to be defective by an authorized Insignia repair center or store personnel, Insignia will (at its sole option): (1) repair the Product with new or rebuilt parts; or (2) replace the Product at no charge with new or rebuilt comparable products or parts. Products and parts replaced under this warranty become the property of Insignia and are not returned to you. If service of Products or parts are required after the Warranty Period expires, you must pay all labor and parts charges. This warranty lasts as long as you own your Insignia Product during the Warranty Period. Warranty coverage terminates if you sell or otherwise transfer the Product.

## How to obtain warranty service?

If you purchased the Product at a Best Buy retail store location or from a Best Buy online website ([www.bestbuy.com](http://www.bestbuy.com) or [www.bestbuy.ca](http://www.bestbuy.ca)), please take your original receipt and the Product to any Best Buy store. Make sure that you place the Product in its original packaging or packaging that provides the same amount of protection as the original packaging. If you purchased your Product from an Authorized Partner, call Insignia at 1-877-467-4289.

To obtain warranty service, in the United States and Canada call 1-877-467-4289. Call agents may diagnose and correct the issue over the phone.

If you purchased the Product from an Authorized Partner other than Best Buy, please call 1-888-BESTBUY in the United States or 1-866-BESTBUY in Canada. You will be asked to provide proof of purchase and to return your Product to Best Buy. Make sure that you put the Product in its original packaging or packaging that provides the same amount of protection as the original packaging.

## Where is the warranty valid?

This warranty is valid only in the United States and Canada to the original purchaser of the product from an Authorized Partner, in the country where the original purchase was made.

## What does the warranty not cover?

This warranty does not cover:

- Food, beverage, and or medicine loss/spoilage.
- Damage to other products caused by a power surge or other similar issue while connected to the Product.
- Customer instruction/education.
- Installation.
- Set up adjustments.
- Cosmetic damage.
- Damage due to weather, lightning, and other acts of God, such as power surges.
- Accidental damage.
- Misuse.
- Abuse.
- Negligence.
- Commercial purposes/use, including but not limited to use in a place of business or in communal areas of a multiple dwelling condominium or apartment complex, or otherwise used in a place of other than a private home.
- Modification of any part of the Product, including the antenna.
- Display panel damaged by static (non-moving) images applied for lengthy periods (burn-in).
- Damage due to incorrect operation or maintenance.
- Connection to an incorrect voltage or power supply.
- Damage due to attempted repair by any person not authorized by Insignia to service the Product.
- Products sold "as is" or "with all faults".
- Consumables, including but not limited to batteries (i.e. AA, AAA, C etc.).
- Products where the factory applied serial number has been altered or removed.
- Loss or Theft of this product or any part of the product.
- Display panels containing up to three (3) pixel failures (dots that are dark or incorrectly illuminated) grouped in an area smaller than one tenth (1/10) of the display size or up to five (5) pixel failures throughout the display. (Pixel based displays may contain a limited number of pixels that may not function normally.).
- Failures or Damage caused by any contact including but not limited to liquids, gels or pastes.

Contact Insignia:

1-877-467-4289

[www.insigniaproducts.com](http://www.insigniaproducts.com)

INSIGNIA is a trademark of Best Buy and its affiliated companies.

\*Distributed by Best Buy Purchasing, LLC

7601 Penn Ave South, Richfield, MN 55423 U.S.A

©2025 Best Buy. All rights reserved.

# INSIGNIA™

**1-877-467-4289**

**[www.insigniaproducts.com](http://www.insigniaproducts.com)**

INSIGNIA is a trademark of Best Buy and its affiliated companies

Distributed by Best Buy Purchasing, LLC

7601 Penn Ave South, Richfield, MN 55423 U.S.A.

©2025 Best Buy. All rights reserved

V1 ENGLISH  
25-0172