


# INDOOR TEMPERATURE & HUMIDITY STATION INSTRUCTION GUIDE



MODEL: 308-1911V2  
DC:060724

## POWER UP

1. Insert 2 AAA batteries into the back of the station.
2. Configure basic settings.

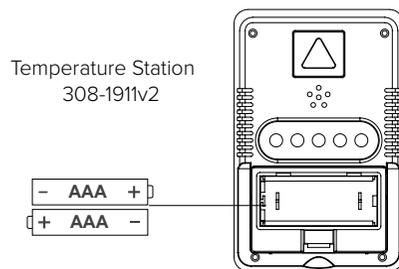

## SETTINGS

1. Hold the SETTINGS button to enter the Settings Menu.
2. Press the + or - button to adjust the values.
3. Press the SETTINGS button to confirm adjustments and move to the next item.
4. Press the ALERTS button at any time to exit.

### Settings Menu order:

- Language (English | Español | Francais)
- Beep ON/OFF
- Hour
- Minutes
- Year
- Month
- Date
- Temp Fahrenheit / Celsius

**Language:** When Español or Francais is selected, the following instructions and weekday will be presented in that language.

**Weekday:** Your Weekday will set automatically when your Year, Month, and Date are set.

## TIME ALARM

1. Hold the ALARM button until the Alarm Hour begins to flash.
2. Press the + or - button to adjust values, hold to adjust quickly.
3. Press the ALARM button to confirm and move to the Alarm Minutes.
4. Use the + or - buttons again to adjust, and press ALARM to confirm and activate the alarm, indicated by the alarm icon.🔔

### Activate/Deactivate Alarm:

- From normal time display, press the ALARM button to deactivate or to activate the alarm. The alarm time will show for 2 seconds.
- When active, the Alarm Icon 🔔 will show.
- When the Alarm /icon is not showing, the alarm is not active and will not sound.
- Press any button to turn off a sounding alarm.


## HI & LO HUMIDITY ALERT

### Set Alerts:

1. Hold the ALERTS button for 3 seconds, Alert OFF will show for your HI Humidity Alert.
2. Arm this alert by pressing the PLUS (+) button. Or leave the alert unarmed by pressing the ALERTS button to skip to your LO Humidity Alert.
3. When HI/LO ALERT ON appears, use the + or - button to adjust the alert value.
4. Press the ALERTS button to move to the next alert setting or exit the menu.



### Arm/Disarm Humidity Alerts:

- To disarm alerts, follow the steps above but use the MINUS (-) button to turn alerts OFF.

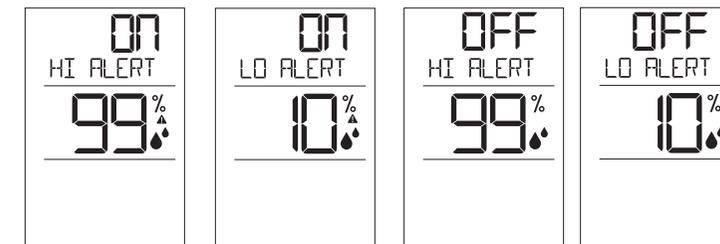

## HI & LO TEMPERATURE/HUMIDITY RECORDS

- From normal display, press the PLUS (+) button to view your HI temperature/humidity records for 5 seconds.
- From normal display, press the MINUS (-) button to view your LO temperature/humidity records for 5 seconds.

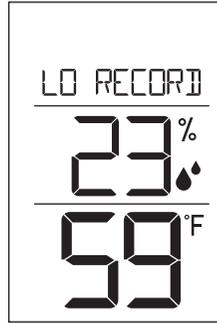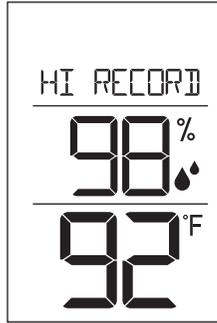

**Note:** These records are recorded from the date you powered the station on. They can only be reset with a power cycle.

## TREND ARROWS ↕

- The Trend Arrows indicate changes in temperature and humidity over the past hour. They update every 15 minutes and compare data from exactly one hour prior.
- Temperature: Arrow adjusts every 1 degree Fahrenheit.  
Humidity: Arrow adjusts every 2% RH

## CUSTOM WEEKDAY | DATE DISPLAY

- Press and release the SETTINGS button to display either the full Weekday, or three letter Weekday, Month, & Date.
- The station will remain on the date display chosen.

## LOW BATTERY INDICATOR

- When battery indicator shows next to the Humidity reading, replace batteries in the station.

## WE'RE HERE TO HELP!

If you require additional support, get in touch with our friendly customer support team based out of La Crosse, WI.

**Self Help:** [bit.ly/308-1911v2\\_support](https://bit.ly/308-1911v2_support)  
**Phone:** 1-608-782-1610  
**Online:** [bit.ly/contact\\_techsupport](https://bit.ly/contact_techsupport)

Our knowledgeable customer support team is available:  
Monday-Friday, 8am-6pm CST.

## STAY IN TOUCH

Ask questions, watch set up videos, and provide feedback on our social media outlets. Follow La Crosse Technology on Youtube, Facebook, Instagram, & X (Twitter).



## SPECIFICATIONS

**Power:** 2-AAA, IEC, LR3 batteries (not included)  
**Battery Life:** Over 12 months  
**Temperature Range:** 32°F to 122°F (0°C to 50°C)  
**Humidity Range:** 10% RH to 99%  
**Dimensions:** 4.34" H x 2.84" W x 0.85" D  
(11.03 H x 7.23 W x 2.15 D cm)

## CARE & MAINTENANCE

### Battery replacement instruction:

- When batteries of different brand or type are used together, or new and old batteries are used together, some batteries may be over-discharged due to a difference of voltage or capacity. This can result in venting, leakage, and rupture and may cause personal injury.
- Always purchase the correct size and grade of battery most suitable for the intended use.
  - Always replace the whole set of batteries at one time, taking care not to mix old and new ones, or batteries of different types.
  - Clean the battery contacts and those of the device prior to battery installation.
  - Ensure the batteries are installed correctly with regard to polarity (+ and -).
  - Remove batteries from product during periods of non-use. Battery leakage can cause corrosion and damage to this product.
  - Remove used batteries promptly.
  - For recycling and disposal of batteries, and to protect the environment please check the internet or your local phone directory for local recycling centers and/ or follow local government regulations.

### WARRANTY INFO

La Crosse Technology Ltd. provides a 1-year limited-time warranty on this product relating to manufacturing defects in materials & workmanship. Per the Song-Beverly Act, in the state of California, the warranty on this item becomes effective on the date of delivery.  
La Crosse Technology, Ltd, 2830 S. 26th St., La Crosse, WI 54601

**For Full Warranty Details, Visit:** [www.lacrossetechnology.com/support](https://www.lacrossetechnology.com/support)  
**Patents:** [www.lacrossetechnology.com/patents](https://www.lacrossetechnology.com/patents)

### FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Increase separation between equipment & receiver.
- Consult the dealer or an experienced radio/TV technician for help.

This device must not be co-located or operating in conjunction with any other antenna or transmitter.

Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

### CAUTION!

The manufacturer is not responsible for any radio or TV interference caused by unauthorized changes or modifications to this equipment. Such changes or modifications could void the user authority to operate the equipment.

All rights reserved. This manual may not be reproduced in any form, even in part, or duplicated or processed using electronic, mechanical or chemical process without the written permission of the publisher. This booklet may contain errors or misprints. The information it contains is regularly checked and corrections are included in subsequent editions. We disclaim any responsibility for any technical error or printing error, or their consequences. All trademarks and patents are recognized.



**WARNING** This product can expose you to chemicals including acrylonitrile, 1, 3-butadiene, and styrene, which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to: [www.P65Warnings.ca.gov](https://www.P65Warnings.ca.gov)