 


CHEFMAN®

RJ52

ELECTRIC KNIFE

WITH CARVING FORK & CASE

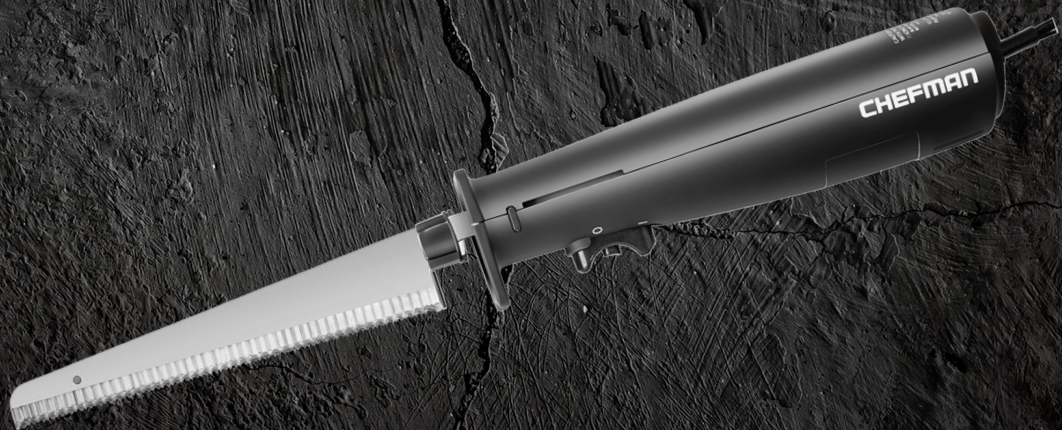

CUSTOMER SERVICE: 888.315.6553 | customerservice@chefman.com

CONGRATULATIONS ON YOUR PURCHASE!

Every Chefman product is manufactured to the highest standards of performance and safety, and we are confident that you will be so satisfied with your purchase that Chefman will be your go-to company for appliances in the future.

Customer satisfaction is a key element of our company's philosophy. The Chefman brand exists to fill a void on retail shelves and in consumer kitchens for a truly value-focused kitchen appliance. By questioning and adding value and innovation at every touch point in the manufacturer to end user journey, Chefman provides home chefs with the tools they need to achieve picture-perfect results with maximum efficiency. In addition to manufacturing appliances that are dependable, affordable, and built with intuitive features to enhance your kitchen experience, we pride ourselves on providing top-of-the line post purchase support, which includes complimentary access to ClubChefman.com for product tutorials, delicious recipes & how-to videos, and access to our team of dedicated Chefs.

Should a problem arise, each product is backed by a comprehensive manufacturer's 1-year warranty as well as outstanding after-sales service support through our dedicated customer service team. In the unlikely event that your product does not operate as described in the manual please feel free to call or email our helpline for assistance. We understand that sometimes products can malfunction, so if you feel that your appliance is not operating as it should, warranty claims can be made within one year from the date of purchase when accompanied by a dated receipt.

This guarantee is in addition to your statutory rights; your statutory rights are not affected. This limited warranty does not apply in cases of damage caused by accident, improper use, abuse or force majeure.

This warranty gives you specific legal rights. Rights may vary depending on your state or province of residence. Some locations do not allow limitations on implied warranties or special incidental, or consequential damages, so the limitations may not apply to you. This limited warranty will be invalidated if the appliance is tampered with in any way whatsoever.

Our telephone helpline (888) 315-6553 is available for questions or technical assistance: Monday-Friday 9am to 5 pm EST.

Customers can also receive support via email: customerservice@chefman.com.



READ ALL INSTRUCTIONS BEFORE USE

For your safety and continued enjoyment of this product, always read the instruction manual before using.



CONTENTS

- 1** Safety Instructions
- 4** Features
- 5** Operating Instructions
- 7** Tips
- 8** Cleaning and Maintenance
- 11** Terms and Conditions
- 12** Warranty Card

SAFETY INSTRUCTIONS

IMPORTANT SAFEGUARDS

READ ALL INSTRUCTIONS.

THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY.

WARNING: When using electrical appliances, especially when children are present, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

1. Do not immerse power cord, plug or appliance in water or any other liquid. This is an electrical appliance. To avoid the risk of electrical shock or serious personal injury, always operate with dry hands.
2. Never leave the Electric Knife connected to the power outlet when not in use.
3. Never pull the power cord to remove from outlet; always handle it from the base of the plug.
4. Do not use the Electric Knife for other than intended use. Do not use outdoors. For household use only.
5. Close supervision is necessary when any appliance is being used by or near children. This Electric Knife is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the Electric Knife by a person responsible for their safety.
6. Never leave the Electric Knife unattended while it is operating.
7. Unplug the Electric Knife from the electrical outlet when not in use, before cleaning, and before putting on or taking off the blades.
8. If Electric Knife stops due to improper operation, or if there is excessive noise, release the On/Off trigger so the Electric Knife powers off. Wait for blades to stop and unplug from electrical outlet. DO NOT open the handle to repair. Contact Chefman for assistance.

SAFETY INSTRUCTIONS

9. Do not operate the Electric Knife if it is damaged or malfunctions in any manner. Do not operate with a damaged power cord or plug.
10. Do not let the power cord hang over the edge of a table or counter or touch any hot surface.
11. Always operate your Electric Knife on a cutting board on a stable surface.
12. The use of accessory attachments not recommended by the manufacturer may result in fire, electrical shock, or risk of injury.
13. Do not place Electric Knife on or near hot gas or electric burner, or in a heated oven.
14. Avoid contact with moving parts. To reduce the risk of injury to persons and/or damage to the Electric Knife, do not put your hands, hair clothing or other objects other than the food you intend to cut near the blades.
15. Blades are sharp! Handle carefully. Unplug before handling blades. Always handle blades with hand away from cutting edge. Always use caution when washing your blades.
16. To avoid personal injury, keep hands and utensils away from sharp blade during operation.
17. Do not operate the Electric Knife in water or under running water.
18. Do not use the Electric Knife on hard foods such as bone or frozen foods.
19. Do not use the Electric Knife for longer than 5 minutes at a time. Allow the knife to cool completely before continuing.
20. Always make sure the cord is unplugged into outlet when inserting and removing the blades from the handle (motor housing).
21. Always handle blades by the side opposite the cutting edges or by the blade grips.
22. Never wrap the power cord around the handle (motor housing).

SAFETY INSTRUCTIONS

SAVE THESE INSTRUCTIONS

WARNING: This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

SHORT CORD INSTRUCTIONS

A short power supply cord is provided to reduce the hazards resulting from entanglement or tripping over a longer cord. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use. If a longer detachable power-supply extension cord is used:

1. The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance, and:
2. The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

LINE CORD SAFETY TIPS

1. Never pull or yank on cord or the appliance.
2. To insert plug, grasp it firmly and guide it into outlet.
3. To disconnect appliance, grasp plug and remove it from outlet.
4. Before each use, inspect the line cord for cuts and/or abrasion marks. If any are found, this indicates that the appliance should be serviced and the line cord replaced. Please return it to an authorized service representative.
5. Never wrap the cord tightly around the appliance, as this could place undue stress on the cord where it enters the appliance and cause it to fray and break.

 
DO NOT OPERATE APPLIANCE IF THE LINE CORD SHOWS ANY DAMAGE OR IF APPLIANCE WORKS INTERMITTENTLY OR STOPS WORKING ENTIRELY.

CAUTION: To ensure continued protection against risk of electric shock, connect to properly grounded outlets only.

IMPORTANT: During the first few minutes of initial use, you may notice smoke and/or a slight odor. This is normal and should quickly disappear. It will not recur after appliance has been used a few more times.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

FEATURES

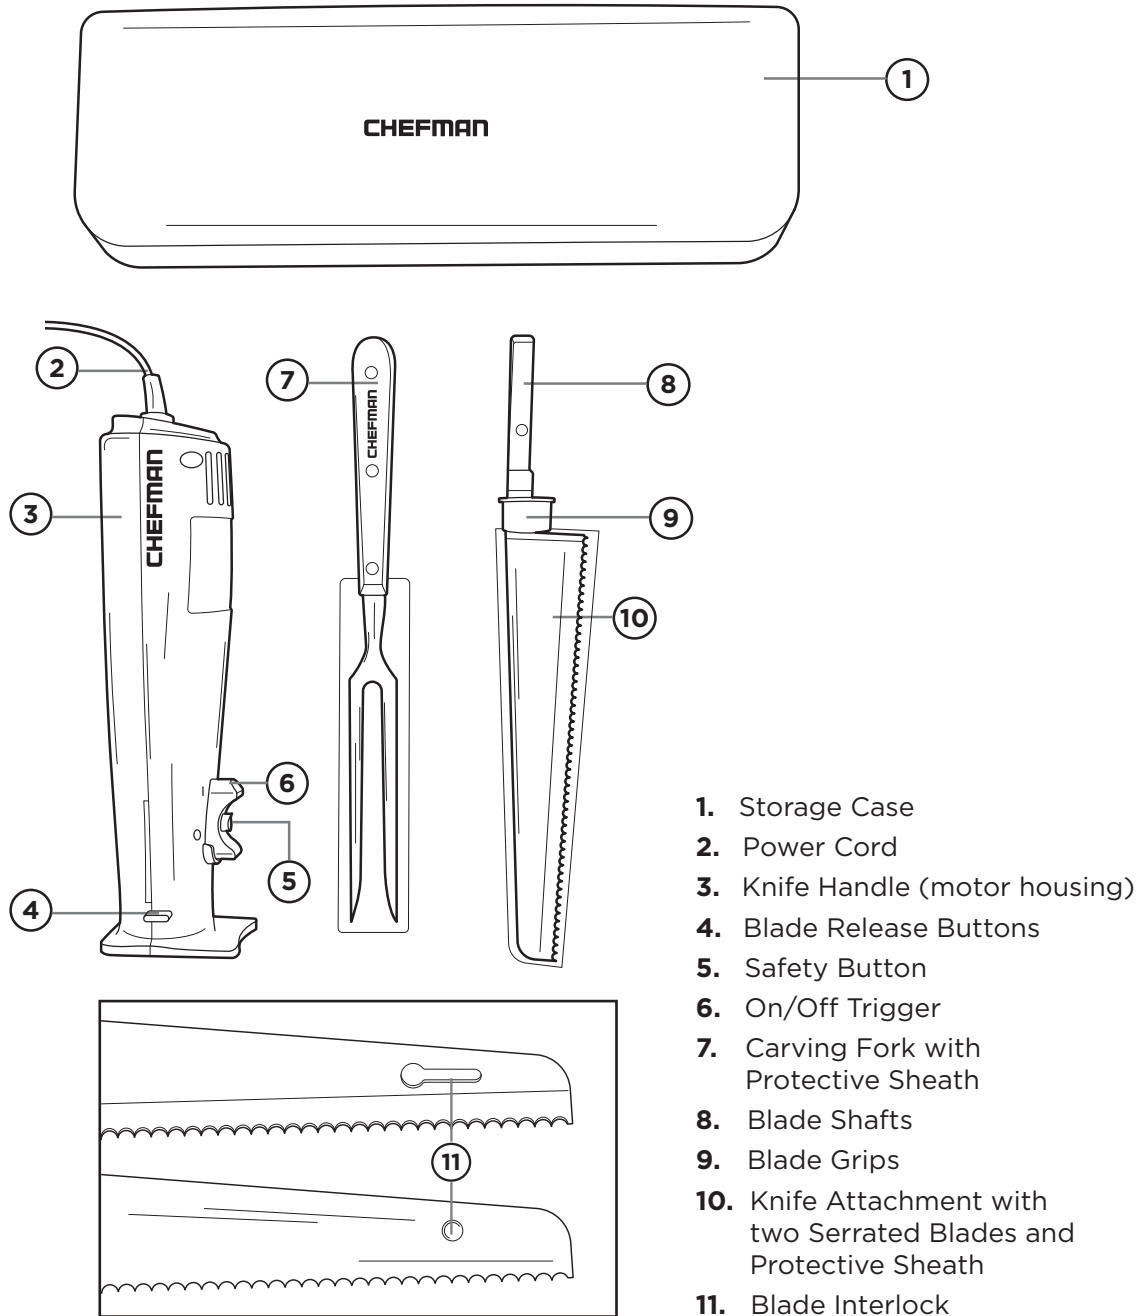

OPERATING INSTRUCTIONS

BEFORE FIRST USE

Remove all packing materials. Gently wipe down knife handle with a damp cloth or paper towel. Carefully wash knife attachment and carving fork with a sponge and warm, soapy water. Knife attachment and carving fork are top-rack dishwasher safe. Knife handle is NOT dishwasher safe. Never submerge the knife handle in water.

CAUTION: The blades are very sharp. Handle with care.

Read all instructions and follow them carefully.

NOTE: The Electric Knife should not run for more than five minutes continuously. Allow the knife to cool down completely before continuing.

ATTACHING THE BLADES

 
 
 
Remove protective sheath from blades. Carefully ensure that the blades are connected to each other with the blade interlock (See Figures 1 & 2 on page 6). To connect, hold the blades by the blade shafts with the blade grips facing outwards. Place the top blade onto the bottom blade so that the notch on the bottom blade can slide into the keyhole on the top blade. Blades should be able to slide back and forth easily and securely when knife is in use.

To attach the blades to the handle, ensure the cord is not plugged into the outlet. Hold the connected blades by the blade grips with the serrated edges facing away from you (See Figure 2 on page 6). Holding the knife handle in your other hand, insert the blades into the top of the handle (See Figure 3 on page 6). Both blades should click into place. Ensure they are secure by gently pulling them away from the handle.

RELEASING THE BLADES

While holding the blade grips, with the serrated edges facing away from you, squeeze the blade release buttons. (See Figure 3 on page 6.) Pull the blades away from handle.

OPERATING INSTRUCTIONS

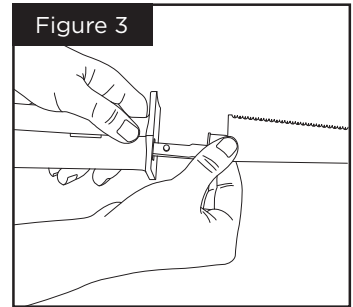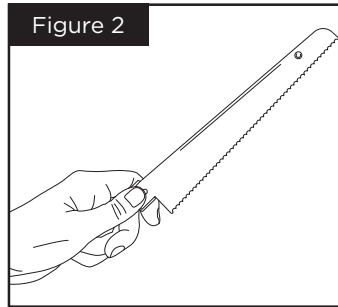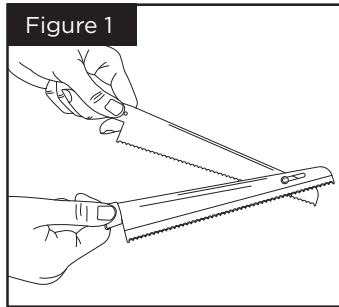

HOW TO USE

Ensure blades are secure. See “Attaching the Blades” on page 5. Plug cord into outlet. Always use carving fork to hold food in place.

CAUTION: Never place your hands or fingers near the blades while the Electric Knife is in use.

Press safety button located on the On/Off trigger. Slide trigger down. Use a steady motion to guide knife along food to slice it. Do not use a lot of pressure. Do not use a sawing, back and forth motion.

NOTE: The electric knife should not run for more than five minutes continuously. Allow the knife handle to cool down completely before continuing.

TIPS

Use a cutting board that lays flat on a steady surface. Ensure that the cutting board is secured with grips, or secure it by placing a damp paper towel or dish towel underneath it.

A grooved cutting board is ideal for juicy foods such as meat.

For best results, let the knife do the work. Do not apply a lot of pressure when using. Do not use a sawing, back and forth motion.

Allow meats to rest at least 10 minutes after cooking and before slicing. This will help the meat retain its juices and flavor.

For tough cuts of meat, like flank steak or brisket, slice against the grain.

When slicing meat near the bone, cut almost to the bone and then use your hands to separate the remaining meat from the bone. Do not attempt to cut through the bone.

In addition to slicing various types of meat, such as large roasts, turkey, chicken, ham and steak, the Electric Knife may also be used to slice fruits, such as small to medium sized melons and pineapple; vegetables, such as tomatoes and eggplant; and soft to medium-hard cheeses, such as fresh mozzarella and cheddar.

When slicing hard items, such as a small watermelon, more pressure may be required.

Always use the carving knife when slicing. It is especially important to use it when slicing small pieces of food or the ends of food. It is also important to use it when slicing slippery items such as watermelon or peeled pineapple.

Do not use to cut frozen food.

Never place your fingers close to the blade when slicing. Always use the carving fork, especially when a small piece is left to slice.

To prolong the life of your knife, as with all knives, wash by hand. High dishwasher temperatures and detergents may dull the blade over time.

Do not attempt to sharpen blades. Replacement blades may be purchased. Call customer service for more information.

CLEANING AND MAINTENANCE

After each use, release blades and carefully wash with a sponge and warm, soapy water. Blades and carving fork are top-rack dishwasher safe. Knife handle is NOT dishwasher safe.

Never submerge knife handle in water. Wipe with a damp cloth or paper towel.

Do not use abrasive cleaners on any part of the Electric Knife.

Dry blades, carving fork and knife handle thoroughly before storing. Never wrap the power cord around the handle.

Store in a cool, dry place out of the reach of children.

Do not place any heavy items on top of the electric knife during storage; this may result in possible damage.

NOTES

[illegible]

NOTES

[illegible]

TERMS & CONDITIONS

Limited Warranty

CHEFMAN® warrants, subject to the conditions stated below, that from the date of purchase, this product will be free from mechanical defects for a period of ONE (1) year. CHEFMAN®, at its option, will repair or replace this product found to be defective during the warranty period. Should this product become defective by reason of improper workmanship or material defect during the specified warranty period, CHEFMAN® will repair or replace the same effecting all necessary parts replacements for a period of one year from the date of purchase. If product is no longer available we will replace it with a product of equal value. Transportation charges on parts, or products in whole, submitted for repair or replacement, under this warranty, must be borne by the purchaser. This warranty is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than as specified on the rating label (e.g., 120V - 60 Hz).

This warranty is available to consumers only. You are a consumer if you own a CHEFMAN® product that was purchased at retail for personal, family or household use. Except as otherwise required under applicable law, this warranty is not available to retailers or other commercial purchasers or owners.

CONDITIONS: This warranty is valid for the original USA and Canada retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty service or replacement. Dealers, service centers, or retail stores do not have the right to alter, modify or in any way, change the terms and conditions of this warranty. Warranty registration is not necessary to obtain warranty on CHEFMAN® Products. Save your proof of purchase receipt.

ABOUT YOUR PRODUCT WARRANTY: Most warranty repairs are handled routinely, but sometimes requests for warranty service may not be appropriate. For example, warranty service would NOT apply if the product damage occurred because of misuse, lack of routine maintenance, shipping, handling, 3rd party warehousing or improper installation. Similarly, the warranty is void if the manufacturing date or the serial number on the product has been removed or the equipment has been altered or modified. During the warranty period, the authorized service dealer, at its option, will repair or replace any part that, upon examination, is found to be defective under normal use and service.

NORMAL WEAR: This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product; improper voltage or current; use contrary to the operation instructions; deviation from instructions regarding storage and transportation; repair or alteration by anyone other than CHEFMAN® or an authorized service center. Further, the warranty does not cover Acts of God, such as fire, flood, hurricanes and tornadoes. CHEFMAN® shall not be liable for any incidental or consequential damages caused by the breach of any express or implied warranty. Except to the extent prohibited by applicable law, any implied warranty of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty. Some states, provinces or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or province to province.

HOW TO OBTAIN WARRANTY SERVICE: If your CHEFMAN® product should prove to be defective within the warranty period, we will repair it, or if we think necessary, replace it. To obtain warranty service, simply email customerservice@chefman.com or call our toll-free number 1-888-315-6553 for additional information from our Customer Service Representatives, or send the defective product to Customer Service at Chefman, 200 Performance Drive, Mahwah, NJ 07495.

This warranty is effective for the time periods listed above and subject to the conditions provided for within this policy.

CALIFORNIA RESIDENTS ONLY:

California law provides that for In-Warranty Service, California residents have the option of returning a nonconforming product (A) to the store where it was purchased or (B) to another retail store which sells CHEFMAN® products of the same type. The retail store shall then, at its discretion, either repair the product, refer the consumer to an independent repair facility, replace the product, or refund the purchase price less the amount directly attributable to the consumer's prior usage of the product. If the above two options do not result in the appropriate relief to the consumer, the consumer may then take the product to an independent repair facility if service or repair can be economically accomplished. CHEFMAN® and not the consumer will be responsible for the reasonable cost of such service, repair, replacement, or refund for nonconforming products under warranty.

CHEFMAN® is a registered trademark of RJ BRANDS, LLC.

WARRANTY



ELECTRIC KNIFE
WITH CARVING FORK & CASE



All data fields are required in order for us to process your request:

Model Number: _____

Full Name: _____

Address: _____

Phone: _____ Email: (if applicable) _____

Date of Purchase*: _____

*We recommend you keep the receipt with this warranty card

Retail Store of Purchase: _____

Description of Malfunction:

Return your completed warranty card to:

RJ Brands
200 Performance Drive
Suite 207
Mahwah, NJ
07495

ELECTRIC KNIFE
CARVING FORK & CASE

MODEL:
RJ52

888.315.6553

customerservice@chefman.com

Phone lines available Monday to Friday, 9am-5pm EST
1-YEAR LIMITED WARRANTY



To log-in to ClubChefman.com follow the below steps:

1. Enter www.clubchefman.com into your web browser.
2. Click on "Sign Up Now".
3. Fill in the required information as prompted.
NOTE: "Place of Purchase" refers to the store at which you purchased your product.
4. Sign in using your User Name and Password.

CLUB CHEFMAN ACCESS CODE: 3001202

CHEFMAN®



CLUBCHEFMAN.COM | CHEFMAN.COM | @MYCHEFMAN