

Wireless Boombox

User's Guide for Model BCB117 v1823-02

 
 


Features

- Built-in stereo speakers
- Supports Bluetooth wireless - range 60 ft.
- CD player: supports CD, CD-R/RW
- Programmable tracks
- AM/FM radio with built-in antennas
- Aux In (3.5mm audio input)
- Analog volume control
- Red LED display
- AC Power: requires AC Power Cable (included)
- DC Battery Power: requires 6 C batteries (not included)


Includes

- AC Power Cable
- User's Guide

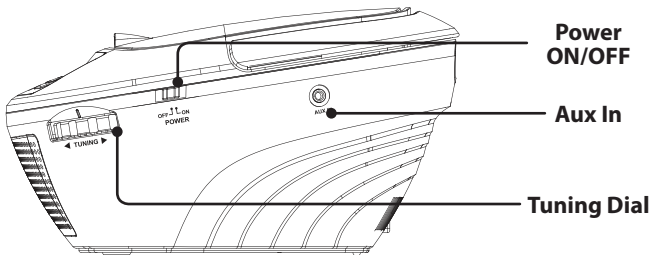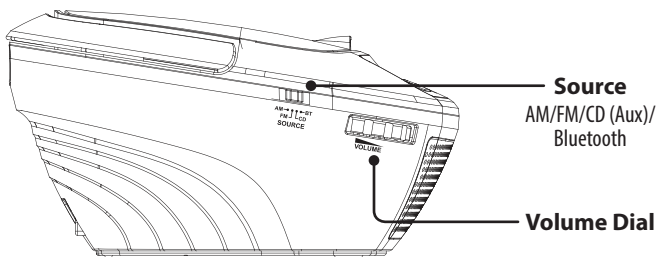

Carry Handle

 CD Door

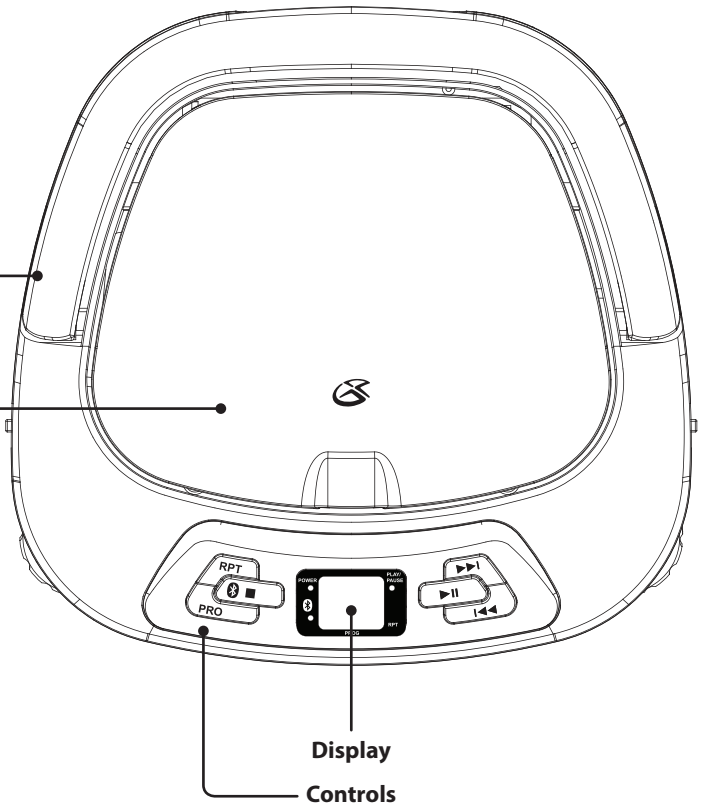

RPT (Repeat)
Press to repeat a single track or the entire album.

Pair Bluetooth/Stop

 
PROG (Program)
Press to program tracks to play in a specific order.

Play/Pause

Skip Fwd/Rev.
Press to skip between tracks on a CD.
Press and hold to search through a single track.


AC Power Cord

For power, plug the power cord into the power port on the rear or the boombox and a standard power outlet.

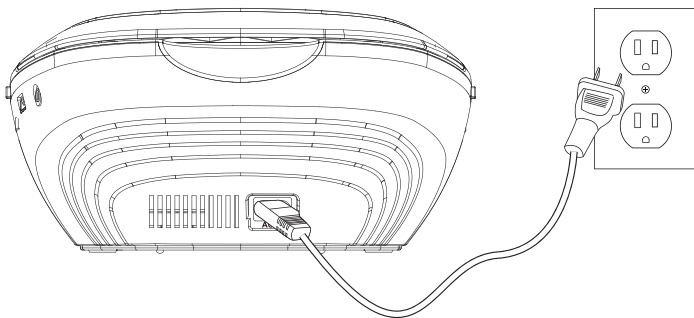

Battery Power

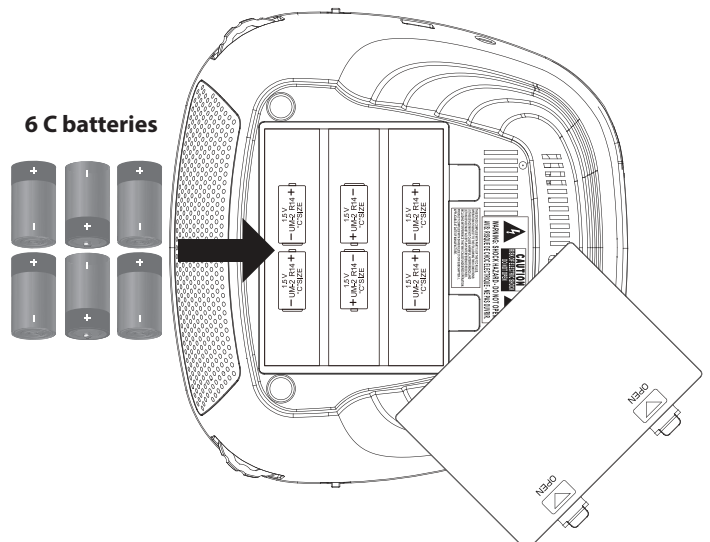 

For battery power, this unit requires 6 C sized batteries (not included).



Bluetooth Wireless

Pairing to a Bluetooth Device and Playing Audio

After initial pairing, the unit will stay paired unless unpaired manually by the user or erased due to a reset of the device. If your device should become unpaired or if any pairing issues should occur, un-pair the unit on your Bluetooth device and follow these steps again.

1. Adjust the boombox's **Source** to **BT (Bluetooth) mode**. A blue light will flash on the display next to the  symbol. If the boombox does not automatically begin to pair, press the  button. *When pairing, remain within 3 feet of the unit.*
2. Using the controls on your Bluetooth device, select **BCB117** from your Bluetooth settings to pair. When successfully paired, the blue light on the display will turn solid and an audible chime will sound from the unit. *If your device requests a password, enter the default password **0000**. You can refer to the user's manual for your specific device for instructions on pairing and connecting Bluetooth devices.*
3. Audio played through the connected Bluetooth device should now be heard through the speakers. Use the controls on the connected Bluetooth device to select and begin playing audio. Play, pause or skip audio using the controls on the device or the boombox.

CD Player

Loading and Playing a CD

1. Open the CD door and place a CD in the boombox, label side facing up.
2. Close the CD door.
3. Adjust the boombox's **Source** to **CD mode**.
4. Press the **Play/Pause** button to begin playing the loaded disc.

Programming a CD

1. Press the **Stop** button to stop a loaded CD.
2. Press the **PROG** button. "01" will blink on the display.
3. Press the **Skip Fwd/Rev** buttons to select a track.
4. Press the **PROG** button to add the selected track to the program. Repeat this process to program up to 20 tracks to play in a specified order.
5. Press the **Stop** button to cancel a program.

Radio

Playing the AM/FM Radio


This unit is equipped with internal AM/FM radio antennas. To improve radio reception, adjust the position of the unit.

1. Adjust the boombox's **Source** to **AM or FM mode**.
2. Adjust the **Tuning Dial** to the desired frequency band.
3. Turn the **Volume** dial to turn on the radio and adjust to the desired volume.
4. Adjust the **Tuning** dial to tune the radio.

Aux In

Requires a 3.5mm audio cable (not included).

 1. Connect a 3.5mm audio cable to the **Aux In on the unit** and **an audio output** on an MP3 player or other audio source.
2. Adjust the boombox's **Source** to **CD (Aux) mode**.
3. Use the controls on the connected MP3 player or other audio source to begin playing audio through the boombox.

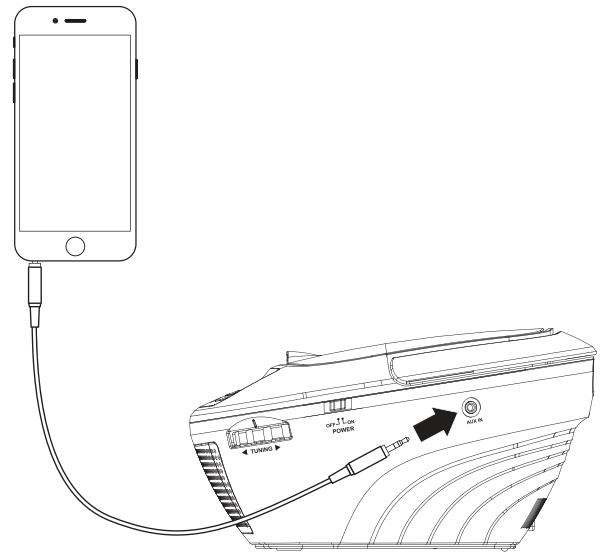

Customer Support

Customer Service: 1-888-999-4215 | **Email Support:** prodinfo@dpiinc.com | **Email Parts:** partsinfo@dpiinc.com

For Safety Information, refer to the included Safety Information & Warnings document. The Safety Information & Warnings document should be retained for future reference.

For Warranty Information and the most up-to-date version of this User's Guide, go to www.gpx.com

To download this User's Guide in English, Spanish, or French, or to get answers to frequently asked questions, visit the support section at: www.gpx.com

Para descargar este Manual del Usuario en inglés, español y francés, o para obtener respuestas a preguntas frecuentes, visite la sección de apoyo en: www.gpx.com

Pour télécharger ce guide de l'utilisateur en anglais, espagnol ou français, ou pour obtenir des réponses à des questions fréquemment posées, consultez la rubrique d'assistance sur: www.gpx.com

Copyright © 2017 Digital Products International (DPI, Inc.) All other trademarks appearing herein are the property of their respective owners. Specifications are subject to change without notice.

