












### Please give us a chance to make it right and do better!

Contact our friendly customer service department for help first. Replacements for missing or damaged parts will be shipped ASAP!



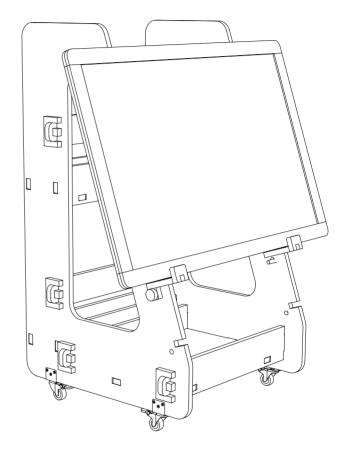

## **Contact Us!**

## Do NOT return this item.

Contact our friendly customer service department for help first.



US:cs.us@costway.com UK:cs.uk@costway.com AU: cs.au@costway.com

## **USER'S MANUAL**

## **Kids Art Easel TP10010**





# **Before You Start**

Please read all instructions carefully and keep it for future reference.

#### **General Security Warning**

Caution: The Product is not suitable for the children under 3 years

Danger: Keep all small parts and packaging materials for this product away from babies

and children, otherwise they may pose a choking hazard.

Danger: Lack of attachment may cause a risk of tipping.





# **WARNING: CHOKING HAZARD**-Small parts. Not for children under 3 years.

#### **Warning for Assembly**


⚠ Assembled only by adults

⚠ Remove all Packaging, separate and count all parts and hardware.


 $\triangle$  Read through each step carefully and follow the proper order.


⚠ We recommend that, where possible, all items are assembled near the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.

 $\triangle$  Ensure a secure surface during installation, and place the product always on a flat, steady and stable surface.

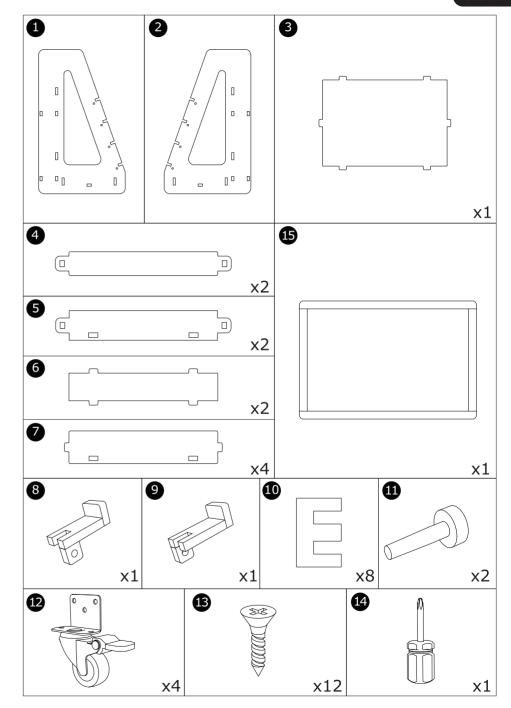



02

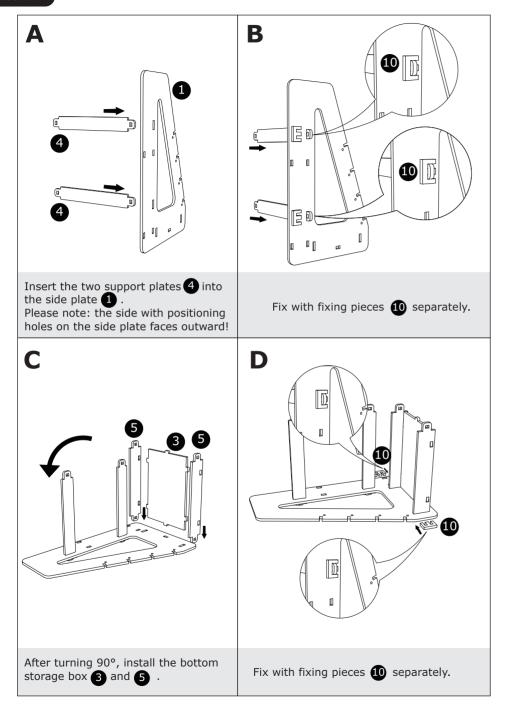

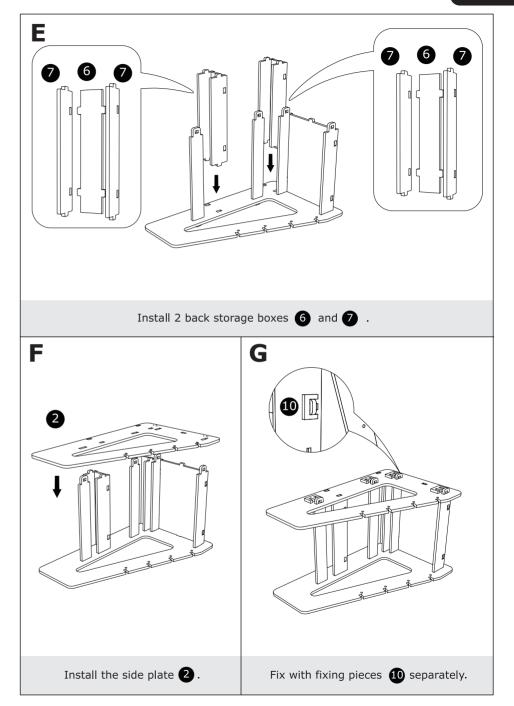

04 05

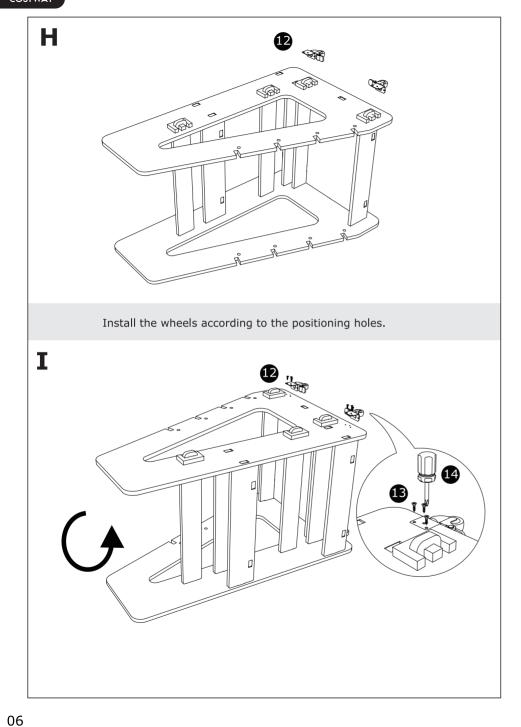

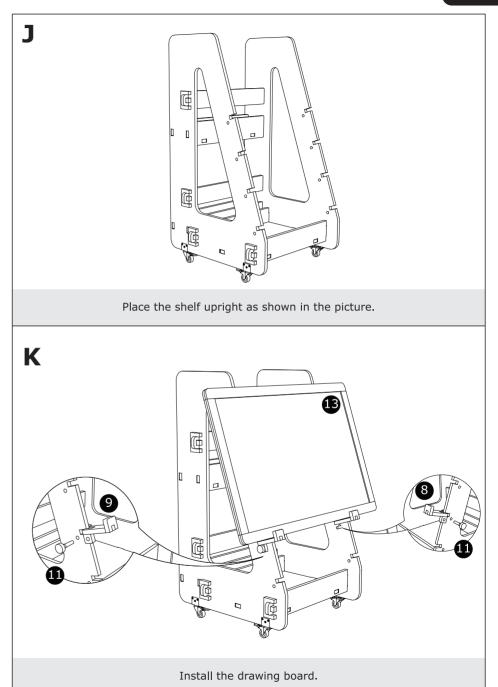

5