

MOOSOO HAIR CURLER

User Manual



12-MONTH WARRANTY

SUPPORT TEAM:

US: usa@imoosoo.com

EU: service@imoosoo.com

▶▶ IMPORTANT SAFETY INSTRUCTIONS

When using electric appliance, especially when children are present, basic safety precautions should always be followed, including the following.

▶▶ READ ALL INSTRUCTIONS BEFORE USING

▶▶ KEEP AWAY FROM WATER

1. **WARNING:** Do not use appliance near bathtub, sink, or other containers or basins filled with water. Do not use appliance while bathing.

2. Do not place in or drop into the water or other liquids.

WARNING: To reduce the risk of burns, electrocution, fire, or injury to persons:

3. When not in use, unplug the curler. Allow it to cool and store in a safe, dry location.

2. This curler is hot when in use. Do not let eyes or bare skin touch heated surfaces.

4. Do not place the heated curler directly on any surface while it is hot, other than a thermal mat.

5. Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities.

6. This curler is intended to be used only on head hair.

7. Use this appliance only for its intended use as described in this manual.

8. Never drop or insert any object(s) into any opening in the appliance.


9. Do not use outdoors or operate where aerosol spray products are being used or where oxygen is being administered.

10. Do not use an extension cord with this appliance.

11. Never use while sleeping.

12. If appliance is not working properly, return it to Customer Service for examination and possible replacement under warranty.
13. While heating or cooling the appliance, never place it on a soft surface, such as a bed, couch, or carpet.
14. Do not leave curler in hot humid places.

▶▶ PACKAGE LIST

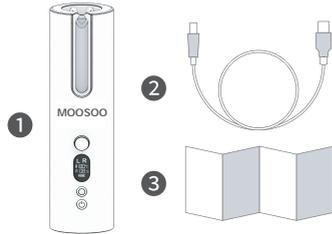


- ① Hair Curler*1
② Type C Cable *1
③ User Manual*1

▶▶ SPECIFICATION

Charging Volt/Power	DC 5V/5W
Battery Capacity	5000mAh 7.2V
Charging Time	3-4 hours
Heating Time	60s
Battery Type	ICR18650 battery
Using Time	40-50 minutes @200°C
Temperature Option	160-200°C (5 setting)
Charging Cable	Type-C cable
Feature	3 Type Wave Direction
	LCD Screen Display
	5 Temperature Optional
	5 Curler Time Setting
	10 Minutes Automatically Turn-off

▶▶ DIAGRAM

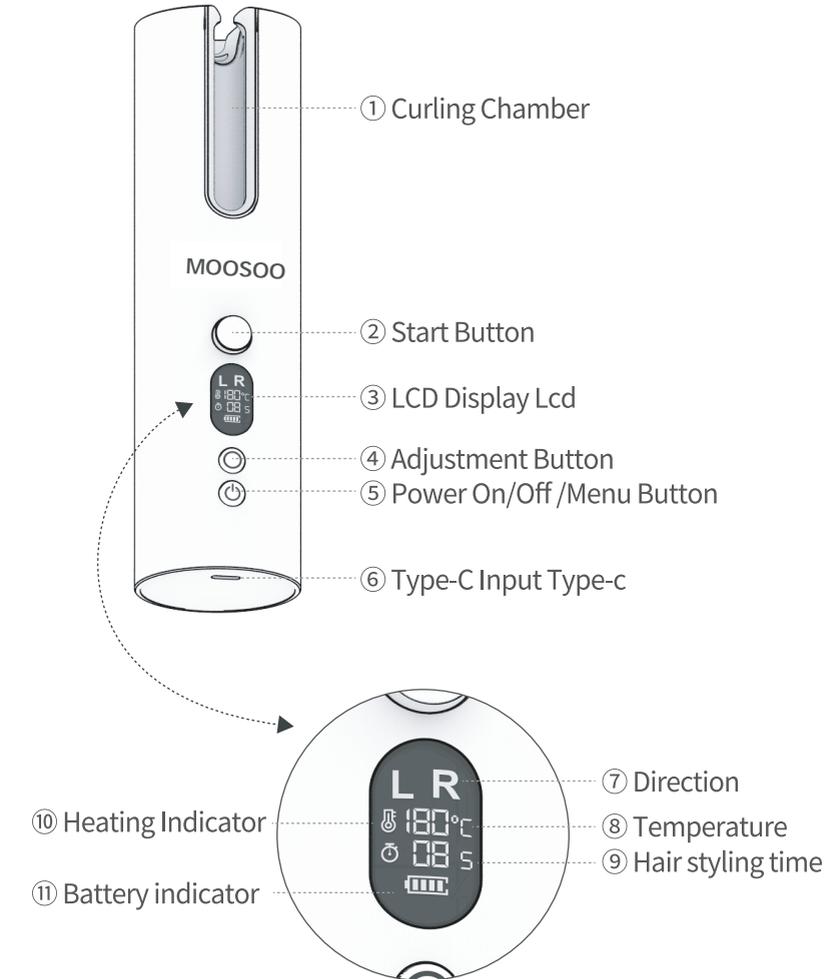

▶▶ CHARGING

 ≤25%
  ≤50%
  ≤75%
  ≤100%


Battery indicator flashing=Low battery

Please use the 5v/2A charger adapter


Charging time: 3.5 hours

Cordless Using Time: 50 Minutes @ 200°C

▶▶ HOW TO SET THE TEMPERATURE, CURL DIRECTION, CURL TIME?

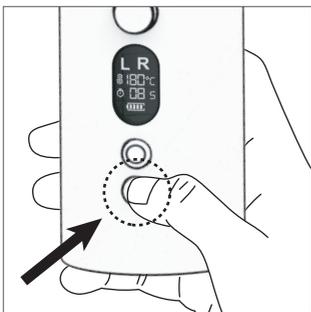

1. Long press the “” button for 3s, with a beep sound, the LCD display turns on, the temperature value flashes and then “” flashing, which means the curler starts heating up.

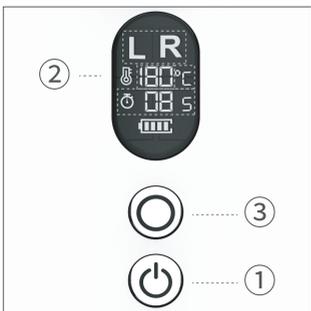

2. There are 4 customizable settings on the display:

L/R/Mix (the curling direction)

Temperature


Curling time; Battery status

°F/°C


① press the “” button to choose the set

② when the setting value is flashing

③ please press the “” button to adjust the value up or down.

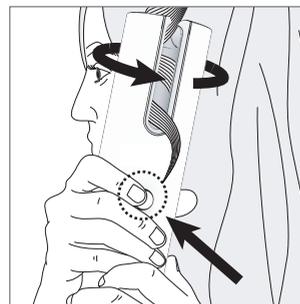


3. After setting is done, insert your hair, keep pressing the first big button, the curling bar starts rotating. Please note that when you release the button, the rotating bar will stop working, so please keep pressing until you hear the beep sound.

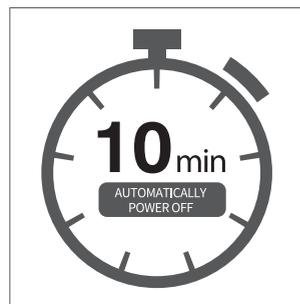


4. 10 minutes automatically off. If there is no operation for 10 minutes, the device will automatically turn off.

Button 	Button 	Button 	Button 	Button 	Button 
Style	Fragile Hair	Soft Thin Hair	Normal Fine Hair	Thick Hair	Thick Heavy Hair
Temperature	160°C/320°F	170°C/338°F	180°C/356°F	190°C/374°F	200°C/392°F
Time	6s	8s	10s	12s	14s
Curl Direction	L 	L 	MIX 	R 	R 
					


▶▶ HOW TO OPERATING?

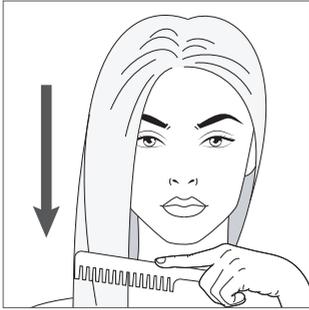


1. Please smooth your hair with your comb at first, and according to your needs to apply some oil to your hair to make it more smooth. Please note, due to the heating up, the oil may be steam and some smell and smoke are normal. Wait for minutes, and smoke will disappear.

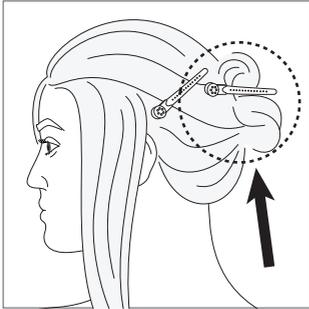

2. Section your hair into a few parts, left one part to do curler, and clip the rest of hair.

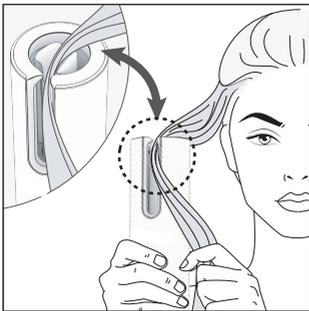

3. Take a ¾" to 1" section of hair and insert it into the opening of the curl chamber in a 90° angle. If larger sections are used, hair may be tangled. In order to avoid the rest of the hair involved and being stuck in the curling chamber, please make sure the U-shaped opening of the curl chamber toward the outside when curling.

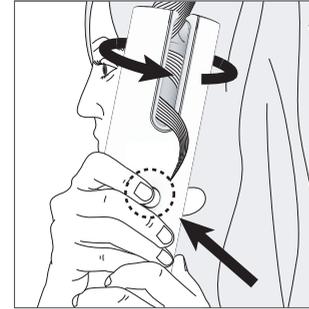

4. Keep pressing the Start Button, do not release until hear the beep sound. To reach a better styling effect, please pressing the start button until the beep sound stopped.

▶▶ Q&A

1. Could you use the hair curler while charging?

The hair curler cannot be turning on when charging. Please use it after fully charged.

2. How to solve the problem of accidentally stuck hair?

In order to avoid your hair be stuck please make sure

- ① dont put too much hair in the hair curler
- ② the front side of the hair curler should towards outside

If stuck happen, please turn the hair curler opposite direction of your hair twist way until your hair is not in a twist status, then slowly pull you hair strands by strands.

3. Cannot Charging?

- ① Please check the battery icon on the lcd display
- ② Please try another type-c cable
- ③ Please use the 5v-2a charger adapter.

- ④ Contact our support team yapoyservice@gmail.com

Why the hair curler work intermittently? Dose it defective?

Please make sure you are keeping pressing the start button while curling until hear the beep sound. When you release the start (curling) button, the hair curler will stop rotating.