

bella^{PRO}TM

PowerUp Blender Instruction Manual



Scan to register
bellakitchenware.com



TABLE OF CONTENTS

IMPORTANT SAFEGUARDS.....	3
ADDITIONAL IMPORTANT SAFEGUARDS.....	4
NOTES ON THE CORD.....	5
NOTES ON THE PLUG.....	5
PLASTICIZER WARNING.....	5
ELECTRIC POWER.....	5
TO RESET THE UNIT	5
GETTING TO KNOW YOUR BELLA PRO POWERUP BLENDER	6
BEFORE USING FOR THE FIRST TIME	7
ASSEMBLY INSTRUCTIONS	7
OPERATING INSTRUCTIONS.....	8
CONTROL PANEL CHART	8
MANUAL MODE	9
USER MAINTENANCE INSTRUCTIONS	10
CARE & CLEANING INSTRUCTIONS.....	10
STORING INSTRUCTIONS	10
LIMITED TWO-YEAR WARRANTY.....	11



IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. **READ ALL INSTRUCTIONS.**
2. To protect against risk of electric shock do not put the appliance base, power cord or plug in water or other liquid. Ensure that appliance does not get wet (water splashes etc.) and do not use it with wet hands.
3. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are closely supervised and instructed concerning use of the appliance by a person responsible for their safety. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
4. Unplug unit from outlet when not in use, before putting on or taking off parts and before cleaning. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.
5. Flashing light indicates ready to operate. Avoid inadvertent contact with the touch screen.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or is dropped or damaged in any manner. Contact the manufacturer at their customer service telephone number for information on examination, repair, or adjustment.
7. Avoid contacting moving parts. Do not attempt to defeat any safety interlock mechanisms.
8. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, electrical or mechanical adjustment. Contact customer service for examination, repair or adjustment.
9. The use of attachments, including canning jars, cups or covers not recommended or sold by the manufacturer may cause a risk of injury to persons. Only items designed for use with this appliance should be used at all times.
10. Do not use outdoors. This unit is designed to be used only indoors.
11. Do not let cord hang over edge of table or counter. The cord can get tangled or cause the appliance to fall.
12. Do not let cord contact hot surface, including the stove. The protective insulation will burn making the appliance inoperable or unsafe to operate.
13. This unit is turned on by pressing the power button or by turning the knob to the desired speed.
14. Blades are sharp. Handle carefully. Use the blade's collar to handle. Touching the blades can cause injuries.
15. Keep hands and utensils out of container while blending to reduce the risk of severe injury to persons or damage to the blender. A scraper may be used but must be used only when the blender is not running.

16. To reduce the risk of injury, never place cutter-assembly blades or discs on the motor base without first putting jar properly in place. Always completely assemble the blade and the jar in place.
17. Always operate blender with cover properly placed on the jar.
18. When blending hot liquids in the jar, remove center piece of two-piece cover. Blending hot liquids may cause the lid to unlock itself from the jar and the hot liquid can cause serious personal injuries.
19. Avoid any contact with blades or moveable parts.
20. Keep hands and utensils away from moving blades while processing food to reduce the risk of severe injury to persons or damage to the PowerUp Blender. A scraper may be used but must be used only when the unit is not running.
21. Be certain cover is securely locked in place before operating appliance.
22. Do not fill the jar above the maximum fill line to avoid risk of injury due to damage to the cover or jar.

ADDITIONAL IMPORTANT SAFEGUARDS

All users of this appliance must read and understand this owner's manual before operating or cleaning this appliance.

1. The cord to the appliance should be plugged into a 120 V AC electrical outlet only.
2. If this appliance begins to malfunction during use, immediately stop the appliance and unplug the cord. Do not use or attempt to repair the malfunctioning appliance.
3. If this appliance falls or accidentally becomes immersed in water, unplug it immediately. Do not reach into the water.
4. Do not use this appliance after it has fallen into or becomes immersed in water.
5. To reduce the risk of injury to persons or property, never use this appliance in an unstable position.
6. Do not use this appliance for other than its intended use. The appliance may be damaged and cause serious personal injury or cause property damage.
7. Do not use if the jar is cracked or chipped.

IMPORTANT: Do not overfill. Never fill ingredients beyond the jar's max line.

WARNING: Failure to add enough liquid before processing may cause the jar to break or chip.

WARNING: To avoid spills, make sure the lid is properly locked in place on the jar with the lid cap in position before selecting any SPEED.

FOR HOUSEHOLD USE ONLY SAVE THESE INSTRUCTIONS

NOTES ON THE CORD

- A. A short power-supply cord (or detached power-supply cord) is provided to reduce the risk resulting from becoming entangled in or tripping over a long cord.
- B. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- C. If a long detachable power-supply cord or extension cord is used:
 1. The marked electrical rating of the cord set, or extension cord should be at least as great as the electrical rating of the appliance.
 2. If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord.
 3. The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.

NOTES ON THE PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

PLASTICIZER WARNING

CAUTION: To prevent plasticizers from migrating to the finish of the countertop or tabletop or other furniture, place NON-PLASTIC coasters or place mats between the appliance and the finish of the countertop or tabletop. Failure to do so may cause the finish to darken, permanent blemishes may occur, or stains can appear.

ELECTRIC POWER

If the electrical circuit is overloaded with other appliances, your appliance may not operate properly. It should be operated on a separate electrical circuit from other appliances.

TO RESET THE UNIT

Your Bella MasterBlend Prep System is equipped with a Resettable Thermal Protector to protect the motor. If the motor shuts down, unplug the unit. Let the unit rest for approximately 20 minutes. Once the resting period has elapsed, plug the power cord back into the outlet and continue operating. If your unit does not function properly following this procedure, discontinue use and contact Consumer Service.

GETTING TO KNOW YOUR BELLA PRO POWERUP BLENDER

Product may vary slightly from illustration.

1. Base (Housing)
2. Nonslip Feet
3. Speed Control Dial
4. Control Panel
5. Stainless Steel Blender Blade Base
6. Blender Jar
7. Blender Lid
8. Measuring Cup



BEFORE USING FOR THE FIRST TIME

1. Carefully unpack the PowerUp Blender and remove all packaging materials. Check the contents to ensure that all parts are present and have been received in good condition.
2. Only handle blending blades by their collar.
WARNING: Do not touch blades. Blades are very sharp. Use extreme care when handling. Failure to do so can result in personal injury.
3. Wash lid, blade and measuring cap and jar in warm, soapy water. Rinse and dry thoroughly.
4. Clean jar before first use. Fill cup one-quarter full with clean, warm water. Following the steps outlined in the operating instructions, pulse several times using the blending blades. Rinse thoroughly.
5. The motor base may be wiped with a damp cloth.
WARNING: DO NOT IMMERSE THE MOTOR BASE IN WATER.

ASSEMBLY INSTRUCTIONS

BASE/JAR ASSEMBLY

1. Before assembling and using the PowerUp Blender, make sure that the power cord is unplugged.
2. Place the base facing you on a dry, level surface.
WARNING: Blade attachment is very sharp. Use extreme care to always grasp the plastic blade collar when handling the blade.
3. To assemble the blender, attach blade collar to jar by twisting it counter-clockwise. Place lid on top of jar and push downwards until secure. Place measuring cup on the lid, and twist clockwise to fix. (Figure 1)

Figure 1



OPERATING INSTRUCTIONS

1. Place the motor base on a flat, clean, dry countertop or table.
2. Make sure the unit is unplugged.
3. Assemble the blender jar following the assembly instructions, place the assembled plastic jar and blade base onto the motor block until it is securely engaged. Make sure blender is switched OFF and the speed control dial is set to O.

IMPORTANT: Check to make sure the jar is properly fixed to the motor block.

4. Place the food to be processed into the jar.
WARNING: Never operate the Blender when the plastic jar is empty.
WARNING: Never over fill the jar. Do not exceed the Max Line.
5. Push down the lid on top of the plastic jar until it is locked.
6. To process, plug the unit into a 120V plug, press power button and press any of the speeds on the speed control base or knob. (Figure 2)
7. When the processing is completed, always press the power button to turn the unit OFF and the speed control dial is set to O, and make sure to unplug the unit.
8. Unlock and pull up the plastic jar, bowl or cup from the motor base.

NOTE: Number of cycles needed to achieve desired results will vary best on quantities and recipes.

CONTROL PANEL CHART

Figure 2



POWER

- Upon connecting the blender to a power source, the control panel will illuminate and emit a beep sound, indicating it's in standby mode. To select any function, simply press the power button.
- To stop any operation, press the power button once more.

CHOP

- Activate the unit by pressing the power button. The button will flash and the functions will light up.
- Select the CHOP function by pressing the CHOP button once. The CHOP button will flash. Start the operation by pressing the CHOP button again. Both the CHOP button will remain lit.
- Chops fresh vegetables into even pieces. Raw vegetables should be no bigger than 1/2" pieces before chopping them in the blender.
- Press either POWER or CHOP button again to turn CHOP OFF.
- CHOP has a fixed 6-cycle time and will automatically turn OFF after 45 seconds.

MILKSHAKE

- Activate the unit by pressing the power button. The button will flash and the functions will light up.
- Select the MILKSHAKE function by pressing the MILKSHAKE button once. The MILKSHAKE button will flash. Start the operation by pressing the MILKSHAKE button again. Both the MILKSHAKE and POWER buttons will remain lit.
- Add milk of choice, sweetener, fresh fruits or chocolate syrup to blend into the perfect milkshake.
- Press either POWER or MILKSHAKE button again to turn MILKSHAKE OFF.
- MILKSHAKE has a fixed 3-cycle time and will automatically turn OFF after 54 seconds.

ICE CRUSH

- Activate the unit by pressing the power button. The button will flash and the functions will light up.
- Select the ICE CRUSH function by pressing the ICE CRUSH button once. The ICE CRUSH button will flash. Start the operation by pressing the ICE CRUSH button again. Both the ICE CRUSH and POWER buttons will remain lit.
- For optimal results when crushing ice, smaller ice cubes are typically easier to crush than larger ones. Alternatively, you can break larger ice cubes into smaller pieces before adding them to the blender's jar.
- ICE CRUSH quickly crushes ice cubes and is perfect for preparing frozen desserts or drinks.
- Press either POWER or ICE CRUSH button again to turn ICE CRUSH OFF.
- ICE CRUSH has a fixed 5-cycle time and will automatically turn OFF after 33 seconds.

SMOOTHIE / CLEAN

- Activate the unit by pressing the power button. The button will flash and the functions will light up.
- Select the SMOOTHIE function by pressing the SMOOTHIE button once. The SMOOTHIE button will flash. Start the operation by pressing the SMOOTHIE button again. Both the SMOOTHIE and POWER buttons will remain lit.
- Blends fresh or frozen fruits and vegetables into the perfect smoothie.
- Press either POWER or SMOOTHIE button again to turn SMOOTHIE OFF.
- SMOOTHIE has a fixed 6-cycle time and will automatically turn OFF after 60 seconds. After cycle, the unit will emit 6 beeps to indicate completion.

MANUAL MODE



- When the knob is turned to the "LOW" position, the unit will run at a low speed.
- When the knob is turned to the "HIGH" position, the unit will run at a high speed.
- Select PULSE to blend ingredients through controlled bursts of power.
- Use PULSE to dislodge ingredients clumped around the blade and at the bottom of the jar.
- PULSE is activated as the knob is turned to PULSE. Release the knob and it will automatically return to O, stopping the unit.
- For best results, time the PULSES to ensure that blades come to a complete stop before pulsing again.
- Always turn the speed control dial to O after use.



USER MAINTENANCE INSTRUCTIONS

This appliance requires little maintenance. It contains no user-serviceable parts. Any servicing requiring disassembly other than cleaning must be performed by a qualified appliance repair technician.

CARE & CLEANING INSTRUCTIONS

CAUTION: Never immerse the motor base, plug or cord in water or any other liquid.

1. Always unplug the PowerUp Blender before cleaning.
2. Whenever possible, simple rinse parts immediately after processing to make cleanup easier.
3. Always handle blade using the blade collar.

CAUTION: Use extreme care when handling blades. Do not touch the blades with your fingers. The blades are very sharp and can cause injury if touched.

4. For quick clean-ups, fill blender jar one-quarter full with clean warm water. Press Pulse several times or the "Clean" mode. Rinse thoroughly.
5. Remove the lid after use to clean. Wash the lid, measuring cup and the plastic jar in warm soapy water. Rinse and dry thoroughly.

CAUTION: never use rough scouring pads or abrasive cleansers on any plastic or metal parts as the surface may be damaged.

6. The blender jar and lid are top-rack ONLY dishwasher safe.

IMPORTANT: after dishwashing, always check to make sure the gasket seal on the lid is properly in place as the heat from some dishwasher may cause to become loose.

7. The motor base may be wiped with a damp cloth or sponge. Dry thoroughly.
8. Clean blades with a small brush to avoid injuries when getting too close to blades.

NOTE: The blade can be detached from the jar by turning counter-clockwise to make cleaning easier. Always handle blades with extreme care to avoid injury.

WARNING: DO NOT IMMERSE THE MOTOR BASE IN WATER.

STORING INSTRUCTIONS

1. Unplug and clean the unit.
2. Store in original box or in a clean, dry place.
3. Never store PowerUp Blender while it is hot or plugged in. Never wrap cord tightly around appliance. Never place any stress on cord, especially where the cord enters the unit, as this could cause the cord to fray and break.
4. This unit comes with a cord storage at the base for convenient storage.





LIMITED TWO-YEAR WARRANTY

SENSIO Inc. hereby warrants that for a period of **TWO YEARS** from the date of purchase, this product will be free from mechanical defects in material and workmanship, and for 90 days in respect to non-mechanical parts. At its sole discretion, SENSIO Inc. will either repair or replace the product found to be defective, or issue a refund on the product during the warranty period.

The warranty is only valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt, as proof of purchase is required to obtain warranty validation. Retail stores selling this product do not have the right to alter, modify, or in any way revise the terms and conditions of the warranty.

EXCLUSIONS:

The warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use of the product, use of improper voltage or current, improper routine maintenance, use contrary to the operating instructions, disassembly, repair, or alteration by anyone other than qualified SENSIO Inc. personnel. Also, the warranty does not cover Acts of God such as fire, floods, hurricanes, or tornadoes.

SENSIO Inc. shall not be liable for any incidental or consequential damages caused by the breach of any express or implied warranty. Apart from the extent prohibited by applicable law, any implied warranty of merchantability or fitness for a particular purpose is limited in time to the duration of the warranty. Some states, provinces or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, and therefore, the above exclusions or limitations may not apply to you. The warranty covers specific legal rights which may vary by state, province and/or jurisdiction.

HOW TO OBTAIN WARRANTY SERVICE:

You must contact Customer Service at our toll-free number: 1-866-832-4843.

A Customer Service Representative will attempt to resolve warranty issues over the phone. If the Customer Service Representative is unable to resolve the problem, you will be provided with a case number and asked to return the product to SENSIO Inc. Attach a tag to the product that includes: your name, address, daytime contact telephone number, case number, and description of the problem. Also, include a copy of the original sales receipt. Carefully package the tagged product with the sales receipt, and send it (with shipping and insurance prepaid) to SENSIO Inc.'s address. SENSIO Inc. shall bear no responsibility or liability for the returned product while in transit to SENSIO Inc.'s Customer Service Center.



For customer service questions or comments
1-866-832-4843 / help@bellahousewares.com
Made in China



Sensio Inc.
dba Made by Gather™
New York, NY 10016/USA

90219 R. 1