



# INTERACTIVE LIVE SURPRISE™

AGES 3+



ADULT SUPERVISION REQUIRED




554554

## CONTENTS


- A. 1 Bunny Hun
- OR** 1 Hoops D.o.g.g.
- OR** 1 Fuzzy Fan
- OR** 1 Royal Kitty-Cat
- B. 1 Beverage
- C. 1 Food Item
- D. 1 Toy

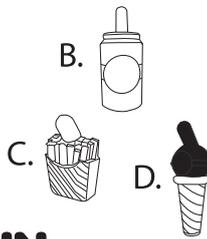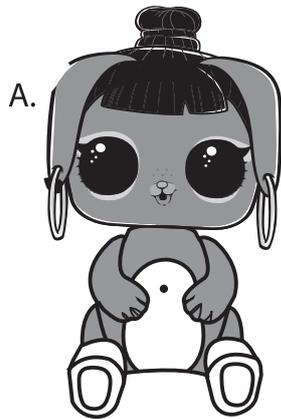



**BUNNY HUN**  
**FUZZY FAN**

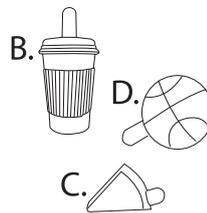

**HOOPS D.O.G.G.**  
**ROYAL KITTY-CAT**

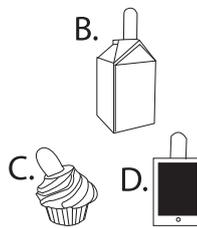

**FUZZY FAN**

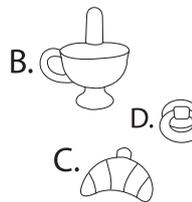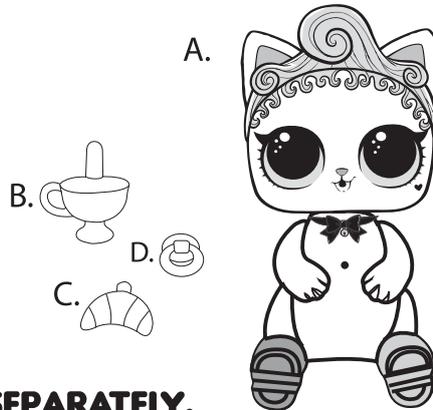

**ROYAL KITTY-CAT**


**EACH SOLD SEPARATELY.  
COLLECT THEM ALL!**

Illustrations are for reference only. Styles may vary from actual contents.

## BATTERY REPLACEMENT

An ADULT must install fresh batteries in the unit should the batteries need replacing:

1. Using a Phillips screwdriver (not included), remove the screw and battery compartment cover located on the back of the pet.
2. Install three (3) fresh 1.5V AG13 (LR44) alkaline batteries (not included) making sure the (+) and (-) ends face the proper direction as indicated inside the battery compartment.
3. Replace the compartment and tighten the screw.

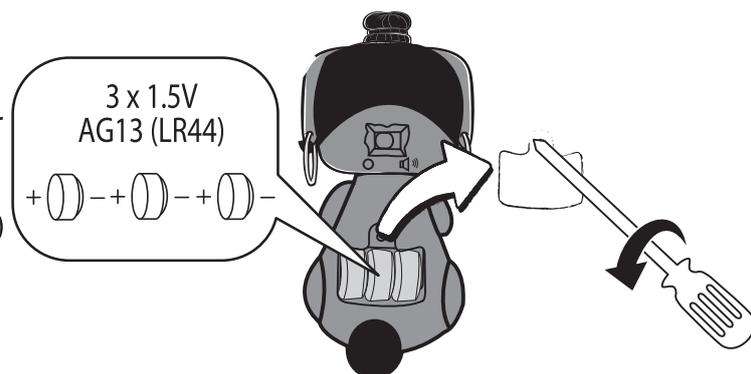

# HOW TO CARE FOR YOUR PET




**SHOW YOUR PET LOVE BY PETTING IT,  
FEEDING IT AND TALKING TO IT.**



**PLAY WITH YOUR PET!  
TURN IT UPSIDE DOWN, SHAKE IT,  
OR SHAKE IT UPSIDE DOWN,  
BUT BE CAREFUL OR YOU WILL  
MAKE YOUR PET DIZZY.**



**DISCOVER EVERYTHING  
YOUR PET CAN DO!**

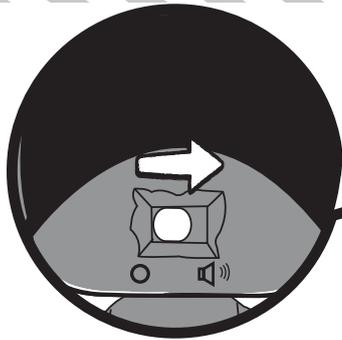

○ = OFF  
🔊 = ON



Head moves!

## GETTING STARTED

Before beginning, move the switch on the back of your pet's head from the OFF position to the ON position.

Cheeks light up!





**PET YOUR PET'S HEAD!**

## GIVE YOUR PET A DRINK OR FOOD!



Insert the peg into the pet's mouth and hold it in place.


## TALK TO YOUR PET!

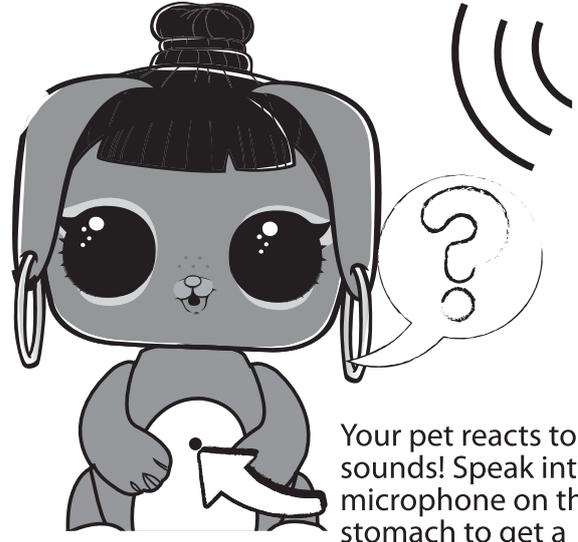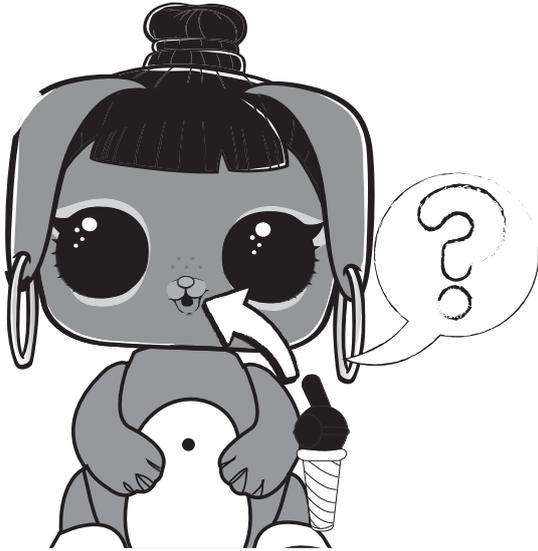

Your pet reacts to sounds! Speak into the microphone on the stomach to get a response from your pet.

## DISCOVER THE SPECIAL SOUNDS YOUR PET MAKES!


Insert the peg into the pet's mouth and hold it in place.

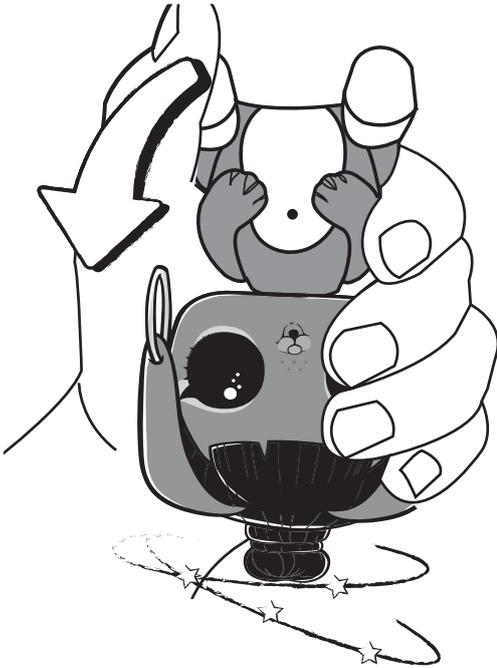

**TURN YOUR PET UPSIDE DOWN, SHAKE IT OR DO BOTH!**



**FLIP IT ON ITS SIDE!**

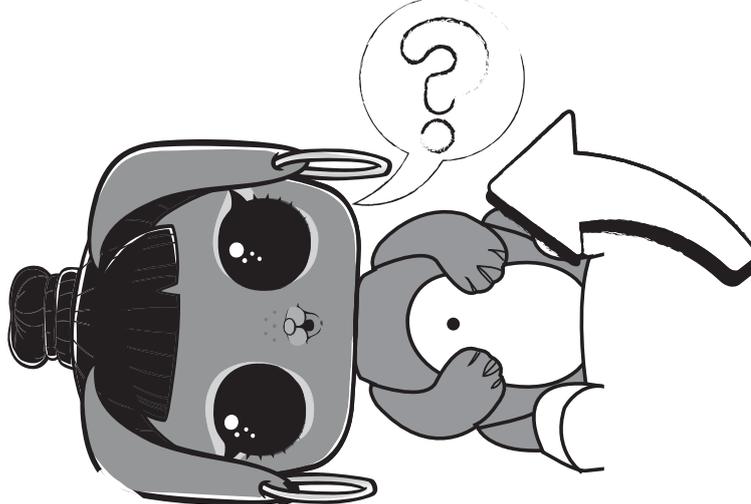

## IMPORTANT INFORMATION

- Pet does not speak. It will make sounds or babble incoherently.
- Your pet will make different sounds. Pet it, flip it on its side, turn it upside down, shake it or shake it upside down to hear all the different sounds.
- Some pets will close their eyes when flipped on their sides.
- Your pet will come with three accessories: a beverage, a food item and a toy. Pet will respond to all three items, but will make a surprise sound when responding to its toy. Collect them all to hear each feature!
- When speaking to your pet, make sure to speak into the microphone on its stomach. Your pet will respond with a sound.
- The microphone on your pet is not intended for recording. It will not record your voice or other sounds.
- After 30 seconds of no activity, your pet will go to sleep. Pet its head or insert its accessory to wake it up.
- Do not stand on or throw pet into furniture, walls, live pets, people etc., as doing so may cause injury to the person and irreparable damage to the unit.
- Turn the pet OFF (O) after playing to conserve battery power.
- Clean pet with a damp cloth and air dry thoroughly. Keep water away from the battery compartment.
- Do not store the pet in direct sunlight for extended periods of time.

## SAFE BATTERY USAGE

- Use alkaline batteries for best performance and longer life.
- Use only the type battery recommended for the unit.
- Batteries should be replaced only by an adult.
- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Do not short-circuit batteries.
- When not used for an extended time, remove batteries to prevent possible leakage and damage to the unit.
- Do not mix rechargeable and non-rechargeable batteries.
- Rechargeable batteries are to be removed from the toy before charging.
- Rechargeable batteries are to be recharged only under adult supervision.
- Do not recharge non-rechargeable batteries.
- Exhausted batteries are to be removed from the toy.
- Do not dispose of batteries in fire as they may leak or explode.

## FCC COMPLIANCE

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Change or modifications not authorized by the manufacturer may void users authority to operate this device.

CAN ICES-3 (B)/NMB-3(B).

## ⚠ WARNING:

This product contains a Button or Coin Cell Battery. A swallowed Button or Coin Cell Battery can cause internal chemical burns in as little as two hours and lead to death. Dispose of used batteries immediately. Keep new and used batteries away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.



'Let's care for the environment!'

The wheellie bin symbol indicates that the product must not be disposed of with other household waste. Please use designated collection points or recycling facilities when disposing of the item. Do not treat old batteries as household waste. Take them to a designated recycling facility.

Please keep this manual as it contains important information.

www.LOLsurprise.com  
©2018 MGA Entertainment, Inc.  
L.O.L. SURPRISE!™ is a trademark of MGA in the U.S. and other countries. All logos, names, characters, likenesses, images, slogans, and packaging appearance are the property of MGA.

16300 Roscoe Blvd.  
Van Nuys, CA 91406  
U.S.A.  
(800) 222-4685  
**Printed in China**

MGA Entertainment UK Ltd.  
50 Presley Way  
Crownhill  
Milton Keynes, MK8 0ES  
Bucks, UK  
+ 0800 521 558



0718-1-E/INT

The preferred method of contact for Customer Service is through our e-mail contact form at [www.mgae.com](http://www.mgae.com)