


INSIGNIA™

Ceramic Tower Heater

NS-HTTCWH6

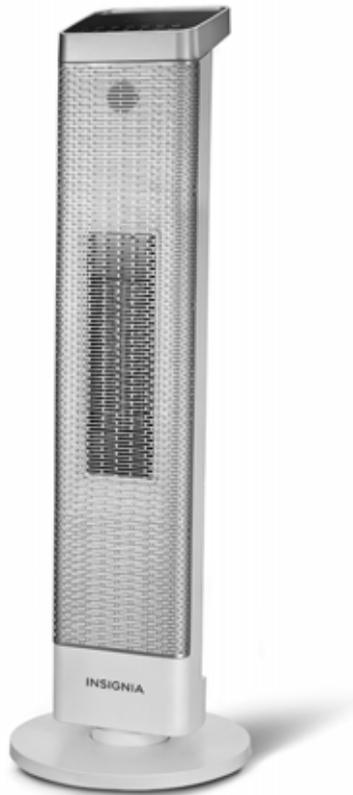

Before using your new product, please read these instructions to prevent any damage.

Insignia Ceramic Tower Heater

Contents

Introduction 2

IMPORTANT INSTRUCTIONS 2

Features 5

 Package contents 5

 Main features 5

 Display/control panel 6

 Remote control 6

Assembling your heater 7

Using your heater 8

Cleaning and maintaining your heater 9

Troubleshooting 10

Specifications 11

ONE-YEAR LIMITED WARRANTY - INSIGNIA 13

Introduction

Congratulations on your purchase of a high-quality Insignia product. Your NS-HTTCWH6 represents the state of the art in ceramic heater design and is designed for reliable and trouble-free performance.

IMPORTANT INSTRUCTIONS



This symbol indicates that dangerous voltage constituting a risk of electric shock is present within your heater.



This symbol indicates that there are important operating and maintenance instructions in the literature accompanying your heater.

When using the heater, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- 1** Read all instructions before using this heater.
- 2** This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces.
- 3** Use handles when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 m) from the front of the heater and keep them away from the sides and rear.
- 4** Extreme caution is necessary when the heater is used by or near children or invalids and whenever the heater is left operating and unattended.
- 5** Always unplug the heater when not in use.
- 6** Do not operate the heater with a damaged cord, plug, after the heater malfunctions, or has been dropped or damaged in any manner. Discard the heater, or return it to an authorized service facility for examination and/or repair.
- 7** Do not use outdoors.
- 8** This heater is not intended for use in bathrooms, laundry areas, and similar indoor locations. Never locate the heater where it may fall into a bathtub or other water container.
- 9** Do not run the cord under carpeting. Do not cover the cord with throw rugs, runners, or similar coverings. Do not route the cord under furniture or appliances. Arrange the cord away from traffic area and where it will not be tripped over.
- 10** To disconnect the heater, turn the controls to off, then remove the plug from the wall outlet.
- 11** Prior to cleaning or other maintenance, the heater must be disconnected from the wall outlet.
- 12** Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- 13** To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- 14** A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.
- 15** Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- 16** Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).

- 17** This heater is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 18** Children should be supervised to ensure that they do not play with the heater.
- 19** CAUTION: Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.
- 20** WARNING: In order to avoid overheating, do not cover the heater.
- 21** This heater draws up to 1500 W during operation. To prevent overloading a circuit, do not plug the heater into a circuit that already has other appliances working.
- 22** It is normal for the plug to feel warm to the touch, however, a loose fit between the wall outlet and plug may cause overheating and distortion of the plug. Contact a qualified electrician to replace loose or worn outlets.
- 23** The output of this heater may vary and its temperature may become intense enough to burn exposed skin. Use of this heater is not recommended for persons with reduced sensitivity to heat or an inability to react to avoid burns.
- 24** Do not leave the heater on unattended.
- 25** Do not spray pesticide or any other flammable spray around the heater. It could damage the heater.
- 26** Stop using the heater and unplug it immediately if any unusual smell or sounds come from the heater.
- 27** Do not cover the heater when in use or when not allowed to cool completely.
- 28** This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.
- 29** If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- 30** The heater must not be located immediately below a socket-outlet.
- 31** Do not use this heater near a bath, a shower, or a swimming pool.

SAVE THESE INSTRUCTIONS



WARNING

Electric Shock Hazard

Failure to follow these instructions can result in electric shock, fire, or death.


Features

- 1500W heater warms up your room
- Thermostat adjusts the temperature from 41–95°F (5–35°C) and includes a 12 hr timer
- Easy-carry handle provides added portability
- Detachable base includes tip-over protection which automatically turns off the heater if it falls over

Package contents


- Ceramic tower heater
- Base
- Remote control (battery included)
- *User Guide*

Main features

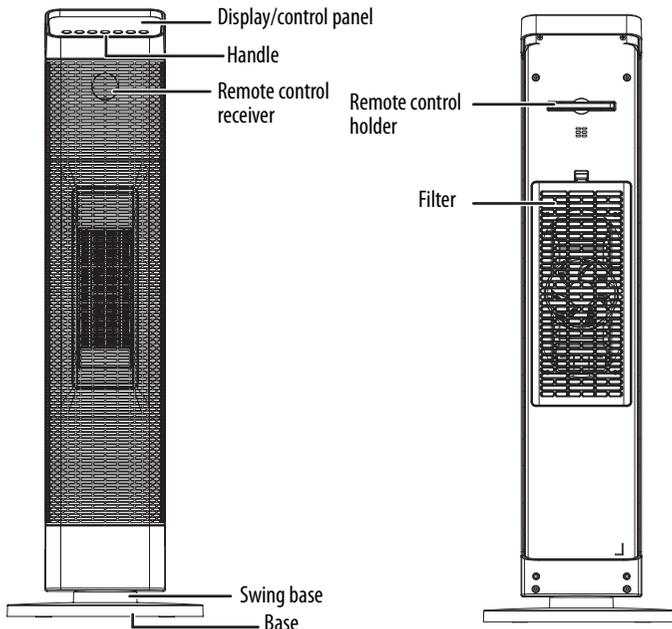


INSIGNIA™

Display/control panel

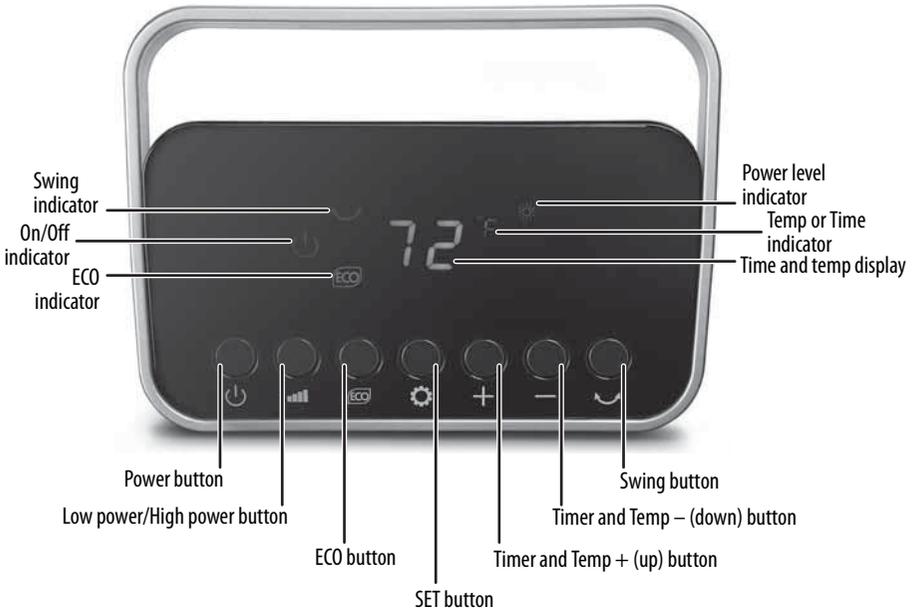

Remote control

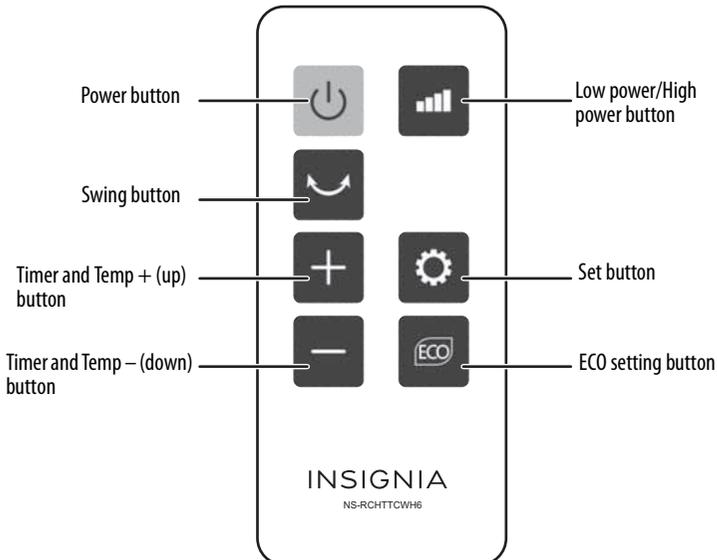


Installing the battery in the remote control


Note

The battery comes included in the plastic bag with the remote control.

- 1 Squeeze then pull the battery holder out of the remote control.
Squeeze together then pull out.

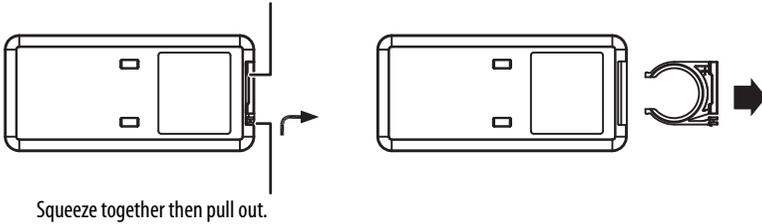

- 2 Insert the battery into the battery holder with the positive (+) side toward the front of the remote control.

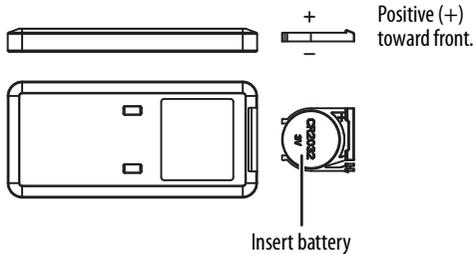


- 3 Push the battery holder into the remote control.

Assembling your heater

- 1 Remove the package contents from the box, then remove the bubble wrap from the heater, the base, and the remote control.
- 2 Carefully place your heater face-up on a cushioned, clean surface to prevent scratches.

- 3 Fit the base onto the bottom of the heater until it snaps into place.

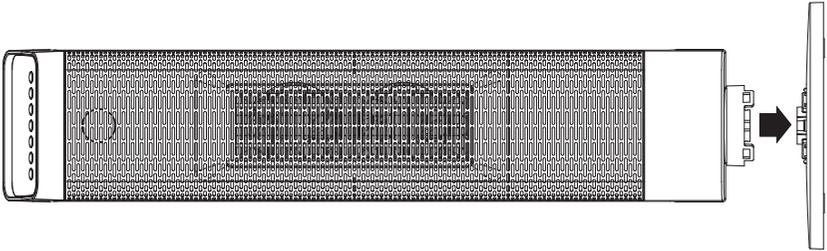

- 4 Place the heater upright on a stable and level surface.

Using your heater

Caution

Never leave an operating heater unattended.

- 1 Make sure that neither the heater nor the power cord has been damaged in any way during transportation.
- 2 Place the heater on a firm, level surface, at least three feet (0.9 m) away from any wall or other objects such as furniture, curtains, plants, or combustible material.
- 3 Fully unwrap the power cord and plug it into a standard wall plug (120 VAC~60 Hz).
- 4 Press the  power button to turn the heater on. The display shows the current room temperature in °F. The default temperature setting is 77° F and the heater is on low power with the low power indicator turned on.
- 5 To change the settings when the heater is turned on, do the following:

To switch between low and high power setting	<ul style="list-style-type: none"> • Press . The high  or low  power indicator turns on.
To turn on the ECO setting	<ul style="list-style-type: none"> • Press . The ECO  indicator turns on. <p>NOTE: In ECO mode the default temperature is 72°F. When the temperature is below 64° F, the heater switches to high power. When the temperature is between 64° and 72°F, the heater switches to low power. When the temperature is above 72°F, the heater stops and displays the room temperature.</p>

To increase or decrease the temperature setting	<ol style="list-style-type: none"> 1. Press . The temperature indicator (F°) blinks. 2. Press the + (up) or – (down). The temperature setting changes by 1° F each time you press the button and is shown on the display. 3. Press  again to confirm. The display returns to the current room temperature. The heater turns on and stays on until the set temperature is reached, then the heater, fan, and swing turn off.
To turn the oscillator on to circulate the heat	<ul style="list-style-type: none"> • Press . The swing indicator turns on and the heater begins to oscillate. Press again to turn it off.
To set how long the heater stays on	<ol style="list-style-type: none"> 1. Press . The time (H) indicator turns on. 2. Press the + (up) or – (down). The timer setting changes by one hour each time you press the button and is shown on the display. 3. Press  to confirm. The heater stays on until the set time reaches 0, then the heater returns to standby mode.
Memory function	When the heater is in standby mode, press  to turn the heater on with the same settings as when you last turned it off (except the timer.)

Note

The display remains bright for one minute after changes are made, then the display dims. Press any button to return the display to normal.

- 6 Press the  power button to turn the heater off (go to standby mode). When you turn the heater back on, the settings remain the same as when you turned it off.

Cleaning and maintaining your heater

- Always remove the plug from the wall socket and allow the heater to cool before cleaning.
- Wipe the heater with a soft, damp cloth. Use a mild detergent if necessary. DO NOT USE solvents or harsh cleaners or you may damage the finish.
- Remove the grill from the back of your heater by pressing the retainer on the top of the grill, then pulling the top of the grill away from the heater. Clean the grill by immersing it in water and brushing it gently to remove lint and dust. Make sure that you dry it thoroughly before you reinstall it.
- Reinstall the grill by fitting the bottom of the grill into the heater, then seating the top of the grill until it clicks into place.
- If the heater will not be used for an extended period of time, store it in a dry place.

Safety features

The heater is equipped with double over-heating protection, which causes the unit to stop operating in the event that the internal temperature exceeds the normal operating temperature. It also includes tip-over protection, which turns the heater off in case it is tipped over.

If the heater shuts down:

- 1 Turn off and unplug the heater.
- 2 Put the heater in the upright position, if necessary.
- 3 Wait for at least 10 minutes until the heater cools.
- 4 Plug the heater into the power outlet and then turn it on. The heater resumes its normal operation.

Troubleshooting

Caution

Do not try to repair your heater yourself. Doing so invalidates the warranty.

Problem	Possible cause	Possible solution
Your heater shuts off unexpectedly or fails to operate	There is no power.	Make sure that the heater is plugged in and that the electrical outlet is working.
	The set temperature is lower than the current room temperature.	Set the desired temperature higher than the current temperature to restart the heater.
	Room temperature has reached the temperature set on the temperature control dial.	<ul style="list-style-type: none"> • This is normal. The heater restarts when room temperature is lower than the set temperature. • Adjust the temperature control dial setting if it's not set to your desired temperature.
	One of the safety protection devices was activated to prevent overheating.	<ol style="list-style-type: none"> 1. Place the heater in an upright position. 2. Check for any obstructions. If you find an obstruction, turn the heater off. 3. Unplug the heater and wait at least 10 minutes for it to cool down. 4. Carefully remove the obstruction. Plug the heater in and restart it as described in "Using your heater" on page 8. 5. If you still notice the same problem, remove the plug from the wall and have the heater checked by an authorized service person.
The room is not warm enough	The room is too large or a window is open.	<ul style="list-style-type: none"> • Turn on the main heat source for the room. • Use more portable heaters. • Close the window.
	The temperature is set too low.	• Increase the temperature setting.
	The power setting is too low.	• Select a higher power setting.

Specifications

Model number	NS-HTTCWH6
Voltage	120 VAC
Frequency	60 Hz
Power	1500 Watts
Noise level	≤ 50 dB
Dimensions (HxWxD)	31.5 x 10.2 x 10.2 in. (80 x 26 x 26 cm)

ONE-YEAR LIMITED WARRANTY - INSIGNIA

Definitions:

The Distributor* of Insignia branded products warrants to you, the original purchaser of this new Insignia-branded product ("Product"), that the Product shall be free of defects in the original manufacturer of the material or workmanship for a period of one (1) year from the date of your purchase of the Product ("Warranty Period").

For this warranty to apply, your Product must be purchased in the United States or Canada from a Best Buy or Future Shop branded retail store or online at www.bestbuy.com, www.bestbuy.ca, or www.futureshop.com, and is packaged with this warranty statement.

How long does the coverage last?

The Warranty Period lasts for 1 year (365 days) from the date you purchased the Product. Your purchase date is printed on the receipt you received with the Product.

What does this warranty cover?

During the Warranty Period, if the original manufacture of the material or workmanship of the Product is determined to be defective by an authorized Insignia repair center or store personnel, Insignia will (at its sole option): (1) repair the Product with new or rebuilt parts; or (2) replace the Product at no charge with new or rebuilt comparable products or parts. Products and parts replaced under this warranty become the property of Insignia and are not returned to you. If service of Products or parts are required after the Warranty Period expires, you must pay all labor and parts charges. This warranty lasts as long as you own your Insignia Product during the Warranty Period. Warranty coverage terminates if you sell or otherwise transfer the Product.

How to obtain warranty service?

If you purchased the Product at a Best Buy or Future Shop retail store location, please take your original receipt and the Product to any Best Buy. Make sure that you place the Product in its original packaging or packaging that provides the same amount of protection as the original packaging. If you purchased the Product from a Best Buy or Future Shop online web site (www.bestbuy.com, www.bestbuy.ca, or www.futureshop.com), mail your original receipt and the Product to the address listed on the web site. Make sure that you put the Product in its original packaging or packaging that provides the same amount of protection as the original packaging.

To obtain warranty service, in the United States call 1-888-BESTBUY, Canada call 1-866-BESTBUY. Call agents may diagnose and correct the issue over the phone.

Where is the warranty valid?

This warranty is valid only in the United States and Canada at Best Buy branded retail stores or websites to the original purchaser of the product in the county where the original purchase was made.

What does the warranty not cover?

This warranty does not cover:

- Customer instruction/education
- Installation
- Set up adjustments
- Cosmetic damage
- Damage due to weather, lightning, and other acts of God, such as power surges
- Accidental damage
- Misuse
- Abuse
- Negligence

- Commercial purposes/use, including but not limited to use in a place of business or in communal areas of a multiple dwelling condominium or apartment complex, or otherwise used in a place of other than a private home.
- Modification of any part of the Product, including the antenna
- Display panel damaged by static (non-moving) images applied for lengthy periods (burn-in).
- Damage due to incorrect operation or maintenance
- Connection to an incorrect voltage or power supply
- Attempted repair by any person not authorized by Insignia to service the Product
- Products sold “as is” or “with all faults”
- Consumables, including but not limited to batteries (i.e. AA, AAA, C etc.)
- Products where the factory applied serial number has been altered or removed
- Loss or Theft of this product or any part of the product
- Display panels containing up to three (3) pixel failures (dots that are dark or incorrectly illuminated) grouped in an area smaller than one tenth (1/10) of the display size or up to five (5) pixel failures throughout the display. (Pixel based displays may contain a limited number of pixels that may not function normally.)
- Failures or Damage caused by any contact including but not limited to liquids, gels or pastes.

REPAIR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS YOUR EXCLUSIVE REMEDY FOR BREACH OF WARRANTY. INSIGNIA SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, INCLUDING, BUT NOT LIMITED TO, LOST DATA, LOSS OF USE OF YOUR PRODUCT, LOST BUSINESS OR LOST PROFITS. INSIGNIA PRODUCTS MAKES NO OTHER EXPRESS WARRANTIES WITH RESPECT TO THE PRODUCT, ALL EXPRESS AND IMPLIED WARRANTIES FOR THE PRODUCT, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE WARRANTY PERIOD SET FORTH ABOVE AND NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, WILL APPLY AFTER THE WARRANTY PERIOD. SOME STATES, PROVINCES AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE.

Contact Insignia:

For customer service please call 1-877-467-4289

www.insigniaproducts.com

INSIGNIA is a trademark of Best Buy and its affiliated companies.

Registered in some countries.

Distributed by Best Buy Purchasing, LLC

7601 Penn Ave South, Richfield, MN 55423 U.S.A.

©2015 Best Buy. All rights reserved.

Made in China

INSIGNIA™

www.insigniaproducts.com

1-877-467-4289 (U.S. and Canada) or 01-800-926-3000 (Mexico)

INSIGNIA is a trademark of Best Buy and its affiliated companies.

Registered in some countries.

Distributed by Best Buy Purchasing, LLC

7601 Penn Ave South, Richfield, MN 55423 U.S.A.

©2015 Best Buy. All rights reserved.

Made in China.

V1 ENGLISH
15-0380