

QUICK SETUP GUIDE

16 ft. Multi-Color LED Tape Light

NS-LED16RGB18 / NS-LED16RGB18-C

WARNING: Unroll before use. Never plug in the LED lights when rolled up, as this can result in product damage or a fire.

 
PACKAGE CONTENTS

- LED tape light
- Remote control
- Screws (2)
- Double-sided tape
- RF controller box
- Quick Setup Guide


FEATURES

- Premium LEDs produce 15 selectable colors and white light
- 16 ft. LED tape light can be cut to length
- Remote control works anywhere in the room—no need to point at the light
- Multi-step dimmer adjusts to the brightness level you want
- Four modes of flashing: Flash, Strobe, Fade, and Smooth
- Self-adhesive backing adheres to TVs, cabinets, or other surfaces for quick, custom lighting
- Powered by AC wall power for constant use

Tape light

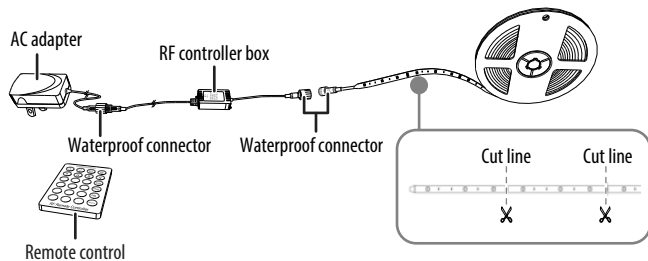

Remote control

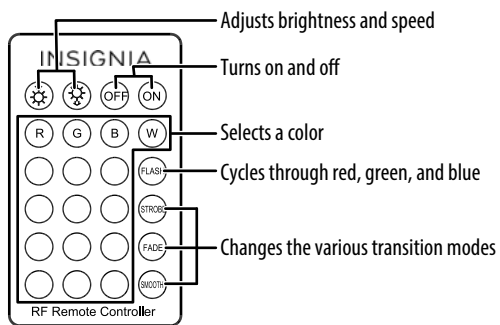 


USING YOUR TAPE LIGHT

Shortening your tape light

- Use a pair of scissors to cut on a cut line. Cut lines are about 3.9 in. (9.9 cm) apart.

 Warning: Do not cut the silver solder markings. Only cut in the center of the copper-colored pads, as shown.

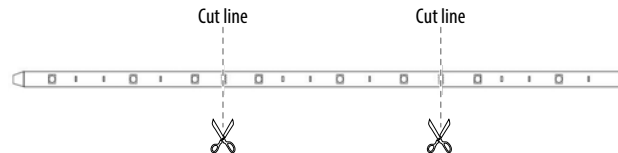

Attaching your lights

- 1 Peel the adhesive backing off the lights, then adhere the lights where you want them.
- 2 **Optional:** Attach the double-sided tape to the back of the RF controller box, then adhere it where you want it.

OR

 
Attach the RF controller box to a surface using the included screws. There are two holes on the controller box to allow for a firm attachment.

Notes:

- Make sure that the tape light is unrolled, otherwise it can damage the tape light or cause a fire.
- Every surface is different, and additional adhesive may be used if the LED tape detaches from the surface. Small pieces of clear tape can be used.

Connecting to power


- 1 Push both ends of the waterproof connectors together, making sure that the arrows line up.

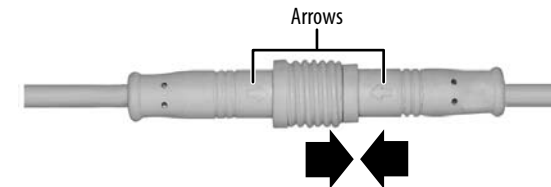

- 2 Turn the cap until it is secure.



 - 3 Plug the AC adapter into a power outlet.

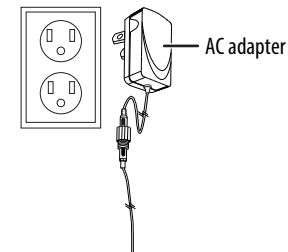

- 4 Remove the plastic battery-saver tab from the remote control.

SPECIFICATIONS

- Input: 12V DC, 2A
- LED Tape Length: 16.4 ft. (5 m)
- LED quantity: 150
- LED life: 30,000 hours (approximate)
- Remote control battery: CR2025
- Remote control range: 30 ft. (9.1 m)

TROUBLESHOOTING

LEDs will not turn on.

- Press the power button to make sure that your light is turned on, then select the color or mode you want.
- Make sure that all of the connectors are connected properly and the AC adapter is plugged into a power outlet.
- Make sure that you have removed the plastic battery-saver tab from the remote before use. If you already removed the battery-saver tab, make sure that the battery still works. If the battery does not work, replace the battery and try again.

LEDs flicker or turn on and off.

- Make sure that the power cable is not damaged.
- Make sure that both of the connectors are firmly connected and screwed together tightly.

SAFETY INFORMATION

- To avoid damage to the tape light, do not sharply twist or bend the tape light 90°.
- Do not cut the silver solder markings. Only cut in the center of the copper-colored pads.
- Do not plug in your lights when they are coiled. This can generate excess heat, which can result in product damage or a fire.

LEGAL NOTICES

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



WARNING: Chemical Burn Hazard. Keep batteries away from children.

This product contains a lithium button/coin cell battery. If a new or used lithium button/coin cell battery is swallowed or enters the body, it can cause severe internal burns and can lead to death in as little as two hours. Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention. The cells shall be disposed of properly, including keeping them away from children. Even used cells may cause injury.

ONE-YEAR LIMITED WARRANTY

Visit www.insigniaproducts.com for details.

CONTACT INSIGNIA:

For customer service, call 1-877-467-4289 (U.S. and Canada) or 01-800-926-3000 (Mexico)

www.insigniaproducts.com

INSIGNIA is a trademark of Best Buy and its affiliated companies
Distributed by Best Buy Purchasing, LLC
7601 Penn Ave South, Richfield, MN 55423 U.S.A.
©2017 Best Buy. All rights reserved.

Made in China