

 


COSTWAY®

Please give us a chance to make it right and do better !

Contact our friendly customer service department for help first.
Replacements for missing or damaged parts will be shipped ASAP !

US office: Fontana **UK** office: Ipswich **AU** office: Truganina
DE office: Hamburg **FR** office: Saint Vigor d'Ymonville **PL** office: Gdańsk

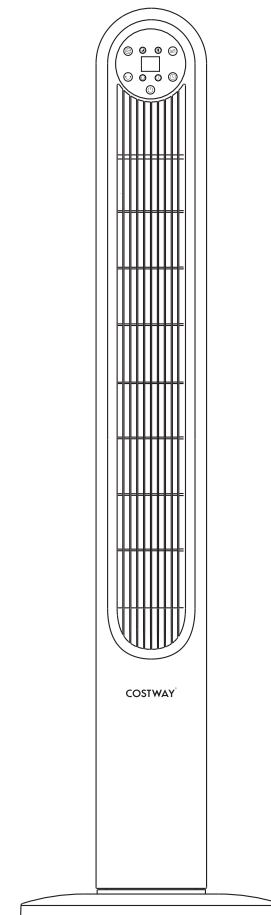

Contact Us!

Do NOT return this item.

Contact our friendly customer service department for help first.



US: cs.us@costway.com
UK: cs.uk@costway.com
AU: cs.au@costway.com

USER'S MANUAL

Tower Fan ES10090

THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.



Before You Start

- ⚠ Please read all instructions carefully.
- ⚠ Retain instructions for future reference.
- ⚠ Separate and count all parts and hardware.
- ⚠ Read through each step carefully and follow the proper order.
- ⚠ We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
- ⚠ Always place the product on a flat, steady and stable surface.
- ⚠ Keep all small parts and packaging materials for this product away from babies and children as they potentially pose a serious choking hazard.

- 1, 1) Always Unplug This Product Before Installing or Replacing Fuses
- 2) Do not operate any fan with a damaged cord or plug. Discard fan or return to an authorized service facility for examination and/or repair
- 3) Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
- 4) "Use Only With a Fuse Rated 2.5 Amperes, 125 Volts."

2, "READ AND SAVE THESE INSTRUCTIONS"

"This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature. "

3, WARNING :

- a) Include instructions pertaining to a risk of fire, electric shock, or injury to persons, for cleaning and user-maintenance, such as lubrication;
- b) Warn the user to unplug or disconnect the appliance from the power supply before servicing.

4, WARNING :

"To Reduce The Risk Of Fire Or Electric Shock, Do Not Use This Fan With Any Solid-State Speed Control Device."

5, "This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded or returned to an authorized service facility for examination and/or repair."

6, a) "Do not operate any fan with a damaged cord or plug. Discard fan or return to an authorized service facility for examination and/or repair."

b) "Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over."

User servicing instruction

 
a) "Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord."

b) "Open fuse cover." The manufacturer shall indicate the specific way to open the cover, such as, "Slide open fuse access cover on top of attachment plug towards blades," or "Push on tabs located next to the blades."

c) "Remove fuse carefully." The manufacturer shall indicate the appropriate way to remove the fuse, such as whether to push the fuse from the other side or turn fuseholder over to remove fuse.

d) "Risk of fire. Replace fuse only with 2.5 Amp, 125 Volt fuse (provided with product)." The blank shall be filled in with the current rating of the fuse. Words located in parenthesis are applicable only if the replacement fuse is provided with the product.


e) "Close fuse cover." The manufacturer shall indicate the specific way to close the cover, such as, "Slide closed the fuse access cover on top of attachment plug," or "Push cover closed so that all tabs latch."

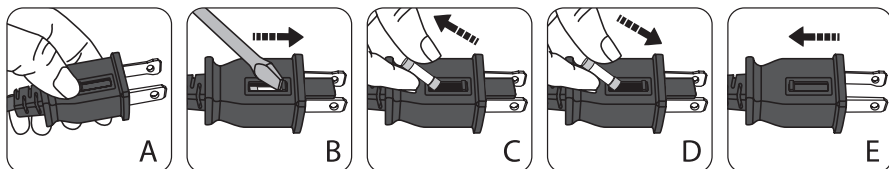

Risk of fire. Do not replace attachment plug. Contains a safety device(fuse, AFCI, LCDI) that should not be removed. Discard product if the attachment plug is damaged.

PLEASE READ THIS MANUAL CAREFULLY BEFORE OPERATING THIS APPLIANCE, AND RETAIN IT FOR FUTURE REFERENCE.

 
Parts Description

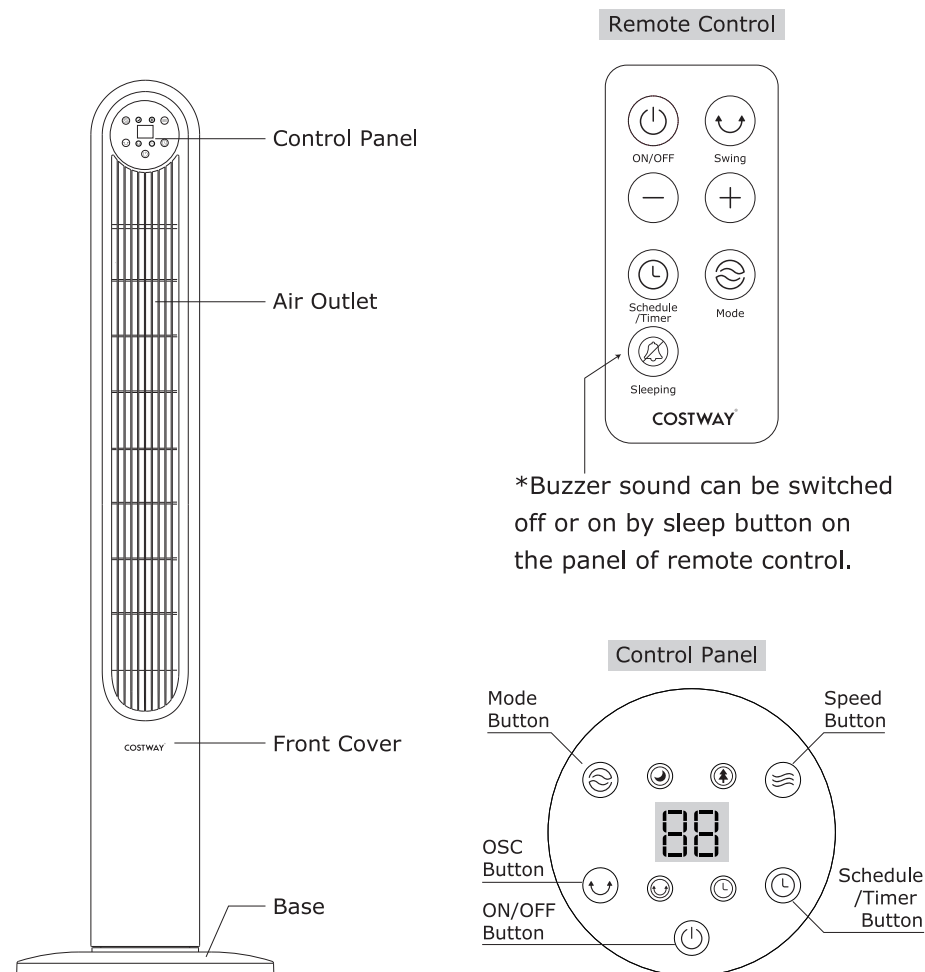

Parts Assembly


- ◆ Assemble the part as shown in the following images before use.
- ◆ Please keep the package for storage when not in use.

 1

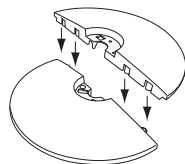


Assemble the front and rear base by aligning the matching holes and sliding them together until they form one base.

 2

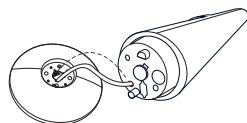


Pull power cord through the hole in the center of the base until the base touches the bottom of the fan body.

 3

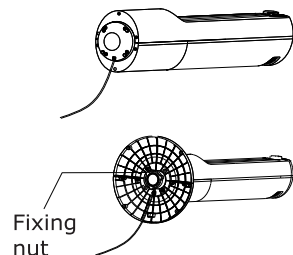

Place the assembled base to the bottom of the fan body by aligning the matching holes, and fix them together. Then fit the base with screws.

 4

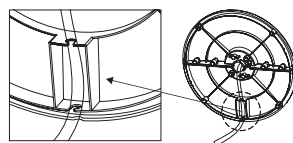

Organize power cord in the wire groove of the base.

 
Operating Instructions

◆ "ON/OFF" Button


- When the power is switched on, the buzzer beeps and the fan goes into standby mode.
- Press the button again to power off and the fan enters standby state. The screen will automatically off if no operation is performed for 30 seconds.
- In the startup state without timing, no operation for 24 hours automatically shut down.

◆ Speed Button

- Press the button to adjust the fan speed. The following diagram shows the order of wind speed:




 - Both the natural mode and sleep mode will change the speed from 1-2-3 in recycle. The screen will show the order of wind speed.



◆ Mode Button

 - Press the button adjust your desired mode when the fan is in On/standby state. The mode will show as below:



- Natural Wind: 3 type of natural wind including Low, Medium & High speed to imitate the wind blowing effect of nature. Press the speed button to choose your desired speed type in natural wind mode.

- **Sleep Wind:** 3 type of sleep wind including Low, Medium & High speed to imitate the wind blowing effect of nature. Press the speed button to choose your desired speed type in sleep wind mode.

1. **High Speed Sleep Wind:** The appliance runs at high (3)-medium (2)-low (1) speed levels for 30 minutes each, and continues to run until the timer is turned off or the power is turned off.

2. **Medium Speed Sleep Wind:** The appliance runs at medium(2)-low (1) speed levels for 30 minutes each, and continues to run until the timer is turned off or the power is turned off.

3. **Low Speed Sleep Wind:** The appliances keeps running under low speed and continues to run until the timer is turned off or the power is turned off.

◆ OSC Button

 
- Press the "OSC" button to make the fan oscillate in horizontal direction. Press the "OSC" button again to stop the function.

◆ Timer Button

- **Schedule Time:** In the standby state, press this button to set the scheduled power-on time. Press the "+, -" button on the remote control to increase or decrease the scheduled time. The setting sequence is shown as follows:




- **Timer:** In the standby state, press this button to set the timer shut-down time. Press the "+, -" button on the remote control to increase or decrease the timer. The setting sequence is shown as follows:




Battery Installation of Remote Control

 1. Pull out the remote control battery holder according to the assembly drawing on the back of the remote control.

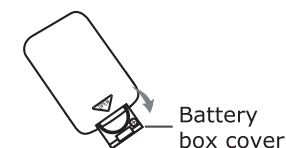

 2. Put the battery into the battery holder, pay attention to the positive and negative poles of the battery.



 
3. Reinstall the battery holder with the battery in the remote control.









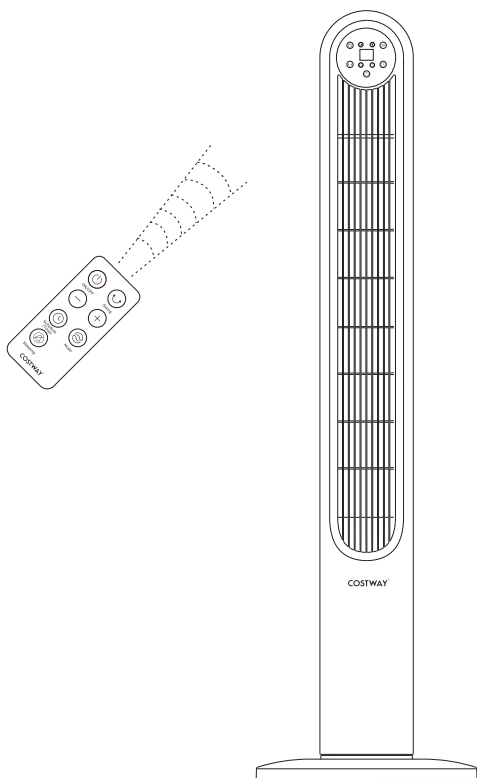






WARNING: Chemical Burn Hazard. Keep batteries away from children. This product contains a lithium button/coin cell battery. If a new or used lithium button/coin cell battery is swallowed or enters the body, it can cause severe internal burns and can lead to death in as little as 2 hours. Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

◆Attention








1. The remote control must face to the receiver
2. The using range of the remote control must be within 16.5FT(5M) away from receiver. If the remote control isn't faced to the receiver, its using range will be narrowed.
3. If this fan is used in the room with operating high-power machines, the remote control may be out of order.
4. Don't put any obstructions between the receiver and remote control
5. Please take good care of the remote control and avoid knocking and breaking.
6. When the remote control is not in use, please take out the battery and store it properly.



Safety Precautions

 Before use, please check whether all voltages are consistent with the indications on the product voltage label.	 Check whether the power cord and plug are damaged before use. Do not bend or pull the power cord to avoid poor contact.
 Do not place the product near the curtains, as it may be sucked into the curtains and damage the motor	 Non-full-time personnel or unqualified technician are not allowed to repair or modify this machine by themselves.
 Do not put your hands or sharp objects into the body during use to prevent accidents. Pay attention to your kids' safety.	 Please turn off the power before unplugging. Do not pull out the power plug with wet hands because there is a risk of electric shock.
 It is strictly forbidden to use it without proper installation.	 Babies, patients, and the elderly are not allowed to blow directly for a long time.
 Do not hang clothes on the body.	 Do not spray volatile agents or insecticides. There are risk of deterioration, damage, and discoloration of the body shell.
 When the tower fan is in use, it cannot be tilted more than 10° or used downside down.	 Do not use the fan in places with high temperature above 40°C/104°F, high humidity (bathroom), dust, or acid-base oil.
 Please unplug the power plug when not in use for a long time.	

Cleaning and User-maintenance

 Please turn off the power and unplug the power plug before cleaning and maintenance.	 This machine needs only general external cleaning and maintenance. First wipe with a kitchen detergent, and then wipe with a clean soft cloth.
 The dirt on the body and fan blades must be cleaned to avoid discoloration and damage.	 Never rinse the body directly with water.
 Do not wipe the body with thinner, toluene, acid lotion, lamp oil, alcohol or chemical cloth to avoid discoloration or deterioration. 	 After each maintenance, the fan should be sufficient dry before powering on or storing. If the appliance will not be used for a long time, the parts should be packed into the original package and placed in a dry place for proper storage.

Trouble Shooting

Issue	Solution
Fan Fails to Operate	<ul style="list-style-type: none"> • Plug in the power cord. • Check whether the power cord is damaged.
Abnormal Sound	<ul style="list-style-type: none"> • Check if any objects enter the body.
Remote Control Malfunction	<ul style="list-style-type: none"> • Check if the battery is dead • Check the positive and negative poles of the battery.

Warning: If the power cord is damaged, it must be replaced by the manufacturer or a professional technician to avoid danger.

Product Specification

Model	Rated Voltage	Rated Power	Noise
ES10090	120V~60Hz	40w	60dB