**ROKU**<sup>®</sup> Select Series HD TV

Quick Start Guide



# Need help?





© 2022 Roku, Inc. All Rights Reserved. Roku, the Roku logo, and the purple d-pad and purple fabric tag designs are trademarks or registered trademarks of Roku, Inc.

4100000912\_02



# STEP 1: Set up your TV





### Prepare a surface

Put a soft covering like a blanket down onto a clean, flat surface (make sure it's larger than the TV) and place the TV on it.

## **B** Attach the stands

Use a screwdriver and included screws to attach the stands.

### C

#### Set TV upright

Place your TV on a stable, flat surface.

# **Mounting your TV?**

For instructions, skip these steps and visit go.roku.com/TV



# STEP 2: Plug TV in and pair remote



### **A** Connect your TV

Plug your TV into a power outlet. It should turn on automatically. If it doesn't, press the power button.

# 

### **B** Pair your remote

Pull out the battery tab on the back of your remote. It will pair to your TV automatically.



# STEP 3: Activate your TV



### **Connect to internet**

Follow the instructions on your TV screen. Activate your TV by using your computer or smartphone to link a Roku account.



#### IMPORTANT

Roku never charges for activation support.

# Need help?

For help with setup, video tutorials, and more visit **go.roku.com/TV** 

# **Remote features**

#### V V

# Voice control

Quickly search across thousands of channels, switch inputs, and control your TV with your voice.



### **Pre-set channel shortcuts**

Launch popular streaming channels in just a press.



## **Options button**

On the home screen: Opens the channel settings menu.

#### While streaming:

Opens sound and picture settings.



# **Frequently asked questions**

# Why do I need an internet connection?

You'll need an internet connection to set up your TV, stream your favorite channels and for automatic software updates.

#### Having trouble pairing your remote?

If you don't see a remote pairing alert on your TV screen, press and hold the home and right arrow buttons for 5 seconds.

#### Why should I enter a credit card?

Saving a payment method makes it easy to rent or buy movies, subscribe to popular channels, and start free trials in just a click. No charges will be made without your authorization.

# What type of voice commands can I use with this remote?

- "Play classic rock"
- "Turn captions on"
- "Launch The Roku Channel"
- "Skip 30 seconds"
- "Show me action movies"