



Portal CD Player with AM/FM radio,
Bluetooth and LED Display

MODEL: SC-726BT



Instruction Manual

Please read carefully before use and keep for future reference.

Table of Contents

Warnings and Precautions	3	Stereo Headphone Jack	11
What inside in the Box	6	CD Operation	11
Before You Start	6	Cassette Operation	16
Location of Controls	7	Bluetooth Operation	19
Connect Power	9	Remote Operation	20
Getting Started	10	Specifications General	21
To Play the Radio	10	Warrenty	21

Warnings and Precautions

	CAUTION WARNING: SHOCK HAZARD. DO NOT OPEN. AVIS: RISQUE DE CHOC ELECTRIQUE. NE PAS OUVRIR	
CAUTION: TO REDUCE THE RISK OF FIRE ELECTRIC SHOCK, DO NO REMOVE THE COVER (OR BACK) OF THE UNIT. REFER SERVICING ONLY TO QUALIFIED SERVICE PERSONNEL.		



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of significant magnitude to constitute risk of electric shock



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operation and servicing instructions in the literature accompanying the appliance.

CLASS 1 LASER PRODUCT		
CLASS 1 LASER PRODUCT APPAREIL LASER DE CLASSE 1 PRODUCTO LASER DE CLASE 1	CAUTION INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCKS DEFEATED AVOID EXPOSURE TO BEAM.	
This product contains a low power laser device.		

On Protection Against Laser Energy Exposure

- As the laser beam used in this product is harmful to the eyes, do not attempt to disassemble the casing.
- Stop operation immediately if any liquid or solid object should fall into the cabinet.
- Do not put anything in the safety slot. If you do, the laser diode will be ON when the disc compartment door is still open.
- If the unit is not to be used for a long period of time, make sure that all power sources are disconnected from the unit. Remove all batteries from the battery compartment, and unplug the AC-DC adapter from the wall outlet. Make it a practice to remove the AC-DC adapter by grasping the main body and not by pulling the cord.
- This unit employs a laser. The use of controls or adjustment or performance of procedures other than those specified here may result in exposure to hazardous radiation.

CAUTION

- Do not block the ventilation openings or holes.
- Do not place any naked flames (such as lighted candles) on the apparatus.
- When discarding batteries, follow all local rules and laws governing the disposal of batteries. Consider the environmental impact of your actions!
- Invisible laser radiation when open and interlock has failed or been defeated. Avoid direct exposure to beam.
- To prevent fire or shock hazard, do not expose this appliance to rain or moisture.

Important Safety Information

1. **Read Instructions:** All the safety and operating instructions should be read before the product is operated.
2. **Retain Instructions:** The safety and operating instruction should be retained for future reference.
3. **Heed Warnings:** All warnings on the product and in the operating instructions should be adhered to.
4. **Follow Instructions:** All operating and usage instructions should be followed.
5. **Cleaning:** Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
6. **Attachments:** Use only attachments recommended by the manufacturer. Use of other attachments may be hazardous.
7. **Water and Moisture:** Do not use this product near water (e.g., near a bathtub, washbowl, kitchen sink, laundry tub, in wet basements, or near a swimming pool and the like).
8. **Accessories:** Do not place this product on an unstable cart, stand, tripod, bracket, or table. Use only with carts, stands, tripods, brackets, or tables recommended by the manufacturer or sold with the product. Any mounting of the product should follow the manufacturer's instructions and should use a mounting accessory recommended by the manufacturer. A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.
9. **Ventilation:** Slots and openings in the cabinet are provided for ventilation to ensure reliable operation of the product and to protect it from overheating. These openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack



unless proper ventilation is provided or the manufacturer instructions have been adhered to.

10. **Power Sources:** This product should be operated only from the type of power source indicated on the rating label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power or other sources, refer to the operating instructions.
11. **Grounding or Polarization:** This product may be equipped with a polarized alternating-current line plug that has one blade wider than the other. This plug will only fit into the power outlet in one direction. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the direction of the plug. If the plug should still fail to fit, contact an electrician to replace the obsolete outlet. Do not defeat the safety purpose of the polarized plug.
12. **Power-Cord Protection:** Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and at the point which they exit from the product.
13. **Protective Attachment Plug:** The product may be equipped with an attachment plug with overload protection. This is a safety feature. See the operating instructions for replacement or directions to reset the protective device. If replacement of the plug is required, be sure the service technician has used a replacement plug that has the same overload protection as the original plug as specified by the manufacturer.
14. **Lightning:** For added protection for this product, unplug it from the wall outlet during a lightning storm or when it is left unattended and unused for long periods of time. This will prevent damage to the product due to lightning or power-line surges.
15. **Overloading:** Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
16. **Object and Liquid Entry:** Never push objects of any kind into this product through openings as they may touch dangerous voltage points

or shout-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.

17. Servicing: Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
18. Damage Requiring Service: Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions: a) when the power-supply or plug is damaged; b) if liquid has been spilled or if objects have fallen into the product; c) if the product has been exposed to rain or water; d) if the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation; e) if the product has been dropped or damaged in any way; f) when the product exhibits a distinct change in performance—this indicates a need for service.
19. Replacement Parts: When replacement parts are required, be sure that your service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.
20. Safety Check: Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to ensure that the product is in proper operating condition.
21. Wall or Ceiling Mounting: The product should be mounted to a wall or ceiling only as recommended by the manufacturer.
22. Heat: The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

FCC NOTICE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful

interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION ON MODIFICATIONS

Any changes or modifications not expressly approved by the grantee of this device may void the authority granted by the FCC to operate the equipment.

What inside in the Box

Please take a moment to make sure that you have everything in the list below.

- Main unit
- AC Power Cord
- User Manual

Before You Start

Please take note of the following before you start.

- Do not block the ventilation openings or holes.
- Avoid installing the unit in locations described below:
- Places exposed to direct sunlight or close to heat radiating appliances (such as electric heaters, or on top of other stereo equipment that radiate heat).
- Places lacking ventilation or dusty places.
- Places subject to constant vibration.
- Places that are humid or moist.
- Operate turning controls and switches as instructed in manual.
- Before turning on the power for the first time, make sure that the power cord is properly installed.


- Store your tapes or CD in a cool area to avoid damage from heat.


CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE, REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

WARNING: Remove batteries if exhausted or if they will not be used again for a long period. The incorrect use of batteries can cause electrolyte leakage and will corrode the compartment or cause the batteries to burst, therefore:

- Do not mix battery types, e.g., alkaline with zinc carbonate.
- When inserting new batteries, replace all batteries at the same time.

Location of Controls

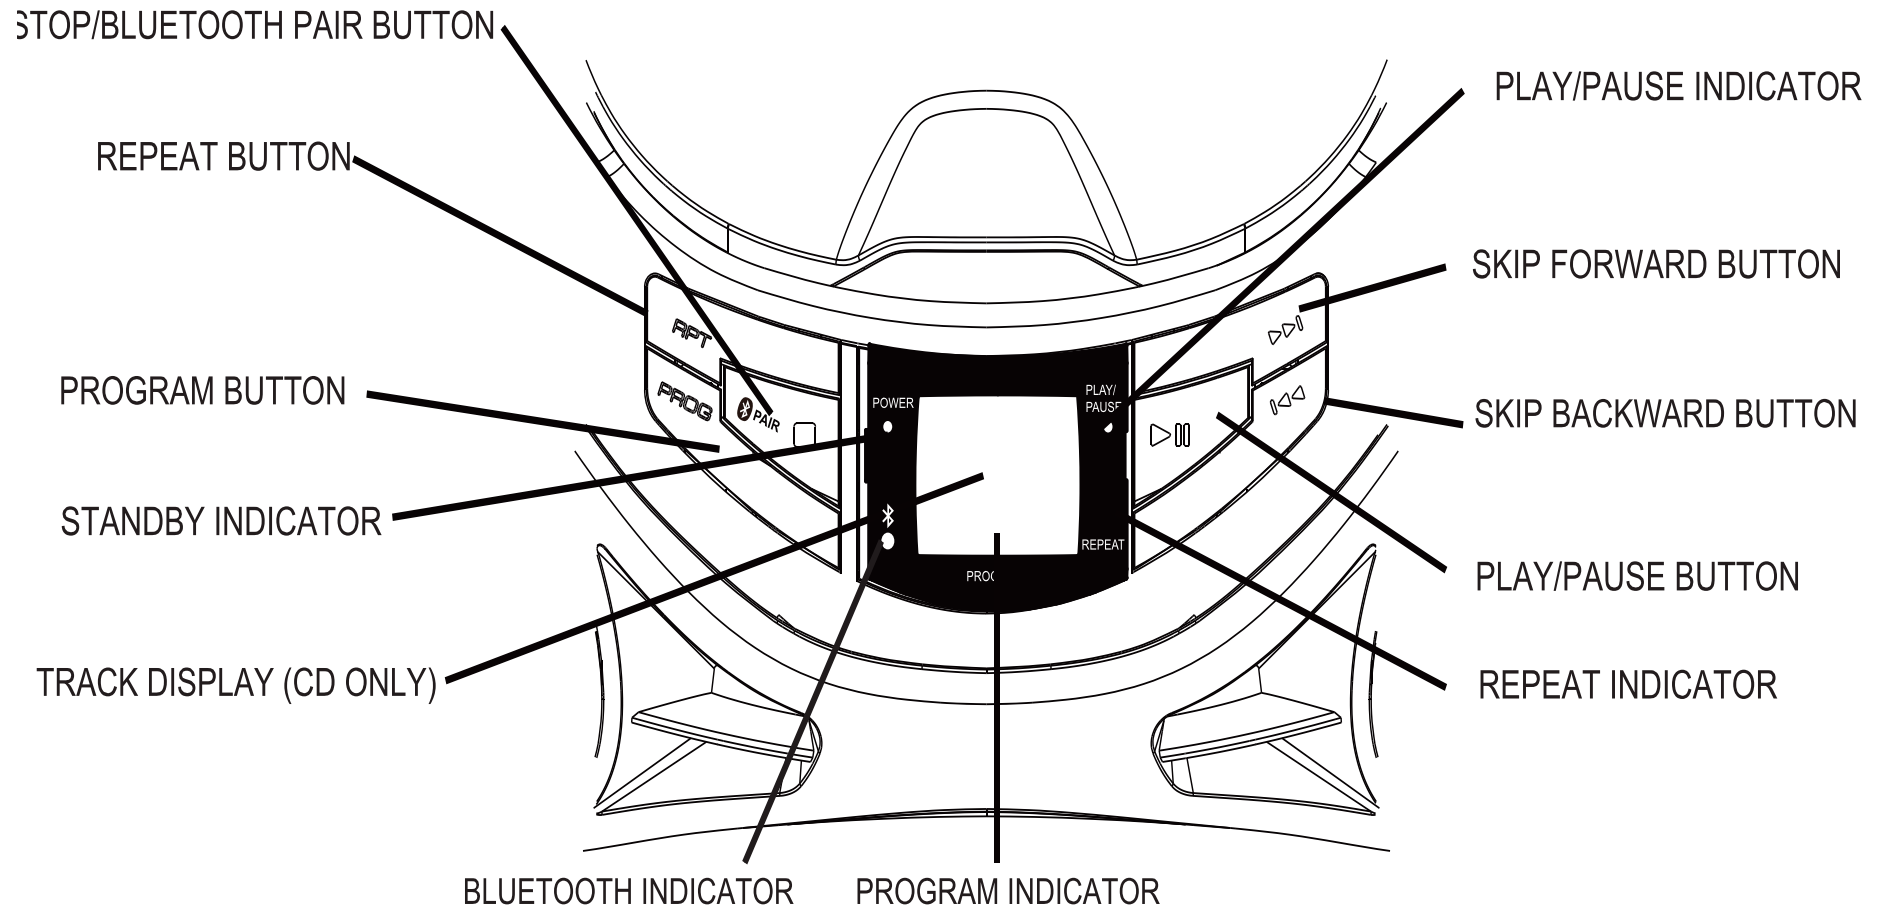

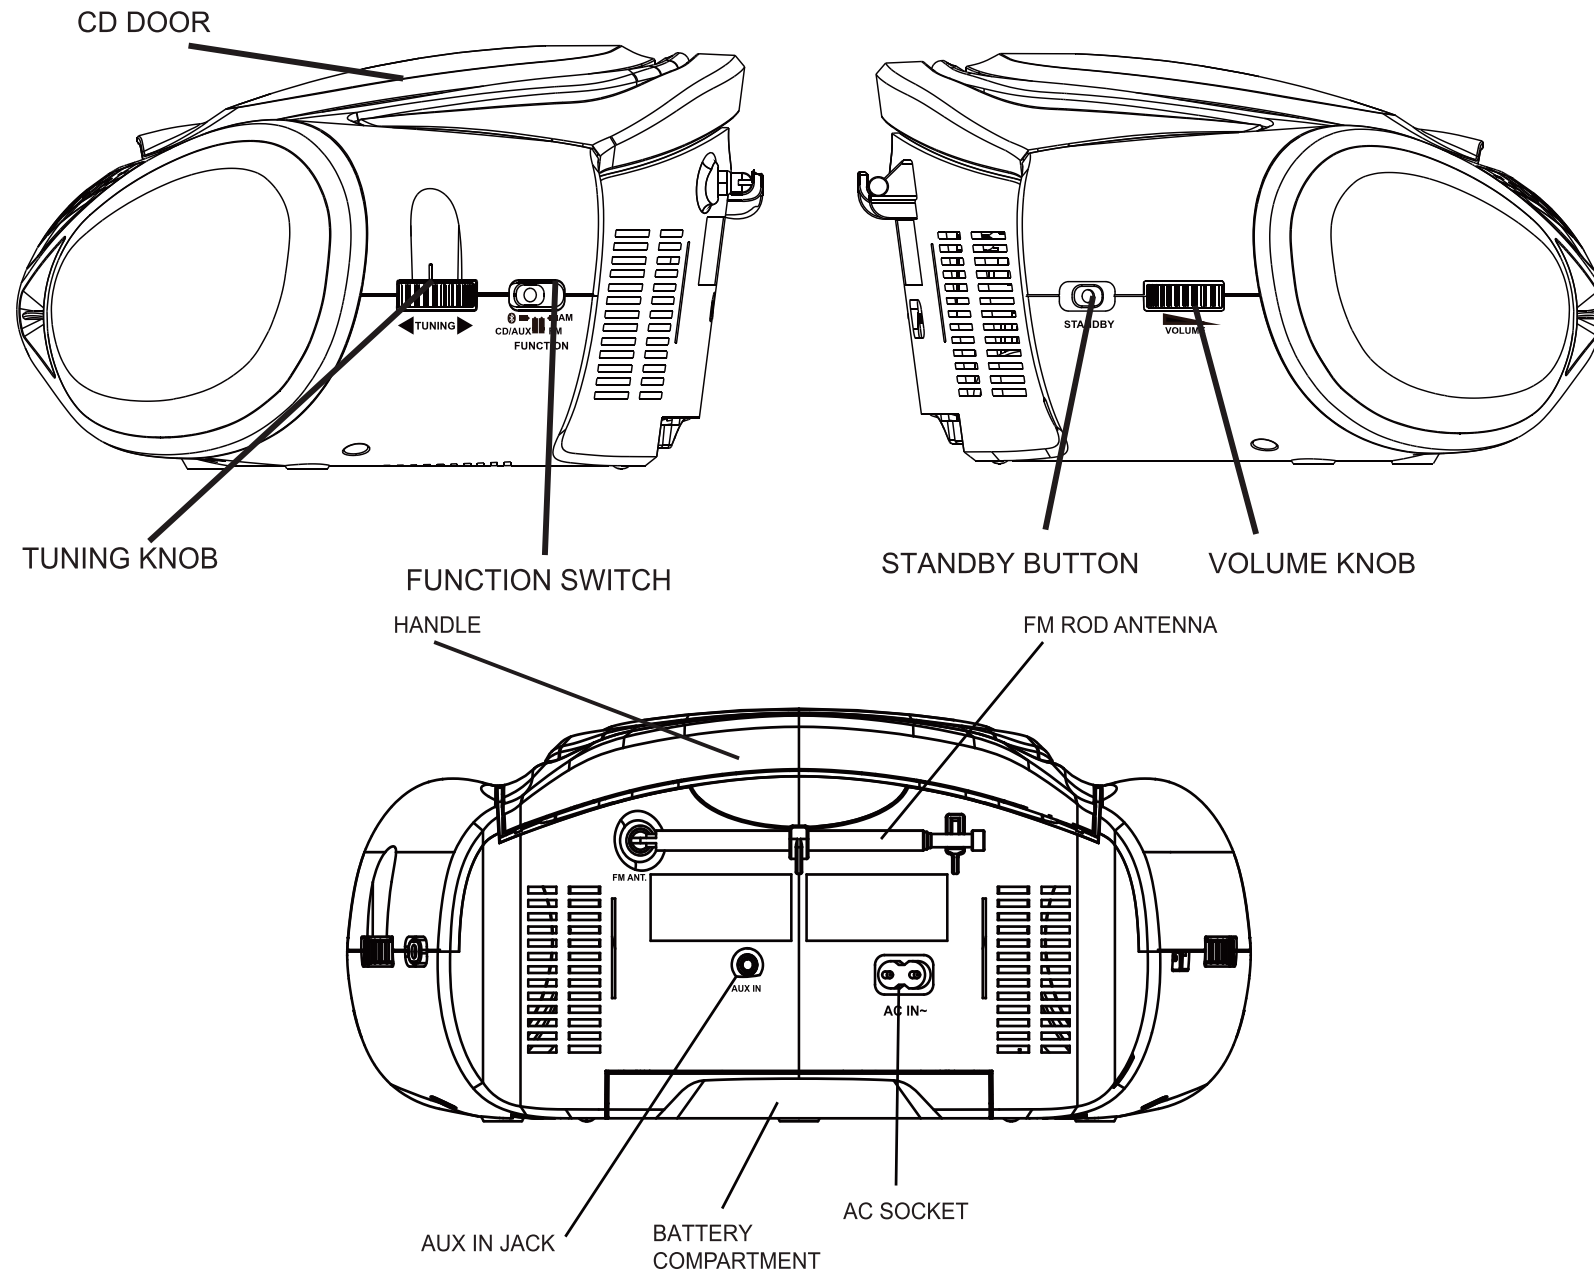

Connect Power

This set is designed to be operated from two different power sources as listed below:

AC Power

Plug the AC Cord into the back of the set and insert the AC plug into standard household outlet.

NOTE:

- If the AC Cord is plugged into the back of the set, the set will not work on batteries. To operate the set on batteries, remove the AC plug from the back of the set.
- If the AC plug of this unit does not fit in your AC outlet, a plug adaptor should be used. Consult your local dealer on the type of plug adaptor required.
- When the unit is not in use for an extended period, press the STANDBY button to switch it off. Then disconnect the power cord from the AC wall outlet

DC Power

This set runs on 6 size "C" batteries. For best performance, always use heavy duty alkaline batteries.

TO INSTALL BATTERIES

1. Remove the Battery Door by gently pushing downward and outward.
2. Insert 6 size "C" batteries.
3. Replace the door.

NOTE:

- Old batteries may swell and leak. To avoid damage to your set, remove the batteries when the set is to be stored for long periods of time or if the batteries become exhausted (the Power Indicator will not light if batteries are completely dead).
- To use your set on battery power you MUST remove the AC Cord from BOTH the wall outlet AND the back of the set.
- Do not mix old and new batteries. Do not mix rechargeable (nickel cadmium) and regular carbon zinc or alkaline batteries.
- The (-) side of battery touches the spring.

Getting Started

- Connect the unit to AC power or insert batteries as described in the Connect Power section. The STANDBY indicator will illuminate.
- Press the STANDBY button to turn on the unit. The STANDBY indicator will switch off.
- To turn off the unit, press the STANDBY button again.

Switching Between Sound Sources (AM/FM/CD/BLUETOOTH)

After powering on the unit, use the FUNCTION switch to toggle between available audio sources.

Adjusting the Volume

Once the unit is turned on, rotate the VOLUME knob to increase or decrease the sound level.

Optimizing Radio Reception

Extend the rod antenna to improve reception for AM and FM modes. You may need to reposition both the antenna and the unit for optimal signal strength.

To Play the Radio

This unit supports reception of FM Stereo, FM, and AM radio bands.

1. Slide the Function Switch to AM or FM mode.
2. Tune to required station with the Tuning knob on the side of the unit.
3. Gently rotate this Tuning Knob back and forth until you get the strongest, clearest sound.
4. The built-in AM antenna and the FM rod antenna are directional. When receiving FM broadcasts, carefully extend the FM Telescopic Antenna to its full length. The strongest reception can be achieved by rotating the set or the FM Antenna.
5. Adjust the Volume Control to your listening preference.
6. To turn off the radio, press the STANDBY button to switch off the unit.

CD Operation

REMOVING A DISC

1. Make sure the CD is not playing. If it is, press the CD Stop button.
2. Open the CD Door on the top of the unit.
3. Gently remove the disc.
4. Close the CD Door by hand.
5. Replace the disc in its protective storage box.

DISC COMPATIBILITY

- This unit plays standard audio CDs with the compact disc digital audio official logo. Discs that don't meet this standard may not work properly.
- Playback of CD-R/CD-RW may vary based on recording quality.
- Avoid blank CD-R/CD-RWs—they take time to read and may cause damage if interrupted.
- The unit cannot read CD-ROMs, CD-Is, VDUs, VCDs, or DVDs.

HANDLING AND MAINTENANCE OF A DISC

- When holding the discs, take care not to touch the playing surface.
- Store the discs in their cases. Return them to their cases with the label surface facing up and push down lightly on the label surface.
- Do not place discs in the following locations:
- Near a heating device or a place where the temperature is high or in dusty areas.
- Do not write on the label surface using a ballpoint pen and do not stick labels on the CD.
- Wipe away any fingerprints or dust on the playing surface of a disc using a soft cloth.

Bear in mind the following points:

- Always wipe from the inside toward the outside of the disc.
- Never in a circular motion.
- Do not use conventional record cleaners, anti-static agents, benzene, thinner or other solvents.

PLAYING A CD

1. Slide the Function Switch to the CD mode position.
2. Open the CD door to open the CD door.
3. Insert a CD with the LABEL side facing UP. If the disc is upside down, the Display will show "NO".
4. Close the CD Door by pushing the door down manually.
5. The unit will play the first track of the inserted disc automatically.
6. Adjust the Volume Control to your taste.
7. To pause playback, press the PLAY/PAUSE button. The music will pause, and the display will show the current track number along with a blinking play icon to signal the paused state. Pressing the button again will resume playback from the same position.
8. To stop the music, press the STOP button. Playback will end, and the total number of tracks on the disc will be shown on the display.
9. During playback, users can navigate between tracks by using the SKIP buttons. Pressing the forward SKIP button will advance to the next track, while pressing the backward SKIP button will return to the previous track.
10. While a disc is playing, users can perform a high-speed music search by pressing and holding either the forward or backward SKIP button. This allows fast scanning through the current track in the selected direction. Once the button is released, the unit immediately resumes normal playback speed from that point in the track.

REPEAT PLAYBACK MODES

The unit offers multiple repeat options during CD playback:

Repeat One Track Press the REPEAT button once while a disc is playing to continuously repeat the current track. A repeat indicator will appear on the display.

Repeat All Tracks Press the REPEAT button twice to repeat the entire disc from start to finish continuously. The repeat all indicator will be shown.

Cancel Repeat Mode Press the REPEAT button again until no repeat indicator is visible on the display. The unit will resume normal playback mode, playing tracks sequentially without repetition.

PROGRAMMED CD PLAYBACK

Supports programming of up to 20 tracks in CD mode.

1. Insert CD without pressing PLAY/PAUSE.
2. Press PROGRAM once while in stop mode. Display shows “P01” blinking.
3. Use SKIP buttons to select a track.
4. Press PROGRAM button again to save the track.
5. Repeat steps 2–3 to program up to 20 tracks.

Playback of Programmed Tracks

Press PLAY/PAUSE after programming to start playback. “PROG” indicator lights up.

Managing Programmed Memory

To clear programmed tracks:

Press STOP twice during playback or open the CD door or switch to a different mode.

Notes: During programmed playback, you may still use Repeat 1 or Repeat All functions.

Bluetooth Operation

Bluetooth Pairing Instructions

- Turn On the Unit Press the STANDBY button to power on.
- Activate Bluetooth Mode Press the FUNCTION button until Bluetooth mode is selected. The "BLUETOOTH" indicator lights up.
- Enter Pairing Mode Press and hold the STOP/PAIR button for 4–5 seconds. Indicator begins flashing to signal discoverable mode.
- Pair with Your Device On your Bluetooth-enabled device:
 - Enable Bluetooth and start scanning
 - Select **"SC-726BT"** from the device list
 - If prompted, enter pass code "0000"
- Successful Connection Once paired:
 - The "BLUETOOTH" indicator glows steadily.
 - A short beep confirms the link.

Note: If pairing fails, try turning the unit off and back on to reset the connection process.

AUX IN Operation

The AUX-IN jack allows connection of external music players or audio sources to the unit.

- Turn on the unit and set the function switch to CD/AUX mode.
- Plug a 3.5mm audio cable (not included) into your external music device.
- Connect the other end of the cable into the AUX-IN jack located on the back of the unit.
- Power on your external music player and begin playback.
- Use the VOLUME knob on the unit to adjust sound output from its speakers.

Specifications General

Power Requirement

AC 120V ~ 60Hz or

DC 6 x "C" Size Batteries (not included)

Power Output

2x 1.5W RMS Speakers

Bluetooth Version

6.0

Radio Frequency

AM 520 - 1710 KHz

FM 87.5 - 108 MHz

Dimensions

Approx. 11.38"(L) x 8.54"(W) x 4.88"(H)

Warranty

Supersonic Inc. ("Supersonic") warrants this product to the original purchaser ONLY, to be free from defects in materials and workmanship under normal use, for ninety (90) DAYS from the date of original purchase. Proof of purchase (receipt) required.

Please visit

<https://www.supersonicinc.com/pages/warranty>
for additional information.