

Quick Start Guide

TC HELICON VOICETONE C1

Key Selector – Selects a major key for pitch correction. CH setting is either Chromatic (no Instrument) or Chords (Instrument connected).

Mic Input Level Control

Ground Lift – Press the button inward if you experience buzz and hum.

Instrument Thru – Send a copy of the instrument input signal to an amp or PA.

Effect Active LED

Effect On/Off Footswitch

USB – Accepts the included mini-USB cable for firmware update.

Power – Connect the included 12 V / \geq 400 mA power supply.



Input Level LED – Green = signal, red = clip.

Mic Control – Use the optional MP-75 mic (button in = on).

Guide Instrument Input

Gender – Adjust your vocal biology between male and female.

Off/Hard – Adjust the pitch correction attack from natural to robotic.



Out – Connect to a mixer or powered speaker.

Mic – Connect your microphone.

Visit tc-helicon.com to download the full manual

TC HELICON