

QUICK SETUP GUIDE

Essential PC Gaming Chair

NS-PCGV30

 
PACKAGE CONTENTS

A




Wheels (5)

B




Star base

 C




Center support post

 D



Center post cover

 E



Riser mechanism

F



Seat bottom

G



Right arm

H



 
Left arm

I



Seat back

J



Allen wrench

K



5/16" × 3/4" screw (4)

L



1/4" × 1" screw (8)

M



Arm caps (8)

N



Spare parts:
5/16" × 3/4" screw
1/4" × 1" screw
Arm cap




Quick Setup Guide

FEATURES


- Seat height adjusts to fit your body
- Swivel and tilt mechanism lets you customize the chair to your preferred position
- Sturdy, 5-pointed star base with wheels makes it easy to move around
- Black design with white trim grants a modern, sleek look
- Made with quality materials for dependable stability

ASSEMBLING YOUR CHAIR


- 1 Turn the star base (B) upside down on carpet or a soft towel.
- 2 Insert the wheel (A) posts into the holes at the ends of the star base arms until they click into place.

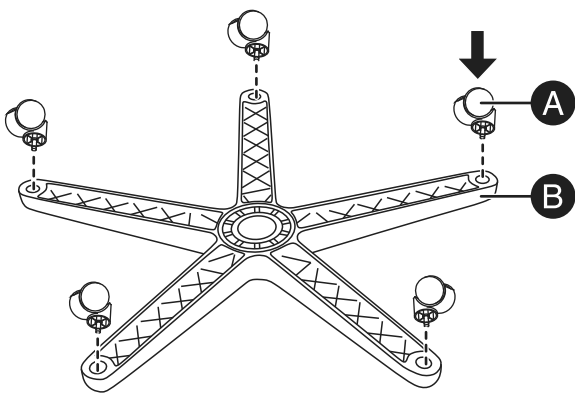


- 3 Turn the base right side up, then insert the bottom of the center support post (C) into the hole in the center of the star base (B). Put the center post cover (D) on the center support post (C).

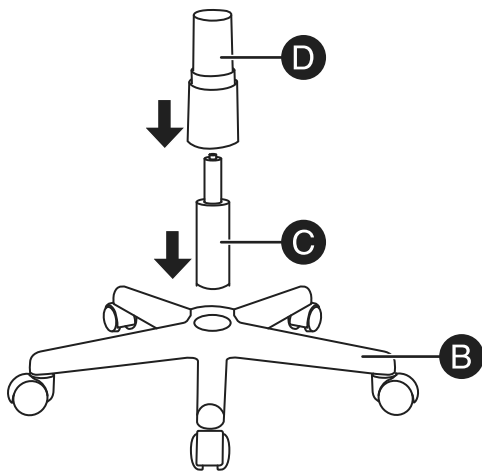


- 4 Turn the seat bottom (F) upside down and place it on a padded box or small stool to support it.

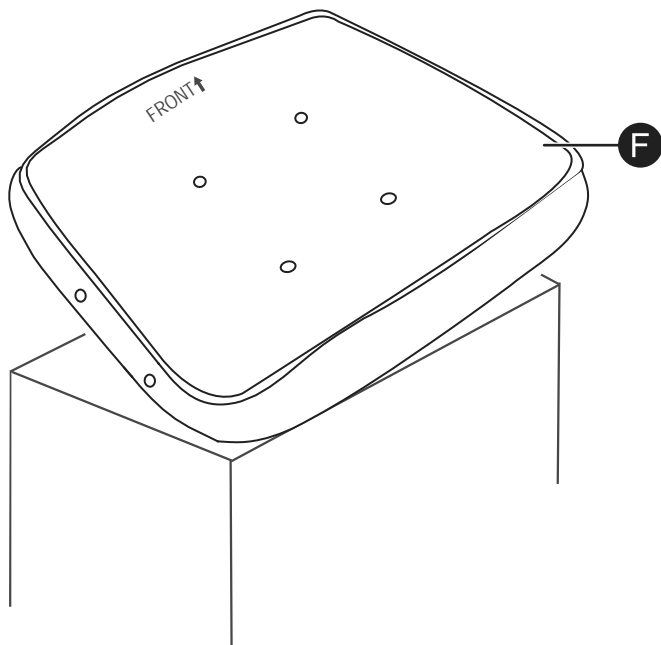


- 5 Align the riser mechanism (E) on the bottom of the seat (F) and attach it to the seat with four 5/16" × 3/4" screws (K). Tighten the screws with the Allen wrench (J).

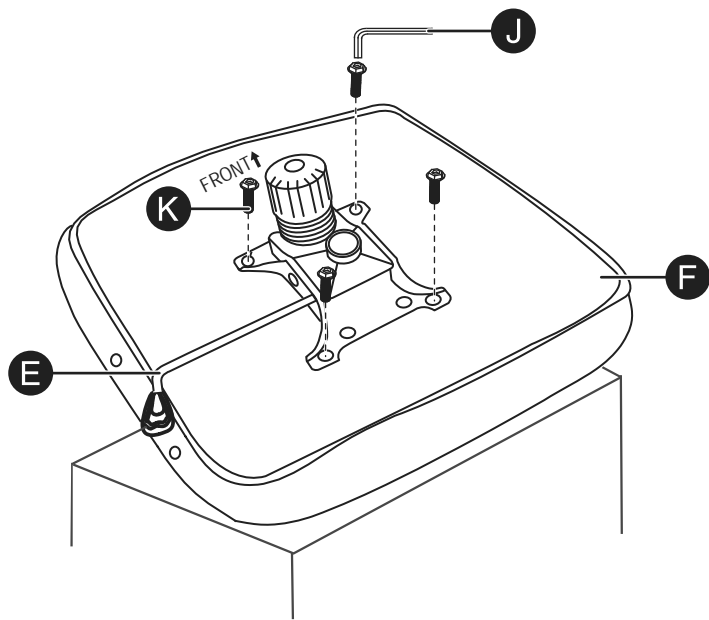


- 6 Lift the seat bottom (F) and turn it right side up, then align the hole in the riser mechanism (E) with the center support post (C) and press the seat down until it clicks into place.

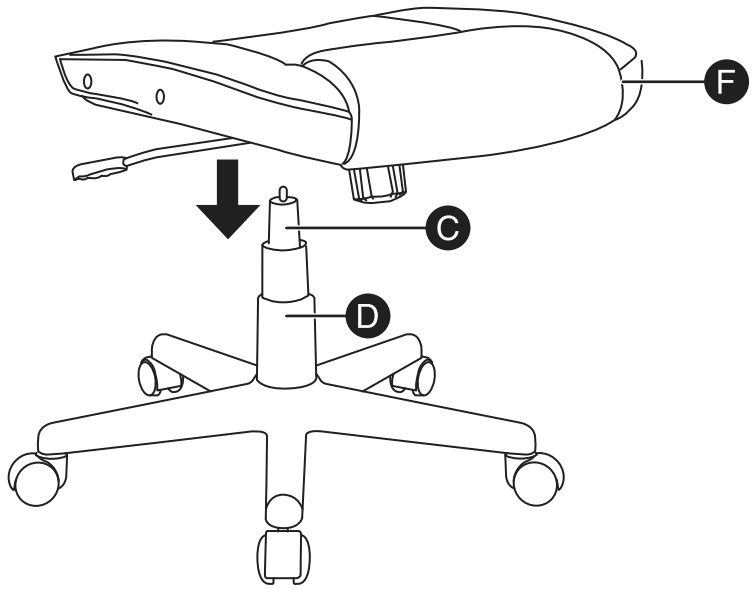


- 7 Attach the left arm (H) and right arm (G) to the seat bottom (F) by using four 1/4" × 1" screws (L) and tighten the screws fully using the Allen wrench (J).

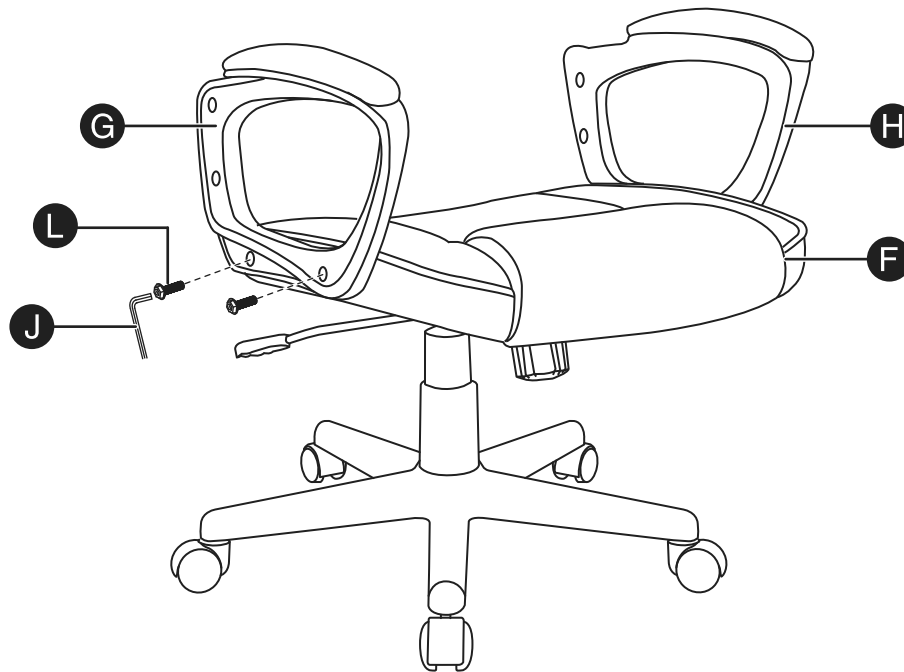

8 Attach the arms to the seat back (I) with four 1/4" x 1" screws (L) and tighten the screws fully using the Allen wrench (J).

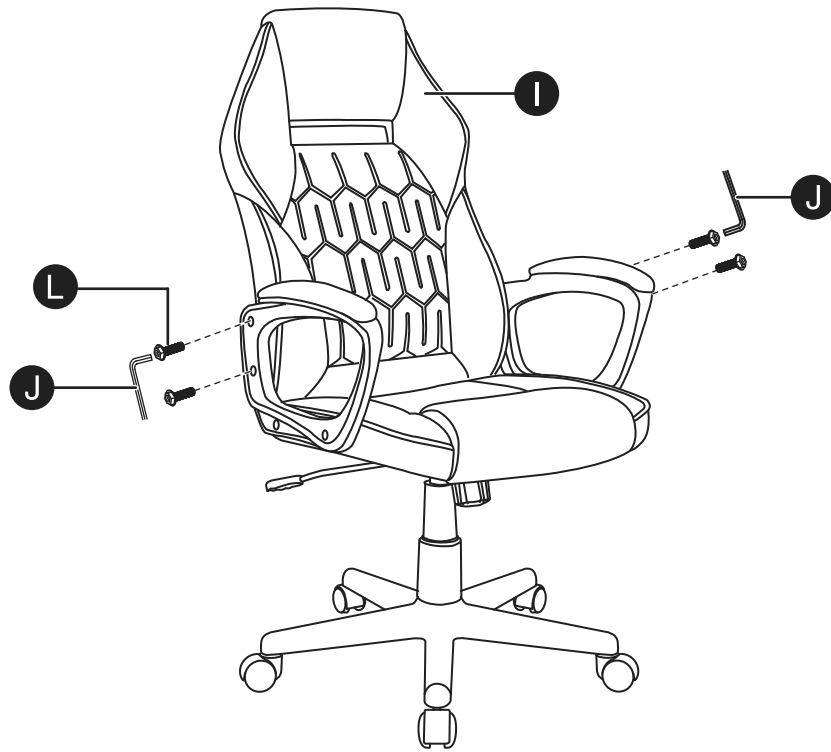

9 After tightening all screws, cover the screw holes with the arm caps (M).

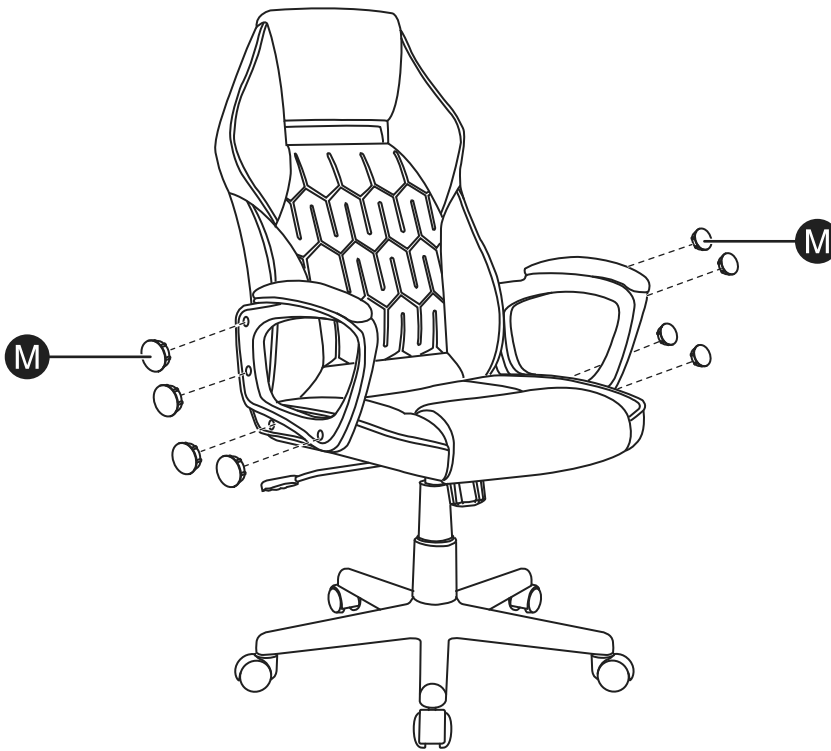

CAUTION: Make sure that the chair back/seat assembly and chair base are securely connected and that all bolts are tightened before sitting in the chair.

USING YOUR CHAIR

- To raise the height of the chair, lift the lever on the right side while not sitting in the chair. To lower the height of the chair, lift the same lever while sitting in the chair.
- To lock the back of the chair, push the lift lever backward. To unlock the chair, pull the lift lever forward.



IMPORTANT SAFETY INFORMATION

Warnings:

- Fall hazard - Do not stand on the chair or attempt to use the chair as a ladder.
- Choking hazard - Be sure to properly dispose of all plastic packing bags.
- Fall hazard - Be careful not to lean the chair back so far that it causes the chair to fall backward or slip out from under you, or put all of your weight on the front of the chair, causing it to fall forward.

Caution:


- Make sure that the casters/wheels are fully inserted into the base of the chair.
- Always keep the base of the chair completely on the floor.
- Periodically make sure that the bolts holding the base and back of the chair in place are securely tightened.

Safety information

- Maximum weight capacity: 275 lbs. (124.7 kg).
- Read the *Quick Setup Guide* completely before assembly.
- Remove all parts from the carton and make sure that all parts are included prior to assembly.
- Assemble the chair on carpet or a soft towel to prevent scratching the chair.
- This chair is designed for sitting on the seat only and nothing else.
- Do not stand on or use as a step ladder.
- Do not sit on the armrests.
- This chair is designed for seating one person at a time.
- Tighten all screws, knobs, bolts, and parts firmly, otherwise do not use.
- If any parts are missing, damaged, or worn, stop using immediately.
- Do not use power tools.

SPECIFICATIONS

- **Dimensions (HxWxD):** 41.34 x 24.02 x 26.38 in. (105 x 61 x 67 cm)
- **Net weight:** 27.34 lbs (12.4 kg)
- **Maximum weight allowed:** 275 lbs. (124.7 kg)
- **Adjustable height range:** 45.08 x 24.02 x 26.38 in. (114.5 x 61 x 67 cm)

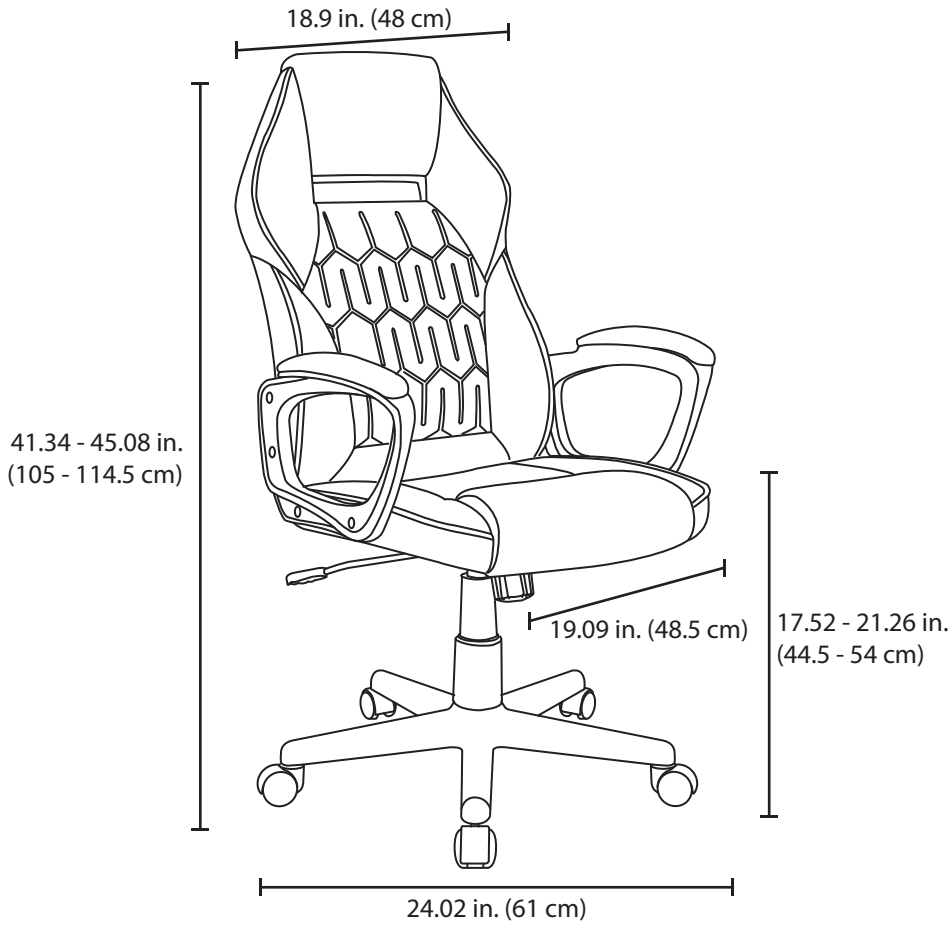

ONE-YEAR LIMITED WARRANTY

Visit www.insigniaproducts.com for details.

CONTACT INSIGNIA:

For customer service, call 1-877-467-4289 (U.S. and Canada)
www.insigniaproducts.com

INSIGNIA is a trademark of Best Buy and its affiliated companies.
Distributed by Best Buy Purchasing, LLC
7601 Penn Ave South, Richfield, MN 55423 U.S.A.
©2022 Best Buy. All rights reserved.