

Find thousands more
great ideas online

Brookstone[®]

973064

© Brookstone 2016

Merrimack, New Hampshire, USA 03054 ▪ 800-846-3000 ▪ Brookstone.com

Brookstone[®]

S8 | Shiatsu Massaging
Seat Topper

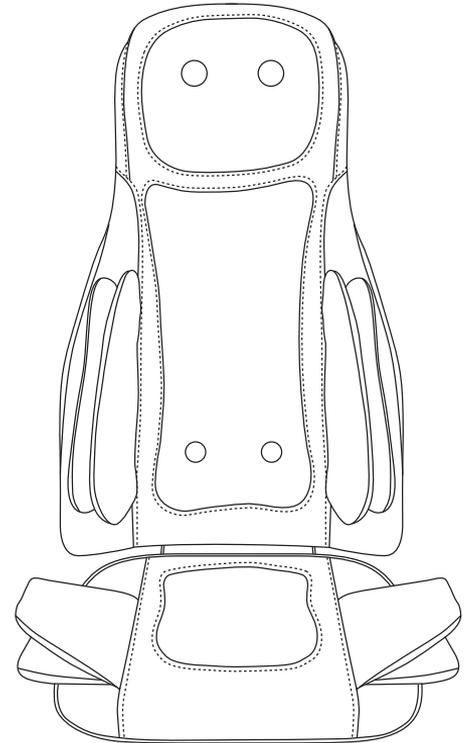


TABLE OF CONTENTS

Warnings and Caution	2
Location Of Controls	7
Safety	11
Preparation Before Use	12
Overall Massage	12
Care And Maintenance	12
Troubleshooting	13
Specifications	14
Warranty	15

CAUTION

- TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER. THERE ARE NO SERVICEABLE PARTS INSIDE.
- TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THE UNIT TO RAIN OR MOISTURE.



The lightning flash with arrow-head symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the unit's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the unit.

IMPORTANT SAFETY INSTRUCTIONS

All of the safety and operating instructions should be read, adhered to and followed before the unit is operated.

SAVE THESE INSTRUCTIONS

DANGER

To reduce the risk of electric shock, burns, fire or injury:

1. Always unplug this massager from the electrical outlet immediately after use and before cleaning.

- 
2. Do not use while bathing or in a shower.
 3. Do not place or store unit where it can fall or be pulled into a tub or sink.
 4. Do not place, drop or submerge in water or other liquid.
 5. Do not reach for unit that has fallen into water. Unplug it immediately.
 6. Care should be taken so that objects do not fall and liquids are not spilled onto the unit.
 7. Never use pins or other metallic fasteners with this appliance.
 8. Carefully examine the covering before each use. Discard the appliance if there are any signs of deterioration such as cracking or blistering.
 9. Keep dry—do not operate in a wet or moist environment.
 10. Do not use wet hands to connect or disconnect the power plug from the electrical outlet.



WARNING

1. Close supervision is necessary when this appliance is used by, on or near children, invalids or disabled individuals.
2. An appliance should never be left unattended while plugged in. Unplug when not in use.
3. Use this massager only for its intended use as described in this manual. Do not use attachments not recommended by manufacturer.
4. For adult use only.
5. Consult your physician before using this massager.
6. This product is not intended for self-treatment of conditions that should be managed by a qualified health care provider.
7. Do not use the product if you are not feeling well.

8. The massager is designed as a non-professional massager to soothe tired and aching muscles. It is not intended to be a substitute for medical attention. If your ailments and symptoms persist or worsen after use, contact your physician immediately.
 9. Do not use the massager in combination with other therapeutic equipment or electric blanket, etc., as this may result in ineffectiveness or injury.
 10. Unplug massager during lightning storms.
 11. Never drop or insert an object into any opening.
 12. Protect the power cord from being walked on or pinched, particularly at plug outlets, convenience receptacles and the point where it exits the unit.
 13. Keep cord away from heated surfaces. Wrap cord loosely around the unit when storing.
 14. Do not operate under blanket or pillow. Excessive heating can occur and cause electric shock or injury to persons.
 15. **IMPORTANT:** Any individual who may: be pregnant or recently gave birth, has a heart condition or a pacemaker, suffers from diabetes or other sensory impairment, phlebitis and/or thrombosis, joint dysfunction, inflammation or injuries, weak bones, osteoporosis, a high fever, an abnormal or curved spine, is at an increased risk of developing blood clots, has pins/screws/artificial joints or other medical devices implanted in his/her body, is being treated for a medical condition or physical injury or is under a doctor's care should consult with a medical professional before using a massaging device designed for home use.
 16. Do not use massager in close proximity to loose clothing or jewelry.
 17. Keep long hair away from the massager while in use.
 18. Do not use on an infant or invalid or on a sleeping or unconscious person.
- 


- 
- 
19. Do not use on insensitive skin or on a person with poor blood circulation.
 20. The unit should be situated away from direct sunlight or heat sources such as radiators, electric heaters, heat registers, stoves, or other units.
 21. Never block the air openings of the unit with materials such as clothing, plastic bags or papers, or place it on a soft surface such as a bed, where the air openings may be blocked. Keep the air openings free of lint, hair and the like.
 22. Do not overload electrical outlet. Use only the power source as indicated.
 23. Do not carry this unit by cord or use cord as handle.
 24. Do not crush—avoid sharp folds.
 25. Never operate this unit if it has a damaged cord or plug, if it is not working properly, or if it has been dropped or damaged, or dropped into water. If the unit's power supply cord or plug is damaged, do not attempt to fix it yourself.
 26. To avoid the risk of electric shock, do not disassemble or attempt to repair the unit. Incorrect repair can cause risk of electric shock or injury to persons when unit is used.
 27. This product is intended for household use only. Do not use this unit outdoors.
 28. Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
 29. Do not operate in the presence of explosive and/or flammable fumes.
 30. Never remove the plug from the socket by pulling the power cord.
 31. To disconnect, ensure all controls are off and remove the plug from the electrical outlet.
 32. Do not stand on the massager. Use only while seated.
 33. Do not insert your hand or foot along the paths of the massage rollers during use as this may cause injury.
 34. Stop operation immediately if you experience any discomfort.
 35. The product is not intended for use by children or persons with reduced physical,

- sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety.
 36. Do not operate for more than 20 minutes continuously. It is recommended to turn off the massager and allow it to rest (cool) for 40 minutes before re-using. This will prolong the life of the massager.
 37. Do not perform continuous massage on the same spot of your body for more than 5 minutes at a time as this may result in excessive stimulation and may have adverse effects.
 38. Children should be supervised to ensure that they do not play with the product.
 39. Use heated services carefully. May cause serious burns. Do not use over sensitive skin areas or in the presence of poor circulation. The unattended use of heat by children or disabled persons may be dangerous.
 40. Temperatures sufficiently high to cause burns may occur regardless of the control setting. Check the skin in contact with the heated area of the massager frequently to reduce the risk of blistering.
 41. Never use the massager on open skin eruptions, swollen or inflamed areas.
 42. Do not operate after taking pain killers, sedatives or alcohol.
 43. Do not apply massage rollers directly on the head, elbow or knee joints, torso or abdomen.
 44. Burns may result from improper use.
 45. **DO NOT WET – DO NOT USE PINS.** Do not use the massager when your body is wet. Do not operate the massager with wet hands.
 46. **NEVER REMOVE COVER.** Do not use the massager when the upholstery is removed. This may cause injury or malfunction.
- 
- 

LOCATION OF CONTROLS

Massage unit

1. Neck Massage Nodes with Heat
2. Dynamic Squeeze™ Massage for Waist
3. Back Massage Nodes with Heat
4. Chair Attachment Strap (on back) and Storage Strap
5. Seat Vibration
6. Dynamic Squeeze™ Massage for Seat
7. Dynamic Squeeze™ Massage for Thighs
8. Power Cord
9. Remote Controller
10. Power Adapter
11. Remote Controller Pocket

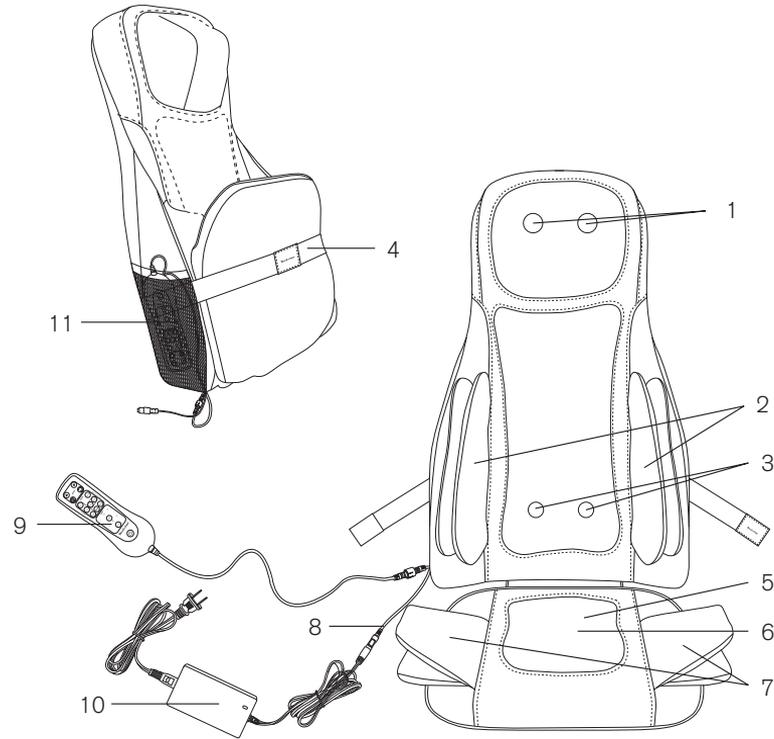

LOCATION OF CONTROLS (CONTINUED)


CONTROLLER

NECK

- ▲/▼ NECK nodes Up/Down Control Buttons
Long Press these buttons to manually adjust Neck massage height.
- ⊙/⊞ NECK nodes Direction Control Buttons
⊙ Press once to start, press 2nd time to reverse direction
⊞ Press to start auto reversing program

BACK

- Back Massage Coverage
Full, Upper or Lower Back.
- SHIATSU Button
To activate/deactivate a rolling, rotating massage.
Note: Does not work with ADJUST button.
- Adjust Button
To adjust the width of the nodes during the rolling massage.
- Rolling Button
To activate/deactivate a sooth massage with a steady, up-and-down rolling motion. Use with the ADJUST button to select roller width.
- Heat Button
To activate/deactivate gentle heat at NECK and BACK node area.
- Target Button
To stop and focus traveling massage nodes at desired position.

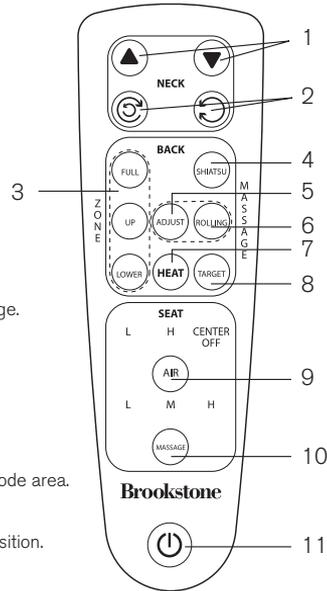


SEAT

- Dynamic Squeeze™ Button
To activate/deactivate the seat and lumbar air squeeze function on thighs, seat and waist. 2 pressure strengths are selectable, and turn off the seat air squeeze function.
- Massage Button
To activate/deactivate SEAT Vibration Massage Program (Low, Medium, High).
- Power Button
Power ON/OFF must be ON for any function to work. Switching off the power while in operation will cause the rollers to return to their storage position.

REMOVE FROM BOX

- Remove S8 Shiatsu Massaging Seat Topper, Ensure all parts are present (see page 8).
- Open the storage strap by separating the velcro.

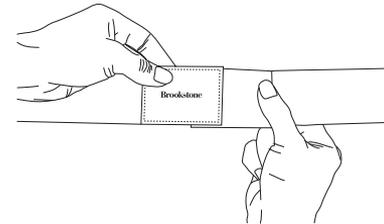

- When your S8 Shiatsu Massaging Seat Topper is not in use and you are ready to store it in the future, use the strap to fold the seat up into the unit and secure it. (As it was when you opened the box for the first time), As shown on page 8.

SAFETY

1. Never leave the unit unattended, especially if children are present.
2. Never cover the unit when it is in operation.
3. Do not use this unit for more than 20 minutes at a time.
4. Extensive use at any time could lead to excessive heating that shortens the life of this unit. Should this occur, discontinue use and allow the unit to cool before operating.
5. Never use this unit directly on swollen/inflamed areas of the skin or on areas of skin eruptions. Do not use in the presence of unexplained back pain.
6. This is a non-professional unit designed to provide soothing massage to muscles. Do not use as a substitute for medical attention.
7. Do not use while in bed or before going to sleep. The massage can create a stimulating effect and delay sleep.
8. This unit should never be used by any individual suffering from any physical ailment that would limit the user's capacity to operate the controls.
9. Extreme heat or cold may damage the unit.
10. Place the unit in a safe, cool, dry place when not in use.
11. Do not submerge the unit in liquid.

PREPARATION BEFORE USE POWER ON/OFF

1. Place S8 Shiatsu Massaging Seat Topper into a sturdy chair. You may optionally secure S8 Shiatsu Massaging Seat Topper to your chair with strap. Insert power adapter into power cord. Push until "click" sound is heard.
2. Insert power adapter plug into AC 120V 60HZ electric outlet.
3. Press on the remote to turn the unit on.
4. Press again to turn the unit off.

OVERALL MESSAGE

1. Select and combine massage programs from NECK, BACK and SEAT according to your preference.
2. The selected massage programs begin.
3. During operation, you can adjust the roller width, neck position, roller options. Activate dynamic squeeze, heat....etc. depending on the selected massage.
4. After the massage is completed, the rollers will return to the storage position.
5. Unplug its power plug from the electrical outlet when unit is not in use.

Note: The unit shuts off automatically after approximately 20 minutes.

CARE AND MAINTENANCE

- Wipe dust and dirt off the S8 Shiatsu Massaging Seat Topper with a dry, soft cloth after use.
- Keep the S8 Shiatsu Massaging Seat Topper clean and away from places of high humidity.



TROUBLESHOOTING

Problem	Possible Cause/Action
<ul style="list-style-type: none"> ▪ Frictional sound of rollers against backrest cover. ▪ Motor sound during operation. ▪ Sound of air. 	<ul style="list-style-type: none"> ▪ These sounds are the result of mechanical structure and not malfunction. ▪ This may occur during normal operation.
The S8 Shiatsu Massaging Seat Topper does not start operation.	<ul style="list-style-type: none"> ▪ Ensure that the Power is on. ▪ Ensure that the power plug is firmly connected to the electrical outlet. ▪ Ensure power adapter is firmly connected to power cord ▪ Check that the voltage at the electrical outlet is adequate. ▪ After prolonged use, Massage 1 motors may need to cool down to protect them. Please wait 30 minutes and try again.
The massage rollers stop during the massage session.	<ul style="list-style-type: none"> ▪ The roller mechanism may be stalled when subjected to excessive force. ▪ Release excessive force on the rollers.
The heated lights on the massage nodes turned off unexpectedly after prolonged use.	<ul style="list-style-type: none"> ▪ The heated lights have a built-in safety feature to prevent overheating. After prolonged use, the safety feature will turn out the lights, allowing them to cool down for approximately 5 minutes. The lights will automatically reappear when safe to operate.

SPECIFICATIONS

Power supply	AC 120V~240V
Power consumption60W
Power frequency50/60 Hz
Auto timer	20 minutes
Dynamic Squeeze™ Massage	Thighs/Seat/Waist (High, Low, Center Off)
Vibration function	Seat (High, Medium, Low)
Weight	Approx. 18 lbs
Upholstery	Synthetic leather
Accessories	Controller, Power Adapter

ONE (1) YEAR LIMITED WARRANTY

Brookstone® warrants this product against defects in materials and/or workmanship under normal use for a period of ONE (1) YEAR from the date of purchase by the original purchaser ("Warranty Period"). If a defect arises and a valid claim is received within the Warranty Period, at its option, Brookstone will either 1) repair the defect at no charge, using new or refurbished replacement parts, or 2) replace the product with a new product that is at least functionally equivalent to the original product, or 3) provide a store credit in the amount of the purchase price of the original product. A replacement product or part, including a user-installable part installed in accordance with instructions provided by Brookstone, assumes the remaining warranty of the original product. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes Brookstone's property. When a store credit is given, the original product must be returned to Brookstone and becomes Brookstone's property.

Obtaining Service: To obtain warranty service, call Brookstone Limited Warranty Service at 1-800-292-9819. Please be prepared to describe the product that needs service and the nature of the problem. A purchase receipt is required. All repairs and replacements must be authorized in advance. Service options, parts availability and response times will vary. You are responsible for delivery and the cost of delivery of the product or any parts to the authorized service center for replacement, per our instructions.

Limits and Exclusions: Coverage under this Limited Warranty is limited to the United States of America, including the District of Columbia and the U.S. Territories of Guam, Puerto Rico, and the U.S. Virgin Islands. This Limited Warranty applies only to products manufactured for Brookstone that can be identified by the "Brookstone" trademark, trade name, or logo affixed to them or their packaging. The Limited Warranty does not apply to any non-Brookstone products. Manufacturers or suppliers other than Brookstone may provide their own warranties to the purchaser,

but Brookstone, in so far as permitted by law, provides these products "as is." This warranty does not apply to: a) damage caused by failure to follow instructions relating to product's use or the installation of components; b) damage caused by accident, abuse, misuse, fire, floods, earthquake or other external causes; c) damage caused by service performed by anyone who is not a representative of Brookstone; d) accessories used in conjunction with a covered product; e) a product or part that has been modified to alter functionality or capability; f) items intended to be periodically replaced by the purchaser during the normal life of the product including, without limitation, batteries or light bulbs; g) any product sold "as is" including, without limitation, floor demonstration models and refurbished items; or h) a product that is used commercially or for a commercial purpose.

BROOKSTONE SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. TO THE EXTENT PERMITTED BY APPLICABLE LAW, BROOKSTONE DISCLAIMS ANY AND ALL STATUTORY OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND WARRANTIES AGAINST HIDDEN OR LATENT DEFECTS. IF BROOKSTONE CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES, THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED IN DURATION TO THE DURATION OF THIS EXPRESS WARRANTY.

Some states disallow the exclusion or limitation of incidental or consequential damages or how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.