 




COSTWAY

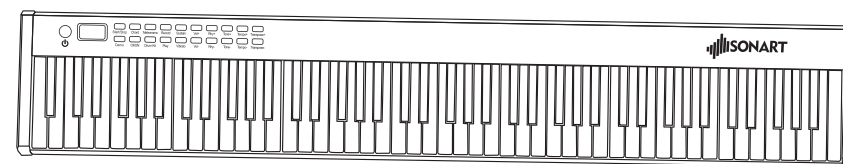

USER'S MANUAL

88-Key Electronic Keyboard MU10068

THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

Please give us a chance to make it right and do better!

Contact our friendly customer service department for help first.

Replacements for missing or damaged parts will be shipped ASAP!

Follow Costway



EN

FR

Contact Us!

Do NOT return this item.

Contact our friendly customer service department for help first.



Before You Start

Please read all instructions carefully and keep it for future reference.

WARNING

Attention: The Product is not suitable for the children under 3 years

Danger: Keep all small parts and packaging materials for this product away from babies and children, otherwise they may pose a choking hazard.

 


WARNING:
CHOKING HAZARD-Small parts.
Not for children under 3 years.

General Warnings:

- ⚠ The product must be installed and used under the supervision of an adult.
- ⚠ Read through each step carefully and follow the proper order.
- ⚠ Remove all packaging, separate and count all parts and hardware.
- ⚠ Please ensure that all parts are correctly installed, incorrect installation can lead to a danger.
- ⚠ We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
- ⚠ Ensure a secure surface during construction, and place the product always on a flat, steady and stable surface.

The following interface function diagram:

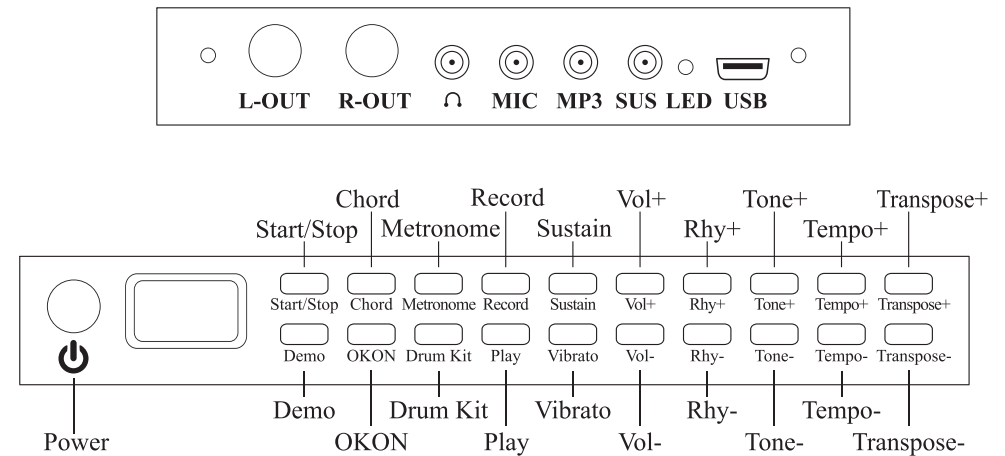

■ Charging Indicator

1. The charging indicator is red. When the piano is plugged into USB for charging, the red light will turn on. When the battery is full the green light turns on and the red light goes off.

When the power is high or full, it is normal for the charging indicator light to flash or go out after charging through USB

2. Battery: High-capacity lithium battery, the charging time is about 4h, please charge for more than 5h for the first use.

Charging adapter: 5V 1A

■ Protection Function

If the lithium battery voltage is too low(below 3.5v), the product will automatically reset or can not started. The charging reminder is: While playing the piano or music, it is automatically stop playing and restore the initial setting state.

■ **L-OUT/R-OUT:** 6.5mm professional equipment output interface, two independent L/R stereo output.



Connect active speaker or audio power amplifier and headphones, enjoy the double channel surround sound output.

Support three line earphone and external speaker, not support four line with microphone earphone. Suggest using 3.5V stereo headphone plug.

■ **MIC Function:** Fixed reverb function is added to satisfy users' desire of playing and singing at any time and anywhere.

■ **MP3 Interface:** Connect to MP3 or other external audio sources, double channel surround sound effect.

■ **SUS:** Sustain pedal, prolong the end time of the key sound.

■ **MICRO_USB:** Charging interface and MIDI connection function.

■ **MIDI Function:**

1. Connect the computer with MICRO_USB data cable, and open the corresponding software to use the MIDI function.

You can install software with MIDI transmission protocol (such as: Everyone Piano) to use with your computer.

Controlling external devices via piano

Play the keyboard, the piano will send the MIDI data to the external device through the USB interface, then you will hear the sound from the BXII and the external device.

Controlling piano through external devices

Use USB cable to connect external equipment, Select the piano as the external device's MIDI output method. The piano can be used as an external sound source.

2. Bluetooth APP connection (Refer to the following section of Bluetooth APP functions).

■ **Two built-in quality external speakers:**

The sound field effect of speakers can make the user intoxicated in the wonderful music.

■ **Sound effects:**

Two types of sound are built-in: Sustain/Vibrato.

■ **Digital tube:** Display the currently used function.

■ **Demo:** 20 Demo songs, press demo button to choose.

Number	Demo songs	Number	Demo songs
01	Ode to Joy	11	Milk Song
02	Little Star	12	A comme Amour
03	For Alice	13	Les premiers sourires de Vanessa
04	Dancing girl	14	Snowdreams
05	My Old Classmate	15	Clean sky
06	a decade	16	Edelweiss
07	Clouds Chasing the Moobn	17	Dance of fireflie
08	Come into my dream	18	My Soul
09	Bandari.Crystal.Lake	19	Ballade pour Adeline
10	Green sleeves	00	Laputa Castle in the Sky

■ **Chord:**

When playing rhythm, press the chord function and then to press the multi-fingering method within the range of keys A1-F4 #, the corresponding chord accompanying sound can be heard. Press the single finger chord fingering, the chord of single-finger will be played.

Table of Single-finger chords (example)

	M	m	7	m7
C				
C#				
D				
D#				
E				
F				
F#				
G				
G#				
A				
A#				
B				

■ **Transposet+/-:** The default is level 0, plus 6 levels, minus 6 levels.
Press the Transpose+ button to increase the knocking force of the keys;
Press the Transpose- button to reduce the knocking force of the keys.

■ **Vol +/-:** t starts at level 14, largest level is 17, minimum is 0.

■ **Tempo+/-**

The default speed is 120, the maximum can be adjusted to 300, the minimum can be reduced to 30.

Different DEMO songs show different speeds. The actual speed shall prevail.

■ **Tone+/-**

Press Tone+ or Tone- to select tone. 128 kinds of tone, please refer to the List Of Tones for details.

■ **Rhy+/-**

Press Rhy+ or Rhy- to select rhythm. 128 kinds of rhythm, please refer to the List Of Rhythms for details.

■ **OKON:**

Press the OKON button to enter the teaching mode automatically. Demo song accompaniment will play in a continues loop and wait for the user to play.
Touch any key to play the main theme of the demo song, Press the OKON button again to select the loop. Press Start/Stop button to make the demo song accompaniment stop playing.

■ **Metronome:**

Press the Metronome function to make a beat sound, and the metronome will play at the current speed. Press Start/Stop function to turn off the metronome.

■ Recording Function:

Press this button to enter the recording mode and make the sound of the metronome. At this point, press any key to start recording. The maximum number of recordings is 700.

When the recording is full, the metronome sound stops. You cannot continue to record any note. When you are recording, you can play it by pressing the "Play" button at any time.

Each time you press this button, the last memory will be cleared and the recording mode will be re-entered.

2. Press the "Play" button for the first time to play the recorded notes, and press the "Play" button for the second time to stop playing

3. Press the "Play" button to exit the recording mode.

4. If no notes have been recorded before, there is no action will occur when you press "Play" button.

■ Drum Kit

Press this button to get the drum's tone on the corresponding keys.

88 keys drum kit corresponding table

							
A 1	A # 1	B 1	C 2	C # 2	D 2	D # 2	E 2
							
F 2	F # 2	G 2	G # 2	A 2	A # 2	B 2	C 3
							
C # 3	D 3	D # 3	E 3	F 3	F # 3	G 3	G # 3
							
A 3	A # 3	B 3	C 4	C # 4	D 4	D # 4	E 4
							
F 4	F # 4	G 4	G # 4	A 4	A # 4	B 4	C 5
							
C # 5	D 5	D # 5	E 5	F 5	F # 5	G 5	G # 5
							
A 5	A # 5	B 5	C 6	C # 6	D 6	D # 6	E 6
							
F 6	F # 6	G 6	G # 6	A 6	A # 6	B 6	C 7
							
C # 7	D 7	D # 7	E 7	F 7	F # 7	G 7	G # 7
							
A 7	A # 7	B 7	C 8	C # 8	D 8	D # 8	E 8
							
F 8	F # 8	G 8	G # 8	A 8	A # 8	B 8	C 9

Bluetooth APP functions:**Phone connection****POPiano connection:**

1. Search and download POPiano APP from App store of the iPhone.
2. Open the POPiano App after turning on the bluetooth of the iPhone, select any song, and choose to start playing after entering.
3. Click on the upper right of the iPhone screen , and then you can choose: connect to the piano through: BlueTooth-Confirmed, next confirm to connect to the piano.
4. After confirming bluetooth connection, the icon is displayed as blue check mark  .

GarageBand connection:

1. Open GarageBand App
2. Turn on bluetooth on your phone.
3. Open GarageBand App and click the Setings icon in the upper right corner of the screen.
4. Connect the piano's bluetooth through the: Song Settings - Advanced - Bluetooth MIDI Devices.

Perfect Piano and PianoBar connection:

1. Download the Perfect Piano App and PianoBar.
2. Turn on bluetooth on your phone.
3. First connect the GarageBand App. When they connect successfully, then open the Perfect Piano App and PianoBar can be used directly.

Android phone connection:**POPiano connection:**

1. Search and download POPiano APP from App store of the mobile phone.
2. Turn on the bluetooth function, some phones need to turn on the phone location function.
3. Open the POPiano App to select any song, and choose to start playing after entering.

4. Click on the upper right of the mobile phone screen , and then you can choose connect to the piano through: Bluetooth - Confirmed, next - confirm to connect to the piano.
5. After confirming bluetooth connection, the icon is displayed as blue check mark  .

■ List Of Tones

0. Piano 1	20. Reed Organ	40. Violin
1. Piano 2	21. Accordion	41. Viola
2. Piano 3	22. Harmonica	42. Cello
3. Honky-Tonk Piano	23. Bandoneon	43. Contrabass
4. Rhodes Piano	24. Acoustic Guitar (nylon)	44. Tremolo StringsS
5. Chorused Piano	25. Acoustic Guitar(steel)	45. Pizzicato Strings
6. Harpsichord	26. Electric Guitar (jazz)	46. Orchestral Harp
7. Clavinet	27. Electric Guitar (clean)	47. Timpani
8. Celesta	28. Electric Guitar (muted)	48. String Ensemble 1
9. Glockenspiel	29. Overdriven Guitar	49. String Ensemble 2
10. Music Box	30. Distortion Guitar	50. SynthStrings
11. Vibraphone	31. Guitar Harmonics	51. SynthStrings 2
12. Marimba	32. Acoustic Bass	52. Choir Aahs
13. Xylophone	33. Electric Bassffinger	53. Voice Oohs
14. Tubular Bells	34. Electric Bass(pick)	54. Synth Voice
15. Santur	35. Fretless Bass	55. Orchestra Hit
16. Hammond Organ	36. Slap Bass 1	56. Trumpet
17. Percussive Organ	37. Slap Bass 2	57. Trombone
18. Rock Organ	38. Synth Bass 1	58. Tuba
19. Church Organ	39. Synth Bass 2	59. Muted Trumpet

■ List Of Tones

60. French Horn	84. Lead 5 (charang)	108. alimba
61. Brass Section	85. Lead 6 (voice)	109. Bagpipe
62. Synth Brass 1	86. Lead 7 (fifths)	110. Fiddle
63. Synth Brass 2	87. Lead8 (bass+lead)	111. Shanai
64. Soprano Sax	88. Pad 1 (new age)	112. Tinkle Bell
65. Alto Sax	89. Pad 2 (warm)	113. Agogo
66. Tenor Sax	90. Pad 3 (polysynth)	114. Steel Drums
67. Baritone Sax	91. Pad 4 (choir)	115. Woodblock
68. Oboe	92. Pad 5 (bowed)	116. Taiko Drum
69. English Horn	93. Pad 6 (metallic)	117. Melodic Tom
70. Bassoon	94. Pad 7 (halo)	118. Synth Drum
71. Clarinet	95. Pad 8 (sweep)	119. Reverse Cymbal
72. Piccolo	96. FX 1 (rain)	120. Guitar Fret Noise
73. Fute	97. FX2 (soundtrack)	121. Breath Noise
74. Recorder	98. FX 3 (crystal)	122. Seashore
75. Pan Flute	99. FX 4 (atmosphere)	123. Bird Tweet
76. Bottle Blow	100. FX5(brightness)	124. Telephone Ring
77. Skakuhachi	101. FX6(goblins)	125. Helicopter
78. Whistle	102. FX 7 (echoes)	126. Applause
79. Ocarina	103. FX 8 (sci-fi)	127. Gun shot
80. Lead 1 (square)	104. Sitar	
81. Lead 2 (sawtooth)	105. Banjo	
82. Lead 3 (calliope lead)	106. Shamisen	
83. Lead 4 (chitf lead)	107. Koto	

■ List Of Rhythms

0. 1beguineswing	24. 1discocha	48. 6rook&roll
1. 20eguin	25. 2guaracha	49. 7urban
2. 3beguine	26. 3charl	50. 1ballad
3. 1pophit	27. 1samba	51. 2jazzballad
4. 2pop	28. 2samba	52. 3C.ballad
5. 3popmalay	29. 1ubminimal	53. 4J.ballad
6. Bossanova	30. 18bit	54. 560Slowballad
7. 1disco	31. 28bit	55. 6pianoBallad
8. 2disco	32. 116bit1	56. 750sballad
9. 3Bluegrassdisco	33. 216bit2	57. Snakebase
10. 1waltzl	34. 3Ballad16T	58. 1Happyblues
11. 2wallzl	35. 4country16T	59. 20ldblues
12. 3Trueballadwaltz	36. 1Tango	60. 3bluegras
13. 4bossawaltz	37. 2tango	61. 1boodie
14. 5Easywaltz	38. 1Polka	62. 2boodie
15. 6shufflewaltz	39. 2polka	63. 3boodie
16. 7Reggaewaltz	40. 1popswing	64. 1shuffle
17. 8Rhumbawaltz	41. 2Easyswing	65. 2shuffle
18. 1march	42. 3softswing	66. 3Dreamshuifle
19. 2march	43. 1rock	67. 4countryshuffle
20. 1rhumba	44. 2rock	68. 5Quickshuffle
21. 2rhumba	45. 3rock	69. 6Heggaeshuffle
22. 1slow	46. 4Airyrock	70. 1R&B
23. 2slow	47. 5heartrock	71. 1Reggaepulse

■ List Of Rhythms

72. 2Reggae	96. 5dance2	120. 20horse2
73. 3reggae	97. 6dance3	121. 21keron
74. 1Salsa	98. rap	122. 22latin
75. 2salsa	99. 1thevillage	123. 23mambo
76. 3salsa	100. 2countryshufle	124. 24newage
77. 1tecno	101. 1eletrickeys	125. 25slowrc1
78. 2tecno	102. 2darkkeys	126. 26soul
79. 1funky	103. 3Easywalk	127. 27twist
80. 2funky	104. 4Destiny	
81. 1dixie	105. 5Comedy	
82. 2dixie	106. 6drive	
83. 1foxtrot	107. 7Liquidnova	
84. 2foxtrot	108. 8KIndustrialfolk	
85. 1R.roll	109. 9slowpure	
86. 2R.roll	110. 10simpleJam	
87. 1fastbeat	111. 11synthethix	
88. 20quickbeat	112. 12feel	
89. 3smoothbeat	113. 13Accelerate	
90. 4Squarebeat	114. 14Beachnight	
91. 5eurobeat	115. 15Irish	
92. 1Alphadance	116. 16Tarantella	
93. 2Betadance	117. 17bigband	
94. 3dreamdance	118. 18dandut	
95. 4dancei	119. 19fusion	

Welcome to visit our website and purchase our quality products!

With your inspiring rating, COSTWAY will be more consistent to offer you
EASY SHOPPING EXPERIENCE, GOOD PRODUCTS and EFFICIENT SERVICE!

US office: Fontana, California

UK office: Ipswich



 
- * Reward Points
- * Exclusive Customer Service
- * Personalized Recommendations
- * Permanent Shopping Cart
- * Order History

5 Star Rating



We would like to extend our heartfelt thanks to
all of our customers for taking time to assemble
this product and giving us valuable feedbacks.



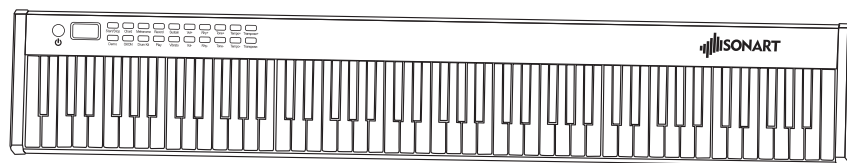

MANUEL DE L'UTILISATEUR

Piano Numérique MU10068

E MANUEL D'INSTRUCTIONS CONTIENT DES INFORMATIONS **IMPORTANTES** SUR LA SÉCURITÉ. VEUILLEZ LIRE ET CONSERVER POUR LA RÉFÉRENCE FUTURE.

VEUILLEZ NOUS DONNER UNE OCCASION DE L'AMÉLIORER ET FAIRE MIEUX!

Contactez d'abord notre service à la clientèle amical pour l'aide.
Les remplacements pour les pièces manquantes ou endommagées
seront envoyés le plus vite possible!

Suivez Costway



Contactez-nous !

Ne retournez pas cet article.

Contactez d'abord notre service à la clientèle amical pour l'aide.



Avant de Commencer

Veillez lire attentivement toutes les instructions et les conserver pour la référence ultérieure.

Avertissement

Attention : Le produit ne convient pas aux enfants de moins de 3 ans.

Danger : Gardez toutes les petites pièces et les matériaux d'emballage de ce produit hors de la portée des bébés et des enfants pour éviter un risque d'étouffement.



 
AVERTISSEMENT : RISQUE D'ÉTOUFFEMENT

– Les petites pièces. Ne convient pas
aux enfants de moins de 3 ans.

Avertissements Généraux :

- ⚠ Le produit doit être installé et utilisé sous la surveillance d'un adulte.
- ⚠ Lisez attentivement chaque étape et suivez l'ordre correct.
- ⚠ Retirez tous les emballages, séparez et comptez toutes les pièces et le matériel.
- ⚠ Veuillez vous assurer que toutes les pièces sont correctement installées, une installation incorrecte peut entraîner un danger.
- ⚠ Nous recommandons que, dans la mesure du possible, tous les articles soient assemblés à proximité de la zone dans laquelle ils seront utilisés, afin d'éviter de déplacer inutilement le produit une fois assemblé.
- ⚠ Assurez-vous que la surface est solide pendant l'assemblage et placez toujours le produit sur une surface plane et stable.

Le schéma fonctionnel d'interface

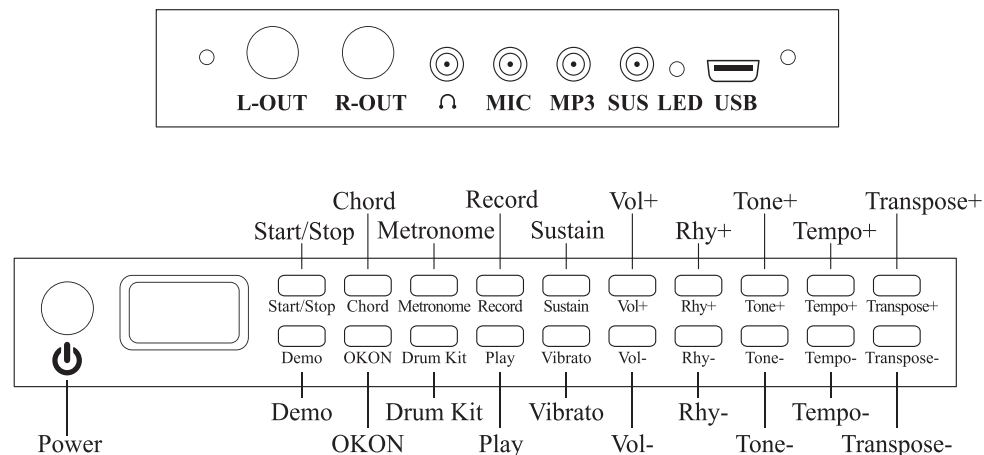

Power, Start/Stop, Demo, Chord, OKON, Metronome, Drum Kit, Record, Play, Sustain, Vibrato, Vol+, Vol-, Rhy+, Rhy-, Tone+, Tone-, Tempo+, Tempo-, Transpose+, Transpose -

■ Indicateur de charge

1. L'indicateur de charge est rouge. Lorsque le piano est branché sur USB pour le chargement, le voyant rouge s'allume. Lorsque la batterie est pleine, le voyant vert s'allume et le voyant rouge s'éteint. Lorsque la batterie est pleine, il est normal que le voyant de charge clignote ou s'éteigne après la charge via USB
2. Batterie : batterie au lithium haute capacité, le temps de charge est d'environ 4 h, veuillez charger pendant plus de 5 h pour la première fois.
3. Adaptateur de charge : 5V 1A

■ Fonction de protection :

Si la tension de la pile au lithium est trop faible (inférieure à 3,5V), le produit se réinitialise automatiquement ou ne peut pas démarrer. Veuillez le recharger à temps.

Le rappel de charge est : Pendant que vous jouez du piano ou de la musique, il s'arrête automatiquement et rétablit l'état de réglage initial.

■ **L-OUT/R-OUT:** Interface de sortie d'équipement professionnel de 6,5 mm, deux sorties stéréo L / R indépendantes.

■

Il peut être connecté à un haut-parleur actif externe ou à un amplificateur de puissance audio et à des écouteurs, et profiter de la sortie de son surround à double canal.

Il prend en charge un écouteur à trois lignes et un haut-parleur externe.

Il est conseillé d'utiliser une prise stéréo 3,5 V pour le casque.

■ **Fonction MIC:** Une fonction de réverbération fixe est ajoutée pour satisfaire le désir de l'utilisateur de jouer et de chanter à tout moment et n'importe où.

■ **Interface MP3:** Connexion au MP3 ou à d'autres sources audio externes, effet de son surround à double canal.

■ **SUS:** Pédale de sustain, prolonge la durée de fin du son des touches.

■ **MICRO_USB:** Interface de chargement et fonction de connexion MIDI.

■ MIDI:

1. Connectez l'ordinateur avec le câble de données MICRO_USB, et ouvrez le logiciel correspondant pour utiliser la fonction MIDI. Vous pouvez installer un logiciel avec un protocole de transmission MIDI (tel que : Everyone Piano) pour l'utiliser avec votre ordinateur.

Contrôle des périphériques externes via le piano

Jouez au clavier, le piano enverra les données MIDI à l'appareil externe via l'interface USB, puis vous entendrez le son du BXII et de l'appareil externe.

Contrôle de piano par les périphériques externes

Utilisez un câble USB pour connecter un équipement externe, sélectionnez le piano comme méthode de sortie MIDI de l'appareil externe. Le piano peut être utilisé comme source sonore externe.

2. Connexion de Bluetooth APP.

■ Deux haut-parleurs externes de qualité intégrés:

L'effet de champ sonore des haut-parleurs

■ Effets sonores:

Deux types de son sont intégrés: Sustain / Vibrato.

■ Tube numérique: affiche la fonction actuellement utilisée.

■ Demo: 20 Démon, appuyez sur le bouton « demo » pour choisir.

N°	Démo	N°	Démo
01	Ode to Joy	11	Milk Song
02	Little Star	12	A comme Amour
03	For Alice	13	Les premiers sourires de Vanessa
04	Dancing girl	14	Snowdreams
05	My Old Classmate	15	Clean sky
06	a decade	16	Edelweiss
07	Clouds Chasing the Moobn	17	Dance of fireflie
08	Come into my dream	18	My Soul
09	Bandari.Crystal.Lake	19	Ballade pour Adeline
10	Green sleeves	00	Laputa Castle in the Sky

■ Chord (Accord):

Lorsque vous jouez un rythme, appuyez sur la fonction d'accord, puis sur la méthode multi-doigts dans la plage des touches A1-F4#, l'accord correspondant accompagnant le son peut être entendu. Si vous appuyez sur le doigté d'accord à un seul doigt, l'accord d'un seul doigt sera joué.

Tableau des accords à un seul doigt (exemple)

	M	m	7	m7
C				
C#				
D				
D#				
E				
F				
F#				
G				
G#				
A				
A#				
B				

■ **Transpose+/-:** La valeur par défaut est de commencer au niveau est de 0, la plage est entre -6 à +6.

Appuyez sur le bouton Transpose + pour augmenter la force de frappe des touches ; ou appuyez sur le bouton Transpose - pour réduire la force de frappe des touches.

■ **Vol +/-:** Il commence au niveau 14, le plus grand niveau est 17, le minimum est 0.

■ **Tempo+/-**

La vitesse par défaut est de 120, le maximum peut être ajusté à 300, le minimum peut être réduit à 30.

Les différentes chansons de la DEMO présentent des vitesses différentes. La vitesse réelle prévaut.

■ **Tone+/-**

Appuyez sur « Tone+ » ou « Tone- » pour sélectionner le timbre. 128 types de timbre, veuillez vous référer à la pièce jointe (Liste des timbres) pour plus de détails.

■ **Rhy+/-**

Appuyez sur « Rhy+ » ou « Rhy- » pour sélectionner le rythme. 128 types de rythmes, veuillez vous référer à la pièce jointe (Liste des rythmes) pour plus de détails.

■ **OKON:**

Appuyez sur le bouton « OKON » pour passer automatiquement en mode d'enseignement. L'accompagnement de la chanson de démonstration se fait en boucle et attend que l'utilisateur la joue. Appuyez sur n'importe quelle touche pour jouer le thème principal de la chanson de démonstration. Appuyez à nouveau sur le bouton « OKON » pour sélectionner la boucle. Appuyez sur le bouton « Start/Stop » pour arrêter la lecture de l'accompagnement de la chanson de démonstration.

■ **Metronome:**

Appuyez sur la fonction « Métronome » pour faire entendre un battement, et le métronome jouera à la vitesse actuelle. Appuyez sur le bouton « Start/Stop » pour arrêter le métronome.

■ **Fonction d'enregistrement:**

1. Appuyez sur ce bouton pour entrer dans le mode d'enregistrement et faire le son du métronome. À ce stade, appuyez sur n'importe quelle touche pour commencer l'enregistrement. Le nombre maximum d'enregistrements est de 700. Lorsque l'enregistrement est complet, le son du métronome s'arrête. Vous ne pouvez pas continuer à enregistrer une note. Lorsque vous enregistrez, vous pouvez la jouer en appuyant sur le bouton « Play » à tout moment. Chaque fois que vous appuyez sur ce bouton, la dernière mémoire sera effacée et le mode d'enregistrement sera rétabli.

2. Appuyez sur le bouton « Play » une première fois pour jouer les notes enregistrées, et une deuxième fois pour arrêter la lecture.

3. Appuyez sur le bouton « Play » pour quitter le mode d'enregistrement.

4. Si aucune note n'a été enregistrée auparavant, aucune action ne sera effectuée lorsque vous appuierez sur le bouton « Play ».

■ **Batterie**

Appuyez sur ce bouton pour obtenir le timbre du tambour sur les touches correspondantes.

Tableau correspondant à la batterie de 88 touches

 A 1	 A # 1	 B 1	 C 2	 C # 2	 D 2	 D # 2	 E 2
 F 2	 F # 2	 G 2	 G # 2	 A 2	 A # 2	 B 2	 C 3
 C # 3	 D 3	 D # 3	 E 3	 F 3	 F # 3	 G 3	 G # 3
 A 3	 A # 3	 B 3	 C 4	 C # 4	 D 4	 D # 4	 E 4
 F 4	 F # 4	 G 4	 G # 4	 A 4	 A # 4	 B 4	 C 5
 C # 5	 D 5	 D # 5	 E 5	 F 5	 F # 5	 G 5	 G # 5
 A 5	 A # 5	 B 5	 C 6	 C # 6	 D 6	 D # 6	 E 6
 F 6	 F # 6	 G 6	 G # 6	 A 6	 A # 6	 B 6	 C 7
 C # 7	 D 7	 D # 7	 E 7	 F 7	 F # 7	 G 7	 G # 7
 A 7	 A # 7	 B 7	 C 8	 C # 8	 D 8	 D # 8	 E 8
 F 8	 F # 8	 G 8	 G # 8	 A 8	 A # 8	 B 8	 C 9

Fonctions pour APP Bluetooth :**Connexion d'iPhone :**

1. Recherchez et téléchargez l'APP « POPiano » sur l'App store de l'iPhone.
2. Ouvrez l'application « POPiano » après avoir allumé le Bluetooth de l'iPhone, sélectionnez une chanson et choisissez de commencer à jouer après avoir entré.
3. Cliquez en haut à droite de l'écran de l'iPhone  , et ensuite vous pouvez choisir : se connecter au piano par : BlueTooth - Confirmé, ensuite - confirmer pour se connecter au piano.
4. Après confirmation de la connexion bluetooth, l'icône est affichée comme cela  .

Connexion GarageBand:

1. Ouvrez l'application GarageBand,
2. Activez le bluetooth sur votre téléphone.
3. Ouvrez l'application GarageBand et cliquez sur l'icône Paramètres dans le coin supérieur droit de l'écran.
4. Connectez le bluetooth du piano à travers les étapes : Réglages de la chanson - Avancé - Périphériques MIDI Bluetooth.

Connexion pour Perfect Piano et PianoBar:

1. Téléchargez l'application Perfect Piano et PianoBar.
2. Activez le bluetooth sur votre téléphone.
3. Connectez d'abord l'application GarageBand. Quand il est connecté avec succès, puis ouvrez l'application Perfect Piano et PianoBar pour les utiliser directement.

Connexion de téléphonie Android:**Connexion de POPiano:**

1. Recherchez et téléchargez l'APP POPiano sur l'App store du téléphone portable.
2. Activez la fonction bluetooth, certains téléphones doivent activer la fonction de localisation du téléphone.
3. Ouvrez l'application POPiano pour sélectionner n'importe quelle chanson, et choisissez de commencer à jouer après avoir entré.

4. Cliquez en haut à droite de l'écran du téléphone portable , et ensuite vous pouvez choisir : se connecter au piano par : Bluetooth - Confirmé, ensuite - confirmer pour se connecter au piano.

5. Après confirmation de la connexion bluetooth, l'icône est affichée sous forme de coche bleue .

■ Listes de timbres

0. Piano 1	20. Reed Organ	40. Violin
1. Piano 2	21. Accordion	41. Viola
2. Piano 3	22. Harmonica	42. Cello
3. Honky-Tonk Piano	23. Bandoneon	43. Contrabass
4. Rhodes Piano	24. Acoustic Guitar (nylon)	44. Tremolo StringsS
5. Chorused Piano	25. Acoustic Guitar(steel)	45. Pizzicato Strings
6. Harpsichord	26. Electric Guitar (jazz)	46. Orchestral Harp
7. Clavinet	27. Electric Guitar (clean)	47. Timpani
8. Celesta	28. Electric Guitar (muted)	48. String Ensemble 1
9. Glockenspiel	29. Overdriven Guitar	49. String Ensemble 2
10. Music Box	30. Distortion Guitar	50. SynthStrings
11. Vibraphone	31. Guitar Harmonics	51. SynthStrings 2
12. Marimba	32. Acoustic Bass	52. Choir Aahs
13. Xylophone	33. Electric Bassffinger	53. Voice Oohs
14. Tubular Bells	34. Electric Bass(pick)	54. Synth Voice
15. Santur	35. Fretless Bass	55. Orchestra Hit
16. Hammond Organ	36. Slap Bass 1	56. Trumpet
17. Percussive Organ	37. Slap Bass 2	57. Trombone
18. Rock Organ	38. Synth Bass 1	58. Tuba
19. Church Organ	39. Synth Bass 2	59. Muted Trumpet

■ Listes de timbres

60. French Horn	84. Lead 5 (charang)	108. alimba
61. Brass Section	85. Lead 6 (voice)	109. Bagpipe
62. Synth Brass 1	86. Lead 7 (fifths)	110. Fiddle
63. Synth Brass 2	87. Lead8 (bass+lead)	111. Shanai
64. Soprano Sax	88. Pad 1 (new age)	112. Tinkle Bell
65. Alto Sax	89. Pad 2 (warm)	113. Agogo
66. Tenor Sax	90. Pad 3 (polysynth)	114. Steel Drums
67. Baritone Sax	91. Pad 4 (choir)	115. Woodblock
68. Oboe	92. Pad 5 (bowed)	116. Taiko Drum
69. English Horn	93. Pad 6 (metallic)	117. Melodic Tom
70. Bassoon	94. Pad 7 (halo)	18. Synth Drum
71. Clarinet	95. Pad 8 (sweep)	119. Reverse Cymbal
72. Piccolo	96. FX 1 (rain)	120. Guitar Fret Noise
73. Fute	97. FX2 (soundtrack)	121. Breath Noise
74. Recorder	98. FX 3 (crystal)	122. Seashore
75. Pan Flute	99. FX 4 (atmosphere)	123. Bird Tweet
76. Bottle Blow	100. FX5(brightness)	124. Telephone Ring
77. Skakuhachi	101. FX6(goblins)	125. Helicopter
78. Whistle	102. FX 7 (echoes)	126. Applause
79. Ocarina	103. FX 8 (sci-fi)	127. Gun shot
80. Lead 1 (square)	104. Sitar	
81. Lead 2 (sawtooth)	105. Banjo	
82. Lead 3 (calliope lead)	106. Shamisen	
83. Lead 4 (chitf lead)	107. Koto	

■ Listes de rythmes

0. 1beguineswing	24. 1discocha	48. 6rook&roll
1. 20eguín	25. 2guaracha	49. 7urban
2. 3beguine	26. 3charl	50. 1ballad
3. 1pophit	27. 1samba	51. 2jazzballad
4. 2pop	28. 2samba	52. 3C.ballad
5. 3popmalay	29. 1ubminimal	53. 4J.ballad
6. Bossanova	30. 18bit	54. 560Slowballad
7. 1disco	31. 28bit	55. 6pianoBallad
8. 2disco	32. 116bit1	56. 750sballad
9. 3Bluegrassdisco	33. 216bit2	57. Snakebase
10. 1waltzl	34. 3Ballad16T	58. 1Happyblues
11. 2wallzl	35. 4country16T	59. 20ldbues
12. 3Trueballadwaltz	36. 1Tango	60. 3bluegras
13. 4bossawaltz	37. 2tango	61. 1boodie
14. 5Easywaltz	38. 1Polka	62. 2boodie
15. 6shufflewaltz	39. 2polka	63. 3boodie
16. 7Reggaewaltz	40. 1popswing	64. 1shuffle
17. 8Rhumbawaltz	41. 2Easyswing	65. 2shuffle
18. 1march	42. 3softswing	66. 3Dreamshuifle
19. 2march	43. 1rock	67. 4countryshuffle
20. 1rhumba	44. 2rock	68. 5Quickshuffle
21. 2rhumba	45. 3rock	69. 6Heggaeshuffle
22. 1slow	46. 4Airyrock	70. 1R&B
23. 2slow	47. 5heartrock	71. 1Reggaepulse

■ Listes de rythmes

72. 2Reggae	96. 5dance2	120. 20horse2
73. 3reggae	97. 6dance3	121. 21keron
74. 1Salsa	98. rap	122. 22latin
75. 2salsa	99. 1thevillage	123. 23mambo
76. 3salsa	100. 2countryshufle	124. 24newage
77. 1tecno	101. 1eletrickeys	125. 25slowrc1
78. 2tecno	102. 2darkkeys	126. 26soul
79. 1funky	103. 3Easywalk	127. 27twist
80. 2funky	104. 4Destiny	
81. 1dixie	105. 5Comedy	
82. 2dixie	106. 6drive	
83. 1foxtrot	107. 7Liquidnova	
84. 2foxtrot	108. 8KIndustrialfolk	
85. 1R.roll	109. 9slowpure	
86. 2R.roll	110. 10simpleJam	
87. 1fastbeat	111. 11synthethix	
88. 20uickbeat	112. 12feel	
89. 3smoothbeat	113. 13Accelerate	
90. 4Squarebeat	114. 14Beachnight	
91. 5eurobeat	115. 15Irish	
92. 1Alphadance	116. 16Tarantella	
93. 2Betadance	117. 17bigband	
94. 3dreamdance	118. 18dandut	
95. 4dancei	119. 19fusion	

Bienvenue pour visiter notre site et acheter nos produits de qualité!

Avec votre évaluation inspirante, COSTWAY sera plus professionnel pour vous offrir une **BONNE EXPÉRIENCE D'ACHATS**, de **BONS PRODUITS** et un **SERCIVE EFFICACE** !
FR office : 26 RUE DU VERTUQUET, 59960 NEUVILLE EN FERRAIN, FRANCE



- * Points de Récompense
- * Service à la Clientèle Exclusif
- * Recommandations Personnalisées
- * Panier Permanent
- * Historique des Commandes

Évaluation de Cinq-étoiles



Nous tenons à vous présenter nos remerciements
sincères à tous nos clients qui prennent beaucoup
de temps pour assembler ce produit et nous donner
des commentaires précieux.

MERCI
😊