

User Guide

Lenovo
IDEAPAD



Lenovo

IdeaPad Slim 3i (14", 11), IdeaPad Slim 3i (15", 11), IdeaPad Slim 3i (16", 11) and IdeaPad Slim 3i (17", 11)

Read this first

Before using this documentation and the product it supports, ensure that you read and understand the following:

- [Generic Safety and Compliance Notices](#)
- *Safety and Warranty Guide*
- *Setup Guide*

First Edition (April 2026)

© Copyright Lenovo 2026.

LIMITED AND RESTRICTED RIGHTS NOTICE: If data or software is delivered pursuant to a General Services Administration "GSA" contract, use, reproduction, or disclosure is subject to restrictions set forth in Contract No. GS-35F-05925.

Contents

About this guide iii

Chapter 1. Meet your computer 1

Front view	1
Microphones	2
Infrared LED	2
Camera shutter	2
Camera	3
Camera light	3
Screen	3
Top view	4
Speakers	5
Touchpad	5
Antennas	5
Keyboard	5
Left view	6
Power connector	6
Charging light	7
USB Standard-A connector	7
HDMI connector	7
Multi-purpose USB Type-C connector	7
Combo audio jack	8
Right view	9
Novo button hole	9
Power light	10
Power button	10
SD card slot	10
USB Standard-A connector	10
Bottom view	11
Avoid constant body contact with specific hot sections	11
Air vents (intake)	11
Specifications	13
Statement on USB transfer rate	16
Operating environment	16

Chapter 2. Get started with your computer 17

Your PC and its operating system	17
Initial setup of the Windows operating system	17
Set up facial recognition (for selected models)	17
Windows Update	17
Windows recovery options	17
Connect to a network	19
Connect to a Wi-Fi network	19

Establish a wired connection	19
Use power efficiently	19
Shut down your PC	20
Put your PC into sleep mode	20
Rechargeable battery pack	20
Adjust timeout settings for saving power	21
System operation modes	22
Adjustable display refresh rate (for selected models)	22

Chapter 3. Explore your computer . . . 24

Intelligent features	24
Eye Care Mode	24
Super Resolution (for selected models)	24
Smart Noise Cancelling	24
Presence Detection (for selected models)	25
Interact with your computer	25
Hotkeys	25
The fn lock switch	26
Combination keys using the fn key	27
Combination keys using the Windows logo key	28
The Copilot key	28
Touch operations supported by Windows (for selected models)	28
Connect to an external display	30
Protect your privacy using the camera shutter	31
Unique Lenovo apps	31
Lenovo Vantage	31
Lenovo Qira (for selected models)	32
Lenovo AI Now (for selected models)	36
Smart Connect	36
The Novo Button menu	37
Open the Novo Button menu	37
The firmware of your PC	37
Firmware setup utility	37
Change settings in the firmware setup utility	38
Set passwords in the firmware setup utility	38

Chapter 4. Help and support 42

Frequently asked questions	42
What should I do if my PC won't start	42
What should I do if my PC gets stuck in sleep or hibernate mode	42
Why does my computer start automatically when I open the lid?	43

- What should I do if my PC is plugged in but not charging 43
- What should I do if the battery drains fast 43
- How to fix blue screen errors 44
- What should I do if my screen flickers 44
- Why can't I adjust the display brightness 44
- What should I do if I spill liquid on the computer 45
- What should I do if my computer stops responding 45
- What should I do if my computer responds slowly 45
- What should I do if my camera can't be launched or found 46
- What should I do if the audio does not work 46
- What should I do if my keyboard types wrong characters 46
- What should I do if my touchpad or trackpad does not respond 47
- What should I do if my touchpad or trackpad responds slowly 47
- What should I do if my fan makes unusual noise 48
- What should I do if I cannot connect to the network 48
- What should I do if I cannot connect to Bluetooth 48
- How to reset my Windows password. 49
- Where can I get the latest device drivers and firmware 50
- How do I partition my storage drive 50
- I pressed the Copilot key on my keyboard, but neither Copilot in Windows nor Windows Search opened. What could be the potential cause? 50
- What should I do if saying "Hey, Qira" does not elicit a response 50
- What should I do with Lenovo Qira transcription or translation quality issues 51

- Self-help resources 51
- Lenovo Limited Warranty 52
 - Customer Replaceable Unit Service 52
 - CRUs for your product model 53
- Lenovo Support Website 53
- Lenovo Support Community 54
- Support from the operating system manufacturer 54
- Call Lenovo 54
 - Before you contact Lenovo 54
 - Lenovo Customer Support Center 54
- Purchase additional services. 55

Chapter 5. PC and accessibility 56

- Accessibility features of the PC hardware 56
 - USB connectors for connecting assistive technology devices 56
 - Keyboard accessibility 56
 - Biometric devices 57
- Accessibility features of Windows 11 57
 - Configuring accessibility features in the Settings app 58
 - Narrator 58
 - Adjusting text sizes, applying a high-contrast theme, and using Magnifier 58
 - Sticky Keys. 59
- Accessible user documentation 59
 - Accessibility features of user documentation 59
 - Testing documentation accessibility 60

Appendix A. Important notice for Quebec consumers 61

Appendix B. Notices and trademarks. 62

About this guide

- This guide applies to Lenovo product model(s) listed below. Illustrations in this guide may look slightly different from your product model.

Model name	Machine type (MT)
<ul style="list-style-type: none"> – IdeaPad Slim 3 14IPH11 – IdeaPad Slim 3 14IPH11 1 – IdeaPad Slim 3 14IPH11 2 	83UQ
<ul style="list-style-type: none"> – IdeaPad Slim 3 15IPH11 – IdeaPad Slim 3 15IPH11 1 – IdeaPad Slim 3 15IPH11 2 – IdeaPad Slim 3 15IPH11 3 	83UR
<ul style="list-style-type: none"> – IdeaPad Slim 3 16IPH11 – IdeaPad Slim 3 16IPH11 1 – IdeaPad Slim 3 16IPH11 2 	83US
<ul style="list-style-type: none"> – IdeaPad Slim 3 14IWC11 – IdeaPad Slim 3 14IWC11 1 – IdeaPad Slim 3 14IWC11 2 	83RQ
<ul style="list-style-type: none"> – IdeaPad Slim 3 15IWC11 – IdeaPad Slim 3 15IWC11 1 – IdeaPad Slim 3 15IWC11 2 – IdeaPad Slim 3 15IWC11 3 	83RR
<ul style="list-style-type: none"> – IdeaPad Slim 3 16IWC11 – IdeaPad Slim 3 16IWC11 1 – IdeaPad Slim 3 16IWC11 2 	83RS
<ul style="list-style-type: none"> – IdeaPad Slim 3 17IWC11 – IdeaPad Slim 3 17IWC11 1 – IdeaPad Slim 3 17IWC11 2 	83VS

- For further compliance information, refer to the *Generic Safety and Compliance Notices* at https://pcsupport.lenovo.com/docs/generic_notices.
- This guide may contain information about accessories, features, and software that are not available on all models.
- This guide contains instructions that are based on the Windows operating system. These instructions are not applicable if you install and use other operating systems.
- Microsoft® makes periodic feature changes to the Windows® operating system through Windows Update. As a result, the operating system related instructions may become outdated. Refer to Microsoft resources for the latest information.
- The content of the guide is subject to change without notice. To obtain the latest version, go to <https://support.lenovo.com>.

Chapter 1. Meet your computer

Front view

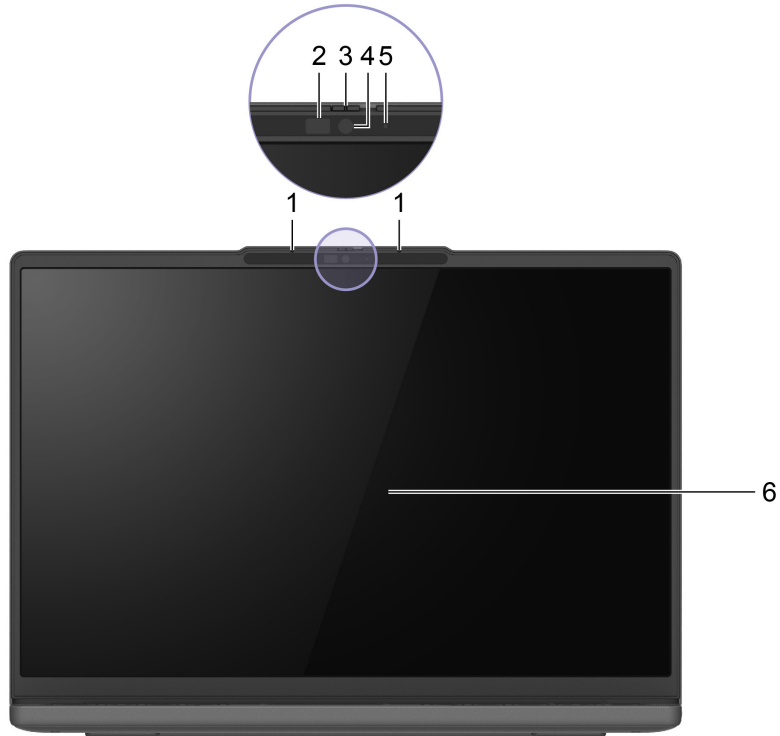


Figure 1. 14/15/16-inch models—front view

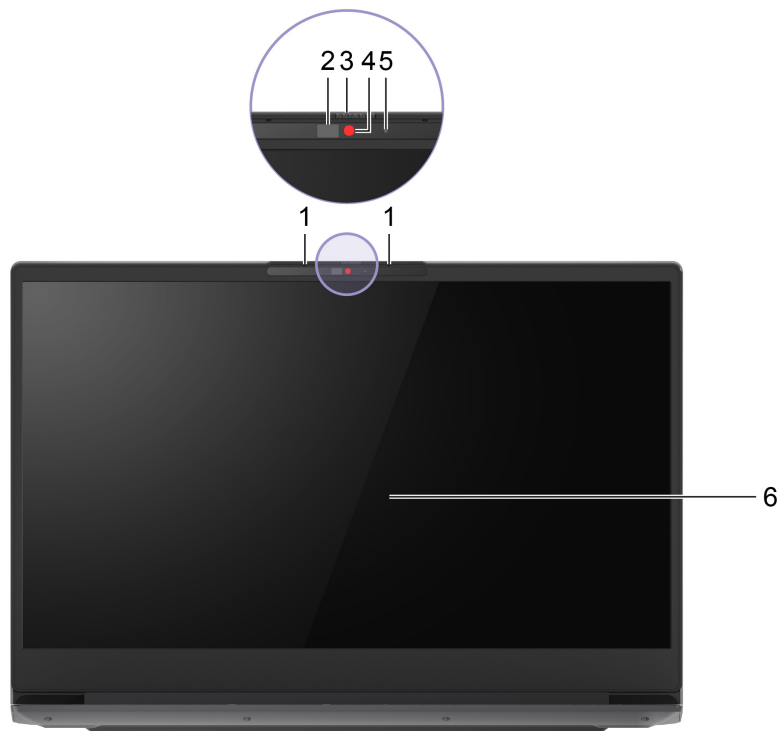


Figure 2. 17-inch models—front view

No.	Description
1	Microphones
2	Infrared LED*
3	Camera shutter
4	Camera
5	Camera light
6	Screen

* for selected models

Microphones

The microphones are the PC's built-in sound input devices. They capture your voice and ambient sound and convert them into digital form. Microphones are essential components when you use your PC for video conferencing or voice recording.

Infrared LED

The infrared LED generates and emits near-infrared waves that are received and used by a camera (or a dedicated infrared camera) for facial recognition.

Camera shutter

The camera shutter is a sliding cap that you can move to block the camera lens.

Note: The camera shutter is designed for privacy protection. When the camera lens is blocked, the camera function is disabled.

Camera

The built-in camera captures visible light and converts it to digital signals. It is used for video recording and video conferencing.

The camera for some models can also detect near-infrared waves. For those models, an IR LED is also included to emit near-infrared waves. They are used together to achieve face-based authentication.

Camera light

The camera light indicates whether the camera is activated.

Table 1. Camera light status and description

Camera light status	Description
On	The camera is activated.
Off	The camera is not activated.

Screen

The screen of the built-in display is where text, graphics, and videos are displayed.

Some models offer touch-enabled screens, which allow you to interact with your PC by intuitively touching buttons, icons, and menu items displayed on the screen. Touch-enabled screens also support multi-finger gestures.

Related topics

“Touch operations supported by Windows (for selected models)” on page 28

Top view



Figure 3. 14-inch models—top view



Figure 4. 15/16-inch models—top view



Figure 5. 17-inch models—top view

No.	Description
1	Speakers
2	Touchpad
3	Antennas
4	Keyboard

Speakers

The speakers are the PC's built-in sound output devices.

Touchpad

The touchpad is the PC's built-in pointing device, which provides the basic functionality of an external mouse. Slide your finger on the touchpad to move the pointer on the screen and tap or double-tap to select or execute a screen item.

The touchpad also supports Windows multi-finger gestures, which provide shortcuts to frequently used apps and functions.

Antennas

The antennas transmit and receive radio waves to allow data to be transferred between your PC and a Wi-Fi® network device or a Bluetooth device.

Note: The antennas are hidden inside the PC.

Keyboard

The keyboard is the primary input device for a PC, designed for typing characters. A Lenovo keyboard also includes shortcut keys that enhance productivity when interacting with the PC, applications, and the Windows operating system.

Note: Keyboard layouts vary by language and region, so your PC's keyboard may differ from the illustrations in this publication.

Left view

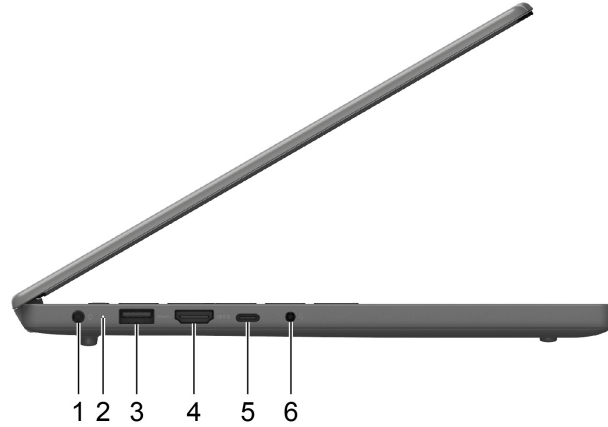


Figure 6. 14/15/16-inch models—left-side view

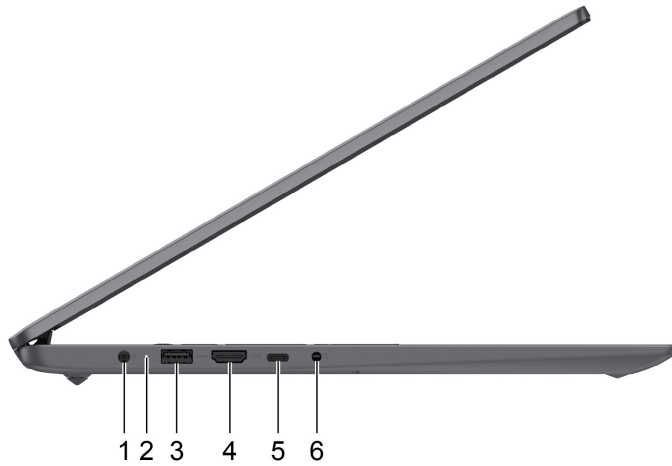


Figure 7. 17-inch models—left-side view

No.	Description
1	Power connector
2	Charging light
3	USB Standard-A connector
4	HDMI™ connector
5	Multi-purpose USB Type-C® connector
6	Combo audio jack

Power connector

This barrel connector is designed to accept the plug of the included ac power adapter and serves as the primary power input for the PC.

Note: In addition to the primary power input connector, the PC also includes a multi-purpose USB Type-C connector that supports power input. If your PC is sold without an ac power adapter, you can either reuse an

existing Lenovo-branded ac power adapter with a compatible plug or purchase a new one. Alternatively, you may use a USB Power Delivery-capable charger with the multi-purpose USB Type-C port. For information on the power levels supported by this connector and the USB Type-C connector, refer to the specifications section in this publication.

Charging light

The charging light indicates whether the PC is plugged into an electrical outlet. When the PC is plugged into an electrical outlet, the color of the light indicates whether the battery is fully charged (or will shortly be fully charged).

Table 2. Charging light statuses and descriptions

Light status	Plugged in?	Battery charge level
Off	No	/
On, amber	Yes	1%–90%
On, white	Yes	91%–100%

USB Standard-A connector

The USB Standard-A connector is used to connect storage or peripheral devices that follow the universal serial bus (USB) specification for data transfer and device interconnection.

HDMI connector

The HDMI connector is used to connect an external display device, such as a television, a projector, or a monitor.

Multi-purpose USB Type-C connector

This multi-purpose USB Type-C® connector is used to connect:

- Storage or peripheral devices that follow the universal serial bus (USB) specification for data transfer and device interconnection
- Display devices

Note: When connecting display devices, you need to use appropriate cables and adapters (if needed) according to the connection capabilities of the display device.

This multi-purpose USB Type-C connector complies with the USB Power Delivery specification. If your PC is sold without an included ac power adapter, you can reuse an existing USB Power Delivery-capable charger or purchase one separately. Refer to the specifications section in this publication for the minimum and maximum negotiable power levels supported by this connector.

Tips for selecting a certified charger

When selecting or reusing a third-party USB Type-C charger for this PC, choose a product that is safety-approved or certified.

Attention: An uncertified charger may damage your PC or pose an electrical hazard.

In many countries and regions, manufacturers or importers of electric chargers can submit their products to certification authorities or approved and recognized testing laboratories. These products typically bear a mark indicating that they meet the relevant quality and safety standards. In some countries and regions, this certification process is mandatory.

If you live in mainland China, choose a charger with the "CCC" mark. For users in many European countries, select one with the "CE" mark. For users in the United States and Canada, choose a charger listed by one of the Nationally Recognized Testing Laboratories (for example, the "UL Listed" mark). For people living in other countries or regions, consult a qualified electrical engineer to learn how to select a safety-approved electric charger.

Combo audio jack

The combo audio jack is used to connect single-plug headsets, headphones, or external speakers.

Right view

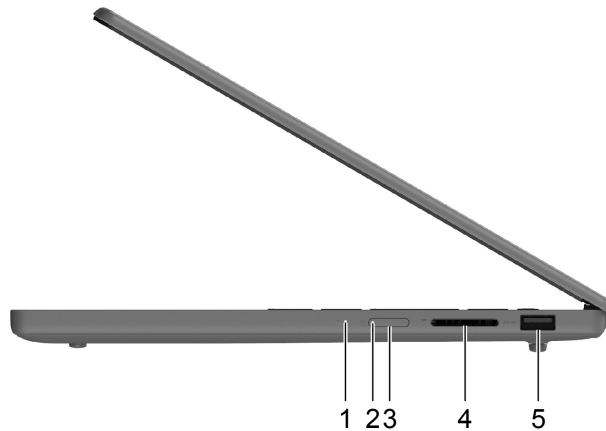


Figure 8. 14/15/16-inch models—right-side view



Figure 9. 17-inch models—right-side view

No.	Description
1	Novo button hole
2	Power light
3	Power button
4	SD card slot
5	USB Standard-A connector

Novo button hole

When the PC is powered off, you can press the Novo button to display the Novo button menu. From the menu, you can then choose to:

- Open the firmware setup utility
- Display the boot device selection menu
- Display the Windows advanced startup options page

Note: The Novo button is rarely used during normal PC operations. To prevent users from accidentally pressing it, the Novo button is placed in a recessed hole. You can use a straightened paper clip to press this button.

Power light

The power light indicates the current power state of the PC: whether it is powered on, powered off, in sleep mode, or in hibernation mode.

When the PC is powered on, this light can also indicate low battery by blinking rapidly.

Table 3. Power light status and description

Light status	Power state	Battery charge level
White (solid on)	Powered on	21%–100%
White (blinking rapidly)	Powered on	1%–20%
White (blinking slowly)	In sleep mode	/
Off	Powered off or in hibernation mode	/

Power button

Press the power button to turn on your PC.

Note: By default, on a Windows PC, pressing the power button when the PC is turned on will put the PC into sleep mode.

SD card slot

The SD card slot is used to insert an SD, SDHC, or SDXC memory card to transfer data between the memory card and your PC.

USB Standard-A connector

The USB Standard-A connector is used to connect storage or peripheral devices that follow the universal serial bus (USB) specification for data transfer and device interconnection.

Bottom view

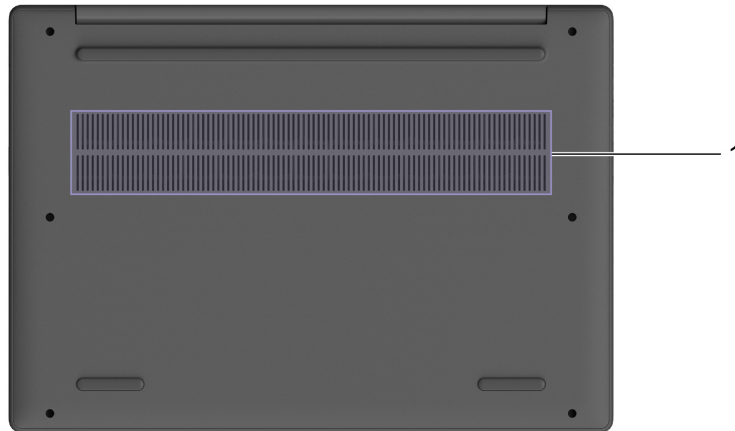


Figure 10. 14/15/16-inch models—bottom view

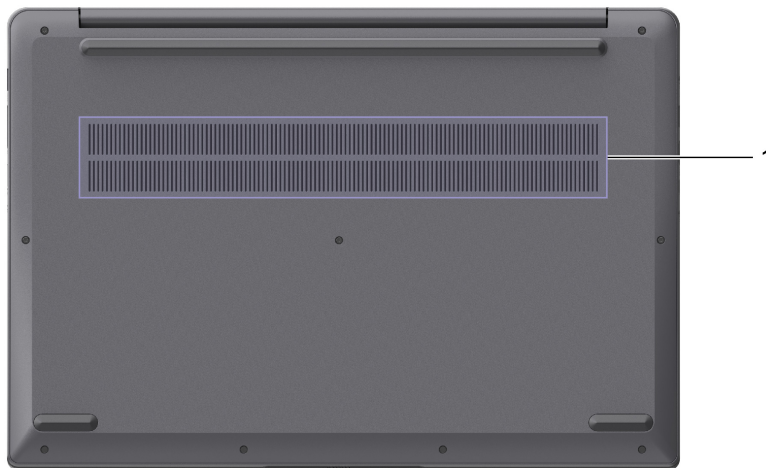


Figure 11. 17-inch models—bottom view

No.	Description
1	Air vents (intake)

Avoid constant body contact with specific hot sections

CAUTION:

When the computer is operating, it should be placed on a hard and flat surface with its bottom area not in contact with user's bare skin. Under normal operating conditions, the temperature of the bottom surface will remain within an acceptable range as defined in *IEC 62368-1*, but such temperatures can still be high enough to cause discomfort or harm to the user if directly touched for over one minute at a time. As such, it is recommended that users avoid prolonged direct contact with the bottom of the computer.

Air vents (intake)

The air vents allow air to be sucked inside of the PC to cool the internal components.

Important: When the PC is operating, do not place it on a bed, sofa, carpet, or other flexible surfaces. Otherwise, the air vents will be blocked and the PC may overheat, reducing performance or causing the PC to be unresponsive or even shut down.

Specifications

Dimensions

Item	Value or specification
Width	<ul style="list-style-type: none">• 314.4 mm (14-inch models)• 343.4 mm (15-inch models)• 360.0 mm (16-inch models)• 399.0 mm (17-inch models)
Depth	<ul style="list-style-type: none">• 224.1 mm (14-inch models)• 241.5 mm (15-inch models)• 253.0 mm (16-inch models)• 274.0 mm (17-inch models)
Thickness (plastic cover)	<ul style="list-style-type: none">• 17.9 mm (thinnest part)• 18.9 mm (thickest part)
Thickness (metal cover)	<ul style="list-style-type: none">• 16.9 mm (thinnest part)• 17.9 mm (thickest part)
Thickness	19.9 mm (17-inch models)

ac power adapter

Item	Value or specification
Input	100 V ac–240 V ac, 50 Hz–60 Hz
Output voltage	20 V
Maximum current	3.25 A
Maximum power	65 W

Note: The PC is available in certain countries or regions without an included ac power adapter.

Rechargeable battery pack

Item	Value or specification
Capacity	50 Wh / 60 Wh
Cell type	Rechargeable Li-ion Battery
Number of cells	3

Memory

Item	Value or specification
Type	DDR5
Slot quantity	1

Mass storage device

Item	Value or specification
Type	Solid-state drive (SSD) / Universal Flash Storage (UFS)*
Slot quantity	<ul style="list-style-type: none">• 1 (for IdeaPad Slim 3 14IWC11, IdeaPad Slim 3 15IWC11, IdeaPad Slim 3 16IWC11 and IdeaPad Slim 3 17IWC11)• 2 (for IdeaPad Slim 3 14IPH11, IdeaPad Slim 3 15IPH11 and IdeaPad Slim 3 16IPH11)
Slot type	M.2 (2242) (for SSD)
Slot interface	PCIe Gen4 (for SSD)

Display

Item	Value or specification
Size	<ul style="list-style-type: none">• 14.0 inches• 15.3 inches• 16.0 inches• 17.0 inches
Resolution	<ul style="list-style-type: none">• 1920 × 1200• 2560 × 1600 (15-inch OLED panel)• 1920 × 1080 (17-inch models)
Maximum refresh rate	60 Hz / 120 Hz* / 165 Hz*
Screen type	LCD / OLED

Connectors and slots

Item	Value or specification
USB Standard-A connector	<ul style="list-style-type: none"> • Quantity: 2 • Power level (output) <ul style="list-style-type: none"> – Voltage: 5 V – Maximum current: 0.9 A • Data protocol <ul style="list-style-type: none"> – USB 2.0 480 Mbps – SuperSpeed USB 5 Gbps
Multi-purpose USB Type-C connector	<ul style="list-style-type: none"> • Quantity: 1 • Power level <ul style="list-style-type: none"> – Output <ul style="list-style-type: none"> – Voltage: 5 V – Maximum current: 3 A – Input <ul style="list-style-type: none"> – Maximum: 65 W (20 V, 3.25 A) (USB Power Delivery) – USB Power Delivery <ul style="list-style-type: none"> • Minimum: 45 W (20 V, 2.25 A) • Maximum: 65 W (20 V, 3.25 A) <p>Note: The minimum power represents the lowest acceptable power level to keep the PC operational and initiate charging of the internal battery, while the maximum power allows for the fastest charging speed. Both power levels are negotiated according to the protocols specified in the USB Power Delivery Specification.</p> • Data protocol <ul style="list-style-type: none"> – USB 2.0 480 Mbps – SuperSpeed USB 5 Gbps – DisplayPort 1.2 <ul style="list-style-type: none"> – Maximum data rate: 21.6 Gbps – Maximum output resolution: 3840 × 2160 (60 Hz)
HDMI connector	<ul style="list-style-type: none"> • Data protocol: Transition minimized differential signaling (TMDS) • Maximum output resolution: 4096 × 2160 (30 Hz)
SD slot	Card type <ul style="list-style-type: none"> • Standard Capacity SD (SDSC) • High Capacity SD (SDHC) • Extended Capacity SD (SDXC)
Audio jack	<ul style="list-style-type: none"> • Diameter: 3.5 mm • Supported plug: <ul style="list-style-type: none"> – 3-pole, TRS – 4-pole, TRRS (CTIA and OMTP)

Note: Data transmission rates are presented as maximum theoretical values in compliance with applicable specifications. The actual data transmission rates depend on various factors, including the performance of the connected devices and the quality of the cables being used. These rates are typically slower than the maximum theoretical values listed.

Networking

Item	Value or specification
Wi-Fi	<ul style="list-style-type: none"> • 802.11a/b/g • 802.11n • 802.11ac • 802.11ax (Wi-Fi 6) • 802.11be (Wi-Fi 7) <p>Note: Different Wi-Fi standards may operate on different frequency bands. In some countries or regions, certain frequency bands may be prohibited for unlicensed use or may require specific conditions. Wi-Fi 6E and Wi-Fi 7 on this PC are disabled in some countries or regions in accordance with local regulations.</p>
Bluetooth	Bluetooth 5.4

* for selected models

Statement on USB transfer rate

Depending on many factors such as the processing capability of the host and peripheral devices, file attributes, and other factors related to system configuration and operating environments, the actual transfer rate using the various USB connectors on this device will vary and will be slower than the data rate listed below for each corresponding device.

USB device	Data rate (Gbit/s)
3.2 Gen 1	5

Operating environment

Maximum altitude (without pressurization)

3048 m (10 000 ft)

Temperature

- At altitudes up to 2438 m (8000 ft)
 - Operating: 5°C to 35°C (41°F to 95°F)
 - Storage: 5°C to 43°C (41°F to 109°F)
- At altitudes above 2438 m (8000 ft)
 - Maximum temperature when operating under the unpressurized condition: 31.3°C (88°F)

Note: When you charge the battery, its temperature must be no lower than 10°C (50°F).

Relative humidity

- Operating: 8% to 95% at wet-bulb temperature 23°C (73°F)
- Storage: 5% to 95% at wet-bulb temperature 27°C (81°F)

Chapter 2. Get started with your computer

Your PC and its operating system

The operating system is essential software for a PC. It manages the hardware devices of the PC, provides utility applications and user interfaces, and enables the installation of various applications for a wide range of purposes.

Your PC comes with Windows 11 pre-installed.

Initial setup of the Windows operating system

When you turn on your PC for the first time, the Windows operating system will guide you through the initial setup process. Most importantly, you will:

- Create a user account
- Connect to a wireless network that has Internet access
- Select language-related settings

Note: If you choose to set up Windows for personal use, you must either use an existing Microsoft account or create a new one. You can switch to a local account after the initial setup.

Set up facial recognition (for selected models)

Apart from text-based passwords, Windows 11 supports additional user authentication methods for PCs with the required hardware devices. For PCs equipped with a built-in infrared LED and an infrared camera, you can enable facial recognition to sign into Windows using your face.

Step 1. Select **Start** → **Settings** → **Accounts** → **Sign-in options** → **Facial recognition**.

Step 2. Select **Set up** → **Get started** and follow on-screen instructions to enroll your face.

Note: If you are using a local account to sign into Windows, you must set a password for the account before you can enable facial recognition.

Windows Update

From time to time, your PC receives update notifications. These notifications may include new features, security updates, and device drivers. While security-related updates are typically downloaded and installed automatically, you can manually control the installation of other available updates.

In Windows Update, you can view available updates, manually check for updates, and configure settings related to updates. To navigate to Windows Update, select **Settings** → **Windows Update**.

Windows recovery options

While using your PC, you may encounter various issues. Windows provides several recovery options to help restore your system to normal functionality. The table below will help you choose the right option for different situations.

Table 4. Windows recovery options

Situations	Recovery options
Windows runs much slower after you install an app.	Restore Windows from a system restore point.
Windows hasn't been functioning properly for some time.	Reset your PC while keeping your personal files.
Your PC won't start.	Utilize Windows startup repair function.
Your PC won't start and cannot be repaired using Windows startup repair function.	Use a recovery drive to restore Windows.

Reset Windows

Resetting Windows allows you to reinstall the operating system while retaining your personal files. This gives the operating system a fresh start and, in some cases, restores the PC's original performance.

- Step 1. Select **Settings** → **System** → **Recovery**.
- Step 2. Under recovery options, select **Reset PC**.
When prompted, choose between **Keep my files** and **Remove everything**.
- Step 3. Follow the on-screen instructions to complete the reset process.


Create a recovery drive

It is advisable to create a recovery drive after completing the initial setup of Windows. If you encounter a significant issue that prevents Windows from starting, you can use the recovery drive to restore the operating system on your PC.

- Step 1. Prepare an empty USB drive with a storage capacity of 32 GB or more.
- Step 2. In the search box on the taskbar, type **Create a recovery drive** and select the matched app.
- Step 3. Make sure **Back up system files to the recovery drive** checkbox is selected and select **Next**.
- Step 4. When prompted, connect the USB drive to your PC, select it, and then select **Next**.
- Step 5. Select **Create**.

Restore Windows using a recovery drive


If the Windows operating system fails to start, you can use a previously created recovery drive to restore Windows onto your PC.

- Step 1. Shut down your PC.
- Step 2. Connect the recovery drive to your PC.
- Step 3. Press the Novo button or the Lenovo Smart Key  to open the Novo button menu.
- Step 4. Select **Boot Menu**.
- Step 5. Select the USB drive as the boot device.
The PC will start to the Windows Recovery Environment.
- Step 6. Follow the on-screen instructions to restore Windows onto your PC.

Connect to a network


Connect to a Wi-Fi network

Ensure that you have a secure Wi-Fi network account and the required credentials.


- Step 1. Select the network icon  on the bottom right of your display.
- Step 2. Select an available network, and then select **Connect**.
If you want to be automatically connected to this Wi-Fi network the next time you start your computer, select **Connect automatically** before selecting **Connect**.
- Step 3. Input your credentials if necessary, and then follow the on-screen instructions to connect to the desired Wi-Fi network.

Establish a wired connection

- Step 1. Plug an Ethernet cable into the Ethernet connector on your computer.
- Step 2. Plug the other end of the Ethernet cable into a network wall jack or a router.

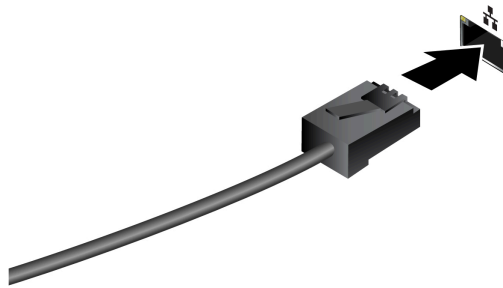

Note: If your computer does not include an Ethernet connector, you can purchase a USB-C to Ethernet adapter from Lenovo at <https://www.lenovo.com/accessories>.

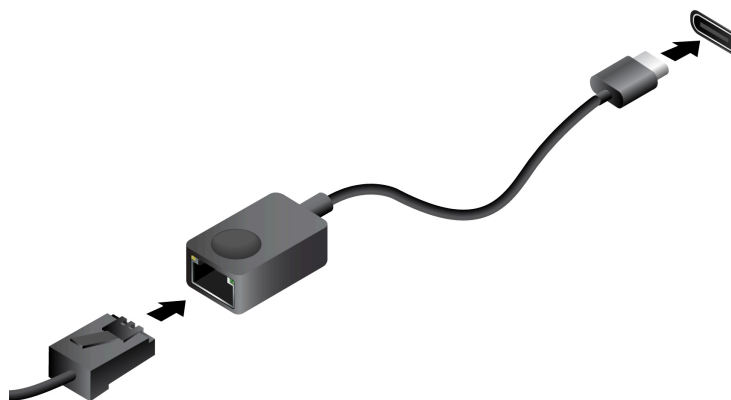

Use power efficiently

As an electronic device, your PC requires electricity to operate. The Windows operating system provides advanced power management features for the devices within your PC. You can take advantage of these features to use your PC in an energy-efficient manner.

Shut down your PC

When you have finished using your PC and do not plan to resume shortly, shut it down.

Step 1. Select **Start → Power**.

Step 2. Select **Shut down**.

Put your PC into sleep mode

If you need to stop using your PC but plan to resume shortly, you can put it into sleep mode. Your PC will wake up more quickly from sleep mode, allowing you to return to where you left off with your work.

Step 1. Select **Start → Power**.

Step 2. Select **Sleep**.

Rechargeable battery pack

Your computer includes a built-in, rechargeable battery pack that makes mobile computing a reality. When the computer is plugged into an electrical outlet, the battery charges. If you use the computer when you don't have access to an electrical outlet, the battery discharges to supply electricity that the computer system requires for operation.

You can charge the battery any time you want. The battery packs of Lenovo computers support multiple charging modes that are suitable for different power usage habits. You can switch the battery's active charging mode in Lenovo Vantage or Lenovo PC Manager.

Battery charging is also affected by its temperature. The recommended temperature range for charging the battery is between 10°C (50°F) and 35°C (95°F).

Note:

You can check the battery temperature in Lenovo Vantage.

To maximize the life of the battery, once the battery is fully charged, it must discharge to 94% or lower before it will be allowed to recharge again.

Normal mode

Normal mode is the most basic charging mode. In normal mode, it typically takes 2 to 4 hours for the battery to charge from 0% to 100%.

Conservation mode

If your computer is constantly plugged into an electrical outlet, consider switching the battery charging to conservation mode. In conservation mode, the battery will not be fully charged. Instead, the battery's charge will be kept within 75%–80%. This is beneficial to the long-term health of the battery.

Note: If you want the battery to be fully charged before bringing the computer to work, disable conservation mode by switching the battery charging to normal or rapid charge mode.

Overnight battery charging mode

Some people follow a regular pattern when using their computers. They finish their workday with the computer at a low battery charge level. They plug in their computers at night and need the battery to be fully charged the next morning so they can unplug the computer and bring it to work. These activities happen at approximately the same time each day. If this sounds like you, consider enabling overnight battery charging mode for the battery.

Overnight battery charging mode affects battery charging during the night hours, the time when you're usually asleep. When it is enabled, the computer regularly adapts its charging behavior based on observation of when you plug in the computer at night and unplug it in the morning. During the nighttime, the battery is charged to a particular range and is kept within that range for an extended period, before being further charged to 100%. Overnight battery charging mode ensures safe charging during the night and is beneficial to the long-term health of the battery.

Note: With overnight battery charging mode enabled, if you break your routine one day by unplugging the computer much earlier than usual in the morning, you may find that the battery is not fully charged.

If the battery pack of your computer supports overnight battery charging mode, it can be enabled in Lenovo Vantage or Lenovo PC Manager.

Recover full battery capacity

If your computer is constantly plugged in to an electrical outlet and the battery rarely discharges, the battery may not be charged to its full capacity even if the battery meter reports 100% charge. You can recover the battery's full charging potential simply by discharging and re-charging the battery.

Step 1. Unplug the computer and use it until the battery charge drops below 20%.

Step 2. Plug in the computer and charge the battery to 100%.

Set power button behavior

By default, pressing the power button puts the computer to sleep mode. However, you can change the power button behavior in Windows Control Panel.

Step 1. Type Control Panel in the Windows search box and then press enter. Open the control panel and view by large or small icons.

Step 2. Select the power options and then click choose what the power button does.

Adjust timeout settings for saving power

Setting appropriate timeouts for your PC to enter sleep mode and for the built-in screen to turn off is an effective method of reducing your PC's power consumption. The Windows operating system comes with default timeout settings for these two items, which you can adjust to better suit your preferences.

Step 1. Select **Start → Settings → System → Power & battery → Screen, sleep, & hibernation timeouts**.

Step 2. Adjust the settings.

For notebook PCs, you can set distinct timeouts for two usage scenarios: when the PC is plugged in and when it is running on battery power.

Default timeout settings for power saving

The operating system on your PC has the following timeouts enabled by default. You can adjust these settings to better suit your preferences.

Note: Setting appropriate timeouts is an effective method of reducing your PC's power consumption. Avoid setting excessively long timeouts to effectively disable this power-saving feature.

Table 5. Default timeout settings for the PC to enter sleep mode and the screen to turn off

Power saving action	Power state	Timeout (minute)
Turn off the screen	Plugged in	5

Table 5. Default timeout settings for the PC to enter sleep mode and the screen to turn off (continued)

Power saving action	Power state	Timeout (minute)
	On battery	3
Put the PC into sleep mode	Plugged in	5
	On battery	3

Note: To wake the PC from sleep mode, press the power button or any key on the keyboard.

System operation modes

Lenovo has preset several modes in which your computer can operate. The maximum attainable performance, power consumption, and speed limit for the heat sink fan vary between the operation modes. Consider the following conditions when you want to switch operation modes.

- The environment where you use your computer, and
- The tasks running on your computer

You can switch the operation mode in the pre-installed app Lenovo Vantage or Lenovo PC Manager. As a shortcut, you can also use the key combination **fn + Q**. Three modes are usually available for most Lenovo computers. The following table lists the operation modes and the recommended conditions for each mode.

Note: The operation modes listed in the table are descriptive and may not be the same as those displayed by the app.

Table 6. Operation modes and their recommended usage conditions

Operation mode	Recommended conditions
High Performance	<ul style="list-style-type: none"> • Your computer is plugged into an electrical outlet. • You want the best performance, and • You don't care if the fan makes a little noise.
Auto (Balance)	You plan to frequently switch between different computer tasks over a period of time.
Power Saving (Quiet)	<ul style="list-style-type: none"> • Your computer is operating on battery power, or • You want the computer to be as quiet as possible.

Note: In Auto (Balance) mode, the computer dynamically switches between High Performance mode and Power Saving (Quiet) mode depending on the tasks running on the computer.

Adjustable display refresh rate (for selected models)

Your eyes might not notice it but the content displayed on the computer screen refreshes constantly. Display refresh rate refers to the number of times per second the screen content refreshes itself and is measured in hertz (Hz).

A refresh rate of 60 Hz is adequate for most situations and is energy efficient. However, when viewing videos or playing video games, a higher refresh rate usually provides a smoother viewing experience.

The displays of some Lenovo computers support dual refresh rates. For such a computer, you can manually switch its display to work at either the higher or lower refresh rate. For Windows operation systems, the manual settings are usually found in **Settings → System → Display**.

Note: Not all displays support dual refresh rates. If you cannot find settings to change the display refresh rate, the refresh rate of the display might be fixed or cannot be manually changed.

Chapter 3. Explore your computer

Intelligent features

Your computer may be pre-installed with Lenovo Vantage or Lenovo PC Manager. Most features described here can be enabled or disabled in one of these apps. Other features may be enabled in a standalone app.

Notes:

- Software features are subject to change. Please refer to your actual product.
- You may need to complete online update to the apps for the features to take effect.

Eye Care Mode

Eye Care Mode intelligently adjusts the color temperature of the screen and can reduce the chances of developing eye fatigue or eye strain.

Super Resolution (for selected models)

By utilizing the capabilities and potentials of Intel processors, Super Resolution helps you play videos with a higher resolution than the original. It works especially well in cases where the source video has a poor resolution.

For most players, Super Resolution can be enabled or disabled in Lenovo Vantage or Lenovo PC Manager, but for some specific players, you might need to enable this feature manually.

Smart Noise Cancelling

Smart Noise Cancelling is a noise reduction feature available on some Lenovo product models. By filtering out input and output noises, Smart Noise Cancelling enhances your audio experience.



Function	Description	Remarks
Microphone noise cancelling	Voice Recognition: Your computer captures multiple voices in a way that reflects their original spatial positions.	<ul style="list-style-type: none">• This function takes effect only when built-in microphones/arrays or 3.5 mm jack wired microphones are used as the input media.• To disable this function, select Off.
	Only My Voice: This option requires you to record your voice so that your computer captures this voice only and tries to eliminate other voices. Note: To remove your voice record, select REMOVE MY VOICE .	
	Normal: Your computer focuses on the voice of the person facing it and reduces ambient sounds.	

Function	Description	Remarks
	Multiple Voices: Your computer captures multiple voices from an expanded range in front of the computer.	
Speaker noise cancelling	Your computer filters out other sounds to play only human voices.	These functions are not applicable to scenarios like listening to music and watching videos.
Meeting noise cancelling	When this function is selected, your computer uses special algorithms for noise reduction when you are using conferencing applications.	

Notes:


- Depending on its hardware, your computer may not support all the functions and options described above.
- You can view and customize this feature under **Device Settings** in Lenovo Vantage or Lenovo PC Manager.

Presence Detection (for selected models)

Presence Detection enables you to improve work efficiency by automatically waking up and logging into your computer, or dimming the display and locking the computer depending on user detection.



For selected video players, this feature will pause any video playing when you leave the computer and resume upon your return.

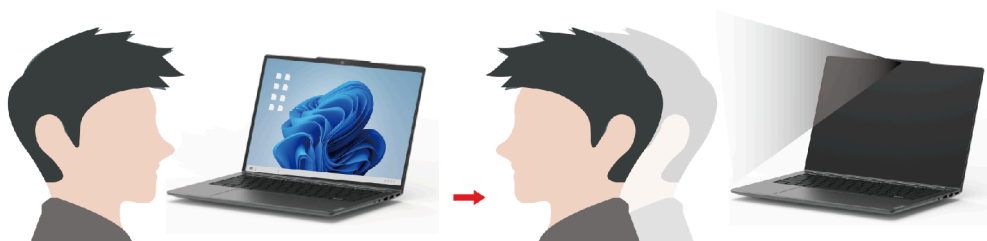

Interact with your computer

Hotkeys

Hotkeys provide quick access to frequently used settings and applications. Typically located in the top row of the keyboard, they often share keys with the function keys (F1–F12) and several other keys. Each hotkey's function is denoted by the icon printed on the key.

Table 7. Hotkey functions

Hotkey icon	Function description
🔇	Mutes/Unmutes sound.
🔊	Decreases volume.
🔊	Increases volume.
🔇	Enables/Disables the microphone.
☀️	Decreases screen brightness.
☀️	Increases screen brightness.
🖥️	Selects and sets up display devices.
✈️	Enables/Disables airplane mode.
⚙️	Opens the Settings app.
🔒	Locks the screen.
🔗	Opens the Smart Connect app.
🧮	Opens the Calculator app.
★	Opens an AI experience, an application launch panel, or a pre-installed PC management application.
🗂️	Opens the Snipping tool.
▶️	Starts/Pauses audio or video playback.
⏏️	Stops audio or video playback.
⏮️	Plays the previous audio or video in the playlist.
⏭️	Plays the next audio or video in the playlist.

The fn lock switch

The fn lock is an electronic switch that affects how you use hotkey functions. To turn it on and off, press fn + esc.

Note: The esc key is in the upper left corner of the keyboard. It has an LED that indicates the status of the fn lock switch.



Figure 12. Locations of the fn lock key and the fn key

A Lenovo keyboard usually contains hotkeys in the top row. These hotkeys share keys with the function keys (F1–F12) and other keys. For these dual-function keys, the icons or characters denoting the primary functions are printed on top of the icons and characters denoting the secondary functions.

- A: an icon or character denoting the primary function
- B: an icon or character denoting the secondary function



Figure 13. The layout of a dual-function key

Table 8. **fn lock** and dual-function keys

fn lock (esc) LED	fn lock status	Pressing the hotkey alone	Pressing the hotkey while holding down the fn key
Off	Disabled	Primary function	Secondary function
On	Enabled	Secondary function	Primary function

Combination keys using the fn key

The fn key can be used in combination with specific keys to adjust device settings or activate additional functions.

Table 9. *fn*-based key combinations


Key combination	Function
fn + Q	Switches the PC's active power mode
fn + M	Enables/disables the touchpad
fn + N	Shows key device information
fn + Space *	Adjusts keyboard backlight
fn + B	Break
fn + P	Pause
fn + S	SysRq
fn + K	ScrLk
fn + I	Insert
fn + T	PrtScr
fn + left arrow	Home
fn + right arrow	End
fn + up arrow	PgUp
fn + down arrow	PgDn

* for selected models


Combination keys using the Windows logo key

The Windows logo key is located in the lower-left corner of the keyboard. It can be used alone or in combination with specific keys to quickly change settings and access utilities within the Windows operating system. The table below lists frequently used key combinations. For a complete list of all key combinations that utilize the Windows logo key, please refer to the official Microsoft online documentation.

Table 10. Windows logo key combinations

Key or key combination	Function
Windows logo key 	Opens or closes the Start menu
+ A	Opens or closes Quick Settings
+ D	Returns to the desktop
+ E	Opens File Explorer
+ I	Opens Settings
+ L	Locks the screen
+ M	Minimizes all open windows
+ N	Opens or closes the Notification Area
+ P	Switches multi-screen modes
+ W	Opens or closes Widgets
+ ; (semicolon)	Opens the emoji panel
+ Tab	Opens or closes Task View
+ PrtSc	Takes a full-screen screenshot and saves it to a file

The Copilot key

The era of AI has arrived, and many Lenovo PCs now include a Copilot key on the keyboard. It is located either in the bottom or the top row of the keyboard and is marked with .

For Windows PCs with Copilot in Windows available and enabled, pressing the Copilot key opens Copilot in Windows. Otherwise, pressing the Copilot key opens Windows Search.

Note: Copilot in Windows may not be available in all geographical locations. In regions where Copilot in Windows is available, you may need to update your Windows operating system to version 23H2 or later through Windows Update for Copilot in Windows to become available.

Related topics


“I pressed the Copilot key on my keyboard, but neither Copilot in Windows nor Windows Search opened. What could be the potential cause?” on page 50

Touch operations supported by Windows (for selected models)

For computers with a touch-enabled screen, you can touch the screen directly with your fingers and interact with your computer in a more natural way. The following table lists frequently used touch operations that are supported by the Windows operating system.

Touch operation

Used for

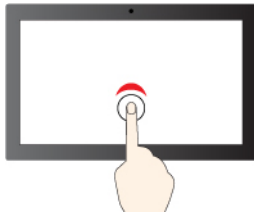

Tap

Opening apps, documents, and other functions on the taskbar or the Start menu



Tap twice quickly

Opening apps that are pinned on the desktop




Tap, hold and lift

Opening the context menu




Pinch

Zooming out

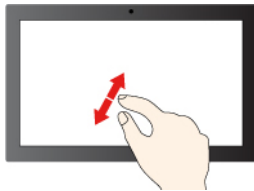


Spread

Zooming in

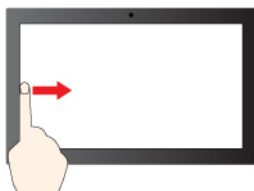

Swipe in from the left edge

Opening the widgets panel

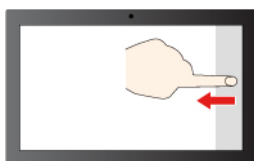

Swipe in from the right edge

Opening the notification center


The Windows operating system also supports 3- and 4-finger gestures on the screen and the touchpad. You can set them up in **Settings → Bluetooth & devices**.

Connect to an external display

Connect to a wired display

Connect your computer to the desired display with an appropriate cable.

- Step 1. Connect one end of the display cable to the HDMI connector or a multi-purpose USB Type-C connector on your computer.
- Step 2. Connect the other end of the cable to the display.

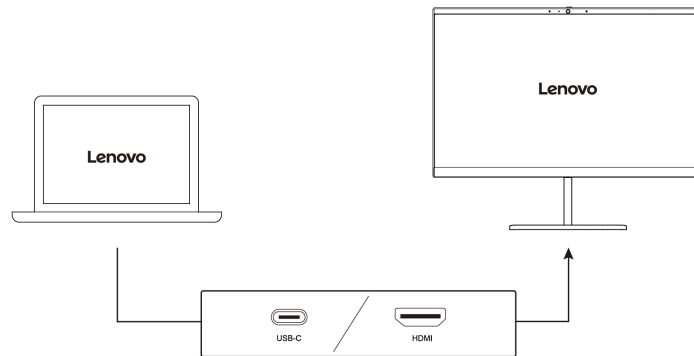

Connect to a wireless display

Ensure that:



- Both your computer and the display support Miracast® technology.
- The display is connected to the same Wi-Fi network as your computer and is discoverable.

- Step 1. Press Windows key + K.
The computer searches for wireless display devices and audio devices and lists the results.
- Step 2. Select the display you want to connect to, and then follow the on-screen instructions.

Change display settings

- Step 1. Right-click on a blank area on the desktop, and then select **Display settings**.
Your computer shows the **Display** window.
- Step 2. Select the display for which you want to change the settings.
- Step 3. Change the display settings as necessary.

Set the display mode

- Step 1. Press  or fn + .
- Step 2. Select a display mode from the list.

Turn on night light

The night light feature in Windows 11 enables users to switch to warmer color tones, reducing blue light emission to alleviate eye strain or fatigue.

Step 1. Open the quick settings menu by selecting the network, sound, or battery icons (📶 🔊 🔋) on the far right of the taskbar or by using the keyboard shortcut **Win** + **A**.

Step 2. Select the button for night light to turn it on or off.

Note: Some Windows 11 versions allow users to customize their quick settings. If the night light button is not visible, you can add it to the quick settings menu by selecting the edit button (✎).

For more tips on reducing eye strain or fatigue, visit <https://www.lenovo.com/us/en/compliance/visual-fatigue>.

Adjust color temperature

If Windows 11 night light mode is turned on, you can adjust the color temperature of the screen.

Step 1. Select **Start** → **Settings**.

Step 2. Select **System** → **Display** → **Night light settings**.

Step 3. Move the slider to adjust the color temperature.

Note: Selected Lenovo PCs are low blue-light certified. These PCs undergo testing with the night light turned on and the color temperature value set at 48 or above.

Protect your privacy using the camera shutter

The camera shutter is a mechanical component that prevents any attempt from capturing your image, thus protecting your privacy. To cover the camera lens, slide the camera shutter to the left. When you want to use the camera, slide the camera shutter to the right.

If you slide the camera shutter to the left during a video call, people on the video call will not be able to see you. If you slide the camera shutter back to the right, they will be able to see you again.



Unique Lenovo apps

Lenovo Vantage

Lenovo Vantage is a one-stop solution to help you update your computer, configure hardware settings, and access personalized support.

If your computer is pre-installed with Lenovo Vantage, type *Vantage* in the Windows search box to launch this app.

Notes:

- Available features may vary depending on your computer model.
- You can download the latest version of this app from Microsoft Store.

Lenovo Qira (for selected models)

Lenovo Qira is a personal ambient intelligence that supports live voice or text interactions and can generate outputs such as text, images, summaries, and transcriptions based on your prompts. It supports multiple processing modes, including both on-device processing and hybrid processing that may use secure cloud-based services. The mode used depends on your settings, the feature requirements, and device capabilities.

Lenovo Qira is integrated into the system and works with supported apps and services. If you use multiple Lenovo devices and sign in with the same Lenovo ID, you can enjoy a consistent experience across supported Lenovo PCs, Lenovo tablets, and Motorola smartphones. This allows you to switch between devices and maintain continuity of your tasks, subject to feature availability, permissions, and your settings.

Notes:

- Lenovo Qira is not available on all product models. On models that do not support Lenovo Qira, pressing the hotkey ☆ opens a pre-installed PC management app or an application launch panel instead.
- Using Lenovo Qira through the hotkey ☆ may require an online update.
- Lenovo Qira receives periodic updates to enhance functionality. Features may change as updates are installed.
- Lenovo Qira may generate inaccurate, incomplete or biased information. It is not a substitute for professional advice or independent judgement, and may not be suitable for some minors. You should review and verify the outputs before use. If you share unverified content, clearly label it as “generated by artificial intelligence”. For more information, refer to the [Lenovo AI Acceptable Use Policy](#).
- Lenovo Qira follows strict, regulatory-compliant consent rules and does not share your data without your explicit permission.

Upgrade Lenovo AI Now to Lenovo Qira

Depending on the manufacturing date, your PC may come pre-installed with Lenovo AI Now, the predecessor to Lenovo Qira. Lenovo Qira succeeds Lenovo AI Now by providing an updated and enhanced AI experience.

To help eligible devices upgrade smoothly, Lenovo has deployed an online upgrade program. If your PC qualifies, you will receive an on-screen upgrade prompt.



Select **Learn More** to view upgrade details and then select **Update** to begin the upgrade process.

Note: The upgrade may take some time to complete. Before starting, make sure your PC is plugged in and connected to a stable internet connection.

Launch Lenovo Qira

- Type Qira in the Windows search box and select the matching result.
- Press the dedicated hotkey marked with ☆ as a shortcut.


A prompt bar appears on your desktop.

Set up Lenovo Qira

To begin using Lenovo Qira, you must first sign in and configure your preferred interaction settings.

Sign in to Lenovo Qira

After launching the Lenovo Qira prompt bar, a sign-in webpage automatically appears. Follow the on-screen instructions to sign in with your Lenovo ID.

Alternatively, hover over the prompt bar, select the Lenovo Qira icon  to open the main window, and navigate to **Settings** → **Account**.


Configure Lenovo Qira

In the Lenovo Qira window, access the **Settings** menu to customize your preferences.

Table 11. Lenovo Qira settings

Setting	Description
Language	Choose the response language.
Launch Options	Enable or disable the wake word feature, which allows you to invoke Lenovo Qira by saying “Hey, Qira.” Note: The wake word feature requires microphone permission. To manage this, go to Start → Settings → Privacy & security → Microphone under App permissions , and ensure Lenovo Qira is allowed to access the microphone.
Voice	<ul style="list-style-type: none"> Set up the voiceprint recognition and select the voice tone. Voiceprint recognition is used only to identify your voice on the device. Select whether Lenovo Qira responds using audio or text.
Sync Data	Enable or disable data synchronization.
Processing Mode	Choose how requests are processed: <ul style="list-style-type: none"> Hybrid Mode: Uses a combination of on-device AI and cloud-based services. Certain requests may be processed using cloud services. Local Mode: Uses on-device AI only. Some features may be limited or unavailable compared to Hybrid Mode.
Personalized Answers	Select whether Lenovo Qira is allowed to access your stored personal data to provide personalized and contextual responses.
Connectors	Select the apps, services, and device defaults that Lenovo Qira is permitted to connect to.
Close Behavior	Select whether Lenovo Qira is allowed to run in the background after it is closed.
Catch Me Up	Select the apps whose notifications you want summarized.

Invoke Lenovo Qira


When Lenovo Qira is minimized as a pill  on your desktop, you can invoke it by:

- Clicking the Lenovo Qira pill on your desktop.
- Saying “Hey, Qira” when the wake word feature and microphone permission are enabled.
- Pressing the dedicated hotkey marked with ☆.

Close Lenovo Qira

You can close Lenovo Qira as follows:

Table 12. How to close Lenovo Qira

Current view	Action to close
Prompt bar	<ol style="list-style-type: none"> 1. Hover over the prompt bar and select the Minus (–) button to minimize Lenovo Qira into a pill on the desktop. 2. Right-click the pill icon  and select Close.
Full window	Select the Close (X) button in the upper-right corner.

After closing, Lenovo Qira minimizes to the system tray and remains inactive until you launch it again.

If you want to fully exit Lenovo Qira:

- Right-click the Lenovo Qira icon in the system tray and select **Exit**.
- Open Task Manager, locate Lenovo Qira, and select **End task**.

Explore Lenovo Qira

Lenovo Qira is built around the following attributes:

- Presence: Lenovo Qira is easily accessible when you choose to use it.
- Actions: Lenovo Qira can assist with tasks such as drafting emails or editing documents, subject to your review and confirmation.
- Perceptions: When enabled and permitted by you, Lenovo Qira can analyze information from supported apps or device inputs to provide contextual assistance.

Table 13. Key features of Lenovo Qira

Feature	Description
Question answering	Responds to your prompts with helpful information.
Proactive suggestions (Next Move)	Provides suggestions based on your activity, supporting you with relevant guidance while you remain control of all actions.
Content generation & editing	Helps draft, rewrite, and edit content for emails, documents, messages, and notes, subject to your review and approval before anything is shared or saved.
Local Mode	Performs select tasks using on-device AI when Local Mode is enabled or the device is offline. Some features may be limited or unavailable.
Hybrid Mode	Combines on-device AI with cloud-based services to enable additional features and capabilities when Hybrid Mode is enabled and an internet connection is available. Certain requests may be processed using cloud services.
Live interaction (Live Mode)	Supports real-time voice conversations and camera-enabled interactions when you actively invoke Lenovo Qira and grant necessary microphone or camera permissions.

Table 13. Key features of Lenovo Qira (continued)

Feature	Description
Notifications summary (Catch Me Up)	Summarizes recent notifications from the apps you choose, helping stay informed while giving you full control over which apps are included and how notifications are synced.
Live recording (Pay Attention)	Supports meetings and conversations with transcriptions, optional translations, and summaries.
AI image creation (Creator Zone)	Creates AI-generated images in Creator Zone , a dedicated creative workspace with built-in safety checks and watermarking.
Knowledge base (Knowledge)	Helps you build and access a personal knowledge library by storing and recalling information you choose to save such as notes, documents, or meeting summaries.

Note: All features operate only when enabled by you, in accordance with your device settings and permissions.

Lenovo AI Now (for selected models)

Lenovo AI Now is your personal and private AI assistant. It enables you to boost your productivity by building your personal knowledge library, helps you with inspiration, writing and summarizing, and provides troubleshooting and quick settings for your PC.

To open Lenovo AI Now, type `Lenovo AI Now` in the Windows search box and select the matched result. Alternatively, you can also press the hotkey marked with ☆ as a shortcut.

Notes:


- Lenovo AI Now is not available on all product models. For those models not pre-installed with this app, pressing the hotkey ☆ will open a quick launch panel.
- Lenovo AI Now makes periodic updates to keep improving your experience. Features may be added or modified after updates are installed.

Smart Connect

Smart Connect is an app that can easily pair your PC with your Motorola smartphone and Lenovo tablet. With Smart Connect, you can:

- Access mobile apps on your PC
- Quickly share content between connected devices
- Mirror your phone display or create a virtual phone screen on your PC
- Copy and paste across connected devices
- Use your phone or tablet camera as the PC webcam
- Control your phone or tablet using your PC keyboard and mouse
- Extend or mirror your PC display on the tablet

Note: Smart Connect makes periodic updates to keep improving your experience. Features may be added or modified after updates are installed.

To open Smart Connect, you can type `Smart Connect` in the Windows search box and then select the matched result. Alternatively, you can also press the hotkey marked with  (F11) as a shortcut.

The Novo Button menu

The Novo Button menu can be displayed before the operating system starts. From the menu, you can choose to

- Open the firmware setup utility
- Open the boot device selection menu
- Open the Windows startup options screen

Note: From the Windows startup options screen, you can then choose to

Start your computer using a recovery drive

Reset your computer

Open advanced options screen

Open the Novo Button menu

For Lenovo computers with a Novo button, you can press the button to open the Novo Button menu.

Step 1. Turn off the computer.

Step 2. Open the LCD screen and press the Novo button.

Note: Alternatively, turn off the computer. Press fn and the power button to open the Novo Button menu.

The firmware of your PC

When you power on your PC, a series of instructions are executed to initialize devices, identify a boot device, and locate a program called the bootloader. The bootloader then searches for the operating system installed on your PC and transfers control to it. Once the operating system has started, your PC is ready for use.

These instructions are stored on a flash memory chip located on the PC's system board. The flash memory chip and the instructions it contains are collectively referred to as the PC's firmware.

Firmware setup utility

Lenovo PCs typically include a setup utility in the firmware that allows you to:

- View information about your PC and its devices
- Change device settings
- Change the order of boot devices
- Set passwords for the firmware and the mass storage device

Note: You should rarely need to use the setup utility for your daily PC usage. To view device information, you can use the utilities provided by the operating system or applications provided by Lenovo (Lenovo Vantage or Lenovo PC Manager). You can use the Novo button menu to temporarily change the order of boot devices.

There are several ways to open the setup utility:

- Utilize the Advanced startup feature of the Windows operating system
- Use the Novo button menu
- Start or restart your PC and press an interrupt key (F1 or F2)

Change settings in the firmware setup utility

This section introduces the operations you can perform in the firmware setup utility.

Select boot devices

Normally, the computer starts to a boot manager loaded from the secondary storage device of the computer. Occasionally, you may need to start the computer to a program or boot manager loaded from another device or a network location. After the system firmware initializes all devices, you can press an interruption key to display the boot menu and select a desired boot device.

- Step 1. Turn on or restart the computer.
- Step 2. Press F12.
- Step 3. From the boot device menu, select a boot device to start the computer.

You can make a permanent change on boot devices in the firmware setup utility. Select the **Boot** menu; in the **EFI** section, select the desired boot device and move it to the top of the device list. Save changes and exit the setup utility for the change to take effect.

Change hotkey mode

- Step 1. Open the firmware setup utility.
- Step 2. Select **Configuration → Hotkey Mode** and press enter.
- Step 3. Change the setting to **Disabled** or **Enabled**.
- Step 4. Select **Exit → Exit Saving Changes**.

Enable or disable always-on

For some Lenovo computers with always-on connectors, the always-on function can be enabled or disabled in the firmware setup utility.

- Step 1. Open the firmware setup utility.
- Step 2. Select **Configuration → Always On USB** and press enter.
- Step 3. Change the setting to **Disabled** or **Enabled**.
- Step 4. Select **Exit → Exit Saving Changes**.

Enable or disable Flip to Start

When Flip to Start is enabled, you can turn on the computer by flipping open the screen.

- Step 1. Open the firmware setup utility.
- Step 2. Select **Configuration**.
- Step 3. Change the setting for **Flip to Start**.

Note: You may also set Flip to Start in Lenovo Vantage or Lenovo PC Manager.

Set passwords in the firmware setup utility

This section introduces the types of passwords that you can set in the firmware setup utility.

Password types

You can set various types of passwords in the firmware setup utility.

Password type	Pre-requisite	Usage
Administrator password	No	You must enter it to start the setup utility.
User password	The administrator password must be set.	You can use the user password to start the setup utility.
Master hard disk password	No	You must enter it to start the operating system.
User hard disk password	The master hard disk password must be set.	You can use the user hard disk password to start the operating system.

Notes:

- All passwords set in the setup utility consist of alphanumeric characters only.
- If you start the setup utility using the user password, you can only change a few settings.

Set administrator password

You set the administrator password to prevent unauthorized access to the firmware setup utility.

Attention: If you forget the administrator password, a Lenovo authorized service personnel cannot reset your password. You must take your computer to a Lenovo authorized service personnel to have the system board replaced. Proof of purchase is required and a fee will be charged for parts and service.

- Step 1. Open the firmware setup utility.
- Step 2. Select **Security** → **Set Administrator Password** and press enter.
- Step 3. Enter a password string that contains only letters and numbers and then press enter.
- Step 4. Enter the password again and press enter.
- Step 5. Select **Exit** → **Exit Saving Changes**.

Next time you start the computer, you must enter the administrator password to open the setup utility. If **Power on Password** is enabled, you must enter the administrator password or the user password to start the computer.

Change or remove administrator password

Only the administrator can change or remove the administrator password.

- Step 1. Open the firmware setup utility using the administrator password.
- Step 2. Select **Security** → **Set Administrator Password** and press enter.
- Step 3. Enter the current password.
- Step 4. In the **Enter New Password** text box, enter the new password.
- Step 5. In the **Confirm New Password** text box, enter the new password again.

Note: If you want to remove the password, press enter in both text boxes without entering any character.

- Step 6. Select **Exit** → **Exit Saving Changes**.

If you remove the administrator password, the user password is also removed.

Set user password

You must set the administrator password before you can set the user password.

The administrator of the setup utility might need to set a user password for use by others.

- Step 1. Open the firmware setup utility using the administrator password.
- Step 2. Select **Security → Set User Password** and press enter.
- Step 3. Enter a password string that contains only letters and numbers and then press enter. The user password must be different from the administrator password.
- Step 4. Enter the password again and press enter.
- Step 5. Select **Exit → Exit Saving Changes**.

Enable power-on password

If the administrator password has been set, you can enable power-on password to enforce greater security.

- Step 1. Open the firmware setup utility.
- Step 2. Select **Security → Power on Password** and press enter.
Note: The administrator password must be set in advance.
- Step 3. Change the setting to **Enabled**.
- Step 4. Select **Exit → Exit Saving Changes**.

If power-on password is enabled, a prompt appears on the screen every time you turn on the computer. You must enter the administrator or user password to start the computer.

Set passwords for the mass storage device

You can set a hard disk password in the setup utility to secure access to your data storage on the PC's mass storage device.

Attention: Be extremely careful when setting a hard disk password. If you forget the hard disk password, a Lenovo authorized service personnel cannot reset your password or recover data from the hard disk. You must take your computer to a Lenovo authorized service personnel to have the hard disk drive replaced. Proof of purchase is required and a fee will be charged for parts and service.

- Step 1. Open the firmware setup utility.
- Step 2. Select **Security → Set Hard Disk Password** and press enter.
Note: If you start the setup utility using the user password, you cannot set hard disk password.
- Step 3. Follow on-screen instructions to set both master and user passwords.
Note: The master and user hard disk passwords must be set at the same time.
- Step 4. Select **Exit → Exit Saving Changes**.

If the hard disk password is set, you must provide the correct password to start the operating system.

Change or remove passwords for the mass storage device

- Step 1. Open the firmware setup utility.
- Step 2. Select **Security**.
- Step 3. Change or remove the hard disk password.

To change or remove master password, select **Change Master Password** and press enter.

Note: If you remove the master hard disk password, the user hard disk password is also removed.

To change user password, select **Change User Password** and press enter.

Note: The user hard disk password cannot be removed separately.

Step 4. Select **Exit → Exit Saving Changes**.

Chapter 4. Help and support

Frequently asked questions

What should I do if my PC won't start

Try any of the following solutions to resolve the issue.

- Disconnect all external devices, including the USB drive, portable hard disk, printer, docking station, and even the mouse and keyboard, because a malfunctioning external device may prevent the PC from starting up.
- Change a compliant power adapter to connect your PC to a working electrical outlet.
- Use the Windows startup repair tool if you can still see the Windows logo.
 1. Start your PC and wait for the Windows logo (or other logos) to appear.
 2. As soon as the logo appears, press and hold the power button until the PC shuts down.
 3. Turn your PC on again and repeat the previous step.
 4. Turn your PC on again. Windows should display the **Automatic Repair** screen.
 5. Select **Advanced options** → **Startup Repair**.
- Use a restore point recorded on your PC or use a recovery drive to restore Windows.

What should I do if my PC gets stuck in sleep or hibernate mode

Try any of the following solutions to resolve the issue.

- Reset your graphics driver by pressing Windows logo key + Ctrl + Shift + B.
- Restart your PC.
 1. Press and hold the power button until your PC shuts down completely.
 2. Wait about 15 seconds.
 3. Press the power button to start your PC.
- Identify the root cause of the problem after restarting your PC.
 - Allow your desired mouse to wake up your PC.
 1. Type device manager in the Windows search box and then press enter.
 2. Under **Mice and other pointing devices**, select your desired mouse.
 3. Under **Power Management**, check **Allow this device to wake the computer**.
 4. Select **OK**.
 - Disable fast startup because it may conflict with sleep or hibernate mode.
 1. Type control panel in the Windows search box and then press enter.
 2. Select **Hardware and Sound** → **Power Options** → **Choose what the power button does** → **Change settings that are currently unavailable**.
 3. Uncheck **Turn on fast startup (recommended)**.
 4. Select **Save changes**.
 - Disable wake timers because they may cause system instability or a black screen.
 1. Type control panel in the Windows search box and then press enter.

2. Select **Hardware and Sound** → **Power Options** → **Change when the computer sleeps** → **Change advanced power settings**.
3. Select **Sleep** → **Allow wake timers**.
4. Next to **On battery** and **Plugged in**, disable wake timers.
5. Select **Apply** → **OK**.

Why does my computer start automatically when I open the lid?

Your computer may have Flip to Start enabled. Many Lenovo notebook computers include a sensor that can detect the angle at which the lid is opened. When you open the lid, the sensor can detect this behavior. If Flip to Start is enabled, the computer will respond by starting up automatically.

If you don't like this feature, you can disable it. Flip to Start can be enabled and disabled in:

- Lenovo Vantage or Lenovo PC Manager
- Firmware Setup Utility

What should I do if my PC is plugged in but not charging

Try any of the following solutions to resolve the issue.

- Make sure the power adapter is plugged in securely to both the wall outlet and your PC.
- Make sure the power adapter and the connector are not damaged. Plug the power adapter into a different wall outlet.
- Ensure that you use the power adapter with proper wattage. Low-wattage power adapters might cause a battery charging problem.
- Restart your PC.
- Roll back the battery driver.
 1. Type device manager in the Windows search box and then press enter.
 2. Under **Batteries**, select **Microsoft AC Adapter** or **Microsoft ACPI-Compliant Control Method Battery**.
 3. Select the **Driver** tab and then select **Roll Back Driver**.
 4. Select **Yes** to roll back your battery driver and restart your PC.

Note: If the **Roll Back Driver** option is unavailable, Windows does not have a previous driver to roll back to. In this scenario, you can try updating or uninstalling the battery driver in the **Driver** tab.

- Check the battery charging mode in Lenovo Vantage or Legion Space. In certain modes, charging will stop when the battery reaches a specific threshold to extend battery life.
- Update the firmware setup utility in Lenovo Vantage or Legion Space.

What should I do if the battery drains fast

Try any of the following solutions to resolve the issue.

- Avoid your PC in high heat or freezing cold because extreme temperatures affect battery performance.
- Disconnect all unnecessary external devices.
- Restrict background activities of high-power-consuming apps.
 1. Select **Settings** → **System** → **Power & battery** → **Battery usage**.
 2. Under **Battery usage per app**, you can check the high-power-consuming apps. Then limit the background activity of a desired app by selecting **More options** ⋮ → **Manage background activity**.

3. Under **Background app permissions**, select **Power optimized (recommended)** or **Never** to manage the background activity for the app.
- Disable all unnecessary startup apps.
 1. Select **Settings → Apps → Startup**.
 2. Disable all unnecessary startup apps.
 - Adjust Power & battery settings.
 1. Select **Settings → System → Power & battery**.
 2. In **Screen, sleep and hibernate timeouts → On battery**, set the **Turn my screen off after** and **Make my device sleep after** timeouts shorter.
 3. In **Power Mode → On battery**, select **Best Power Efficiency**.
 - Decrease the screen brightness using F5 (or fn + F5) or in **Settings → System → Display → Brightness**.
 - Decrease or turn off the keyboard backlight using fn + Space or fn + down arrow key.

How to fix blue screen errors

1. Restart your PC.
2. Type get help in the Windows search box and then press enter.
3. In the search box of the Get Help app, type troubleshoot BSOD error.
4. Follow the guided walkthrough.

What should I do if my screen flickers

Try any of the following solutions to resolve the issue.

- Reset your graphics driver by pressing Windows logo key + Ctrl + Shift + B.
- Restart your PC.
- Check whether Task Manager flickers by pressing Ctrl + Alt + Delete or Ctrl + Shift + Esc.
 - If Task Manager also flickers, roll back your display driver.
 1. Type device manager in the Windows search box and then press enter.
 2. Under **Display adapters**, select a display adapter.
 3. Select the **Driver** tab and then select **Roll Back Driver**.
 4. Select **Yes** to roll back your display driver and restart your PC.

Note: If the **Roll Back Driver** option is unavailable, Windows does not have a previous driver to roll back to. In this scenario, you can try updating or uninstalling your display driver in the **Driver** tab.
 - If Task Manager does not flicker, update or uninstall incompatible apps that are probably causing the problem.
 1. Keep all apps updated from the Microsoft Store or the manufacturer's site.
 2. Check whether the screen flickers in a specific app. If yes, uninstall the app.

Why can't I adjust the display brightness

If you are unable to adjust the display brightness, it may be due to adaptive brightness being enabled or an outdated display driver. You can try the following solutions to troubleshoot and fix the issue:

- Disable adaptive brightness:
 1. Go to **Start → Settings → System → Display**.

2. Under **Brightness**, select the switch for **Change brightness automatically when lighting changes** to turn it off.
 3. Under **Brightness**, set the **Change brightness based on content** option to **Off**.
- Update the display driver:
 1. Type Device Manager in the Windows search box and then press enter.
 2. Select the arrow icon > next to **Display adapters** to expand the section.
 3. Right-click your display adapter, select **Update driver**, and follow the on-screen instructions.

What should I do if I spill liquid on the computer

1. Carefully unplug the ac power adapter and turn off the computer immediately. The more quickly you stop the current from passing through the computer the more likely you will reduce damage from short circuits.

Attention: Although you might lose some data or work by turning off the computer immediately, leaving the computer on might make your computer unusable.

2. Wait until you are certain that all the liquid is dry before turning on your computer.

CAUTION:

Do not try to drain out the liquid by turning over the computer. If your computer has keyboard drainage holes on the bottom, the liquid will be drained out through the holes.

What should I do if my computer stops responding

Press and hold the power button until the computer turns off. Then restart the computer.

What should I do if my computer responds slowly

Try the following solutions to troubleshoot and fix the problem:

- Restart your computer.
- Delete temporary files and free up more drive space on your computer. For details, go to https://support.microsoft.com/disk_cleanup.
- Remove unnecessary programs from the startup programs:
 1. Open the **Start** menu, and then select **Settings** → **Apps** → **Startup**.
 2. In the **Startup** section, turn off the switch of programs that are not necessary to start automatically when you log in to Windows.
- Uninstall unnecessary or unused software.
- Scan for viruses and malware using the anti-virus software that is installed on your computer.
- Update the Windows operating system.

Get the latest updates from the Windows Update. For details, go to https://support.microsoft.com/windows_update.
- Recover your Windows operating system.

Depending on your specific situation, you can choose from different recovery options. For details, go to https://support.microsoft.com/windows_recovery.
- Repair missing or corrupted system files using the System File Checker tool. For details, go to https://support.microsoft.com/system_file_checker.

What should I do if my camera can't be launched or found

Try the following solutions to troubleshoot and fix the issue:

- Ensure that your camera is not disconnected or covered:
 - If you are using an external camera, ensure that you have connected it to a working USB connector on your computer.
 - If you are using an integrated camera, slide the camera shutter or camera switch to the on position.
- If you are using an integrated camera, it might be disabled. Go to **Start** menu, and select **Settings** → **Bluetooth & devices** → **Camera** to enable the integrated camera.
- The apps you are using might not have access to your camera. To authorize access to your camera:
 1. Open the **Start** menu, and select **Settings** → **Privacy & security** → **Camera**.
 2. Turn on **Camera access** switch and **Let apps access your camera** switch.
- Your antivirus software settings might block access to your camera. Go to your antivirus software settings and unblock the access.
- Your camera driver might be outdated. To update the camera driver:
 1. Type Device Manager in the Windows search box and then press enter.
 2. Select **Device Manager** from the list of results. The Device Manager window opens.
 3. Select arrow icon > next to **Camera** to expand the section.
 4. Right-click the camera that you would like to update.
 5. Select **Update driver** and follow the on-screen instructions.
- Run the automated camera troubleshooter in the Get Help app:
 1. Open the **Start** menu, and select **Settings** → **Privacy & security** → **Camera**.
 2. Scroll down to the bottom. Select **Get help** and follow the on-screen instructions.

What should I do if the audio does not work

If you encounter any audio problems, such as no audio or malfunctioning audio, try the following solutions to troubleshoot and fix the issue:

- Go to **Start** → **Settings** → **System** → **Sound** to verify that the sound output or input devices are selected correctly, and the volume is properly set.
- Run the audio troubleshooter:
 1. Go to **Start** → **Settings** → **System** → **Sound**.
 2. Under **Advanced**, find **Troubleshoot common sound problems**, select **Output devices** or **Input devices**, and follow the on-screen instructions to troubleshoot and fix the problem.

For more solutions to audio problems, go to <https://support.lenovo.com/solutions/ht501860>.

What should I do if my keyboard types wrong characters


- Ensure that the keyboard layout settings are correct. Take the following steps:
 1. Go to **Settings** → **Time & language** → **Language & region**.
 2. Under **Preferred languages**, select the three horizontal dots next to your primary language preference and select **Language options**.
 3. Under **Installed keyboards**, check the keyboard layout and add the corresponding keyboard if you're not using the right one.

- Sometimes the keyboard types wrong characters because you may have enabled the feature of auto-correcting misspelled words. Take the following steps to disable this feature:
 1. Go to **Settings → Time & language → Typing**.
 2. Select the switch for **Autocorrect misspelled words** to turn it off.
- Ensure that the keyboard driver is in good status. Take the following steps:
 1. Type Device Manager in the Windows search box and then press enter.
 2. Select **Device Manager** from the list of results. The Device Manager window opens.
 3. Select arrow icon > next to **Keyboard** to expand the section.
 4. Double-click the keyboard that is not working and check the status.
 5. If it is not working properly, select **Driver** from the tabs on the top and select **Uninstall device** to uninstall the device.
 6. Apply Windows Update to install the latest driver automatically.

What should I do if my touchpad or trackpad does not respond

If your touchpad does not respond, it might be because you have disabled the touchpad or your touchpad driver is out-of-date or malfunctioning. To solve the problem, you can try the following solutions.

- Enable the touchpad:
 1. Go to **Start → Settings → Bluetooth & devices → Touchpad**.
 2. Turn on the **Touchpad** toggle.

Note: Alternatively, you can also press the touchpad hotkey  or the key combination fn+M to enable or disable the touchpad.
- Update the touchpad driver:
 1. Type Device Manager in the Windows search box and then press enter.
 2. Select the arrow icon > next to **Human Interface Devices** to expand the section.
 3. Right-click the touchpad, select **Update driver**, and follow the on-screen instructions.
- If a touchpad problem occurs after a recent driver update, follow the instructions below to roll back to the previously installed driver:
 1. Type Device Manager in the Windows search box and then press enter.
 2. Select the arrow icon > next to **Human Interface Devices** to expand the section.
 3. Right-click the touchpad, and select **Properties**.
 4. Under **Driver**, select **Roll Back Driver** and follow the on-screen instructions.

What should I do if my touchpad or trackpad responds slowly

If your touchpad is not responding as quickly or accurately as you expect, you can try the following solutions.

- Ensure the touchpad surface is clean, dry, and free from dirt or oils. Gently clean it with a soft, lint-free cloth.
- Disconnect any external mouse, keyboard or other USB devices. A faulty peripheral can sometimes cause cursor lag.
- Go to **Start → Settings → Bluetooth & devices → Touchpad** and then adjust the cursor speed.
- Update the touchpad driver:
 1. Type Device Manager in the Windows search box and then press enter.
 2. Select the arrow icon > next to **Human Interface Devices** to expand the section.

3. Right-click **HID-compliant touch pad**, select **Update driver**, and follow the on-screen instructions.





What should I do if my fan makes unusual noise

If your fan makes unusual noise, you can try the following solutions.

- Terminate power-consuming applications or processes that are not in use to reduce fan noise:
 1. Type Task Manager in the Windows search box and press enter.
 2. Terminate power-consuming applications or processes that are not in use.
- Adjust your computer operation mode in the pre-installed app Lenovo Vantage or Lenovo PC Manager or Lenovo Baiying or Legion Space. As a shortcut, you can also use the key combination fn+Q. For details, see "System operation modes" in this *User Guide*.
- Update the operating system or device drivers to the latest version.


 

What should I do if I cannot connect to the network



If you're unable to access email, browse the web, or stream music, it's likely you're not connected to your network and can't access the internet. To solve the problem, you can try the following solutions.

- Check your network connection status:
 1. Select the quick setting area    on the right side of the side bar.
 2. Make sure that Wi-Fi is turned on.
 3. Check if your network name shows **Connected** below it. If it displays a status other than **Connected**, select a Wi-Fi network you recognize from the list of available networks. Then, click on the network and attempt to connect.
- Check Airplane mode:
 1. Select **Start** → **Settings** → **Network & Internet** → **Airplane mode**.
 2. Ensure Airplane mode is turned off.
- Run automated diagnostics process:
 1. Right-click on the network icon  on the right side of the task bar.
 2. Select **Diagnose network problems** and then follow the on-screen instructions.
- Forget and reconnect to the Wi-Fi network:
 1. Select **Start** → **Settings** → **Network & Internet** → **Wi-Fi** → **Manage known networks**.
 2. Select your Wi-Fi network and then select **Forget**.
 3. Reconnect to the network by selecting it and entering the password.
- Restart your modem and wireless router.

What should I do if I cannot connect to Bluetooth

If you cannot connect to Bluetooth, try the following solutions one by one.

- Ensure Bluetooth is supported and enabled on both your computer and your Bluetooth device. To turn on Bluetooth on your computer, take the following steps:
 1. Select the quick settings area    on the right side of the taskbar.
 2. In the Bluetooth quick setting, ensure that Bluetooth is turned on. If not, select the Bluetooth icon to turn it on.

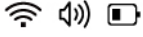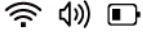- Restart your Bluetooth device.
- Ensure that your Bluetooth device is charged or has enough power.
- Ensure that your Bluetooth device is placed within the required Bluetooth connection distance range of your computer.
- Ensure that airplane mode is turned off on your computer. Take the following steps:
 1. Select the quick settings area  on the right side of the taskbar.
 2. In the Airplane mode quick setting, ensure that Airplane mode is turned off. If not, select the Airplane mode icon to turn it off.
- Ensure that your Bluetooth device is not too close to other USB devices that are connected to your computer. Unshielded USB devices might interfere with Bluetooth connections.
- Remove your Bluetooth device, and then add it again:
 1. Select **Start → Settings → Bluetooth & devices → Devices**.
 2. Select **More options** of the Bluetooth device you are having the problem with.
 3. Select **Remove device** to remove the Bluetooth device.
 4. Select the quick settings area  on the right side of the taskbar.

Note: Ensure that the Bluetooth on both your computer and the Bluetooth device is turned on. Ensure that the device is discoverable.
 5. Select **Manage Bluetooth devices** (>) on the Bluetooth quick setting to expand the section.
 6. Select the device when it is displayed on the **New devices** list, and then follow the on-screen instructions.
- Run the Bluetooth troubleshooter:
 1. Select **Start → Settings → System → Troubleshoot → Other troubleshooters**.
 2. Locate the Bluetooth section, select **Run** and then follow the on-screen instructions.
- Uninstall the driver of the Bluetooth adapter. Windows will automatically install the latest driver.
 1. Type Device Manager in the Windows search box.
 2. Select **Device Manager** from the list of results. The Device Manager window opens.
 3. Select the arrow icon > next to **Bluetooth** to expand the section.
 4. Right-click the Bluetooth device you are having problem with, and then select **Uninstall device**.
 5. Confirm that you want to uninstall this device from your system in the Uninstall Device window, and then select **Uninstall**.
 6. After the driver is uninstalled, restart your computer. Windows will automatically install the latest driver.
 7. If Windows does not reinstall the driver automatically, open device manager and select **Scan for hardware changes** on the tool bar (the magnifying glass icon).

How to reset my Windows password

If you have forgotten the password for your Windows account, you can try the following solutions.

- If you sign in to Windows with an email address, you have a Microsoft Account. You can reset your password online:
 1. Go to the Microsoft password reset page from any other device.
 2. Enter your Microsoft email address and follow the on-screen instructions.

3. You will be asked to verify your identity using a security code sent to your alternate email address or phone number.
4. Once reset, use your new password to sign in to your laptop.

Note: An internet connection is required on your laptop for this to work.

- If you sign in with a username that does not use an email, you have a local account. Do the following to reset your password:

1. Use a password reset hint:

On the Windows sign-in screen, select **Sign-in options** and then enter your password. If you see a **Password hint** displayed below the password field, it may help you remember your password.

Note: This feature is only available if you set up the hint in advance. You can see the option to set up a password hint when you create a local account password.

2. Use a previously created password reset disk:

If you have created a password reset disk, you can connect it to a USB-compatible connector on your computer and then follow the on-screen instructions to reset your password.

Where can I get the latest device drivers and firmware

- Lenovo Vantage or Lenovo PC Manager
- Lenovo Support Web site at <https://support.lenovo.com>

How do I partition my storage drive

Refer to <https://support.lenovo.com/solutions/ht503851>.

I pressed the Copilot key on my keyboard, but neither Copilot in Windows nor Windows Search opened. What could be the potential cause?

Your Windows operating system version is not up to date and does not include the necessary software components. Update your Windows operating system to version 23H2 or later using Windows Update and then try again.

Note: The Version 23H2 update may not be immediately available for your PC. You may need to periodically open Windows Update and manually check for updates to install the 23H2 update when it becomes available for your PC.

What should I do if saying “Hey, Qira” does not elicit a response

Try any of the following solutions to resolve the issue.

- In Lenovo Qira window, go to **Settings → Launch Options**, and ensure the wake word feature is enabled.
- Ensure your microphone is working properly and not muted.
- Make sure the volume on your PC is turned up.
- Exit and restart Lenovo Qira.
- In Windows Settings, go to **Start → Settings → Privacy & security → Microphone** under **App permissions**, and check if Lenovo Qira is permitted to access the microphone.
- Confirm you are using the latest version of Lenovo Qira.
- Restart your PC.

- Ensure that no other apps are using the microphone at the same time, as this may prevent Lenovo Qira from responding.
- Navigate to **Settings** → **Feedback** for assistance within the Lenovo Qira app.

If the issue persists, consult Lenovo support resources or forums for further assistance.

What should I do with Lenovo Qira transcription or translation quality issues

Try any of the following solutions to resolve the issue.

- Ensure the audio input is clear. Background noise may affect the accuracy.
- Keep your PC stable during live interaction.
- Confirm you are using the latest version of Lenovo Qira.
- Navigate to **Settings** → **Feedback** for assistance within the Lenovo Qira app.

If the issue persists, consult Lenovo support resources or forums for further assistance.

Self-help resources

Use the following self-help resources to learn more about the computer and troubleshoot problems.

Resources	How to access?
Troubleshooting and frequently asked questions	<ul style="list-style-type: none"> • https://www.lenovo.com/tips • https://forums.lenovo.com
Accessibility information	https://www.lenovo.com/accessibility
Reset or restore Windows	<ul style="list-style-type: none"> • Use Lenovo recovery options. <ol style="list-style-type: none"> 1. Go to https://support.lenovo.com/HowToCreateLenovoRecovery. 2. Follow the on-screen instructions. • Use Windows recovery options. <ol style="list-style-type: none"> 1. Go to https://pcsupport.lenovo.com. 2. Detect your computer or manually select your computer model. 3. Select Troubleshoot & Diagnose and follow the on-screen instructions.
Use Legion Space or Lenovo PC Manager to:	
<ul style="list-style-type: none"> • Download and install the latest drivers and firmware. • Configure hardware settings. • Diagnose computer hardware problems. • Check the computer warranty status. 	Use Windows Search.
Product documentation:	
<ul style="list-style-type: none"> • Generic Safety and Compliance Notices • <i>Safety and Warranty Guide</i> • <i>Setup Guide</i> • This <i>User Guide</i> • <i>Regulatory Notice</i> 	<ol style="list-style-type: none"> 1. Go to https://support.lenovo.com. 2. Detect your computer or select computer model manually. 3. Select Guides & Manuals and filter out the documentation you want.

Resources	How to access?
<p>Lenovo Support Web site with the latest support information of the following:</p> <ul style="list-style-type: none"> • Drivers and software • Diagnostic solutions • Product and service warranty • Product and parts details • Knowledge base and frequently asked questions 	<p>Visit https://support.lenovo.com</p>
<p>Windows help information</p>	<ul style="list-style-type: none"> • Use Get Help or Tips. • Use Windows Search. • Microsoft support Web site: https://support.microsoft.com

Lenovo Limited Warranty

Lenovo PC products come with a limited warranty. The general terms and conditions, along with country- or region-specific warranty provisions, are detailed in the [Lenovo Limited Warranty](#) document. If you experience issues during the warranty period due to defects in materials or workmanship, you can contact Lenovo to receive warranty service, which is available through one of the following service types.

- Customer Replaceable Unit (CRU) Service
- On-site Service
- Courier or Depot Service
- Customer Carry-in Service
- Mail-in Service
- Customer Two-Way Mail-in Service

Note: Not all service types are available for every PC model and availability varies by geographic location.

Customer Replaceable Unit Service

Customer Replaceable Unit Service is a type of warranty service offered by Lenovo. One or more components of a Lenovo PC may be designated by Lenovo as Customer Replaceable Units (CRUs) based on their ease of replacement. During the warranty period, if a part designated by Lenovo as a Customer Replaceable Unit becomes defective, and if this service is available for your model and geographic location, the warranty service may be performed using this service type.

If you intend to install a CRU, Lenovo will ship the CRU to you. You might be required to return the defective part that is replaced by the CRU. When return is required: (1) return instructions, a prepaid shipping label, and a container will be included with the replacement CRU; and (2) you might be charged for the replacement CRU if Lenovo does not receive the defective CRU within thirty (30) days of your receipt of the replacement CRU. For full details, see the [Lenovo Limited Warranty](#) document.

A Lenovo computer may contain the following types of CRUs:

CRU type

Self-service CRU

Description

Parts that can be installed or replaced easily by customer themselves or by trained service technicians at an additional cost.

Optional-service CRU

Parts that can be installed or replaced by customers with a greater skill level. Trained service technicians can also provide service to install or replace the parts under the type of warranty designated for the customer's machine.

CRUs for your product model

The table below lists the CRUs and CRU types that are defined for your product model.

Note: Laws and regulations in certain countries or regions are enacted to protect customers' rights to independently service a product both during and after the warranty period. The designation of CRUs for your product model is intended solely for performing warranty service and does not affect customers' statutory rights. Parts not classified as CRUs are not eligible for CRU service but may still be replaceable by customers in accordance with applicable laws and regulations.

Part	Self-service CRU	Optional-service CRU
Power cord*	X	
ac power adapter*	X	

* for selected models

Notes:

- Some models come with a wall-mounted ac power adapter and do not include a power cord.
- CRU replacement instruction is provided in one or more of the following publications and are available from Lenovo at any time upon your request.
 - the product *User Guide*
 - the printed publications that came with the product
- Replacement of any parts not listed above, including the built-in rechargeable battery, should be done by a qualified repair technician or by ensuring that you carefully follow all instructions provided by Lenovo. You can also find Lenovo-authorized repair facilities by going to <https://support.lenovo.com/partnerlocation> for more information.

Lenovo Support Website

The [Lenovo Support Website](#) offers tools and resources that allow you to check your warranty status, purchase parts and services, and troubleshoot issues independently. It also provides links to access additional help and support from Lenovo.

To access tools and resources relevant to your PC product, select **PC** from the product categories on the support homepage. Then, navigate to your product model's support page by entering the product name, choosing from a list of models, or allowing the website to automatically detect your product.

Lenovo Support Community

The [Lenovo Support Community](#) is an online forum organized into a series of subcommunities dedicated to sub-brands and specific product categories. It enables customers to share knowledge and discuss issues they may be experiencing. Should you encounter an issue with your product, you can search for a solution or post a question in the Community. Using an AI translation solution, Lenovo Community content can be created and viewed in twenty-one different languages, with the number potentially increasing.

The Community homepage offers intuitive navigation. You can select the product group, then narrow down to the subcategory and product name that matches your device. Viewing and searching content does not require an account. A one-time guest post is possible without registration; however, creating a Community account with your [Lenovo ID](#) provides full access and a better experience. Before posting, we recommend reviewing the Community Guidelines, which explain how to search, post, and maintain respectful interactions.

Note: Please note that while Lenovo representatives may participate in discussions by responding to questions, the Community is primarily a peer to peer Community and not an official support channel. Most solutions are provided by users from around the world. As products and services vary across countries and regions, we advise that customers approach solutions shared on the forum with caution, carefully evaluating and validating them for their product and symptoms.

Support from the operating system manufacturer

Practically speaking, you cannot use a PC without its operating system. The operating system's manufacturer provides the official and usually the most comprehensive information about it.

Windows 11 is an operating system developed by Microsoft®. If you encounter any issues or would like to learn more about Windows 11, you can visit the [official Microsoft support website for Windows](#).

Call Lenovo

If you have tried to correct the problem yourself and still need help, you can call Lenovo Customer Support Center.

Before you contact Lenovo

Record product information and problem details before you contact Lenovo.

Product information	Problem symptoms and details
<ul style="list-style-type: none">• Product name• Machine type and serial number	<ul style="list-style-type: none">• What is the problem? Is it continuous or intermittent?• Any error message or error code?• What operating system are you using? Which version?• Which software applications were running at the time of the problem?• Can the problem be reproduced? If so, how?

Note: The product name and serial number can usually be found on the bottom of the computer, either printed on a label or etched on the cover.

Lenovo Customer Support Center

During the warranty period, you can call Lenovo Customer Support Center for help.

Telephone numbers

For a list of the Lenovo Support phone numbers for your country or region, go to <https://pcsupport.lenovo.com/supportphonenumberlist>.

Note: Phone numbers are subject to change without notice. If the number for your country or region is not provided, contact your Lenovo reseller or Lenovo marketing representative.

Services available during the warranty period

- Problem determination - Trained personnel are available to assist you with determining if you have a hardware problem and deciding what action is necessary to fix the problem.
- Lenovo hardware repair - If the problem is determined to be caused by Lenovo hardware under warranty, trained service personnel are available to provide the applicable level of service.
- Engineering change management - Occasionally, there might be changes that are required after a product has been sold. Lenovo or your reseller, if authorized by Lenovo, will make selected Engineering Changes (ECs) that apply to your hardware available.

Services not covered

- Replacement or use of parts not manufactured for or by Lenovo or nonwarranted parts
- Identification of software problem sources
- Configuration of firmware as part of an installation or upgrade
- Changes, modifications, or upgrades to device drivers
- Installation and maintenance of network operating systems (NOS)
- Installation and maintenance of programs

For the terms and conditions of the Lenovo Limited Warranty that apply to your Lenovo hardware product, see “Warranty information” in the *Safety and Warranty Guide* that comes with your computer.

Purchase additional services

During and after the warranty period, you can purchase additional services from Lenovo at <https://pcsupport.lenovo.com/warrantyupgrade>.

Service availability and service name might vary by country or region.

Chapter 5. PC and accessibility

PCs are powerful general-purpose computing devices that many individuals rely on for accessing information, connecting with friends, pursuing education, conducting research, and completing work tasks. This reliance extends to individuals with vision, hearing, cognitive, or mobility impairments, as well as to those whose abilities may decline due to illness or aging.

This chapter explores the accessibility features available on your Lenovo PC, including both hardware components and those offered by the pre-installed operating system. By gaining a comprehensive understanding of the available accessibility features and how to activate and configure them, you can enhance your PC's usability for individuals with disabilities.

Accessibility features of the PC hardware

Lenovo PCs are designed with accessibility in mind. Throughout the design process, special considerations are prioritized for individuals with disabilities and best industry practices are implemented in hardware design.

USB connectors for connecting assistive technology devices

Several types of assistive technology devices are available on the market that can be connected to a PC to enhance its accessibility. For example, a refreshable braille display is an assistive technology device that enables individuals who are both deaf and blind to use a PC. When connected to a PC, a refreshable braille display can work in conjunction with a compatible screen reader to provide tactile output in braille characters. Blind individuals who have been trained to read braille can run their fingers over the display to comprehend the information presented on the PC.

Many assistive technology devices utilize USB technology for connectivity. Most Lenovo PCs are equipped with at least one USB connector that adheres to the relevant USB specifications and is backward compatible. A Lenovo PC may feature a USB Standard-A connector, a USB Type-C connector, or both. If the plug type of the assistive technology device does not match the USB connector on your PC, you can easily purchase and use a USB adapter to resolve the issue.

Keyboard accessibility

The keyboard serves as the primary input device for many PC users. Lenovo keyboards, whether integrated or supplied separately with the PC, are designed and manufactured with accessibility in mind. This section highlights the accessibility features of Lenovo keyboards that benefit all users, including those with disabilities.

Keyboard layout

The alphabetic keys on a Lenovo keyboard are arranged in a QWERTY layout, which is standard for input devices featuring alphabetic keys. The F and J keys have bumps that make them tactilely distinguishable from other keys. This feature serves as an orientation aid for skilled typists, allowing them to rest their index fingers without looking at the keys. Some Lenovo keyboards include a separate numeric keypad. The numeric keys are organized in four rows and three columns, arranging in ascending order from left to right and bottom to top. Additionally, the 5 key features a bump to make it tactilely distinguishable.

Standard modifier keys

Lenovo keyboards are equipped with standard modifier keys for PCs, including:

- the alt key

the ctrl key
the shift key
the Windows logo key

These keys are extensively used as the modifier key for shortcuts by the operating system and other applications.

The tab key

The tab key is located in the leftmost column of the keyboard. For operating systems, applications, and web documents that are designed with accessibility in mind, users can press the tab key and alt + tab (in reverse order) to cycle through the interactive elements.

Hotkeys

Many Lenovo keyboards feature hotkeys in the top row, offering convenient access to frequently used settings.

The fn key and the fnlock

The fn key is a Lenovo-defined modifier key. It can be used with the top-row dual-function keys to switch their functionalities. It can also be used with several other keys to access Lenovo defined settings.

The fnlock is a switch that can be turned on and off by pressing fn + esc. Instead of holding down the fn key to switch the functionality of dual-function keys, you can turn on fnlock. This feature allows users to access both hotkey and function key functionalities without the need to press two keys simultaneously.

Keyboard backlight

Many Lenovo keyboards are equipped with backlights to help you use the keyboard in dark lighting conditions. The backlights can be controlled by pressing fn + Space.

Biometric devices

Some Lenovo PCs are equipped with biometric devices that facilitate easy and secure identity authentication. If your PC includes an IR LED and an IR camera, you can enable facial recognition in Windows 11. Additionally, you can use your fingerprint for authentication on PCs with a fingerprint reader. Biometric identity authentication can be particularly beneficial for users who have difficulty typing passwords.

Note: When biometric devices are used for device authentication, they are not the only available method for this purpose. If biometric authentication fails, you can use a password or PIN to sign in to Windows.

Accessibility features of Windows 11

An operating system is a crucial piece of software installed on a PC. It plays a vital role in the PC's basic functionality by providing a user interface, various tools for system management, and a foundation upon which additional specialized applications can be installed.

Microsoft's Windows 11 is a modern operating system that comes preinstalled on many Lenovo PCs. It offers a rich set of accessibility features designed for individuals with diverse disabilities. This section outlines the accessibility features available in Windows 11, explains how to activate them, and discusses the benefits they provide.

Notes: The following accessibility features of Windows have been tested and confirmed to deliver their essential functionalities on Lenovo PCs that come pre-installed with Windows 11.

- Narrator

- Magnifier

Configuring accessibility features in the Settings app

Windows 11 provides a centralized location within the Settings app for activating and configuring all accessibility features. You can access this section by selecting **Start → Settings → Accessibility**. Additionally, the keyboard shortcut Windows logo key + U provides quick access to this interface.

Narrator

Narrator is Windows 11's built-in screen-reading application. It can read screen content aloud to users and also accept input from the keyboard, enabling individuals with visual impairments to navigate effectively within Windows 11, use applications, and browse the web.

Start and stop Narrator

You can start and stop Narrator by selecting the toggle button for Narrator in the centralized Accessibility section of the Settings app. Additionally, the keyboard shortcut Windows logo key + ctrl + enter provides quick access to both the start and stop functions.

Customize Narrator

Narrator offers a variety of controls that allow you to customize it to suit your preferences. For example, you can install additional text-to-speech voices and select your preferred voice for Narrator. You also have the option to adjust the verbosity level to choose the type of content to be read. All Narrator settings are conveniently located in the centralized Accessibility section of the Settings app. Additionally, the keyboard shortcut Windows logo key + ctrl + N offers quick access to these settings.

Adjusting text sizes, applying a high-contrast theme, and using Magnifier

For individuals who find it difficult to see text clearly on the screen, Windows offers the options of adjusting text sizes, applying a high-contrast theme, and using Magnifier.

Adjust text sizes

If you find the text on the screen is too small to read, you can scale up the size of text displayed by Windows and other applications.

Step 1. Select **Start → Settings → Accessibility → Text size**.

Step 2. Use the slider and the preview pane to select a size that fits your need and then select **Apply**.

Apply a high-contrast theme

For individuals with low vision, Windows 11 offers contrast themes that enhance text readability by using a background color that sharply contrasts with the text.

Step 1. Select **Start → Settings → Accessibility → Contrast themes**.

Step 2. In the dropdown list for **Contrast themes**, select one option and then select **Apply**.

To exit a contrast theme, select **None** from the dropdown list. The keyboard shortcut for turning on and off contrast theme is left alt + left shift + prt sc.

Enable Magnifier

You can enable Windows 11 Magnifier to enlarge specific areas or the entire screen, making text and images easier to see.

Step 1. Select **Start → Settings → Accessibility → Magnifier**.

Step 2. Select the toggle to enable or disable Magnifier.

The keyboard shortcuts for enabling and disabling Magnifier are Windows logo key + Plus sign (+) and Windows logo key + esc, respectively. When Magnifier is enabled, you can use Windows logo key + plus sign (+) and minus sign (-) to zoom in and zoom out.

Sticky Keys

Microsoft Windows offers numerous keyboard shortcuts that require users to hold down a modifier key (such as shift, ctrl, alt, or the Windows logo key) before pressing one or more additional keys. While these shortcuts provide significant convenience for many users, they can pose accessibility challenges for individuals who have difficulty holding down multiple keys at the same time.

Sticky Keys is an accessibility feature in Windows that, when enabled, allows users to press keys in sequence to activate shortcut functions. For example, instead of holding down the ctrl key and the C key simultaneously, users can press each key individually to copy text to the clipboard.

To enable Sticky Keys, press the shift key five times in quick succession. When the confirmation dialog box appears, select **Yes**. To disable Sticky Keys, press the shift key five times again and choose **No** when prompted.

Accessible user documentation

Documentation containing instructions for the use of the product, including its accessibility features, is available in accessible formats (such as HTML and PDF) on the Lenovo Support Website. When creating documentation, a series of industry standards and best practices are followed to ensure that the content is useful to as broad an audience as possible. Additionally, automated testing tools are employed to identify issues that may hinder the accessibility of information. These issues are addressed to the extent permitted by commonly available technologies.

Accessibility features of user documentation

By adhering to industry standards and best practices, Lenovo documentation offers numerous features that facilitate the perception and understanding of the content. Additionally, several of these features are specifically designed to ensure that users of assistive technology devices can access information comparable to that available to those who do not rely on such devices.

Perceivable content

Text content is presented using popular and easy-to-read fonts. Text colors are in high contrast with the background. Non-text elements, such as graphics and videos that convey important information, are accompanied by alternative text descriptions. Users with visual impairments can utilize screen readers to access information comparable to that available to sighted users.

Understandable content

The documentation is presented visually in a well-structured and simple layout. It also includes hidden tags or other markup information that store the content's structure, which can be utilized programmatically by assistive technologies to convey this structure to users.

Operable content

Documentation includes industry-standard tags for sectioning and interactive elements, such as titles, headings, various structural components, links, buttons, and input fields. Screen reader users can utilize standard modifier keys on the keyboard to effectively navigate and interact with the documentation.

Testing documentation accessibility

Before being officially released, Lenovo documentation undergoes testing with automated tools to evaluate its accessibility. HTML documents are assessed for compliance with the success criteria outlined in the *Web Content Accessibility Guidelines (WCAG)*, a widely accepted set of standards designed to enhance web document accessibility. PDF documents are evaluated for accessibility using the accessibility checker in Adobe Acrobat for the same purpose. Automated testing tools help identify elements within a document that may present challenges when rendered by screen readers and other assistive technology devices. Accessibility issues identified by these automated tools are subsequently analyzed manually and corrected as needed.

Appendix A. Important notice for Quebec consumers

In regard to section 79.18 of Quebec's Regulation respecting the application of the Consumer Protection Act, Lenovo in no way guarantees the availability of (a) replacement parts; (b) repair services; and (c) information necessary to maintain or repair the goods. For up-to-date information on the technical support and parts available for your purchase, please consult <https://support.lenovo.com/ca/en>

Appendix B. Notices and trademarks

Notices

Lenovo may not offer the products, services, or features discussed in this document in all countries. Consult your local Lenovo representative for information on the products and services currently available in your area. Any reference to a Lenovo product, program, or service is not intended to state or imply that only that Lenovo product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any Lenovo intellectual property right may be used instead. However, it is the user's responsibility to evaluate and verify the operation of any other product, program, or service.

Lenovo may have patents or pending patent programs covering subject matter described in this document. The furnishing of this document does not give you any license to these patents. You can send license inquiries, in writing, to:

Lenovo (United States), Inc.
8001 Development Drive
Morrisville, NC 27560
U.S.A.

Attention: Lenovo Director of Licensing

LENOVO PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some jurisdictions do not allow disclaimer of express or implied warranties in certain transactions, therefore, this statement may not apply to you.

Changes are made periodically to the information herein; these changes will be incorporated in new editions of the publication. To provide better service, Lenovo reserves the right to improve and/or modify the products and software programs described in the manuals included with your computer, and the content of the manual, at any time without additional notice.

The software interface and function and hardware configuration described in the manuals included with your computer might not match exactly the actual configuration of the computer that you purchase. For the configuration of the product, refer to the related contract (if any) or product packing list, or consult the distributor for the product sales. Lenovo may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you.

The products described in this document are not intended for use in implantation or other life support applications where malfunction may result in injury or death to persons. The information contained in this document does not affect or change Lenovo product specifications or warranties. Nothing in this document shall operate as an express or implied license or indemnity under the intellectual property rights of Lenovo or third parties. All information contained in this document was obtained in specific environments and is presented as an illustration. The result obtained in other operating environments may vary.

Lenovo may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you.

Any references in this publication to non-Lenovo Web sites are provided for convenience only and do not in any manner serve as an endorsement of those Web sites. The materials at those Web sites are not part of the materials for this Lenovo product, and use of those Web sites is at your own risk.

Any performance data contained herein was determined in a controlled environment. Therefore, the result obtained in other operating environments may vary significantly. Some measurements may have been made on development-level systems and there is no guarantee that these measurements will be the same on generally available systems. Furthermore, some measurements may have been estimated through extrapolation. Actual results may vary. Users of this document should verify the applicable data for their specific environment.

This document is copyrighted by Lenovo and is not covered by any open source license, including any Linux agreement(s) which may accompany software included with this product. Lenovo may update this document at any time without notice.

For the latest information or any questions or comments, contact or visit the Lenovo Web site:

<https://support.lenovo.com>

Trademarks

Lenovo, the Lenovo logo, and IdeaPad are trademarks of Lenovo. Microsoft, Windows, and Windows Hello are trademarks of the Microsoft group of companies. DisplayPort is a trademark of the Video Electronics Standards Association. The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries. Wi-Fi and Miracast are registered trademarks of Wi-Fi Alliance. USB Type-C is a registered trademark of USB Implementers Forum. All other trademarks are the property of their respective owners.