


# ASSEMBLY GUIDE

INSIGNIA™

# 3-in-1 TV Stand

NS-HFTVS3N175

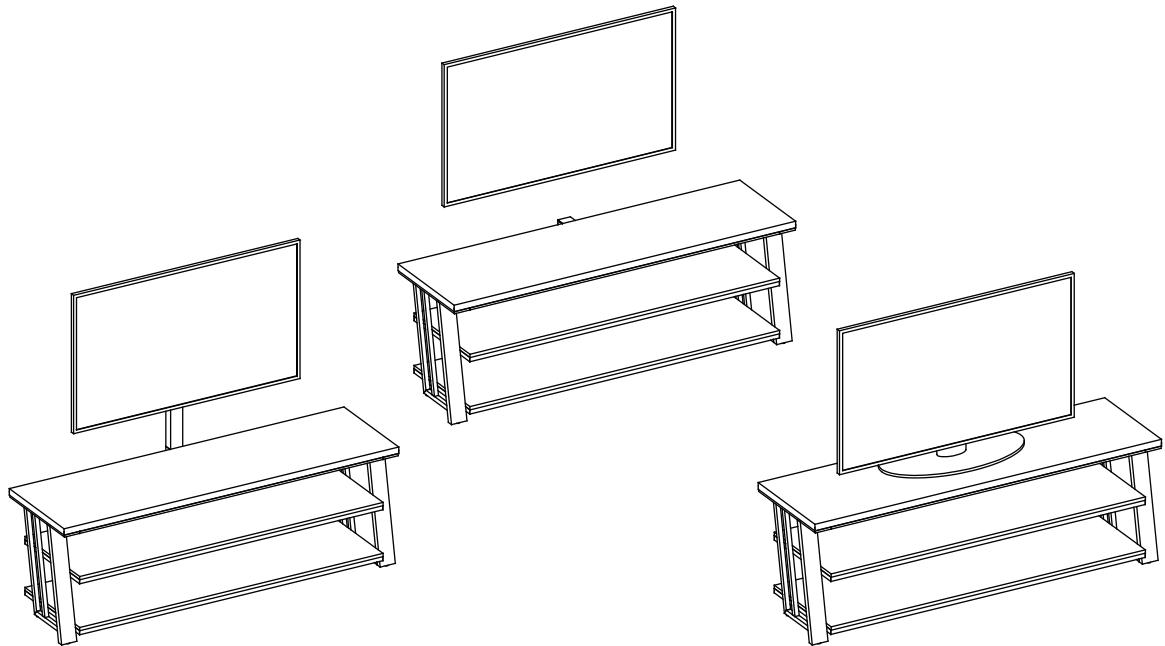

Before using your new product, please read these instructions to prevent any damage.

# INSIGNIA™

## Contents

IMPORTANT SAFEGUARDS .....	3
Features .....	4
Dimensions .....	4
Package contents .....	5
Parts .....	5
Hardware .....	6
Tools needed (not provided) .....	7
Assembling your stand .....	8
Mounting the TV using the swivel configuration .....	16
Mounting the TV using the wall-mount configuration .....	26
Mounting the TV using the tabletop configuration .....	33
Maintaining your TV stand .....	37
Specifications .....	37
ONE-YEAR LIMITED WARRANTY .....	38



# IMPORTANT SAFEGUARDS

## WARNING



Some steps are more easily handled with two adults.

## CAUTION

**⚠** The top surface of this stand is designed for use with a product weighing no more than 100 lbs. (45.4 kg) and having a width that permits it to sit evenly on the stand with no more than a one-inch overhang on each side of the shelf. Use with products that weigh more than the maximum weight allowed, or with dimensions that extend beyond the maximum width may result in instability, which may result in injury.

## CAUTION

**⚠** This product contains small items that could be a choking hazard if swallowed. Keep these items away from young children!

## WARNING

**⚠** Please use your stand correctly and safely. Improper use can cause safety hazards or damage to your furniture or household items. Carefully read the following chart.


LOOK OUT FOR:	WHAT CAN HAPPEN:	HOW TO AVOID THE PROBLEM:
<ul style="list-style-type: none"> <li>Children climbing on the stand.</li> <li>A child may try to reach a toy or other object by climbing on the stand.</li> <li>Children will play and be active near the TV.</li> </ul>	<ul style="list-style-type: none"> <li>Risk of injury or death.</li> <li>A child climbing on the stand can make it top-heavy and cause it to tip over.</li> <li>A child playing with a TV can cause it to tip over.</li> </ul>	<ul style="list-style-type: none"> <li>Never allow children to climb on or play with the stand.</li> <li>Do not place toys or food on the top shelves. Children may try to climb to reach them out of curiosity.</li> </ul>
<ul style="list-style-type: none"> <li>Improper use of the stand to support TVs.</li> <li>The stand is designed for use with TVs will specify the maximum weight rating and recommended size of the TVs it will safely support.</li> </ul>	<ul style="list-style-type: none"> <li>Risk of injury or death.</li> <li>TVs can be very heavy. Note, older CRT TVs tend to be unbalanced and prone to tipping forward.</li> </ul>	<ul style="list-style-type: none"> <li>A TV must only be set on furniture specifically designed to support a television.</li> <li>Never use a TV that exceeds the weight ratings or size guidelines specified for the stand.</li> </ul>
<ul style="list-style-type: none"> <li>Improperly moving the stand.</li> </ul>	<ul style="list-style-type: none"> <li>The stand can tip over or break if improperly moved.</li> <li>Risk of injury.</li> </ul>	<ul style="list-style-type: none"> <li>Unload shelves from the top to the bottom before moving the stand.</li> <li>Do not push the stand, especially on a carpeted floor. Have a friend help you lift the item and set it in place.</li> <li>Do not lift the stand using the top shelf. Lift from the frame or leg assembly.</li> <li>Remove the TV before moving the TV stand.</li> </ul>
<ul style="list-style-type: none"> <li>The TV/stand assembly tipping forward.</li> </ul>	<ul style="list-style-type: none"> <li>Risk of injury.</li> <li>Top-heavy furniture can tip over.</li> <li>The TV and stand could be damaged.</li> </ul>	<ul style="list-style-type: none"> <li>Use the tipping restraint hardware provided and install it properly.</li> </ul>

## SAVE THESE INSTRUCTIONS

## Features


- 3-in-1 display system lets you tilt (5° up/11° down) or swivel (45° left/right) your TV to find the best view
- Sturdy mount supports most flat screen TVs up to 75 in. (190.5 cm) and 100 lbs. (45.4 kg)
- Three open shelves provide space for cable boxes, Blu-ray players, game consoles and more
- Textured wood grain laminate in a neutral gray looks great in any living room
- Anti-tip hardware protects children and pets from accidental tip-overs
- Compatible VESA configurations:
  - 200 x 200
  - 200 x 300
  - 300 x 300
  - 400 x 200
  - 400 x 300
  - 400 x 400
  - 600 x 400

## Dimensions

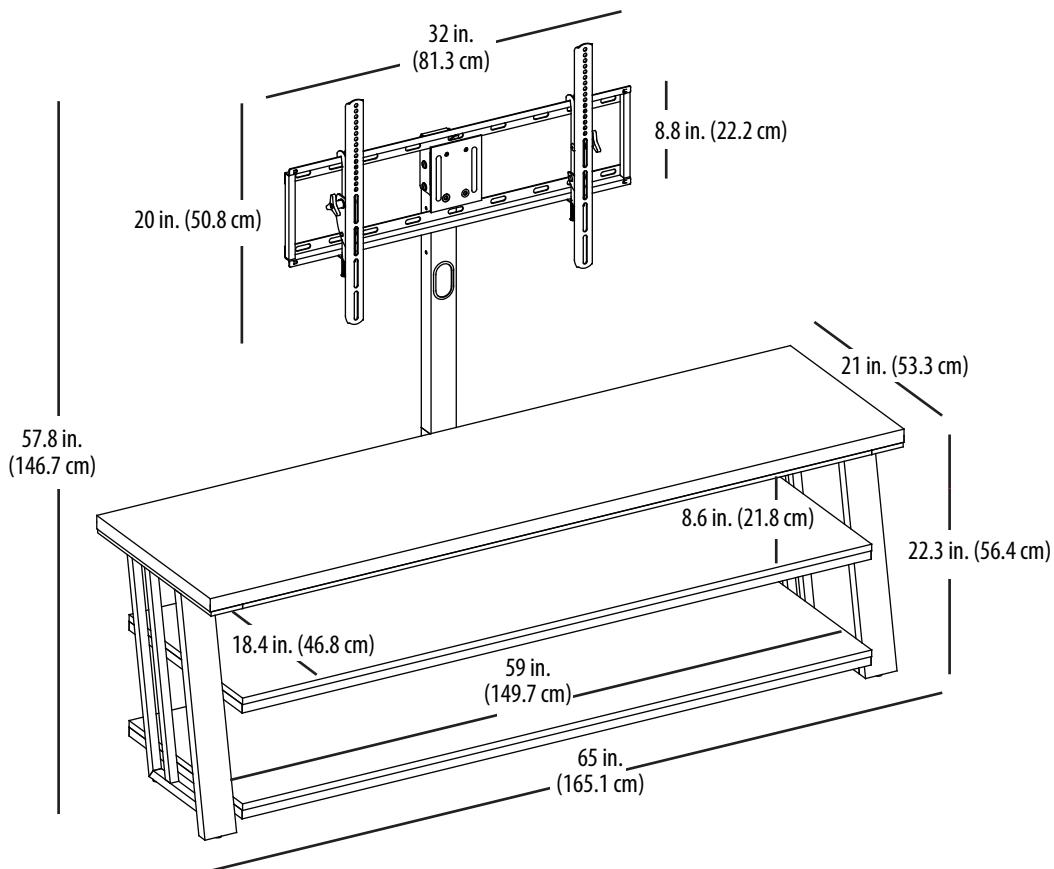


# Package contents


## Parts

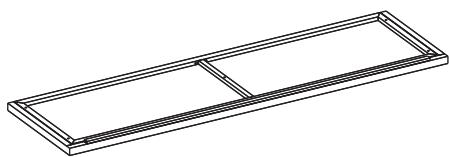


**A** Top shelf (1)

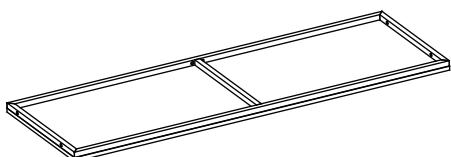


**B** Middle shelf (1)

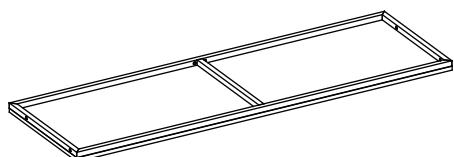


**C** Bottom shelf (1)

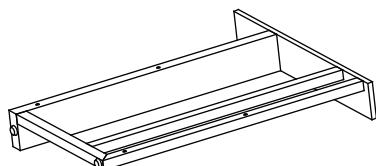


**D** Left side frame (1)

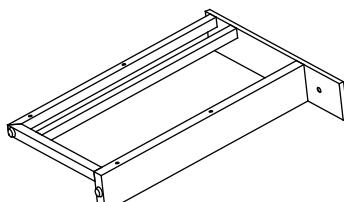


**E** Right side frame (1)

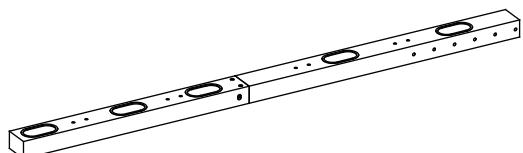


**F** Spine assembly (1)

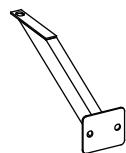


**G** Top shelf support (1)

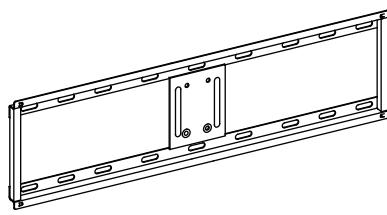

**I** Mounting frame (1)

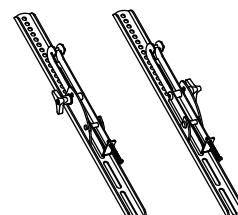

**J** TV bracket (2)




 



**H** Swivel bracket (1)








**K** Cable clip (2)

## Hardware

 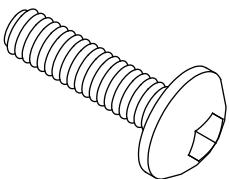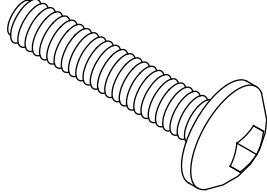
 
LABEL	STAND PART	QTY.
L	 Bolt 1/2" (12.7 mm)	4
M	 Bolt 5/8" (15.9 mm)	13
N	 Bolt 3/4" (19 mm)	4
O	 Bolt 1 1/4" (31.6 mm)	12
P	 Bolt 1 3/4" (44.5 mm)	2
Q	 Lock washer	29
R	 Flat washer	29
S	 Lag bolt	4
T	 Concrete anchor	4
U	 Large flat washer	4

 LABEL	STAND PART	QTY.
V	 Plastic end cap	1
W	 4 mm hex key	2
X	 4.8 mm hex key	1
Y	 Touch-up pen	1
Z	 Tipping restraint hardware kit	1
AA	 Bolt M4 × 12 mm	4
BB	 Bolt M4 × 30 mm	4
CC	 Bolt M5 × 12 mm	4
DD	 Bolt M5 × 30 mm	4
EE	 Bolt M6 × 12 mm	4

**Hardware (continued)**

     LABEL	STAND PART	QTY.
FF	 Bolt M6 × 35 mm	4
GG	 Bolt M8 × 16 mm	4
HH	 Bolt M8 × 20 mm	4
II	 Bolt M8 × 40 mm	4
JJ	 Bolt M8 × 50 mm	4
KK	 Lock washer M4	4
LL	 Lock washer M5	4

LABEL	STAND PART	QTY.
MM	 Lock washer M6	4
NN	 Lock washer M8	4
OO	 Large spacer	4
PP	 Small spacer	4
QQ	 Flat washer M4/M5	4
RR	 Flat washer M6/M8	4

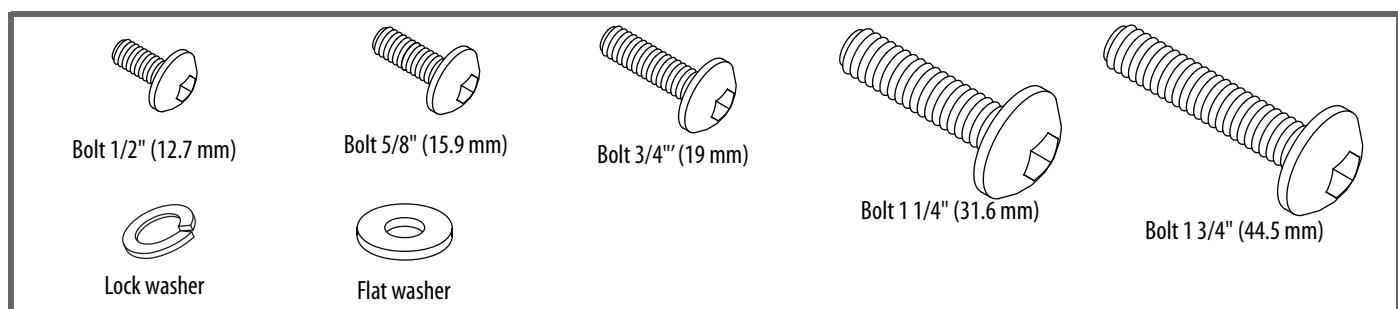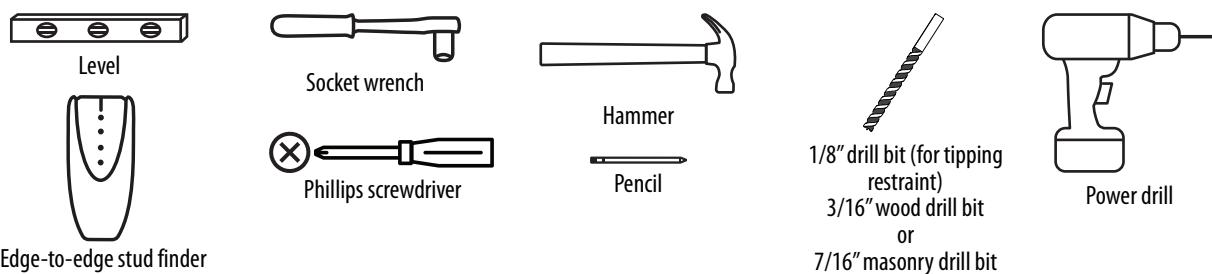**Extra hardware****Tools needed (not provided)**


## Assembling your stand

**Tip:** Assemble your stand on a carpeted floor or the empty TV stand carton to avoid scratching it.

**Note:** Do not fully tighten all bolts until you finish assembling all of the parts. After assembly, go back and fully tighten all bolts. This will make the assembly easier.

### STEP 1: Attach the top panel to the spine

You need:

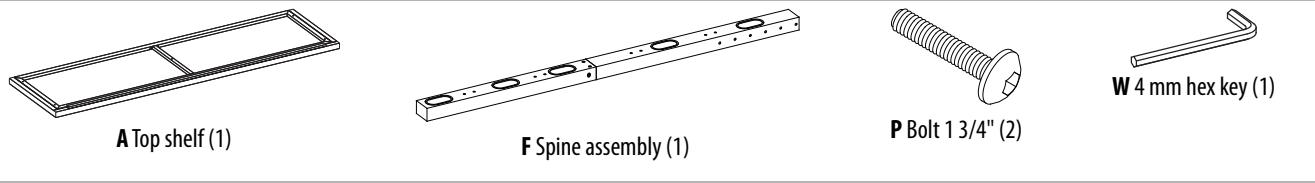


- 1 Align the top shelf (A) at a 90° angle to the spine assembly (F). Make sure that the drilled holes in the top shelf align with the threaded holes on the spine.

**Note:** The metal frame faces the floor when you turn your stand upright.


- 2 Insert two 1 3/4" bolts (P) through the drilled holes in the top shelf (A), then screw them into the holes on the spine assembly with the 4 mm hex key (W).



**Note:** Do not fully tighten all bolts until you finish assembling all of the parts. After assembly, go back and fully tighten all bolts. This will make the assembly easier.

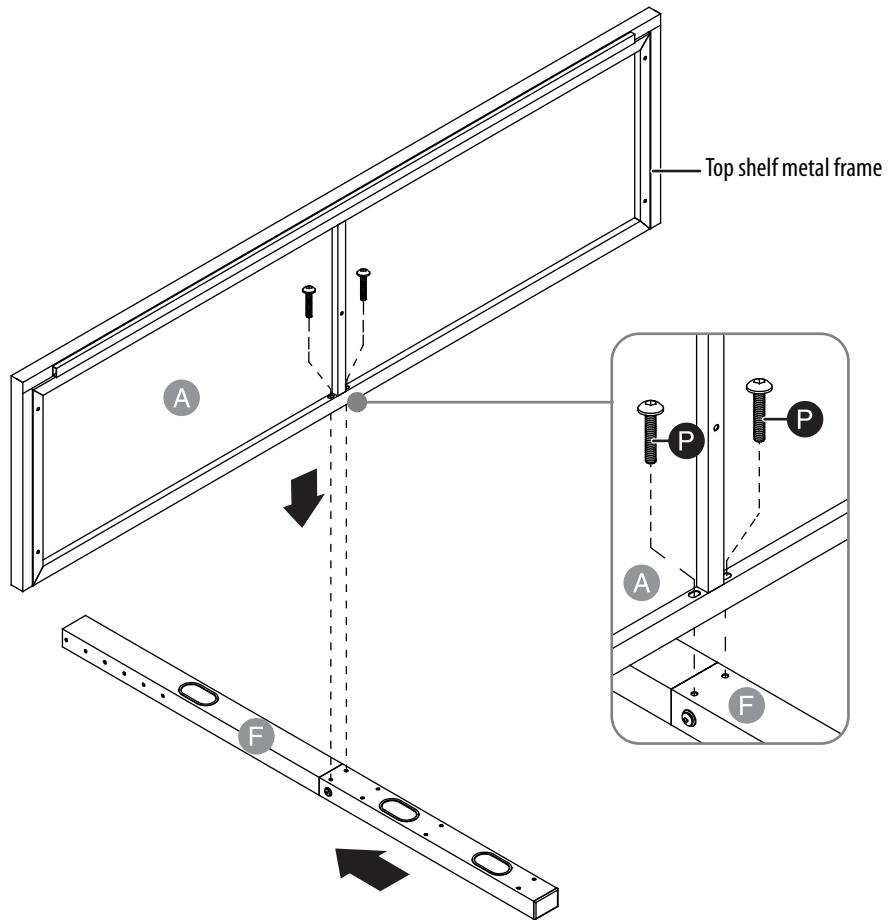

**STEP 2: Attach the top shelf support to the top panel and spine****You need:**

 - 1 Align the top shelf support (**G**) with the center of the top shelf (**A**).
- 2 Place a flat washer (**R**), then a lock washer (**Q**) over the hole in the top of the shelf support and in the two holes on the bottom of the shelf support.
- 3 Insert a 5/8" bolt (**M**) through each sets of washers, then tighten the bolts with the 4 mm hex key (**W**).

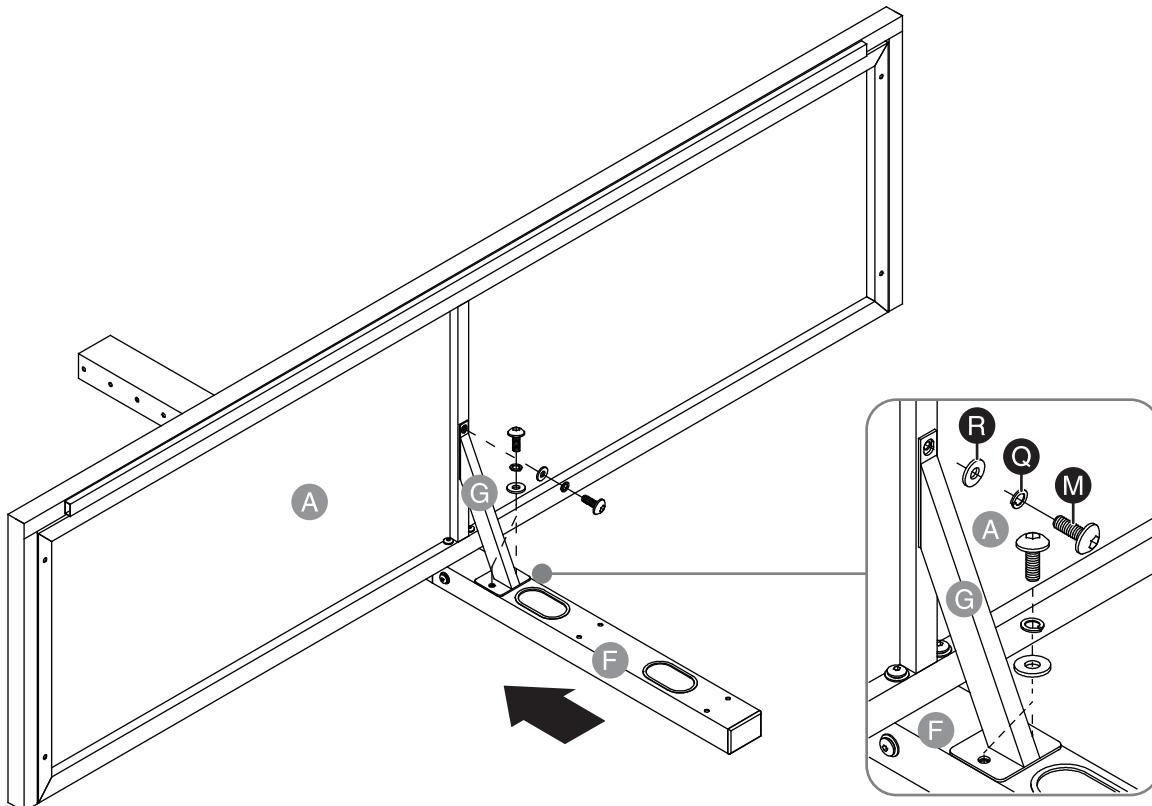


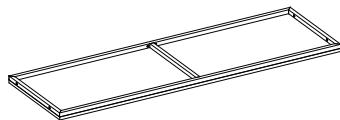**STEP 3: Attach the middle shelf to the spine****You need:****B** Middle shelf (1)**O** 1 1/4" bolt (2)**Q** Lock washer (2)**R** Flat washer (2)**W** 4 mm hex key (1)

- 1 Place flat washers (**R**), then lock washers (**Q**) over the two drilled holes on the middle shelf (**B**).


**Note:** The metal frame faces the floor when you turn your stand upright.

- 2 Insert 1 1/4" bolts (**O**) through the washers and into the two threaded holes in the middle of the spine (**F**). Tighten the bolts with the 4 mm hex key (**W**).

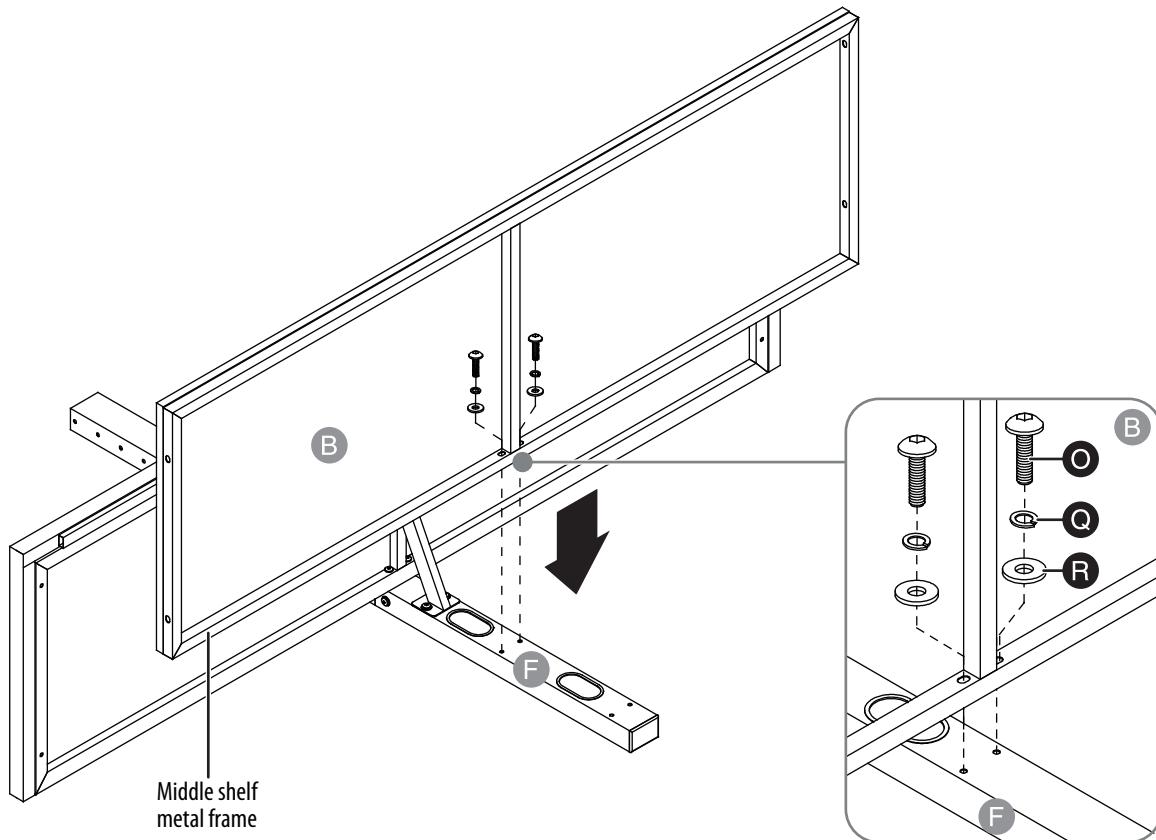


## STEP 4: Attach the bottom shelf to the spine

 You need:



**C** Bottom shelf (1)

 

**O** 1 1/4" bolt (2)



**Q** Lock washer (2)



**R** Flat washer (2)





**W** 4 mm hex key (1)

- 1 Place flat washers (R), then lock washers (Q) over the two drilled holes on the bottom shelf (C).

**Note:** The metal frame faces the floor when you turn your stand upright.


- 2 Insert 1 1/4" bolts (O) through the washers and into the two threaded holes on the outer edge of the spine (F). Tighten the bolts with the 4 mm hex key (W).

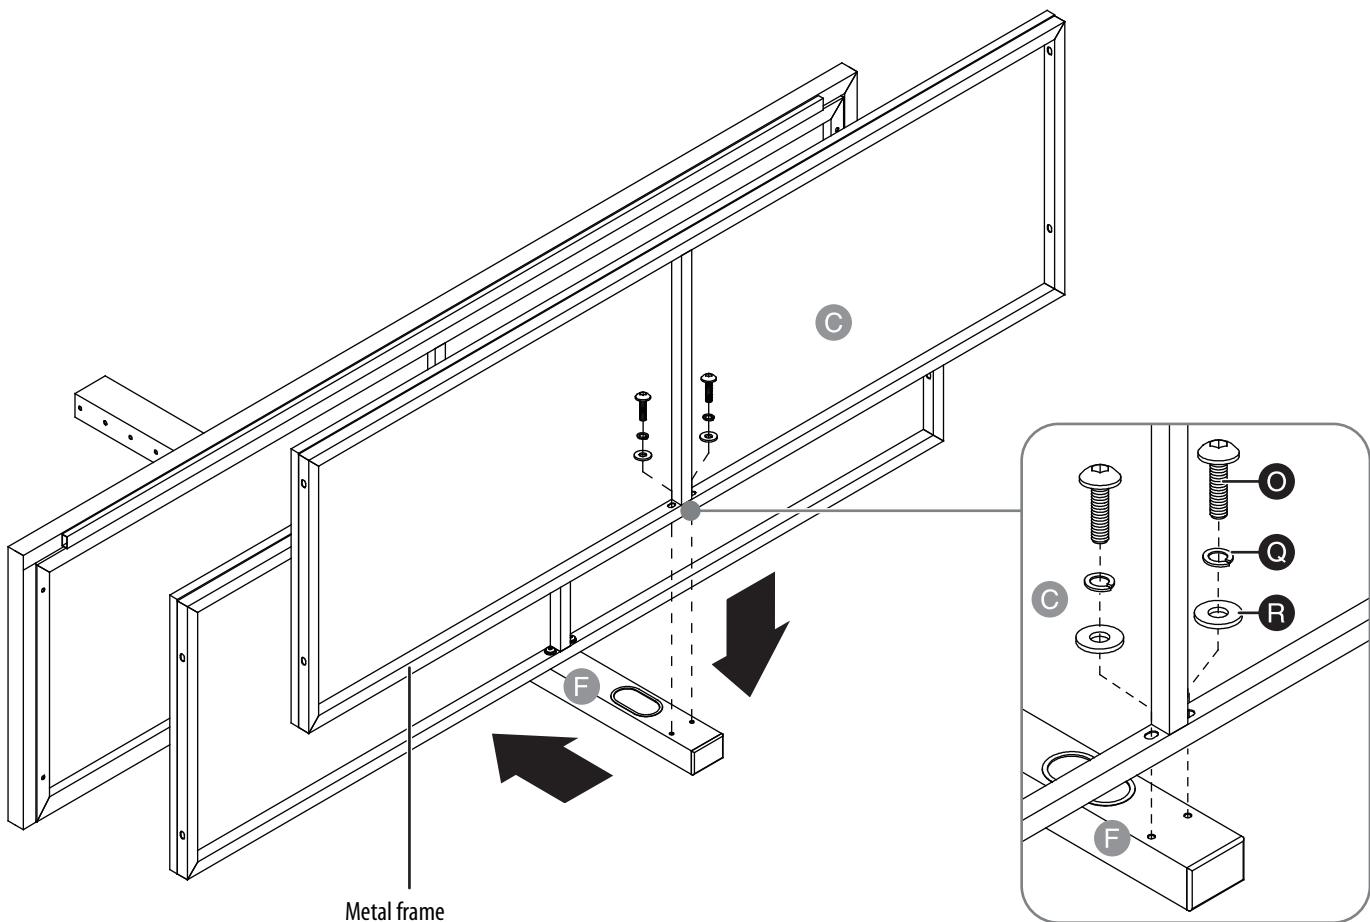

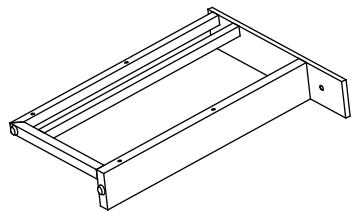**STEP 5: Align and attach the right side frame to the shelves****You need:****O** 1 1/4" bolt (4)**Q** Lock washer (4)**R** Flat washer (4)**W** 4 mm hex key (1)**E** Right side frame (1)


- 1 Place flat washers (R), then lock washers (Q) over the four drilled holes on the inside of the lower shelves (B and C).
- 2 Insert 1 1/4" bolts (O) through the washers and into the four threaded holes on the right side frame (E). Tighten the bolts with the 4 mm hex key (W).

**Note:** Make sure that the mounting holes on the top rail of the right side frame (E) overlap the threaded holes underneath the top shelf (A) correctly.

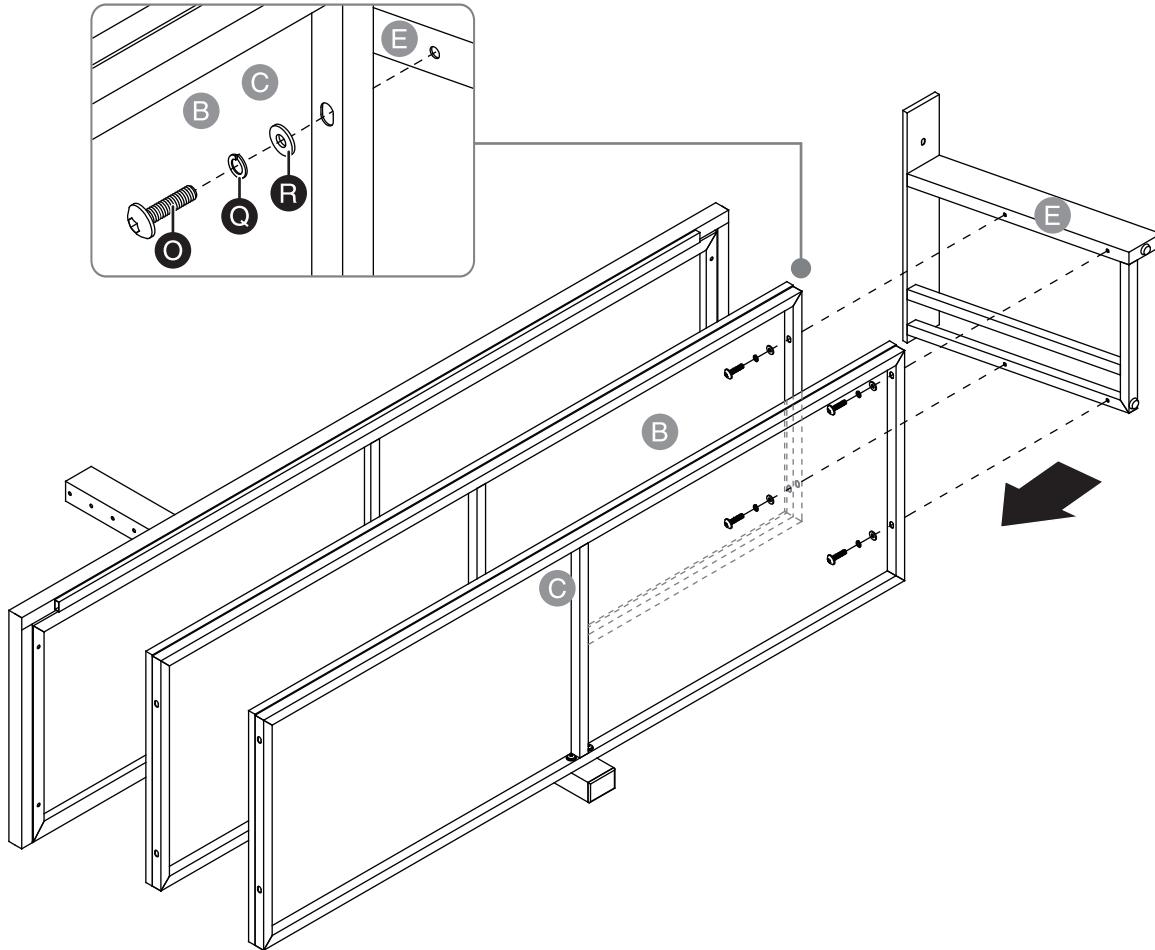

## STEP 6: Attach the right side frame to the top panel

 You need:



**N** 3/4" bolt (2)



**Q** Lock washer (2)





**R** Flat washer (2)




**W** 4 mm hex key (1)


- 1 Place flat washers (**R**), then lock washers (**Q**) over the two drilled holes on the inside of the top rail of right side frame (**E**).
- 2 Insert 3/4" bolts (**N**) through the washers and into the two threaded holes on the top shelf (**A**). Tighten the bolts with the 4 mm hex key (**W**).

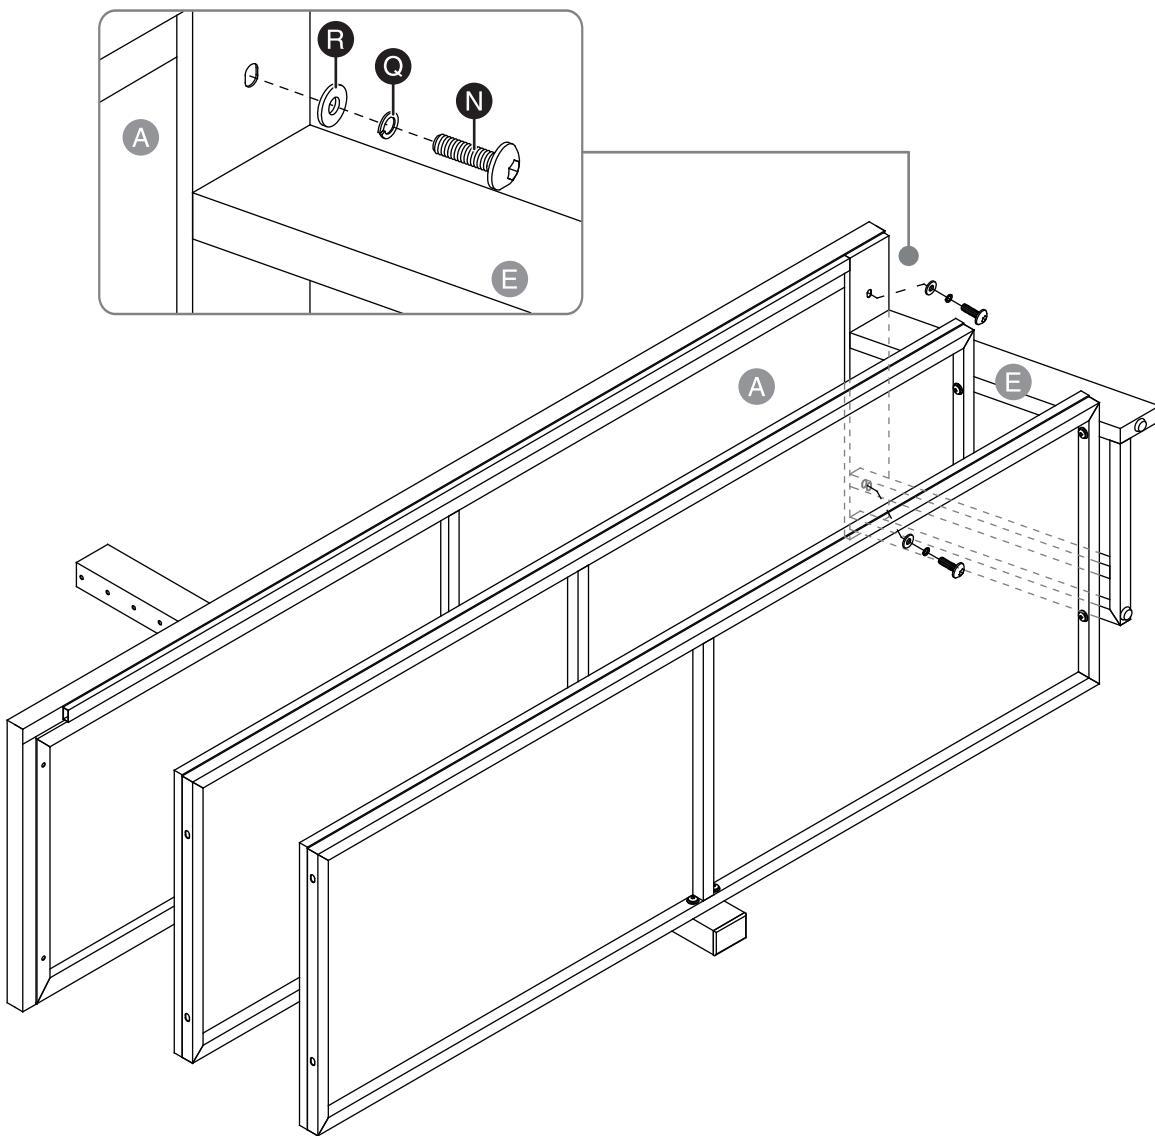

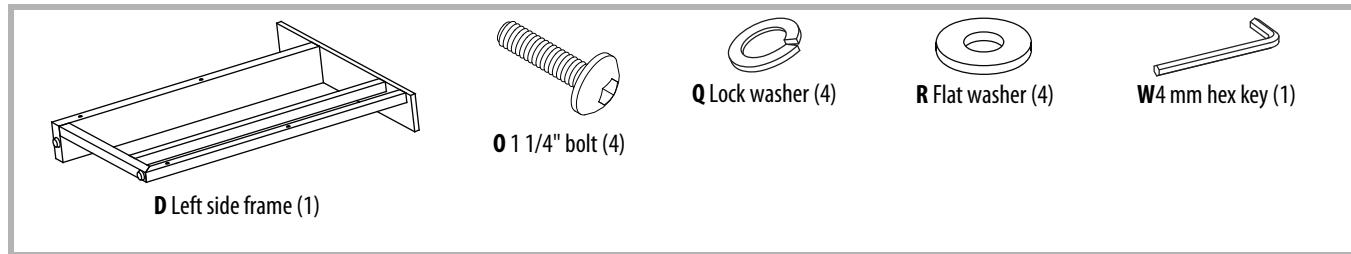**STEP 7: Attach the left side frame to the shelves****You need:**

- Follow the steps in STEP 5: Align and attach the right side frame to the shelves on page 12 to attach the left side frame (D) to the lower shelves (B and C).

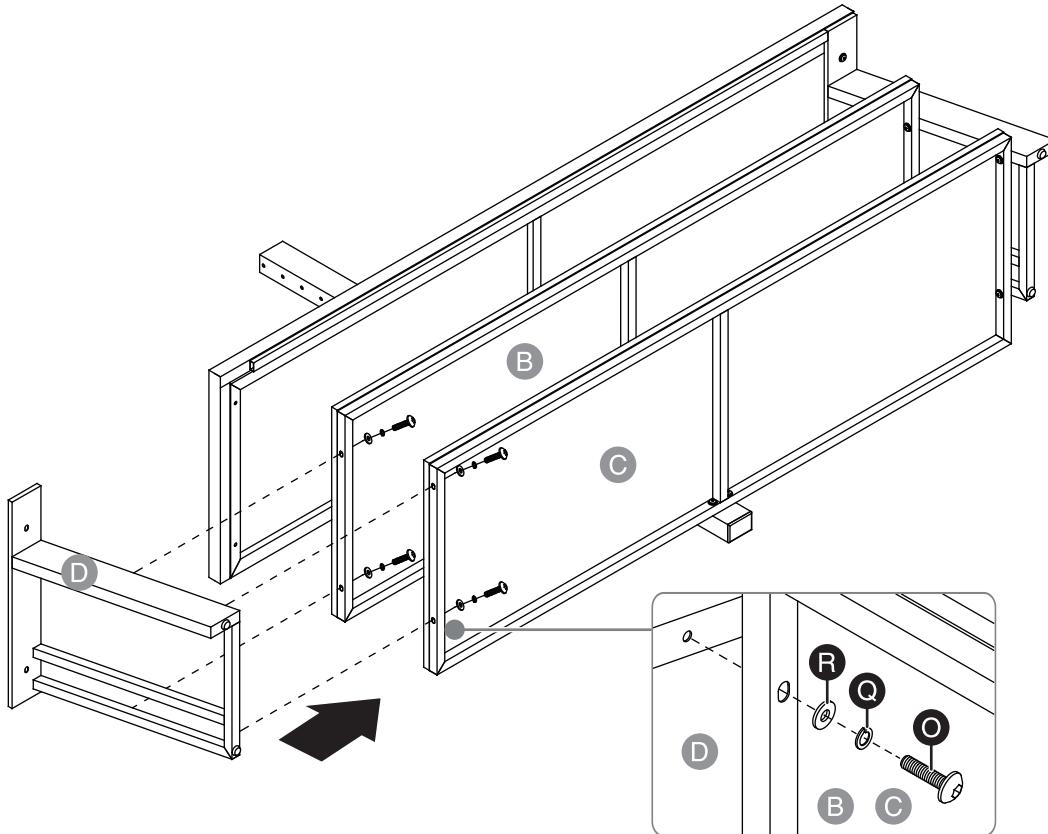


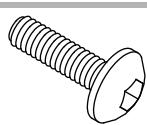**STEP 8: Fasten the left side frame to the top panel****You need:****N** 3/4" bolt (2)**Q** Lock washer (2)**R** Flat washer (2)**W** 4 mm hex key (1)

- 1 Follow the steps in [STEP 6: Attach the right side frame to the top panel](#) on page [13](#) to attach the left side frame (**D**) to the top shelf (**A**).
- 2 Stand the assembled frame upright.

**Note:**

- For swivel stand assembly, go to [Mounting the TV using the swivel configuration](#) on page [16](#).
- For wall-mount assembly, go to [Mounting the TV using the wall-mount configuration](#) on page [26](#).
- For tabletop assembly, go to [Mounting the TV using the tabletop configuration](#) on page [33](#).

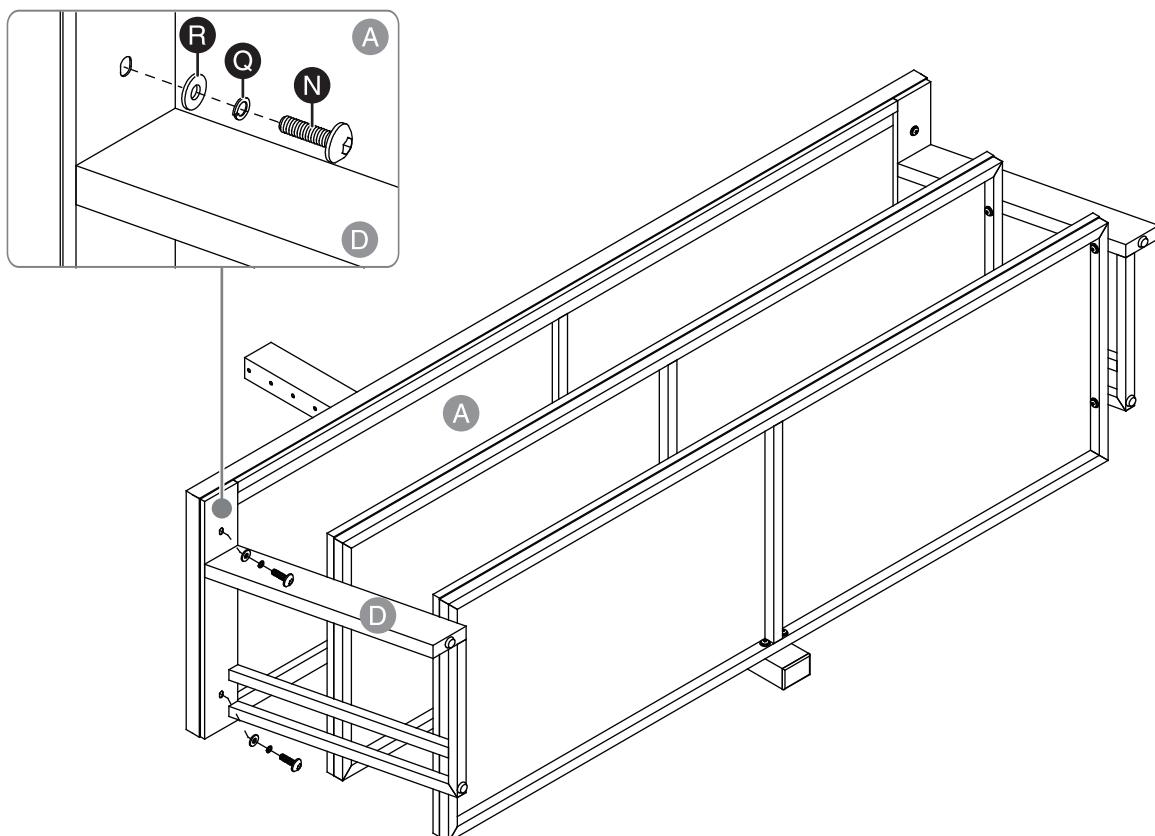


## Mounting the TV using the swivel configuration


**Note:** If you are wall-mounting the TV, go to **STEP 4: Select the correct bolts, washers, and spacers for your TV** on page 19.

### STEP 1: Attach the swivel bracket to the mounting frame

 You need:



**H** Swivel bracket (1)

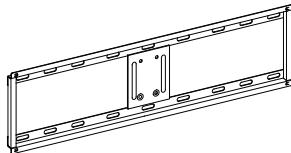


**I** Mounting frame (1)



**L** 1 1/2" bolt (4)



 **Q** Lock washer (4)



**R** Flat washer (4)




**W** 4 mm hex key (1)

- 1 Align the four mounting holes on the swivel bracket (H) with the holes on the back side of the mounting frame (I). Make sure that the hex nut on the swivel bracket and the two raised holes on the mounting frame point in the same direction.

**Note:** The hex nut and raised holes point in the same direction.

- 2 Place a flat washer (R), then a lock washer (Q) over each of the mounting holes on the back of the swivel bracket (H).
- 3 Insert a 1/2" bolt (L) through the washers and into each of the threaded holes on the mounting frame (I).
- 4 Tighten the bolts with the 4 mm hex key (W).

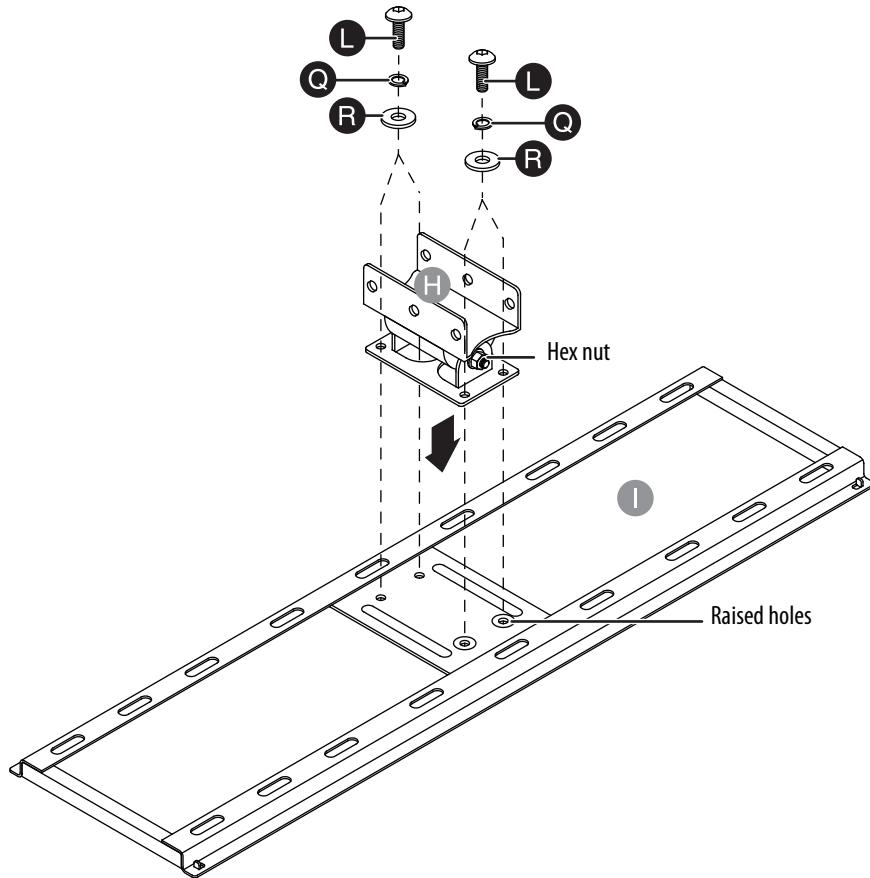

## STEP 2: Attach the swivel bracket assembly to the spine

You need:



M 5/8" bolt (6)



Q Lock washer (6)




R Flat washer (6)



W 4 mm hex key (1)



**Note:** The upper spine provides four height options for your TV. Based on your TV size, adjust the swivel bracket (H) to the best height to offer optimum viewing.

- 1 Place a flat washer (R), then lock washer (Q) over one of the holes on the side of the swivel bracket.
- 2 Insert a 5/8" bolt (M) through the washers and into the threaded hole on the spine assembly (F).
- 3 Repeat steps 1 through 2 for the five remaining holes.
- 4 Tighten the bolts with the 4 mm hex key (W).

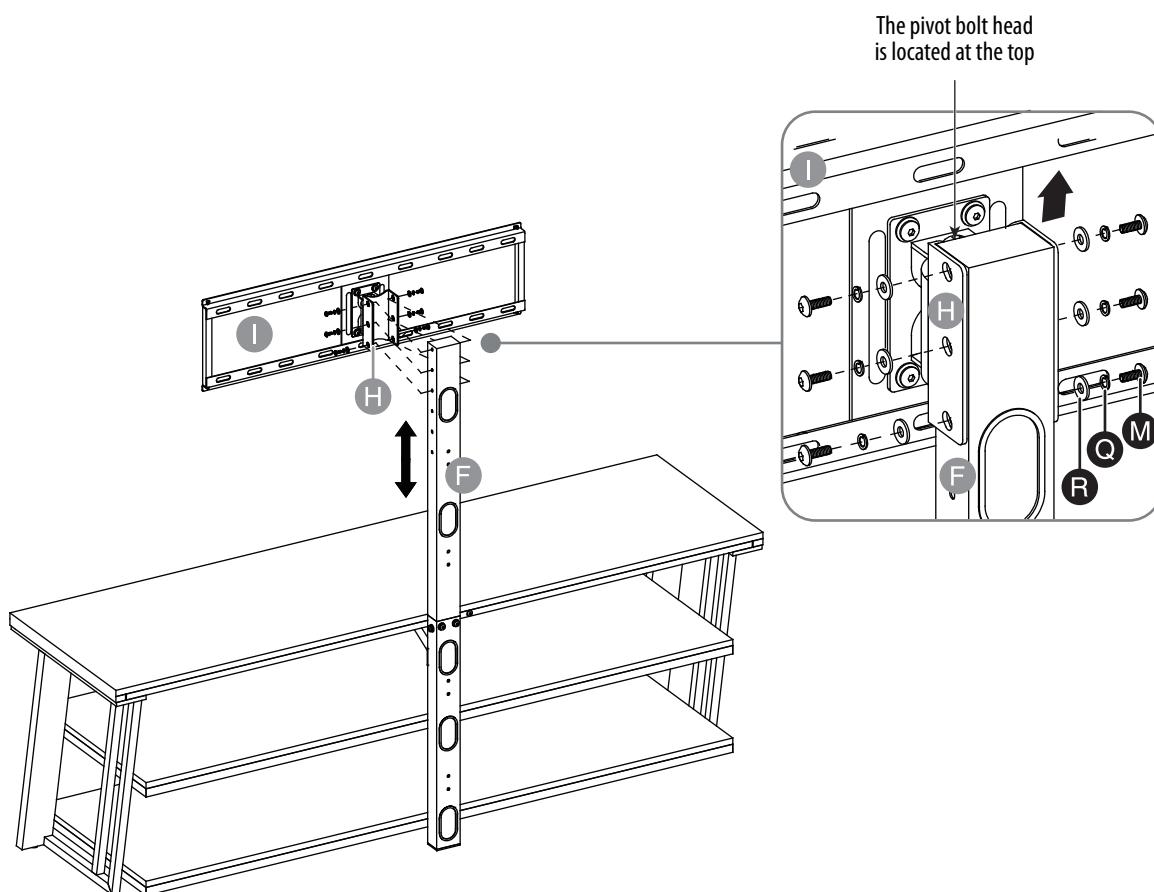

**STEP 3: Attach the cable clips****You need:****K** Cable clip (2)**M** 5/8" bolt (4)**W** 4 mm hex key (1)

- 1 Align a cable clip with two of four possible locations on the spine assembly (**F**), then insert two 5/8" bolts (**M**) through the cable clip and into the spine assembly.
- 2 Repeat for the other cable clip.
- 3 Tighten the bolts with the 4 mm hex key (**W**).

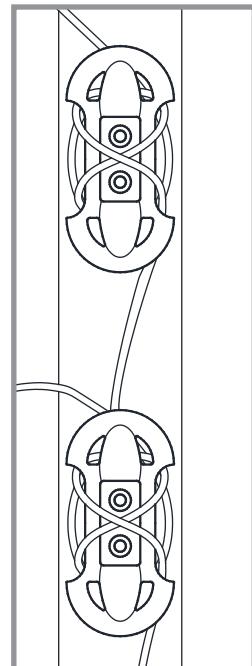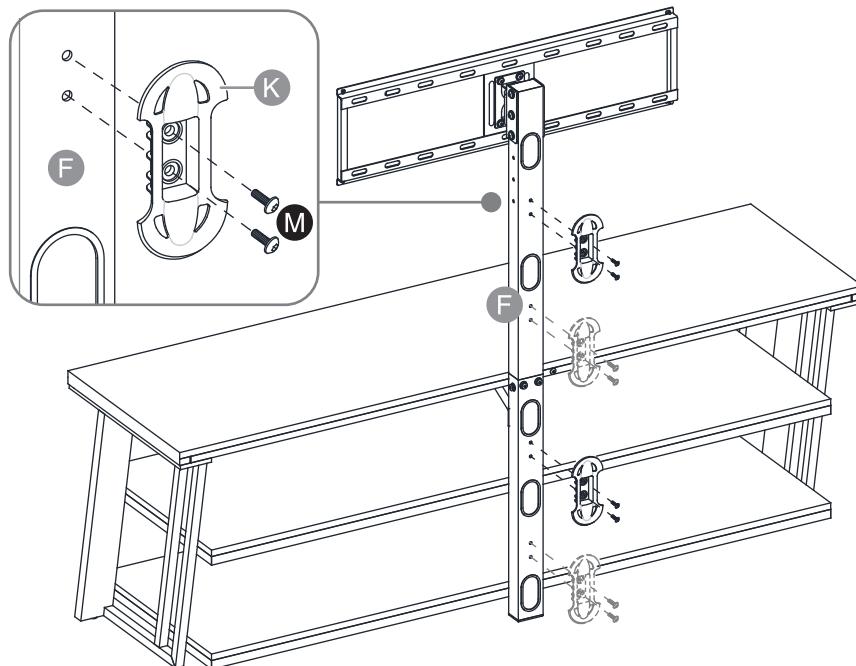

Cables wrapped on cable clips

## STEP 4: Select the correct bolts, washers, and spacers for your TV

If you are in doubt about which size bolt to use, try one of the bolts in one of the four Vesa mounting holes on the back of your TV. A bolt that is too large will not fit in the hole at all, but make sure that the bolt size you choose is not too loose. It should grip the hole threads evenly and not wobble. After you determine which size bolts to use, go to the next step.

### ***M4 hardware assembly:***

- M4 x 12 mm bolts (**AA**) top screw holes
- M4 x 30 mm bolts (**BB**) bottom screw holes
- M4 lock washers (**KK**)
- M4/M5 flat washers (**QQ**)
- Small spacers (**PP**)

### ***M5 hardware assembly:***

- M5 x 12 mm bolts (**CC**) top screw holes
- M5 x 30 mm bolts (**DD**) bottom screw holes
- M5 lock washers (**LL**)
- M4/M5 flat washers (**QQ**)
- Small spacers (**PP**)

### ***M6 hardware assembly:***


- M6 x 12 mm bolts (**EE**) top screw holes
- M6 x 35 mm bolts (**FF**) bottom screw holes
- M6 lock washers (**MM**)
- M6/M8 flat washers (**RR**)
- Large spacers (**OO**)

### ***M8 hardware assembly:***


- M8 x 16 mm bolts (**GG**) or M8 x 20 mm bolts (**HH**) top screw holes
- M8 x 40 mm bolts (**II**) or M8 x 50 mm bolts (**JJ**) bottom screw holes
- M8 lock washers (**NN**)
- M6/M8 flat washers (**RR**)
- Large spacers (**OO**)

**STEP 5: Determine whether your TV has a flat back or an irregular or obstructed back or a curved screen**


- 1 Carefully place your TV screen face-down on a cushioned, clean surface to protect the screen from damages and scratches.
- 2 If your TV has a table-top stand attached, remove the stand. See the documentation that came with your TV for instructions.
- 3 Lay the TV brackets, oriented vertically, on the back of your TV.
- 4 Align the screw holes in the TV brackets with the mounting screw holes on your TV.
- 5 Identify which type of back your TV has:
  - **Flat back:** The brackets lay flush against the back of your TV and do not block any jacks. You do not need spacers when assembling the wall mount.

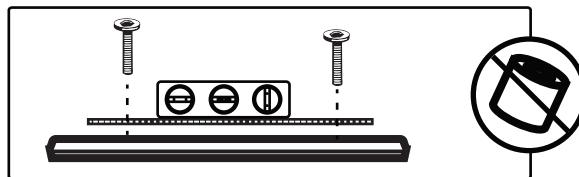


- **Obstructed back:** The brackets block one or more of the jacks on the back of your TV. You need spacers when assembling the wall mount.

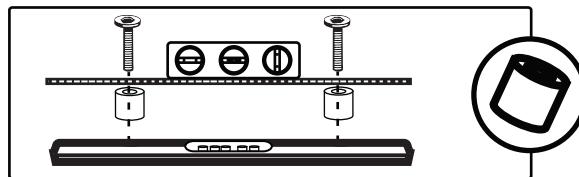

- **Irregularly-shaped back:** There is a gap between a bracket and some part of the back of your TV. You need spacers when assembling the wall mount.

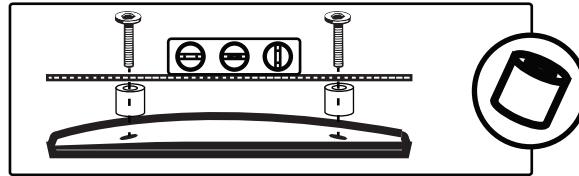


- 6 Remove the TV brackets.

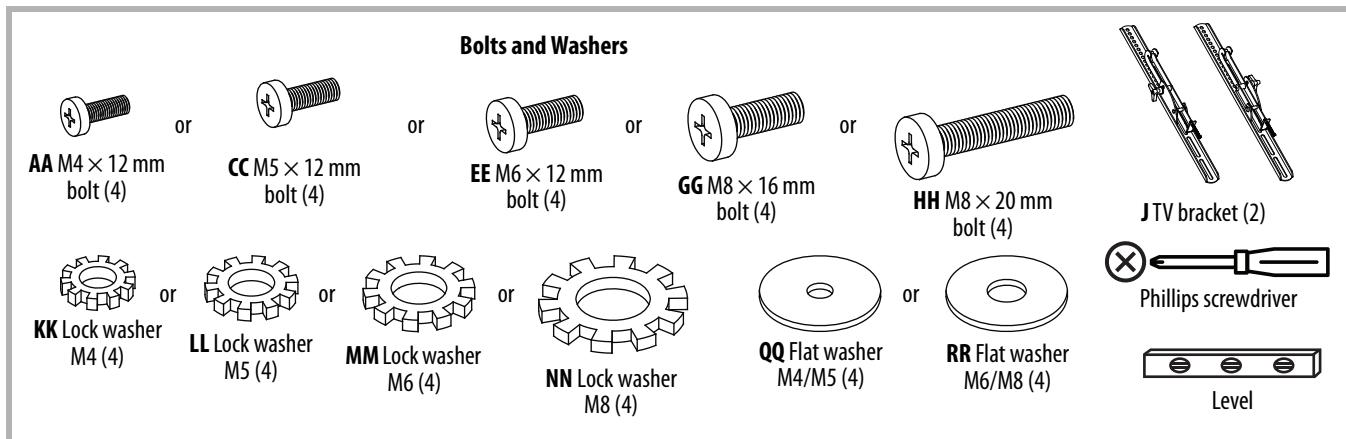**STEP 6: Option 1 - Mounting brackets on a TV with a flat back****You need:**

- 1 Insert the selected bolts through the washers and correct mounting holes on the TV brackets (J), then finger tighten them into the threaded holes on the back of your TV. Make sure that the TV brackets are centered and level with each other and that the hooks face the bottom of the TV.


**Note:** Lean the TV up against a wall or other solid surface when attaching with the TV brackets. DO NOT place the TV face down on the glass. This may cause permanent damage.

- 2 Tighten the bolts until they are snug against the TV brackets using a Phillips screwdriver. DO NOT over tighten.

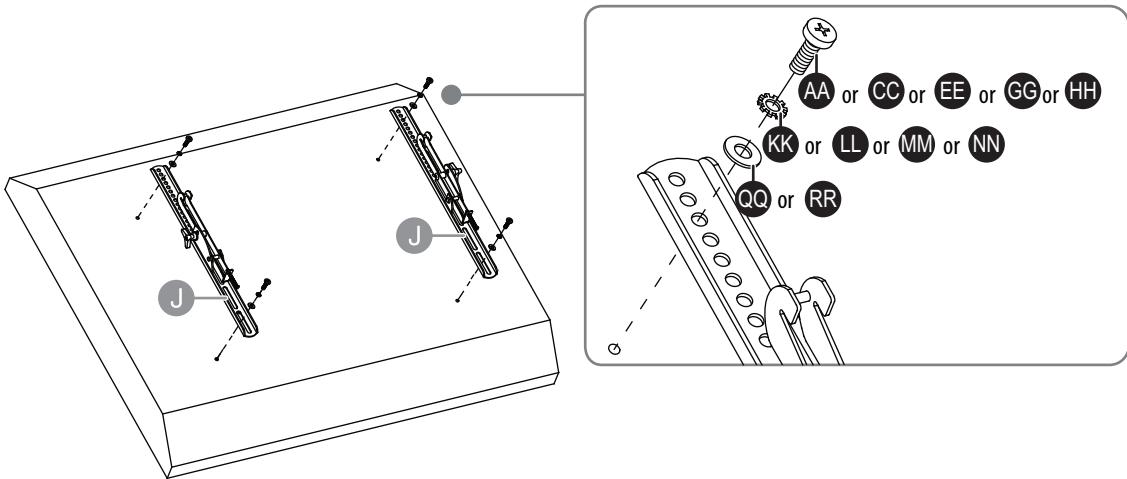

## STEP 6: Option 2: Mounting bracket on a TV with an irregularly shaped or obstructed back or a curved screen TV


You need:

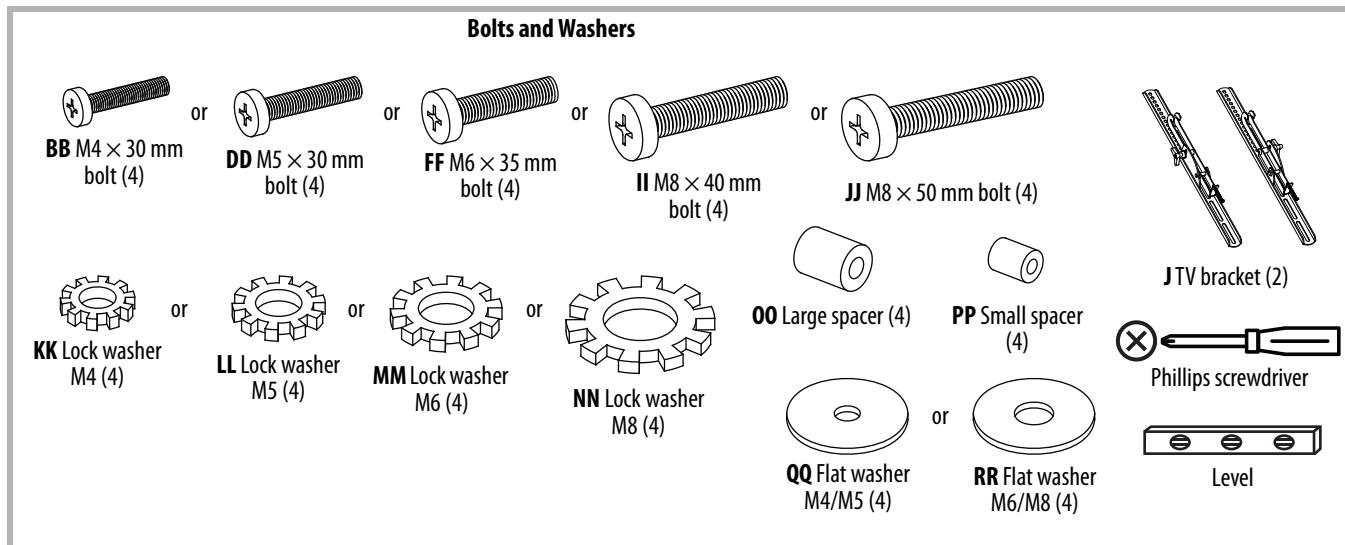

- 1 Insert the selected bolts through the washers and correct mounting holes on the TV brackets (J), then finger tighten them into the threaded holes on the back of your TV. Make sure that the TV brackets are centered and level with each other and that the hooks face the bottom of the TV.

**Note:** Lean the TV up against a wall or other solid surface when attaching with the TV brackets. DO NOT place the TV face down on the glass. This may cause permanent damage.


- 2 Tighten the bolts until they are snug against the TV brackets using a Phillips screwdriver. DO NOT over tighten.

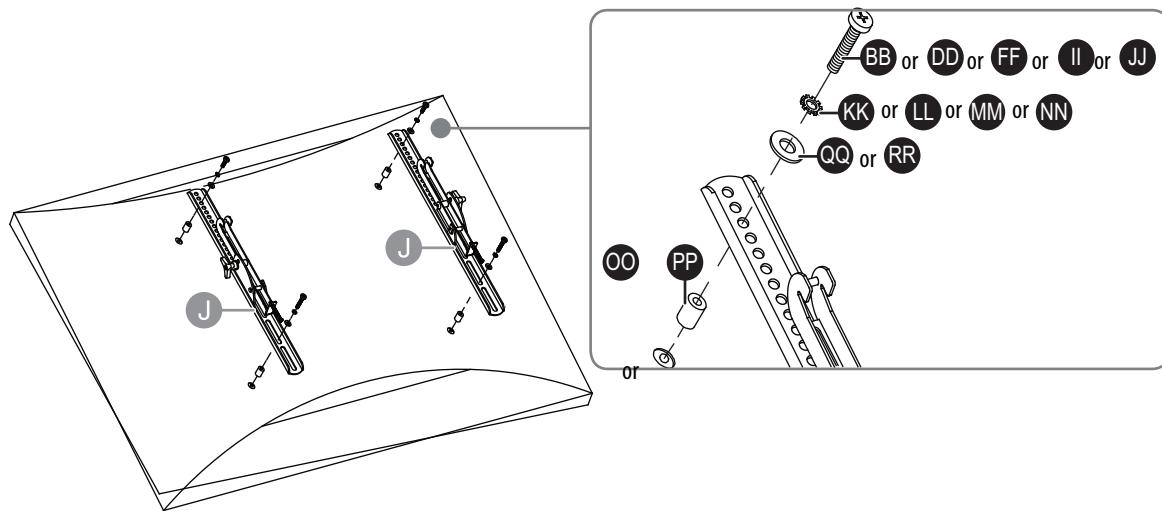


**STEP 7: Attach the TV to the mounting frame on the swivel bracket**

**Note:** If you are wall-mounting the TV, go to [Mounting the TV using the wall-mount configuration](#) on page 26.

 **You need:**




- 1 With the help of another adult, lift the TV up to the mounting frame (I).
- 2 Set the hooks on TV brackets (J) over the mounting frame (I), then lower the hooks onto the bars of the mounting frame.
- 3 Center the TV, then secure it in place using a Phillips screwdriver to tighten the safety bolt on the bottom hooks. Tighten until the safety bolt hits the underside of the mounting frame.

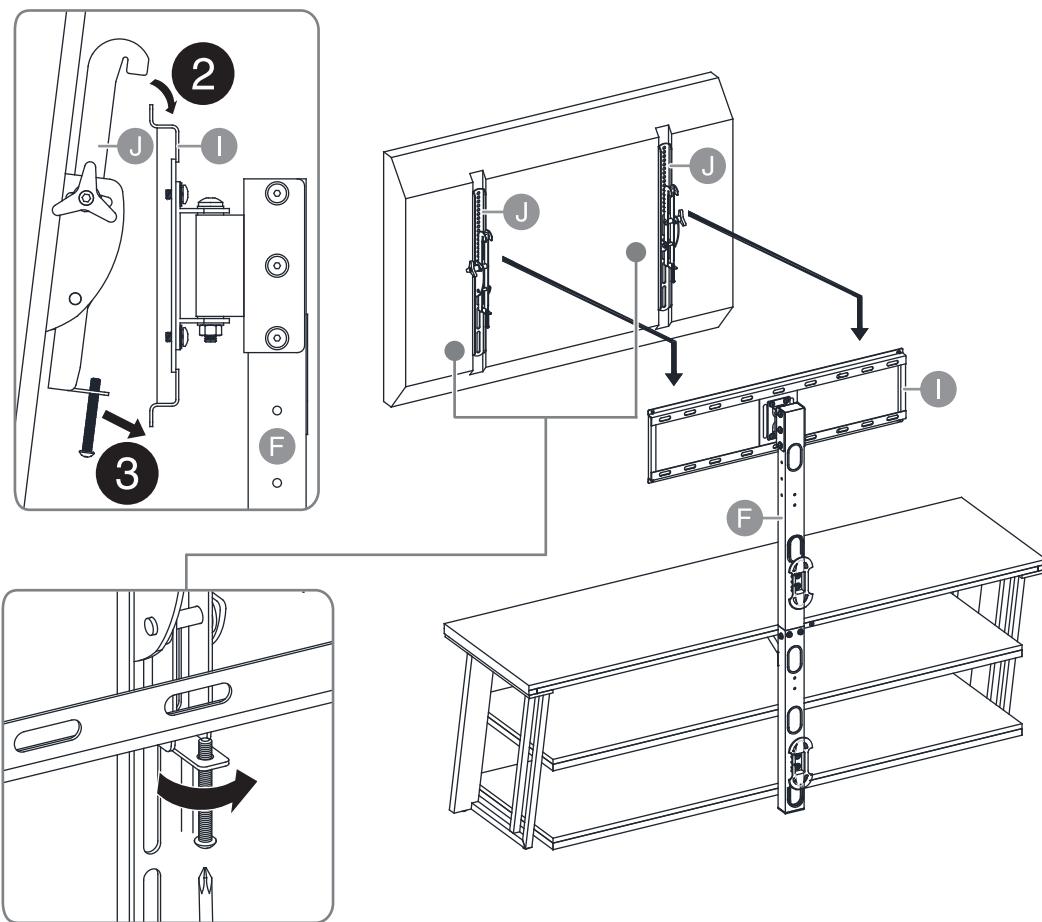

**STEP 8: Adjusting the tilt****You need:**

The TV brackets (J) let you make a tilt adjustment of up to 11° down and 5° up to provide optimum viewing and minimize glare.

- 1 Turn the tension knobs counterclockwise to loosen the knobs on both TV brackets (J), then grasp the edge of the TV and move it up or down to the position you want.
- 2 Turn the tension knob clockwise to tighten the brackets in position. Use the 4.8 mm hex key (X) to tighten the tension knobs, if necessary.

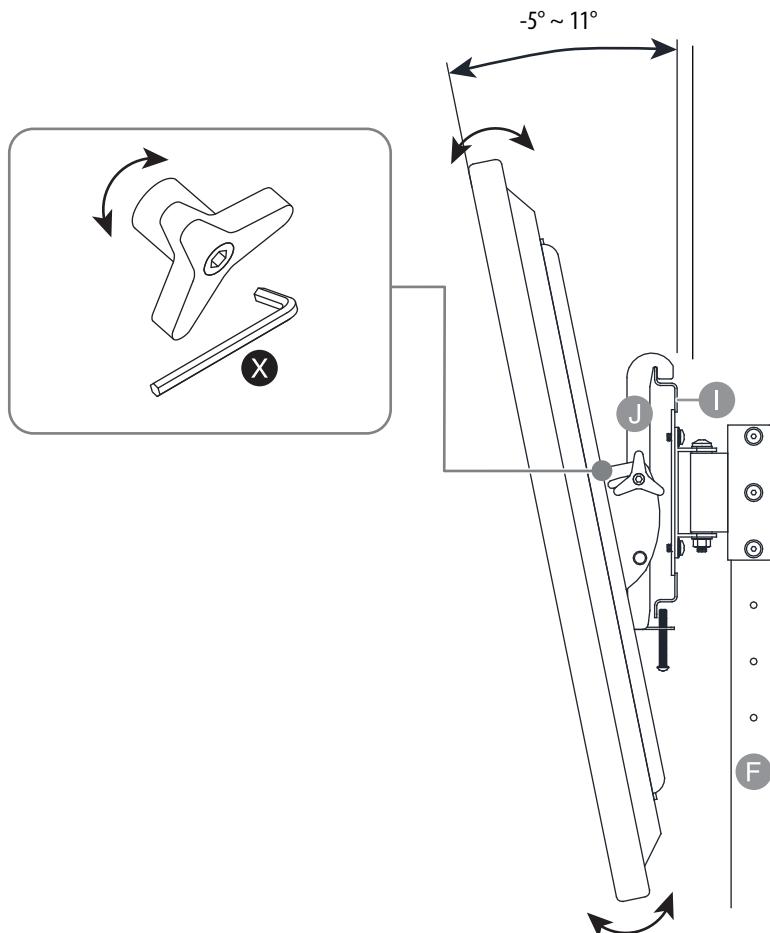

## STEP 9: Position your TV stand and install the tipping restraint hardware kit

You need:

**Z Tipping restraint hardware kit (1)**



**A** Metal bracket (2)



**B** Nylon strap (1)



**C** Long screw (1)



**D** Short screw (1)




Level



1/8" drill bit




Pencil

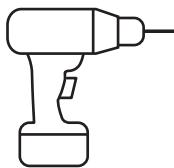

Power drill

- 1 Position your assembled stand against a wall where you plan to use it.
- 2 Adjust the leveling feet to level your TV stand.
- 3 Align the spine (F) with a stud and mark the wall at the center point of the stud. The mark should be within 3 in. (7.6 cm) of the bolt on the top of swivel bracket.
- 4 Using a 1/8" drill bit, drill a hole at the marked location and attach one metal bracket (A) using the long screw (C) included inside the tipping restraint (Z).
- 5 Remove one 5/8" bolt with the washers installed on the top of swivel bracket (H).
- 6 Attach the other metal bracket included inside the tipping restraint (Z) to the swivel bracket (H) using the removed bolt and washers.
- 7 Lace the end of the nylon strap (B) down through the mounting hole in each metal bracket. Bring both ends together and slide the flat end through the locking end and draw it through until all slack is removed.

**WARNING:** The tipping restraint must be installed correctly. Failure to do this could result in your TV/stand assembly falling forward, resulting in damage to equipment or personal injury.

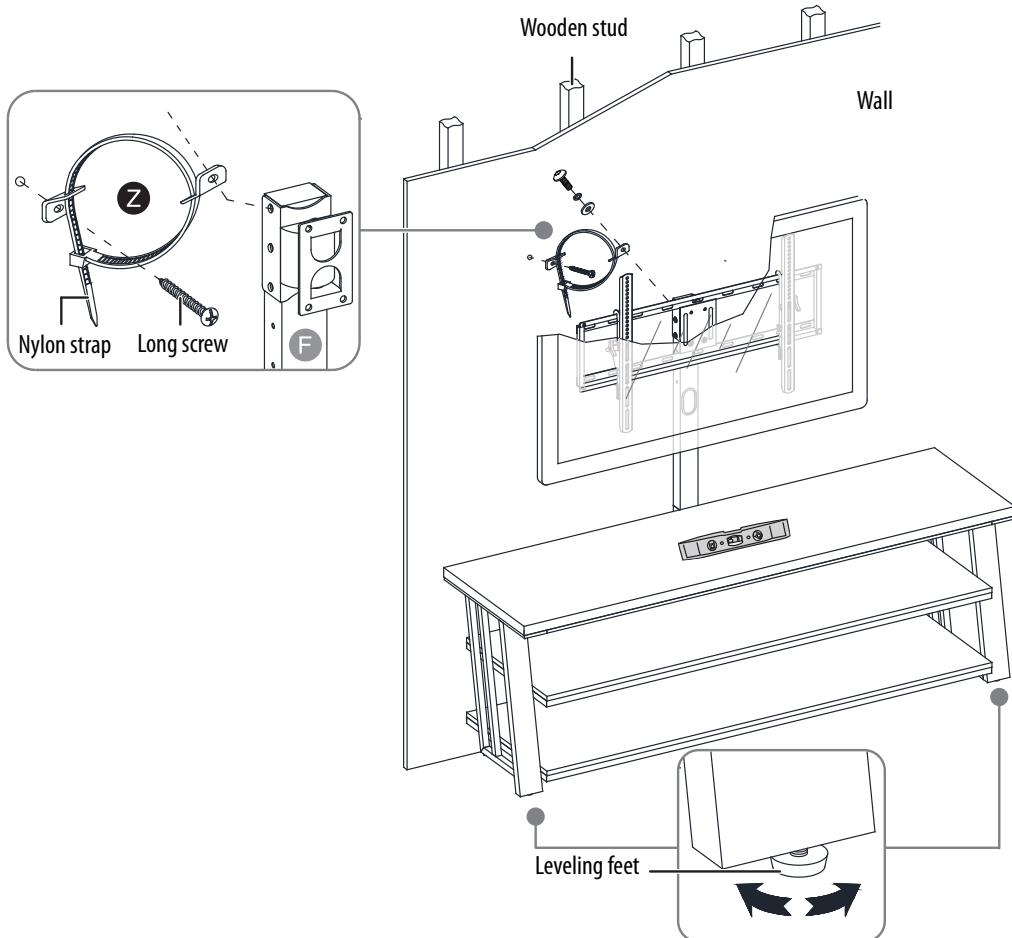


## Mounting the TV using the wall-mount configuration

### STEP 1: Remove the upper spine

You need:






- Unscrew the four bolts and the washers on the spine assembly (**F**), then remove the upper spine from the spine assembly.

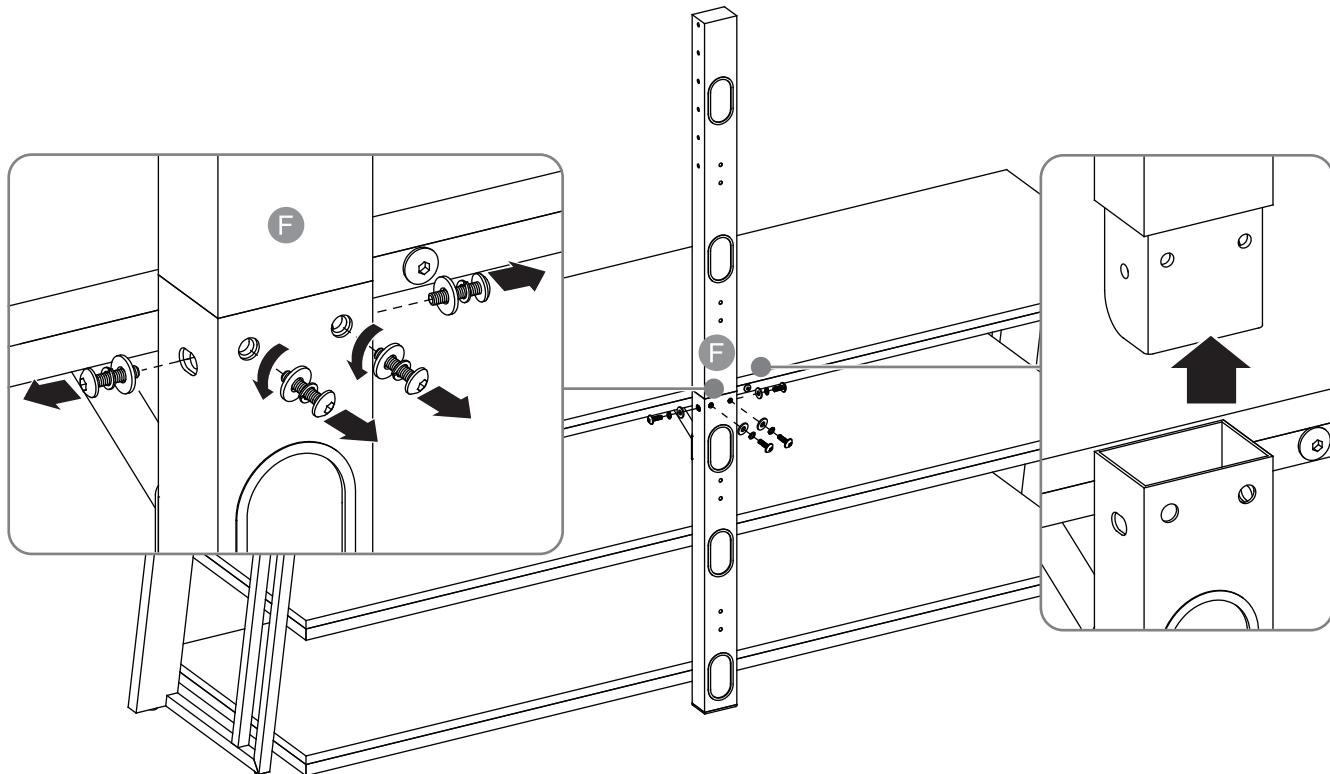



**STEP 2: Insert the end cap****You need:****V Plastic end cap (1)**

- Plug the plastic end cap (**V**) all the way onto the top of the lower spine (**F**).

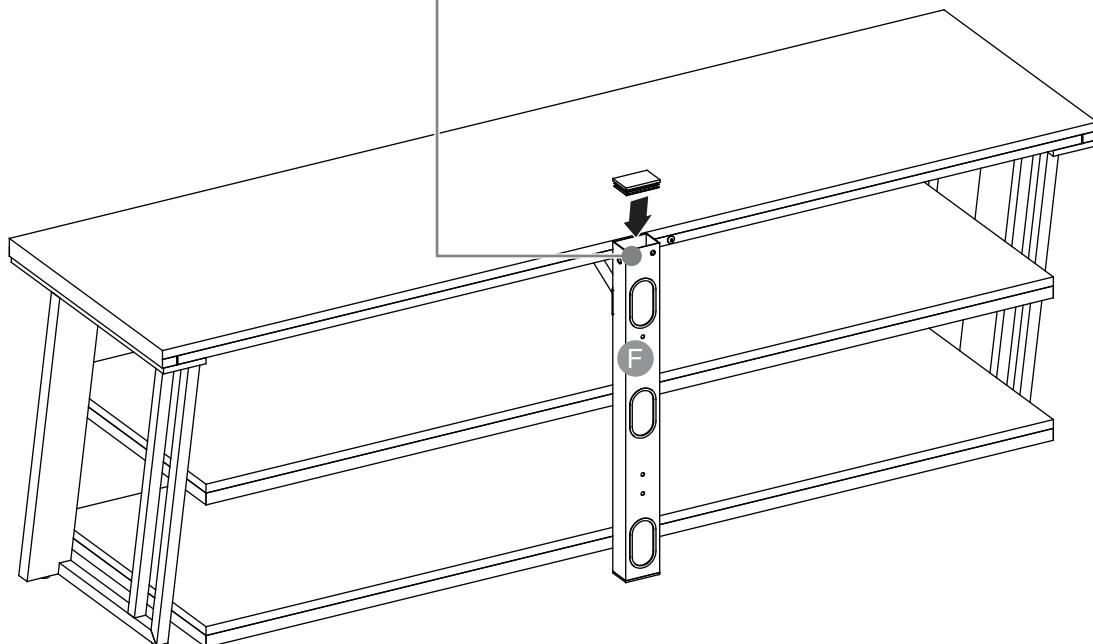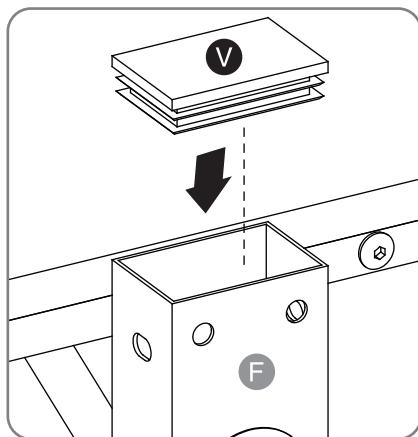

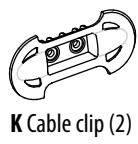**STEP 3: Attach the cable clips****You need:****K** Cable clip (2)**M** 5/8" bolt (4)**W** 4 mm hex key (1)

- Fasten two cable clips (**K**) to the back of lower spine (**F**) using four 5/8" bolts (**M**).

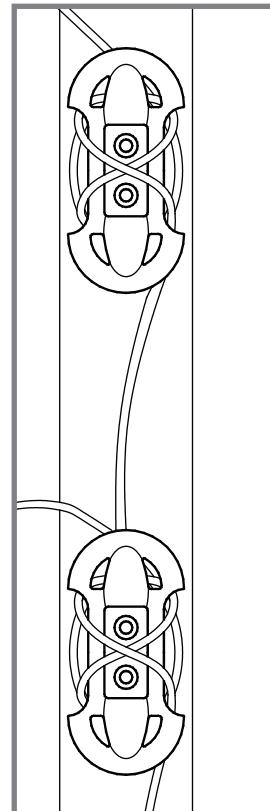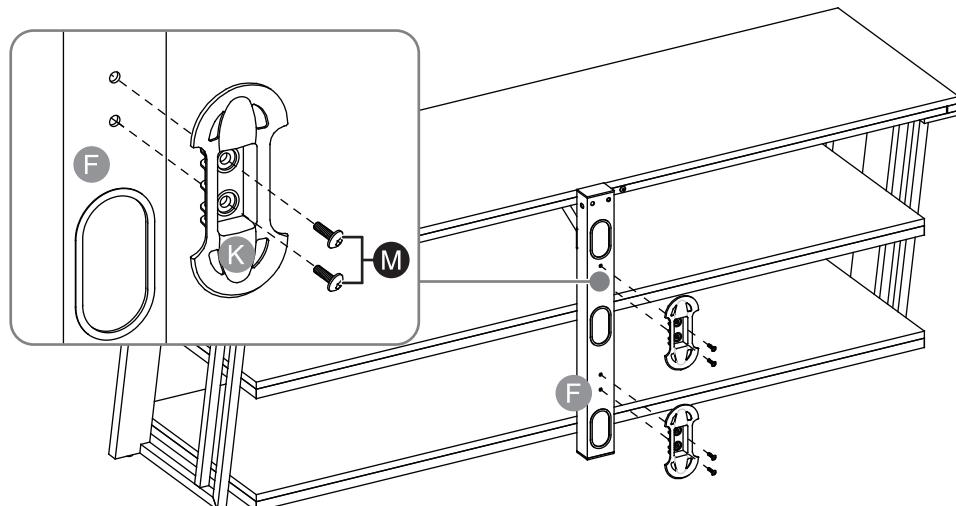


Cables wrapped on cable clips

## STEP 4: Option 1 - Mount the frame to a stud wall


If you are mounting the TV on a concrete or block wall, to go STEP 4: Option 2- Mount the frame to a block or concrete wall on page 30.


**You need:**

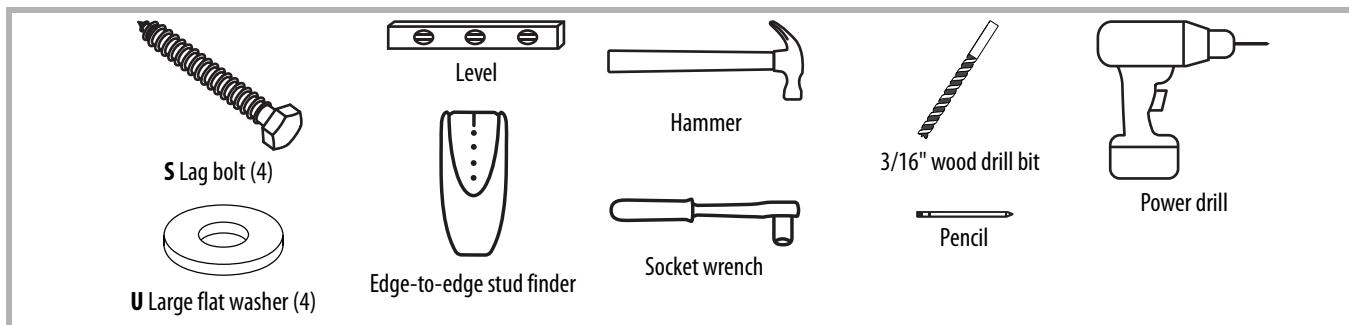

- 1 Use a stud sensor to locate two adjacent wall studs, then position the mounting frame (I) exactly between the two studs.
- 2 Use a level to make sure that the mounting frame is level, then mark the four mounting holes. Remove the mounting frame.
- 3 Drill four 3/16" (4.8 mm) holes 2.5" (64 mm) deep using a drill with 3/16" a wood drill bit.
- 4 Align the mounting frame (I) with the pilot holes, then secure the frame to the wall with four lag bolts (S) and four washers (U) using a socket wrench.

**CAUTION:** Make sure that the lag bolts are tight and secure, but do not overtighten them.

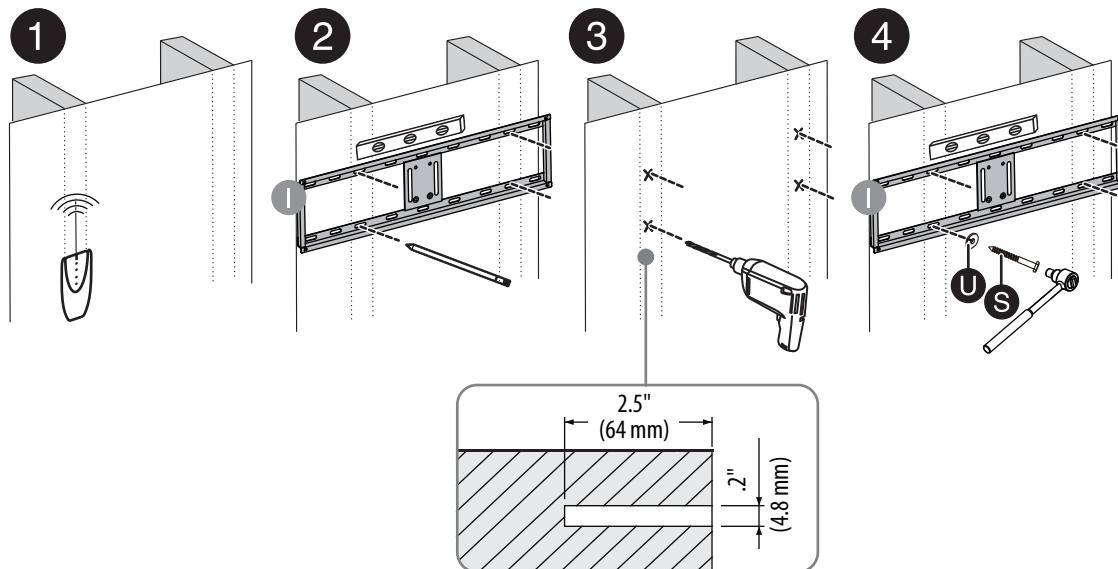

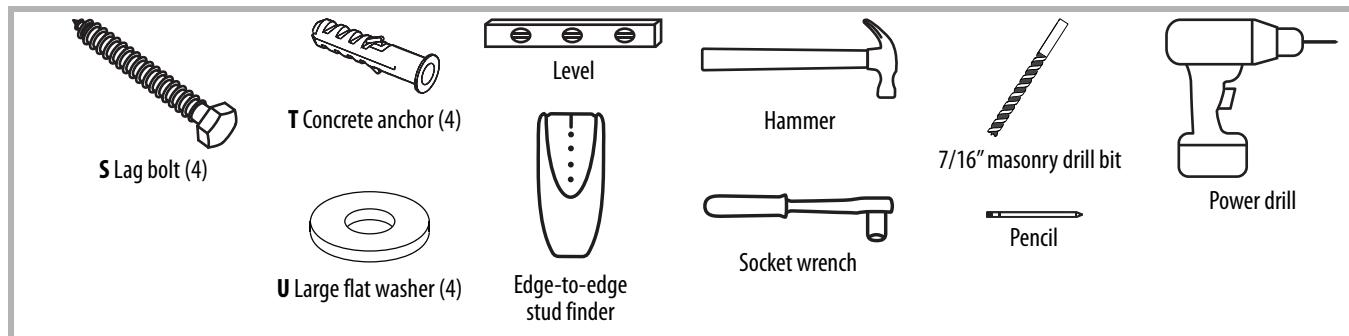
**STEP 4: Option 2- Mount the frame to a block or concrete wall****You need:**

- 1 Place the mounting frame (I) against the wall where you intend to mount the TV. Use a level to make sure that the mounting frame is level, then mark the four mounting holes on the wall. Remove the mounting frame.

**CAUTION:** Never locate the mounting holes into the mortar between blocks. The TV may fall causing damage or injury.


- 2 Drill four 7/16" (11 mm) holes through the screw marks to a depth of 2.5" (64 mm) using a drill with a 7/16" masonry drill bit.
- 3 Insert a concrete anchor (T) into each of the screw holes using a hammer.
- 4 Align the mounting frame over the concrete anchors.
- 5 Place a washer (U) over one of the mounting frame screw holes, then insert a lag bolt (S) and tighten.
- 6 Repeat the previous step for the other three screw holes.

**CAUTION:** Make sure that the lag bolts are tight and secure, but do not overtighten them.

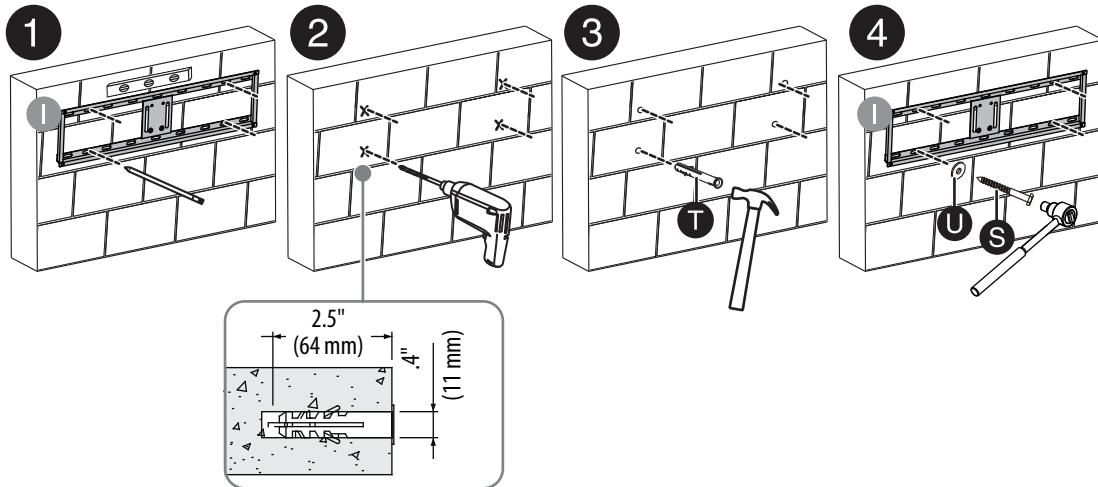


## STEP 5: Attach the TV to the mounting frame on the wall

 You need:



- 1 Depending on the type of TV that you own, attach the TV brackets (J) to the back of the TV following the steps in:
  - [STEP 5: Determine whether your TV has a flat back or an irregular or obstructed back or a curved screen on page 20](#)
  - [STEP 6: Option 1 - Mounting brackets on a TV with a flat back on page 21](#)
  - [STEP 6: Option 2: Mounting bracket on a TV with an irregularly shaped or obstructed back or a curved screen TV on page 22.](#)
- 2 With the help of another adult, lift the TV up to the mounting frame (I).
- 3 Set the hooks on TV brackets (J) over the mounting frame, then lower the hooks onto the bars on the mounting frame.
- 4 Center the TV, then secure it in place using a Phillips screwdriver to tighten the safety bolt on the bottom hooks. Tighten until the safety bolt hits the underside of the mounting frame.
- 5 Place your stand with the shelves under the TV.
- 6 Position your assembled stand against a wall where you plan to use it.
- 7 Adjust the leveling feet to level your TV stand.
- 8 Follow the instructions printed on the bag containing the tipping restraint hardware kit (Z) to attach the restraint hardware to the wall and your stand.


**WARNING:** The tipping restraint must be installed correctly. Failure to do this could result in your TV/stand assembly falling forward, resulting in damage to equipment or personal injury.

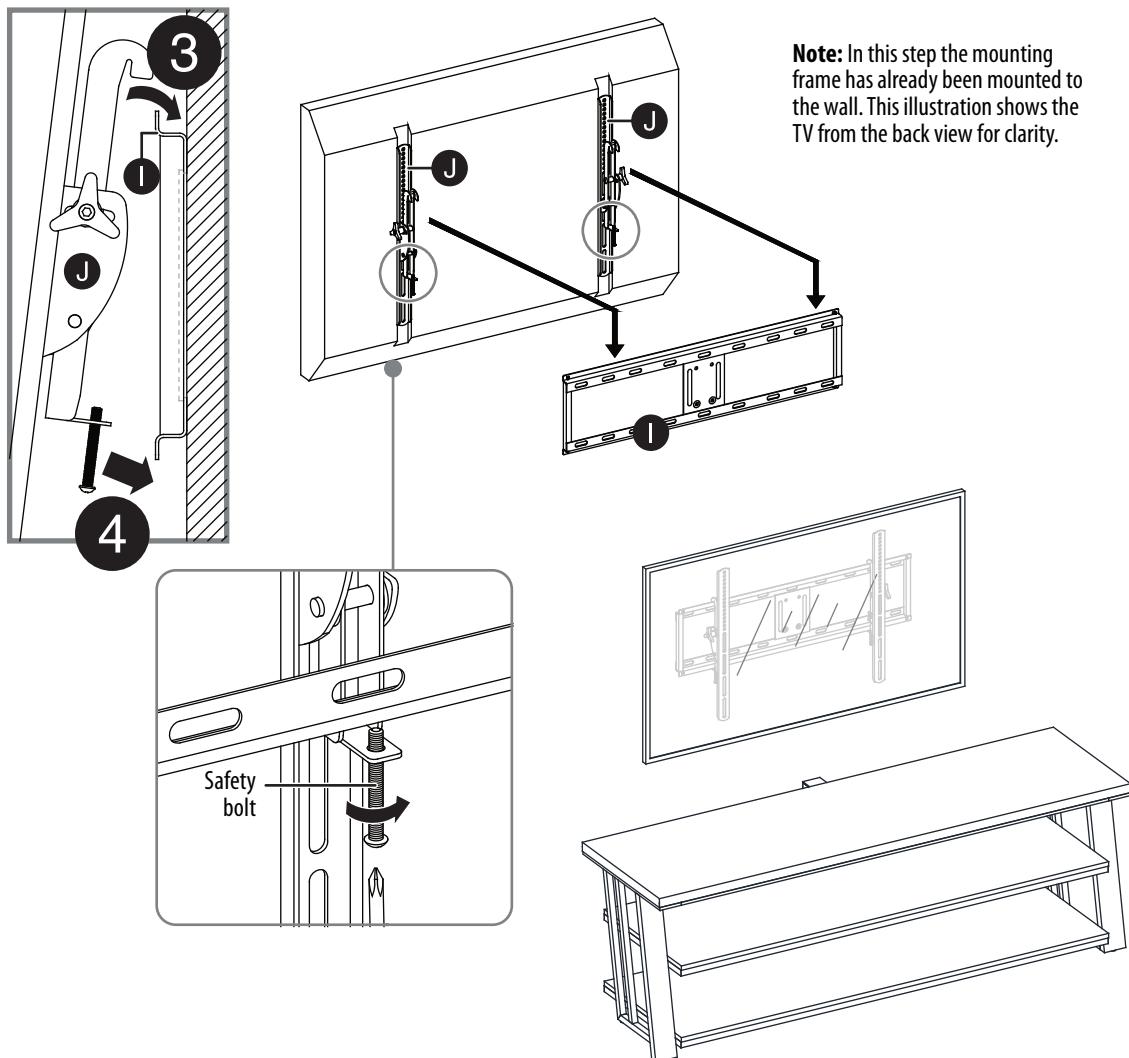

**STEP 6: Adjust the tilt****You need:****X 4.8 mm hex key (1)**

The TV brackets (J) let you make a tilt adjustment of up to 11° down and 5° up to provide optimum viewing and minimize glare.

- 1 Loosen the tension knobs on both TV brackets (J), then grasp the edge of the TV and move it up or down to the position you want.
- 2 Turn the tension knob clockwise to secure the brackets in position. Use the 4.8 mm hex key (X) to tighten the tension knobs, if necessary.

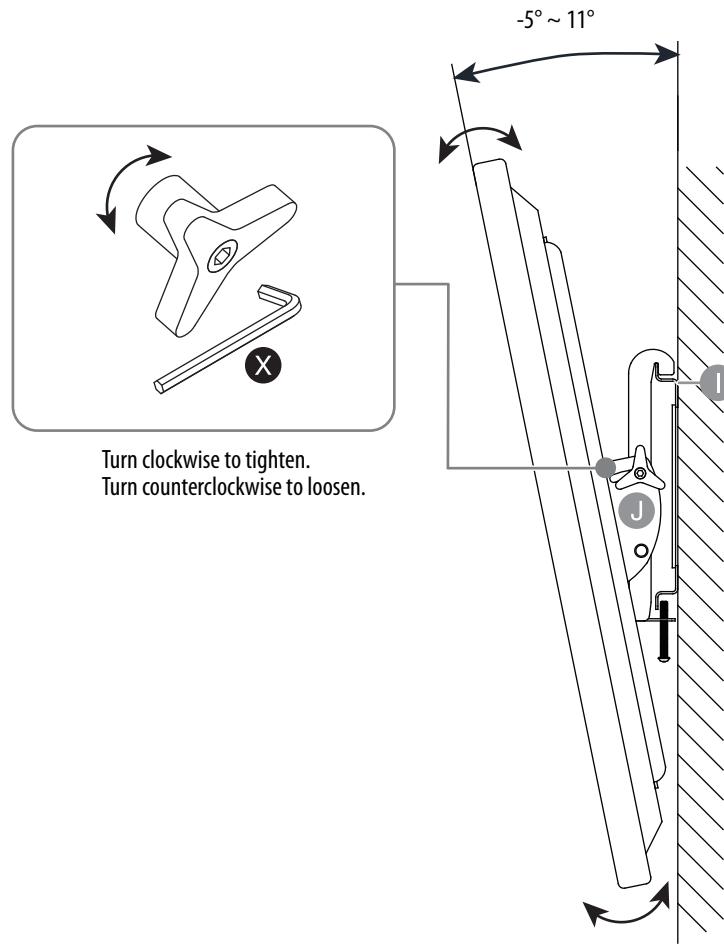


# Mounting the TV using the tabletop configuration


## STEP 1: Remove the upper spine

You need:





 
- Unscrew the four bolts and the washers on the spine assembly (**F**), then remove the upper spine from the spine assembly.

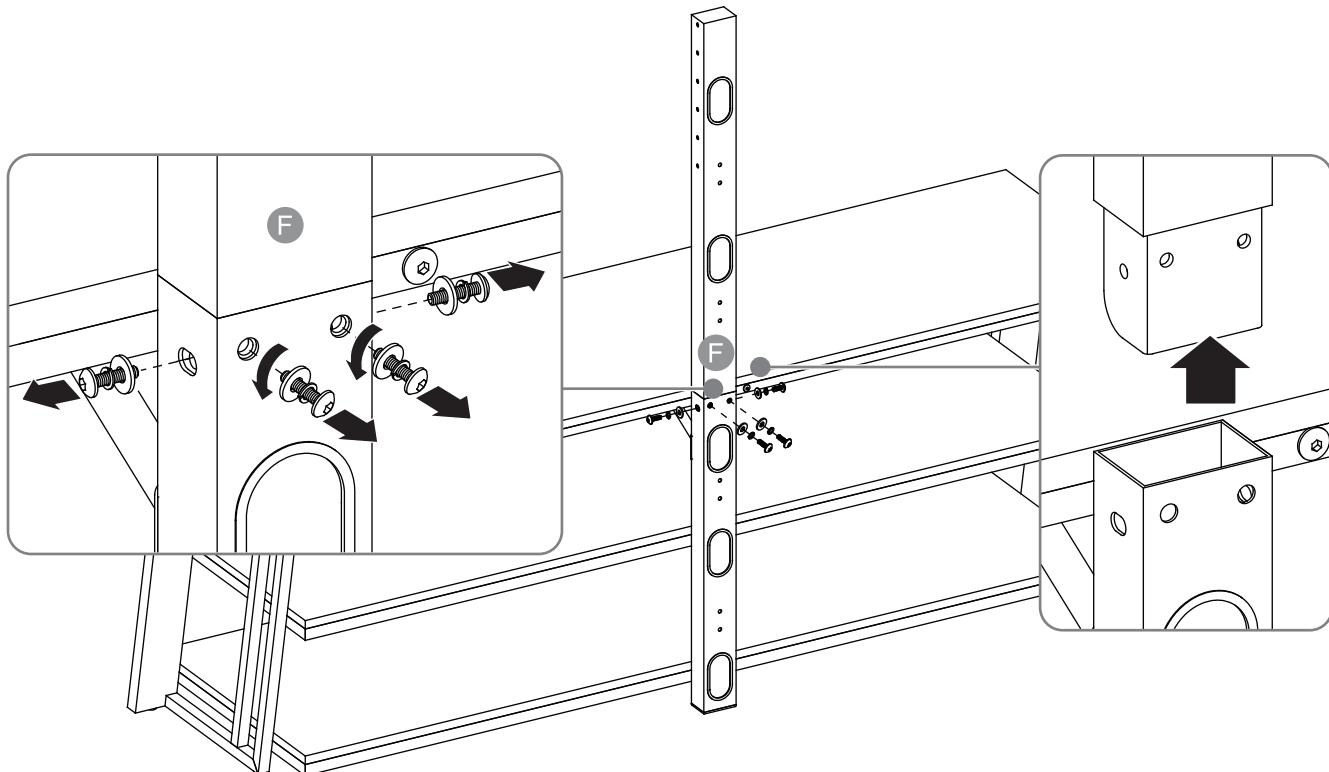



**STEP 2: Insert the end cap****You need:****V Plastic end cap (1)**

 
- Plug the plastic end cap (**V**) all the way onto the top of the lower spine (**F**).

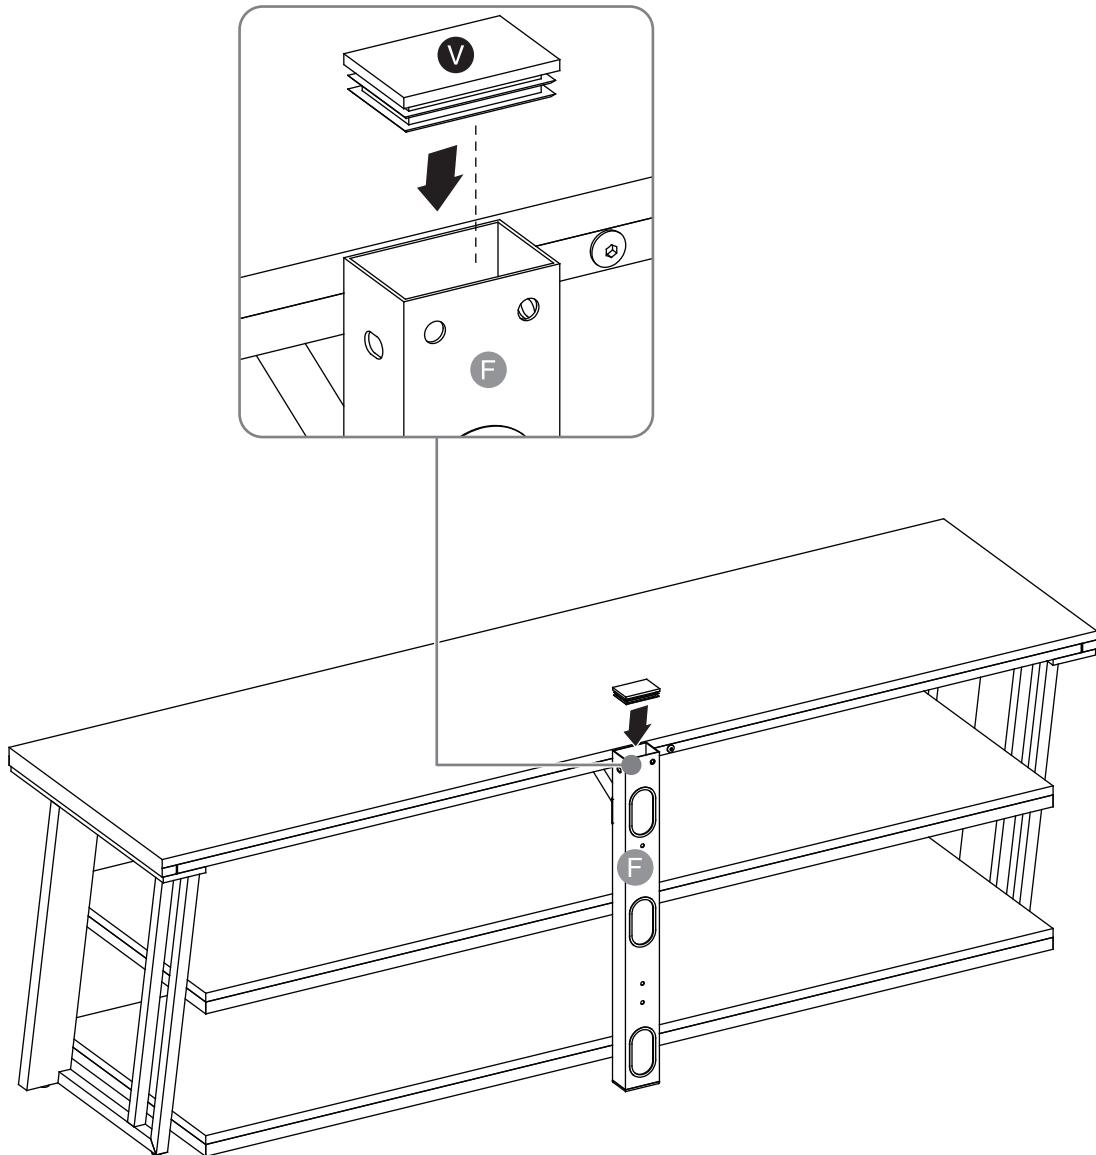

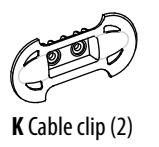**STEP 3: Attach the cable clips****You need:****K** Cable clip (2)**M** 5/8" bolt (4)**W** 4 mm hex key (1)


- Fasten two cable clips (**K**) to the back of lower spine (**F**) using four 5/8" bolts (**M**).

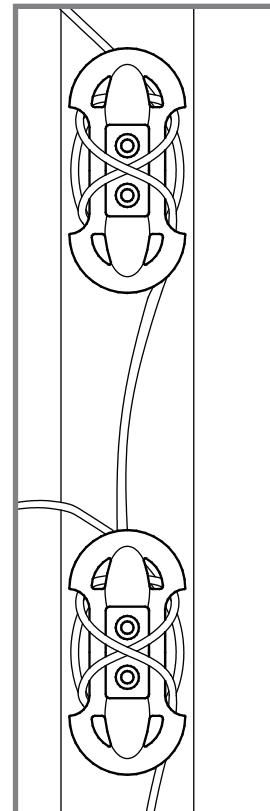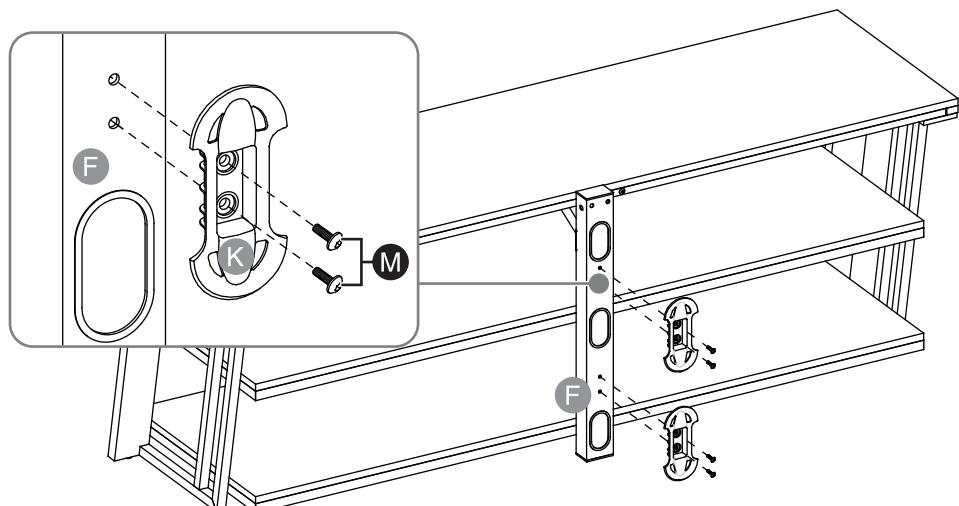Cables wrapped on  
cable clips

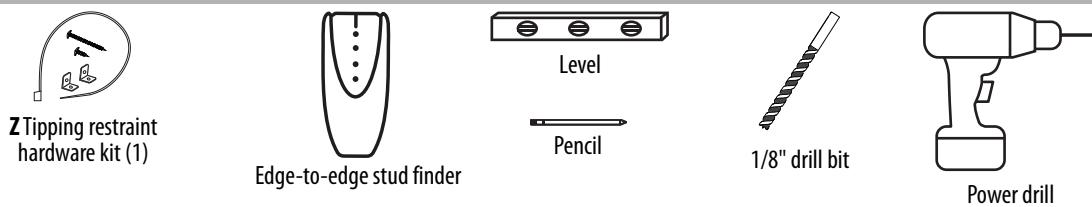**STEP 4: Position your TV stand and install the tipping restraint hardware kit****You need:**

- 1 Position your assembled stand against a wall where you plan to use it.
- 2 Adjust the leveling feet to level your TV stand.
- 3 Follow the instructions printed on the bag containing the tipping restraint hardware kit (Z) to attach the restraint hardware to the wall and your stand.

**WARNING:** The tipping restraint must be installed correctly. Failure to do this could result in your TV/stand assembly falling forward, resulting in damage to equipment or personal injury.

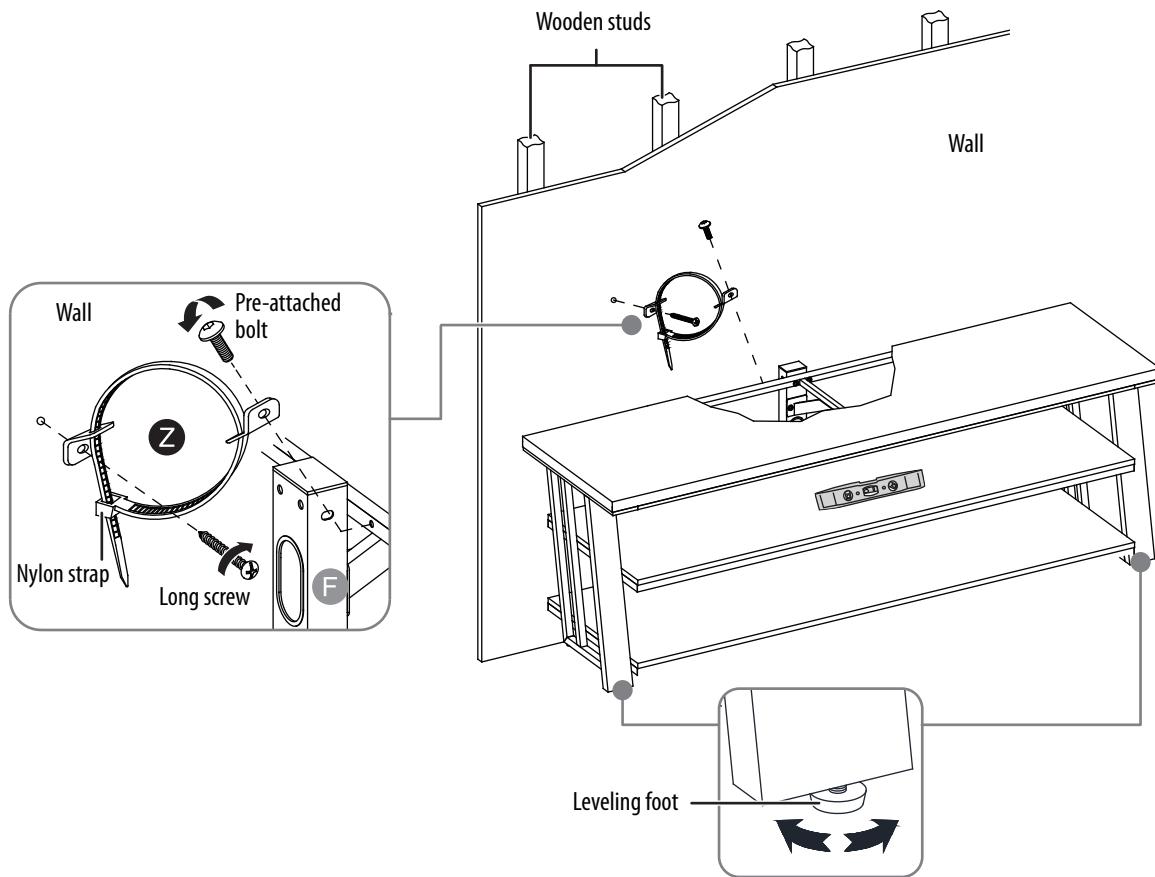

# Maintaining your TV stand

## Wood/Laminate

- Use your favorite type of furniture polish.
- Do not spray polish directly onto the stand. Spray onto a soft cloth, then wipe the stand.
- Always test any polish in a discrete location first, such as the back of the stand, to make sure that there is no adverse reaction.
- Dust frequently with a soft cloth.
- Never slide objects across surfaces. Lift objects from the top surface rather than dragging them across the finish when moving them.
- Do not expose your stand to direct sunlight, drying heat sources, or dampness.

## Metal

- For everyday cleaning of chrome, brass, aluminum, and painted metal surfaces, wipe with a slightly damp, soft cotton cloth, or vacuum to keep them looking their best.
- If soiled, wipe with clean sponge or cloth wrung out of water. Wipe dry with cloth or paper towel to avoid water spots.
- Don't use any harsh abrasives or chemicals to clean any metal surfaces because they may damage the protective coating.
- Metal rust if the finish is scratched or if your furniture is exposed to excessive humidity, particularly in salt water locations.
- Most metal furniture has a protective coating to prevent rust, however rust may occur if the finish is marred or wears away over time.

# Specifications

Dimensions (H × W × D)	22.3 × 65 × 21 in. (56.4 × 165.1 × 53.3 cm) With swivel floater: 57.8 × 65 × 21 in. (146.7 × 165.1 × 53.3 cm)
Weight	3-in-1 TV stand: Net weight: 91.4 lbs. (41.5 kg) Maximum overall weight: 200 lbs. (90.7 kg) Maximum top shelf weight: 100 lbs. (45.4 kg) Maximum lower shelf weight: 50 lbs. (22.6 kg) Maximum TV weight on swivel stand: 100 lbs. (45.4 kg)
Recommended screen range	37" to 75"diagonal (32.5 - 66" width)

# ONE-YEAR LIMITED WARRANTY

**Definitions:**

The Distributor\* of Insignia branded products warrants to you, the original purchaser of this new Insignia-branded product ("Product"), that the Product shall be free of defects in the original manufacturer of the material or workmanship for a period of one (1) year from the date of your purchase of the Product ("Warranty Period").

For this warranty to apply, your Product must be purchased in the United States or Canada from a Best Buy branded retail store or online at [www.bestbuy.com](http://www.bestbuy.com) or [www.bestbuy.ca](http://www.bestbuy.ca) and is packaged with this warranty statement.

**How long does the coverage last?**

The Warranty Period lasts for 1 year (365 days) from the date you purchased the Product. Your purchase date is printed on the receipt you received with the Product.

**What does this warranty cover?**

During the Warranty Period, if the original manufacture of the material or workmanship of the Product is determined to be defective by an authorized Insignia repair center or store personnel, Insignia will (at its sole option): (1) repair the Product with new or rebuilt parts; or (2) replace the Product at no charge with new or rebuilt comparable products or parts. Products and parts replaced under this warranty become the property of Insignia and are not returned to you. If service of Products or parts are required after the Warranty Period expires, you must pay all labor and parts charges. This warranty lasts as long as you own your Insignia Product during the Warranty Period. Warranty coverage terminates if you sell or otherwise transfer the Product.

**How to obtain warranty service?**

If you purchased the Product at a Best Buy retail store location or from a Best Buy online website ([www.bestbuy.com](http://www.bestbuy.com) or [www.bestbuy.ca](http://www.bestbuy.ca)), please take your original receipt and the Product to any Best Buy store. Make sure that you place the Product in its original packaging or packaging that provides the same amount of protection as the original packaging.

To obtain warranty service, in the United States and Canada call 1-877-467-4289. Call agents may diagnose and correct the issue over the phone.

**Where is the warranty valid?**

This warranty is valid only in the United States and Canada at Best Buy branded retail stores or websites to the original purchaser of the product in the country where the original purchase was made.

**What does the warranty not cover?**

This warranty does not cover:

- Food, beverage, and/or medicine loss/spoilage.
- Customer instruction/education
- Installation
- Set up adjustments
- Cosmetic damage
- Damage due to weather, lightning, and other acts of God, such as power surges
- Accidental damage
- Misuse
- Abuse
- Negligence
- Commercial purposes/use, including but not limited to use in a place of business or in communal areas of a multiple dwelling condominium or apartment complex, or otherwise used in a place of other than a private home.
- Modification of any part of the Product, including the antenna
- Display panel damaged by static (non-moving) images applied for lengthy periods (burn-in).
- Damage due to incorrect operation or maintenance
- Connection to an incorrect voltage or power supply
- Attempted repair by any person not authorized by Insignia to service the Product
- Products sold "as is" or "with all faults"
- Consumables, including but not limited to batteries (i.e. AA, AAA, C etc.)
- Products where the factory applied serial number has been altered or removed
- Loss or Theft of this product or any part of the product
- Display panels containing up to three (3) pixel failures (dots that are dark or incorrectly illuminated) grouped in an area smaller than one tenth (1/10) of the display size or up to five (5) pixel failures throughout the display. (Pixel based displays may contain a limited number of pixels that may not function normally.)
- Failures or Damage caused by any contact including but not limited to liquids, gels or pastes.

REPAIR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS YOUR EXCLUSIVE REMEDY FOR BREACH OF WARRANTY. INSIGNIA SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, INCLUDING, BUT NOT LIMITED TO, LOST DATA, LOSS OF USE OF YOUR PRODUCT, LOST BUSINESS OR LOST PROFITS. INSIGNIA PRODUCTS MAKES NO OTHER EXPRESS WARRANTIES WITH RESPECT TO THE PRODUCT. ALL EXPRESS AND IMPLIED WARRANTIES FOR THE PRODUCT, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE WARRANTY PERIOD SET FORTH ABOVE AND NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, WILL APPLY AFTER THE WARRANTY PERIOD. SOME STATES, PROVINCES AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE.

Contact Insignia:

**1-877-467-4289**

[www.insigniaproducts.com](http://www.insigniaproducts.com)

INSIGNIA is a trademark of Best Buy and its affiliated companies.

\*Distributed by Best Buy Purchasing, LLC

7601 Penn Ave South, Richfield, MN 55423 U.S.A.

©2024 Best Buy. All rights reserved.

# INSIGNIA™

[www.insigniaproducts.com](http://www.insigniaproducts.com)  
1-877-467-4289 (U.S. and Canada) or 01-800-926-3000 (Mexico)

INSIGNIA is a trademark of Best Buy and its affiliated companies.  
Distributed by Best Buy Purchasing, LLC  
7601 Penn Ave South, Richfield, MN 55423 U.S.A.  
©2024 Best Buy. All rights reserved.

V2 ENGLISH  
24-0555