


## PACKAGE CONTENTS


- Windows tablet
- USB cable
- AC power adapter
- Quick Setup Guide
- Important Information

## FEATURES


### Front

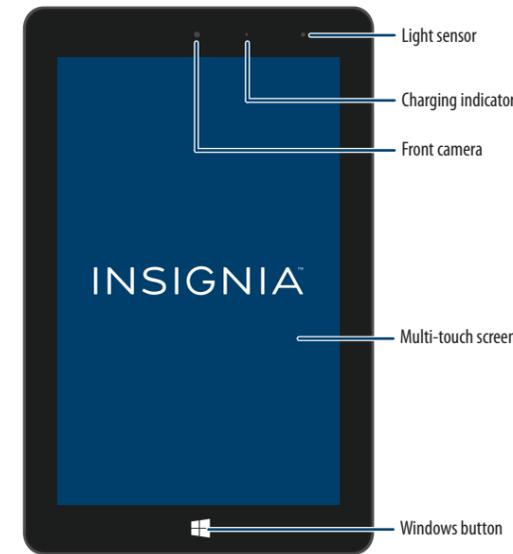


### Right side

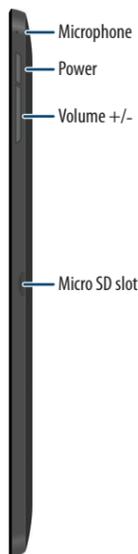


### Back

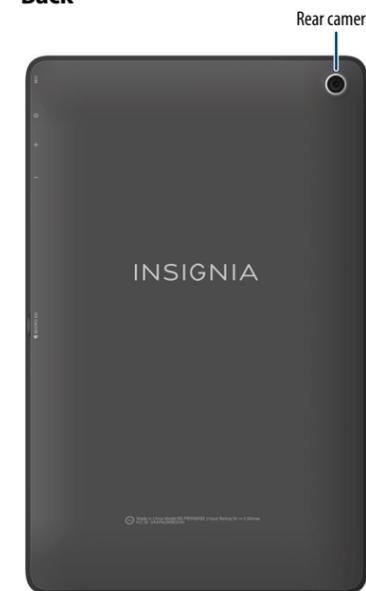

### Top side

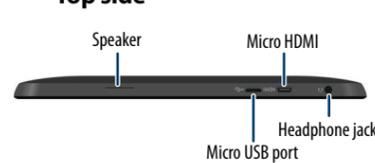

## SETTING UP YOUR TABLET

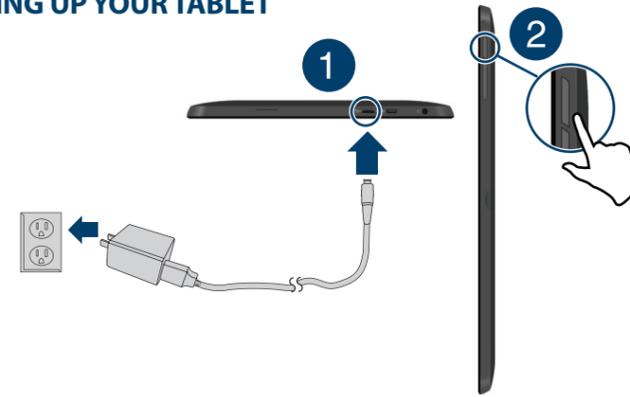

- 1 Connect the USB cable to your tablet and AC power adapter, then plug the adapter into a power outlet.  
**Note:** Charge your tablet fully before using it for the first time.
- 2 Press and hold the power button (⏻) to turn on the tablet.
- 3 Follow the on-screen instructions to set up your tablet.

## USING GESTURES TO NAVIGATE

<b>Tap</b>		Tap an item to open or select it.
<b>Touch and hold</b>		Touch an item and do not release until your tablet responds.
<b>Drag</b>		Touch and hold an item, then move your finger to where you want to place the item.
<b>Swipe</b>		Quickly slide your finger across the screen.
<b>Pinch</b>		Pinch your fingers together or move them apart.
<b>Rotate</b>		Rotate your tablet to change the screen orientation.

## FINDING YOUR WAY AROUND

### Start screen


Tap the button to open or close the Start screen.



### Action Center


The Action Center displays notifications and provides quick access to frequently used settings. To open the Action Center:

- Swipe from the right edge of your tablet toward the center of the screen.
- OR
- Tap in the lower-right corner of the taskbar.

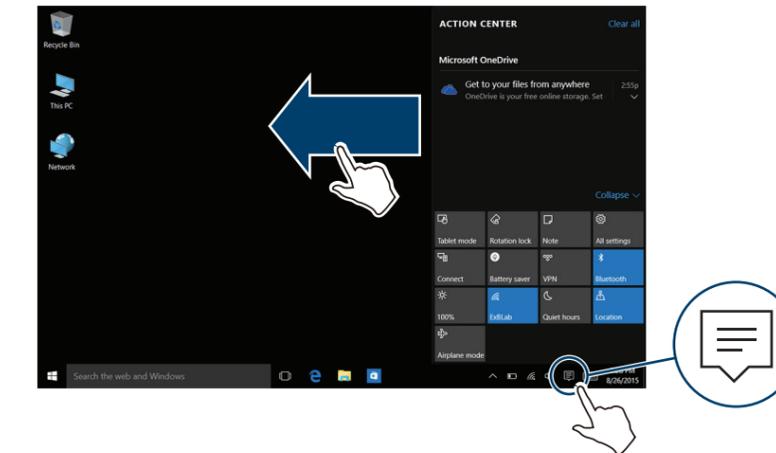

### Switch between tablet and desktop modes

Open the Action Center, then tap **Tablet mode** to switch between tablet and desktop modes.

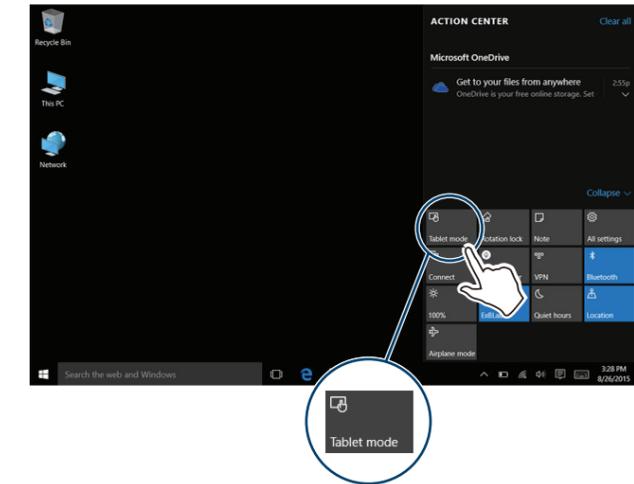

### Apps list

If in tablet mode, tap in the lower-left corner of the Start screen.


OR

If in desktop mode, tap in the lower-left corner of the Start screen, then tap **All apps**.

### Tablet mode



### Desktop mode

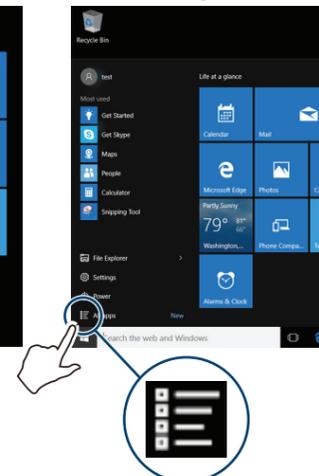


### FIND YOUR USER GUIDE ONLINE!

We are going green so a copy of your *User Guide* is not provided in the box but is available online.

Go to [www.insigniaproducts.com](http://www.insigniaproducts.com), then click **Support & Service**. Enter **NS-P89W6100** in the box under **Manual, Firmware, Drivers & Product Information**, then click ►.


### Search

If in tablet mode, tap  (search) in the taskbar, tap the search box to open the keyboard, then type what you are looking for.

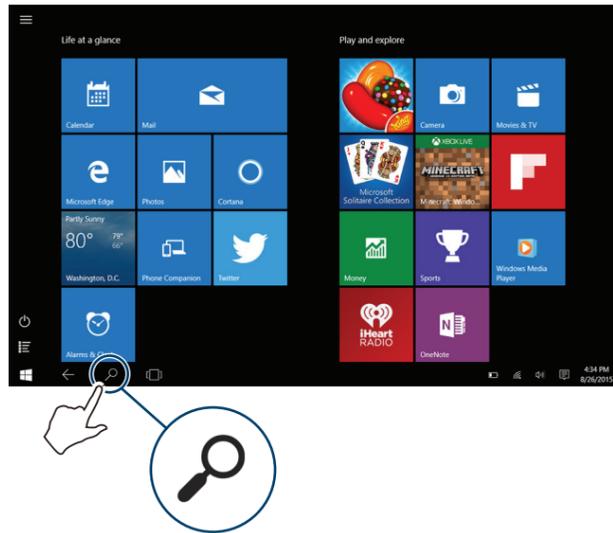


OR

If in desktop mode, tap the search bar, then type what you are looking for. If the on-screen keyboard does not open automatically, tap  (keyboard) in the lower-right corner of your screen.

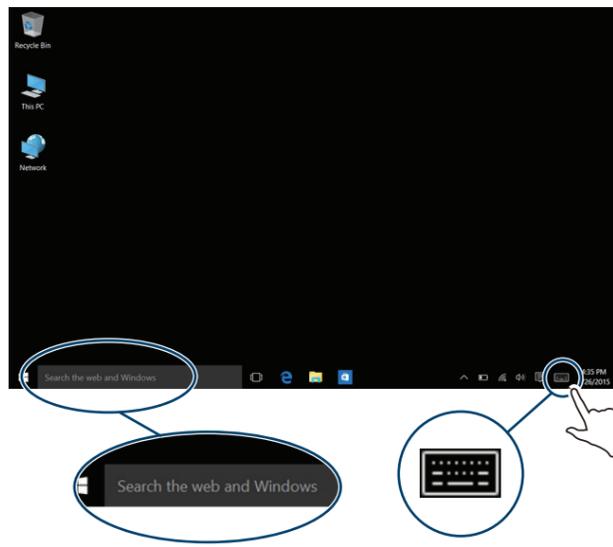

### Open task view

Tap  in the taskbar to view a list of open apps.

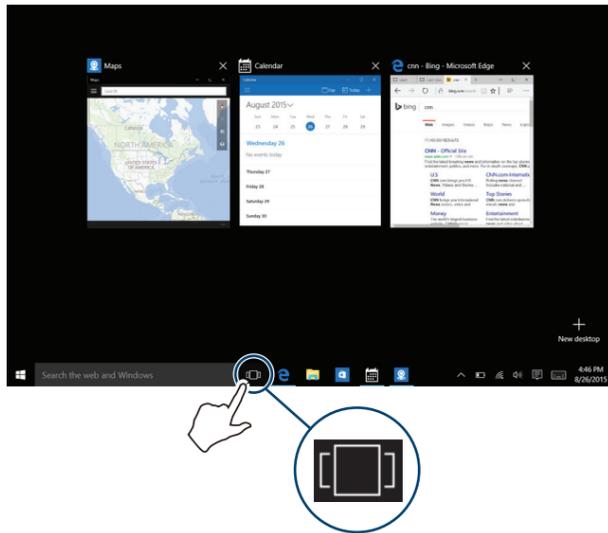

### CONNECTING TO WI-FI

1 In the taskbar, tap  or .


**Note:** If you see  you are already connected to Wi-Fi.



3 Tap the network that you want to connect to, then tap **Connect**.


**Note:** Tap the checkbox next to “Connect automatically” if you want your tablet to automatically connect to this network in the future.

4 If prompted, enter a network password, then tap **Next**.

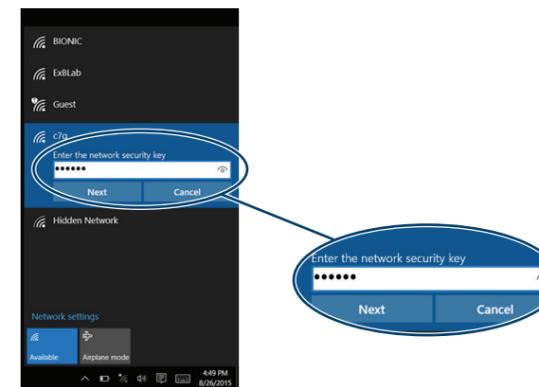


### TURNING OFF YOUR TABLET

• Press and hold the power button () for three seconds, then swipe down.

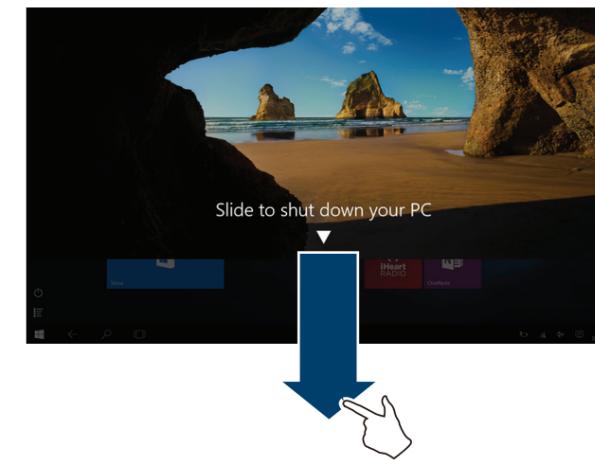


### USING A MICRO SD CARD

• With the label facing the back of your tablet, gently push the micro SD card (not included) into the MICRO SD slot until it clicks. Your tablet automatically opens your memory card files.

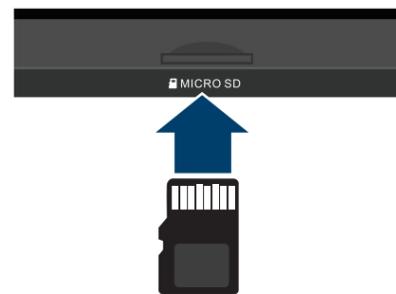

**Note:** Do not remove the card while data is being transferred.

2 Tap  **Wi-Fi** to turn on Wi-Fi, if needed. A list of available networks are displayed.

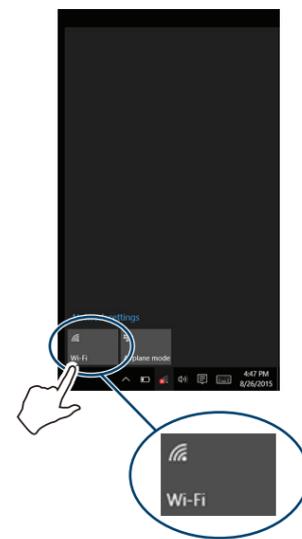

### NEED MORE INFORMATION?

- Look for troubleshooting in the *Important Information*.
- Open  **All apps**, then tap **Get Started** to learn more about Windows 10.
- Find more resources online at [www.insigniaproducts.com](http://www.insigniaproducts.com).

### ONE-YEAR LIMITED WARRANTY

Visit [www.insigniaproducts.com](http://www.insigniaproducts.com) for details.

### CONTACT BEST BUY

For customer service, call 1-877-467-4289 (Canada)  
[www.insigniaproducts.com](http://www.insigniaproducts.com)

Windows is a trademark or registered trademark of the Microsoft Corporation in the United States and/or other countries. Other company, product, or service names may be trademarks or service marks of others.

INSIGNIA is a trademark of Best Buy and its affiliated companies.

Distributed by Best Buy Purchasing, LLC  
©2015 Best Buy. All rights reserved.

**Made in China**