





QUICK SETUP GUIDE

RF-G1501 / RF-G1501-C, 4-Port HDMI Switch with 4K Compatibility

FRONT

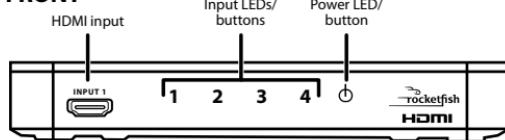

BACK

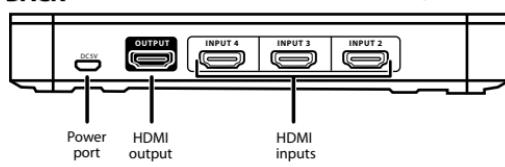

PACKAGE CONTENTS

- 4-Port HDMI Switch
- Power adapter
- Remote control
- Quick Setup Guide


FEATURES

Your 4-Port HDMI Switch supports 4K video and next-generation audio.

- Compatibility with most CEC-enabled HDMI devices
- **Resolution:** 480p, 720p, 1080p, and 4K (4096 x 2160)
- **Frame Rate:** Up to 4K at 60Hz (1080p at 240Hz)*
- **Color:** Deep Color, HDR, and other enhanced color specifications

Before using your new product, please read these instructions to prevent any damage.

REMOTE

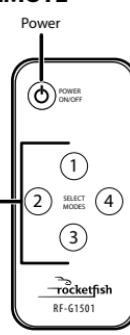

- **Audio:** Works with Dolby TrueHD, DTS-HD, and all audio formats supported by the HDMI 2.0 standard

- **Auto Switch:** When a source device is turned on, the switch automatically detects and switches to that device's input

Note: TVs with high internal refresh rates (such as 240Hz) are compatible. The specifications refer to source signal and not the TV refresh rate.

SETTING UP YOUR HDMI SWITCH

- 1 Connect HDMI cables from your source devices to the switch's input ports.
- 2 Connect an HDMI cable from your TV (or projector) to the switch's output port.
- 3 Connect the power adapter from the **DC 5V** port to a power outlet. The power LED and an input LED light up.


Note: To fully support 4K resolution, connect the input and output channels using HDMI Premium Certified cables 9.6 ft. (3 meters) or less in length.

Optional wall-mounting: Install two screws 4 in. (10.2 cm) apart into your wall, then hang the switch on the screws. Mounting hardware is not included.

USING YOUR HDMI SWITCH

- 1 Turn on your TV and the source device.
- 2 Turn on your switch by pressing the **POWER ON/OFF** button on your remote control or pressing the **Ø** (power) button on your switch.

Note: When the switch is turned on, it automatically switches to the last input that was used, unless Auto Switch is turned on. If Auto Switch is on, the switch goes to the device that is turned on.

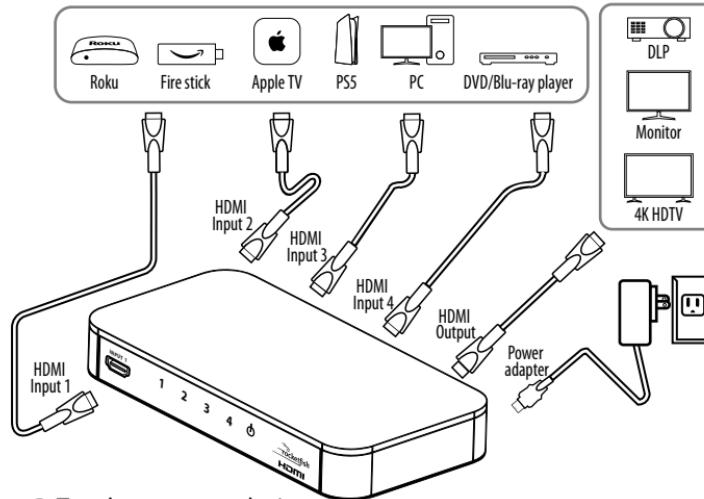

- 3 To select a source device:
 - Press the number on your remote that matches the input of the source device you want.
OR
 - Tap the number on your switch that matches the input port that your source device is connected to.
The corresponding input LED lights.
- 4 Use your source device as usual to play video and audio.
- 5 When finished, press and hold the **Ø** (power) button to turn off your switch.

Note: You may leave the power on while not in use.

SETTING UP THE AUTO SWITCH FUNCTION

The Auto Switch function automatically detects when a source device is turned on and switches to that device's input.


Note: The auto switch function setting is off by default.

- You can turn the auto switch function on or off by pressing and holding the  (power) button on the front panel for three seconds while the switch is turned off.
- The LEDs on the front panel flash twice to indicate that the auto switch function is turned off.
- The LEDs on the front panel turn on for two seconds to indicate that the auto switch is turned on.

Note: Some devices don't output an on/off detection signal to activate the auto switch function on your switch. If this causes signal confusion, turn off the auto switch function.

REPLACING THE REMOTE BATTERY

- 1 Push in the tab on the battery tray, then pull out the tray.

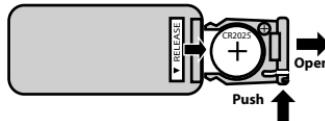

- 2 Remove the old battery. Insert a new CR2025 battery with the + facing up, then slide the tray closed.

SAFETY INFORMATION

WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH** of **CHILDREN**.
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.
- For treatment information call: 1 (800) 498-8666.



- a) Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- b) Even used batteries may cause severe injury or death.
- c) Call a local poison control center for treatment information.
- d) Compatible battery type is CR2025.
- e) Nominal battery voltage is 3V.
- f) Do not force discharge, recharge, disassemble, heat above 50°C/122°F or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.

g) Ensure the batteries are installed correctly according to polarity (+ and -).

- h) Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
- i) Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- j) Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries and keep them away from children.

TROUBLESHOOTING

No video and/or audio

- Make sure that all connections are correct and secure.
- Make sure that the switch is plugged in and turned on.
- Make sure that the switch is set to the correct source device.
- Make sure that your TV (or projector) is set to the input/source that your switch is connected to.
- Make sure that the audio and video formats (such as a Blu-ray disc) are supported by the source device and display that you are using.
- Unplug the switch's power cable, wait 10 seconds, then plug it back in again.
- Make sure that your TV or projector supports the video resolution that your source device is using.
- Make sure that your HDMI cable is not damaged. Try using a different HDMI cable.
- Long HDMI cables may cause signal loss. Try a different, shorter HDMI cable.
- Higher resolution settings require higher quality HDMI cables. Try using lower resolution settings if you are using standard HDMI cables 9.6 ft. (3 meters) or less in length.
- To fully support 4K @ 60Hz resolution, connect the input and output channels using HDMI PREMIUM Certified cables.

Input source will not change

If you are changing the source with the switch:

- Press more firmly and touch the button longer.
- Make sure that you are not wearing gloves and that your fingers are clean and dry.
- Try changing the source with a remote.

If you are changing the source with a remote:

- Move closer to the switch and make sure that there is a line of sight between the switch and remote sensors.
- Replace your remote control's battery.
- Try changing the source with the controls on the switch.

Notes:

- When the CEC function fails, confirm whether your source and display devices support CEC.
- When CEC malfunctions cause screen output abnormalities, turn off the CEC function of your source or display devices.

SPECIFICATIONS

Dimensions (H ×W × D): 1.02 × 3.4 × 6.9 in. (2.6 × 8.6 × 17.5 cm)

Weight: .66 lbs. (.3 kg)

Power supply with micro USB connector: 5V DC/0.6A

LEGAL NOTICES

FCC Statement

1. FCC Caution - §15.21:

"Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment."

2. FCC Statement - §15.105(b):

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- It is recommended that a dealer or an experienced radio/TV technician is contacted for help.

3. The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.

ONE-YEAR LIMITED WARRANTY

Visit www.rocketfishproducts.com for details.

CONTACT ROCKETFISH:

For customer service, call 1-800-620-2790 (U.S. and Canada)
www.rocketfishproducts.com

ROCKETFISH is a trademark of Best Buy and its affiliated companies.

Distributed by Best Buy Purchasing, LLC

Richfield, MN 55423

©2025 Best Buy. All rights reserved.