

QUICK SETUP GUIDE

Dual Waffle Maker

NS-WM2CBK6

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- 1 Read all Instructions.
- 2 Do not touch hot surfaces. Use handles or knobs.
- 3 To protect against electric shock, do not immerse the cord, plugs, or waffle maker in water or other liquid.
- 4 Close supervision is necessary when any appliance is used by or near children.
- 5 Unplug from the outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the waffle maker.
- 6 Do not operate the waffle maker with a damaged cord or plug or after the waffle maker malfunctions, or has been damaged in any manner. Return the waffle maker to the nearest authorized service facility for examination, repair or adjustment.
- 7 The use of accessory attachments not recommended by the waffle maker's manufacturer may cause injuries, fire, or electric shock.
- 8 Do not use outdoors.
- 9 Do not let the power cord hang over the edge of a table or counter, or touch hot surfaces.
- 10 Do not place on or near a hot gas or electric burner, or in a heated oven.
- 11 Do not use the waffle maker for other than its intended use.
- 12 Make sure that your household voltage corresponds to the voltage stated on your waffle maker's rating label.
- 13 Allow your waffle maker to cool completely before moving it.

- 14 This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

SAVE THESE INSTRUCTIONS

PACKAGE CONTENTS

- Waffle maker
- Quick Setup Guide

FEATURES

- Automatic temperature control
- Non-stick cooking plates for easy cleaning
- Cord wrap on the base for storing your power cord when not in use
- Stores upright to save space
- Power and ready light
- Cool-touch handle



#	ITEM	DESCRIPTION
1	Handle	Use to easily move and store the waffle maker when not in use.
2	Handle lock	Locks the lid into place.
3	Indicator light	<ul style="list-style-type: none"> • Lights when the waffle maker is plugged in. • Turns off when the waffle maker is preheated. • Lights when your waffles are cooking. • Turns off when your waffles are done.
4	Non-stick cooking plates (not visible)	Pour the waffle batter on the lower plate and close the lid to cook.

BEFORE USING YOUR WAFFLE MAKER FOR THE FIRST TIME

- 1 Remove all packaging materials.
- 2 Wipe the cooking plates with a sponge or cloth dampened in warm water.
 - Caution:** Do not immerse your waffle maker in water, and do not run water directly onto the cooking plates.
- 3 Dry the plates with a cloth or paper towel.

USING YOUR WAFFLE MAKER

Note: The first time you heat your waffle maker, it may emit some smoke or odor, which is normal. This does not affect the safety of your waffle maker.

For best results, lightly coat the cooking plates with a little cooking oil or cooking spray.

- 1 Close your waffle maker and plug it into a power outlet. The power light turns on.



Preheating takes approximately two to four minutes. When your waffle maker is preheated, the power light turns off.



- 2 Open the lid, then pour the waffle batter until it just covers the raised squares on the bottom plate.
- 3 Close the lid and latch the handle lock. The light turns on.



The waffle cooks for approximately two to four minutes. When your waffle is done cooking, the light turns off again.



- 4 Unlatch the handle lock and use the handle to open the lid, then use a plastic spatula to remove the contents. Never use metal tongs or a knife because these can damage the non-stick coating on the cooking plates.
- 5 Disconnect the power cord from the power outlet and leave your waffle maker open to cool.

STORING YOUR WAFFLE MAKER

- 1 Unplug your waffle maker.
 - 2 Make sure that your waffle maker is cool.
 - 3 Clean and dry the cooking plates and exterior, if necessary.
 - 4 Close the lid and lock it into place.
 - 5 Wrap the power cord around the cord wrap bracket on the base of your waffle maker.
 - 6 Use the handle to move the waffle maker.
- Note:** The waffle maker can be stored upright.

MAINTENANCE AND CLEANING

- Do not disassemble your waffle maker for cleaning.
- Never immerse your waffle maker in water or place it in a dishwasher.
- Do not use anything abrasive (such as metal scouring pads or steel wool) that can scratch or damage the non-stick coating or exterior finish.
- Do not use metal utensils to remove food residue because they can damage the non-stick surface.

To clean your waffle maker:

- 1 Unplug your waffle maker and let it to cool before cleaning. The cooking plates are easier to clean when they are slightly warm.



- 2 Wipe the cooking plates with a soft, damp cloth or sponge to remove food residue. For baked on food residue, squeeze some warm water mixed with detergent over the food residue or place a wet paper towel over the residue to soften it. Remove the residue with a non-abrasive, plastic scouring pad, then wipe the cooking plates with a soft damp cloth or sponge.
- 3 If necessary, wipe the outside of your waffle maker with a damp cloth.

SPECIFICATIONS

Measurements (H×W×D): 3.6 × 9 × 9.1 in
(9.2 × 22.9 × 23.1 cm)

Maximum temperature: 200 +/-20°

Wattage: 760W

Voltage: 120V

ONE-YEAR LIMITED WARRANTY

Visit www.insigniaproducts.com for details.

CONTACT INSIGNIA:

For customer service, call 1-877-467-4289 (U.S. and Canada) or 01-800-926-3000 (Mexico)
www.insigniaproducts.com

INSIGNIA is a trademark of Best Buy and its affiliated companies
Distributed by Best Buy Purchasing, LLC
7601 Penn Ave South, Richfield, MN 55423 U.S.A.

©2018 Best Buy. All rights reserved.

Made in China