

USER'S MANUAL

Mini Tower Fan ES10037US

THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

Please give us a chance to make it right and do better!

Contact our friendly customer service department for help first.

Replacements for missing or damaged parts will be shipped ASAP!

Follow Costway



Contact Us!

Do NOT return this item.

Contact our friendly customer service department for help first.



Before You Start

- ⚠ Please read all instructions carefully.
- ⚠ Retain instructions for future reference.
- ⚠ Separate and count all parts and hardware.
- ⚠ Read through each step carefully and follow the proper order.
- ⚠ We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
- ⚠ Always place the product on a flat, steady and stable surface.
- ⚠ Keep all small parts and packaging materials for this product away from babies and children as they potentially pose a serious choking hazard.

Important safety instructions

When using any electrically powered product, basic safety precautions should always be followed.

PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE USING THE PRODUCT.

- Check the household voltage to ensure it matches the units rated specification before operating.
- Close supervision is necessary when the unit is used by or near children or pets, or left unattended.
- Do not allow children to play with any product packaging, such as plastic bags.
- Do not operate the unit with a damaged cord or plug, after the product malfunctions, or has been dropped or damaged in any way. Return the complete product to an authorised service facility for examination and repair.
- This product is intended for domestic use only and not for commercial, industrial or outdoor use.
- Always turn the unit off and unplug before moving location.
- To disconnect from the power supply, grip the power adaptor and pull from the power socket. Never pull by the cord.
- Do not operate the unit in areas where petrol, paint, or other flammable liquids are used or stored.
- Do not use the unit in artificially hot or humid conditions or allow it to be used in any hazardous environment.
- Do not place the unit near an open flame, cooking or heating appliance, or hot surface.
- This unit is not intended for use in wet or damp locations. Never locate the unit in an area where it may fall into a sink or other water container. Always use on a dry level surface.
- Do not let the power cord hang over the edge of a table or counter. Arrange the power cord away from an area where it may be tripped over.
- Never place the power cord under a carpet or rug.
- Do not place objects on the product or allow objects to obstruct the inlet or outlet openings. Do not operate in close proximity to walls or curtains, etc.
- The use of attachments or accessories not recommended or sold by Necessity is not recommended as they may cause injury to persons or property and void the warranty.
- Do not attempt to repair the unit, to repair the unit take it to a qualified service engineer.
- If the cord is damaged it must be replaced by the Manufacturer or an authorised service centre in order to avoid a hazard.

- 1, 1) Always Unplug This Product Before Installing or Replacing Fuses
- 2) Do not operate any fan with a damaged cord or plug. Discard fan or return to an authorized service facility for examination and/or repair.
- 3) Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
- 4) Use Only With a Fuse Rated 2.5 Amperes, 125 Volts.

2, READ AND SAVE THESE INSTRUCTIONS

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

Warning:

- a) The user needs to clean and maintain the tower fan regularly to avoid fire, electric shock or personal injury, such as lubrication;
- b) The user needs to unplug or disconnect the appliance from the power supply before servicing.

 
4, WARNING :To Reduce The Risk Of Fire Or Electric Shock, Do Not Use This Fan With Any Solid-State Speed Control Device.

5, This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded or returned to an authorized service facility for examination and/or repair.

- 6, a) Do not operate any fan with a damaged cord or plug. Discard fan or return to an authorized service facility for examination and/or repair.
- b) Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.


User servicing instruction

- a) Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
- a) Open fuse cover. The manufacturer shall indicate the specific way to open the cover, such as, Slide open fuse access cover on top of attachment plug towards blades, or Push on tabs located next to the blades.
- c) Remove fuse carefully. The manufacturer shall indicate the appropriate way to remove the fuse, such as whether to push the fuse from the other side or turn fuse holder over to remove fuse.
- d) Risk of fire. Replace fuse only with 2.5 Amp, 125 Volt fuse (provided with product). The blank shall be filled in with the current rating of the fuse. Words located in parenthesis are applicable only if the replacement fuse is provided with the product.
- e) Close fuse cover. The manufacturer shall indicate the specific way to close the cover, such as, Slide closed the fuse access cover on top of attachment plug, or Push cover closed so that all tabs latch.

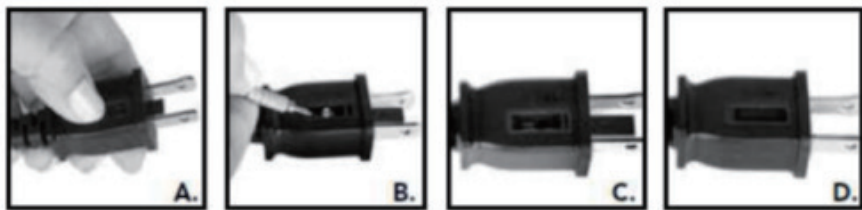

Risk of fire. Do not replace attachment plug. Contains a safety device(fuse, AFCI, LCDI) that should not be removed. Discard product if the attachment plug is damaged.

 Parts description

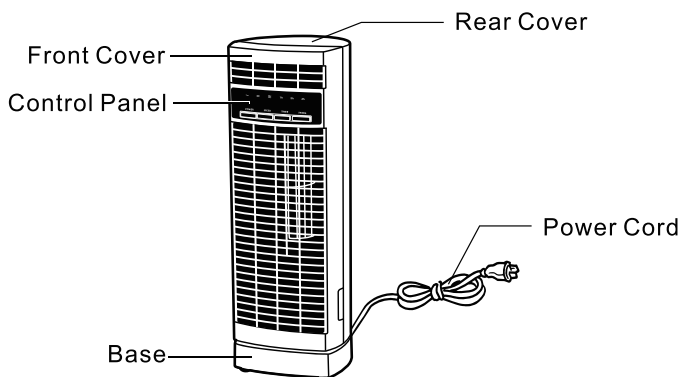

Operating instructions

The fan is operated by pushing the buttons on the control panel (Fig 1).

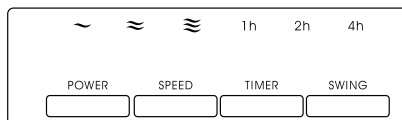 



Fig 1

POWER

·Press the button marked **POWER** to turn on, press again, to stop.

SPEED

 ·Press the button marked **SPEED** to change the speed setting
 ~ (low) ≈ (medium) and ≡ (high), LED light will show current speed

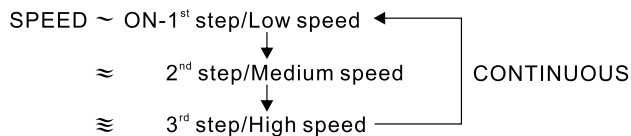


SWING

·Press the button marked **SWING** to make the fan oscillate in horizontal direction.
 Press again to switch off this function.

TIMER

 ·Press the button marked **TIMER** to change the running time of the fan. The timer can be set to run for 1, 2, or 4 hours, and the light will display the timer level set; Press five times to switch this function off.



Maintenance

- Before you clean the appliance, switch the product OFF; remove the plug from the power socket.
- Use a damp cloth to clean the product housing.
- Do not use water, detergents, abrasive cleaning liquids, or chemical agents (Alcohol, Gasoline etc.) to clean the appliance.
- Store in a dry, dust free area.

Specifications

Model	Voltage	Frequency	Power
ES10037US	120V	60Hz	35W

Welcome to visit our website and purchase our quality products!

With your inspiring rating, COSTWAY will be more consistent to offer you
EASY SHOPPING EXPERIENCE, GOOD PRODUCTS and EFFICIENT SERVICE!

US office: Fontana, California

UK office: Ipswich



- * Reward Points
- * Exclusive Customer Service
- * Personalized Recommendations
- * Permanent Shopping Cart
- * Order History

5 Star Rating



We would like to extend our heartfelt thanks to
all of our customers for taking time to assemble
this product and giving us valuable feedbacks.

THANK
you
😊

