


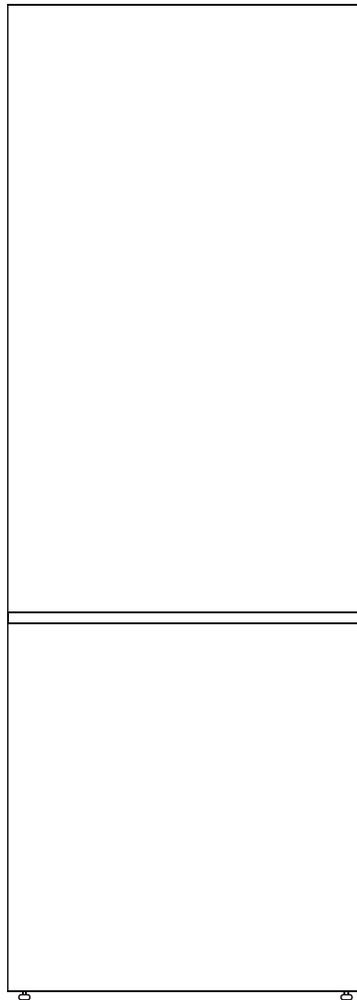

TALL REFRIGERATOR BOTTOM FREEZER Model - MDRF 359WE



OWNER'S MANUAL

Please read the instructions carefully and keep for future reference. Information may be updated from time to time so please refer to the manual online for the latest version of the manual.

Warranty

Conserv Appliances undertakes to the consumer-owner to repair or, at our option, to replace any part of this product which proves to be defective in workmanship or materials under normal personal, family or household use, in the USA and Canada, for a period of one year from the date of original purchase. For commercial use, the product is warranted for a period of 90 days. During this period, we will provide all labor and parts necessary to correct such defect, free of charge, if the appliance has been installed and operated in accordance with the written instructions with the appliance. Ready access to the appliance, for service, is the responsibility of the consumer-owner. Service would be provided from Monday to Friday between normal business hours.

Exclusions

In no event shall Conserv Appliances be liable for incidental or consequential damages or for damages resulting from external causes such as abuse, misuse, incorrect voltage or acts of God. This warranty does not cover service calls which do not involve defective workmanship or materials covered by this warranty. Accordingly, diagnosis and repair costs for a service call which does not involve defective workmanship or materials will be the responsibility of the consumer-owner.

Specifically, the following work is not covered under warranty and does not constitute warranty work

Installation – e.g. installing as built-in

Maintenance – e.g. cleaning appliance using solvents

Mishandling – e.g. breakage of shelves

Most work is covered. The defining factor is, has the machine malfunctioned (Conserv Appliances is responsible) or has the customer omitted or done something to cause the machine to malfunction (customer is responsible). Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation of exclusion may not apply to you.

WARRANTY SERVICE

This warranty is given by:

Conserv Appliances

10222 Georgibelle Drive, Suite 200
Houston, TX 77043-5249

For Service:

Call 1-800-776-3538

Email: Service@ApplianceDesk.com

Web: www.ApplianceDesk.com

Business hours: 9:00 am - 5:00 pm weekdays

You can register your Warranty by either of the following methods:

1. Scan QR Code

- Open Smart Phone
- Open Camera
- Click the Link



2. Register online at ApplianceDesk.com/Warranty

3. QR Code is also used to obtain Product Information, Manuals and Updates

GENERAL

Since it is the responsibility of the consumer-owner to establish the warranty period by verifying the original purchase date, Conserv Appliances recommends that a receipt, delivery slip or some other appropriate payment record be kept for that purpose.

This warranty gives you specific legal rights, and you may also have other rights which vary from State to State.

All rights reserved. Manual subject to change without notice.

Safety Precautions

Please always follow the safety precautions listed below:

- Do not put acid or flammable or volatile materials inside the appliance.
- Unplug the unit immediately if you find any abnormal smell or smoke, and contact Customer Service.
- Use a dedicated power outlet and a three prong power socket, that is properly grounded.
- Do not use extension cords or ungrounded two prong adapters.
- Do not use the power cord or plug if it is damaged.
- When removing the power plug, do not pull on the cord. Grasp the plug firmly and pull it out from the socket.
- Unplug the unit first when doing maintenance or repair and when replacing the light bulb.
- Keep ventilation openings free of obstructions.
- This appliance is not intended for use by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

Safe Disposal

- Before discarding the refrigerator, remove doors and shelves in order to prevent risk of child entrapment.
- Dispose off this appliance in accordance with local regulations.

State of California Proposition 65 Warnings:


WARNING: This product contains one or more chemicals known to the State of California to cause cancer.

WARNING: This product contains one or more chemicals known to the State of California to cause birth defects or other reproductive harm.

Placement

This unit is designed to be free standing and not built-in.

- The unit should be placed in a ventilated and dry environment.
- Do not put the unit in direct sunlight, and keep it as far as possible from heat sources.
- Don't put the unit in a cold area.
- The unit should be placed on flat and stable ground. Keep the unit level by adjusting the front leg levelers.
- There should be enough space around the unit as shown, to allow proper ventilation.

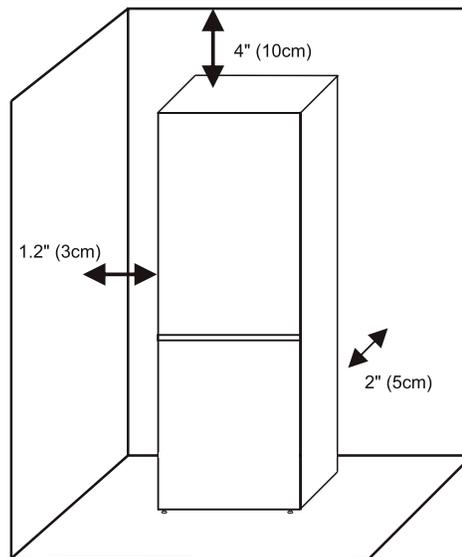

Before Use

- Before initially plugging in the refrigerator, keep the unit standing upright and stable for 2 hours. The refrigerator should be on for up to 4 hours and adequately cold, before putting food in it.
- It is recommended that you clean the interior of the unit before placing food inside.
- After plugging in the refrigerator, both sides on the unit will become warm. This is normal.
- The glass shelves are adjustable and can be moved up or down as needed.

Operation

This appliance is intended for household use.

Temperature control and settings

- Temperature settings are: 2, 4, 5, 6 and 8. The coldest setting is 2 and the least cool is 8.
- **The default setting is 5.**
- Press the “SET” button to choose the desired temperature. The selected number will light up.
- If you want to cool the refrigerator quickly, then press “FAST COOL” and select “2”, “4” or “5”.
- The freezer temperature will adjust according to the refrigerator temperature that has been selected. There is no separate temperature control for the freezer. (See Table).

Note: If you press “SET” while in the “FAST COOL” mode, the Fast Cool function will be canceled. Fast cool will automatically shut off after 30 hours, if not manually turned off before that time.

Control Knob	Refrigerator Temperature Setting	Freezer Temperature Setting
2 (coldest)	2°C / 35.6°F	-24°C / -11°F
4	4°C / 39.2°F	-22°C / -7.6°F
5 (default - middle)	5°C / 41°F	-18°C / -0.4°F
6	6°C / 42.8°F	-16°C / 3.2°F
8 (less cold)	8°C / 46.4°F	-14°C / 6.8°F



- Open the freezer door after 30 minutes. If there is cold air, that means the unit is working properly. After a period of time the thermostat will switch off & on automatically and set the refrigerator and freezer compartments at the desired temperatures.

Door Reversal Instructions

The doors of the refrigerator and freezer open to the right. If it is preferable to have the doors open to the left, the door swing can be reversed by following the steps below.



Removing the doors

1. Using a screwdriver, remove the upper hinge cover, screws, and upper hinge from the right side.

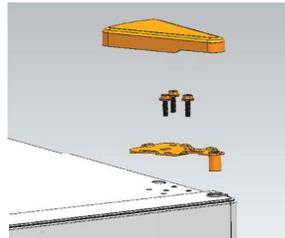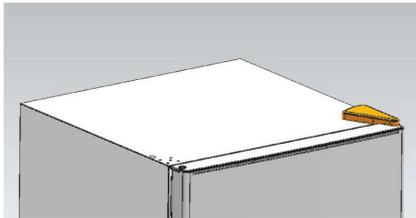



2. Lift out the refrigerator door and set aside.

3. Using a screwdriver, remove the middle hinge and screws.

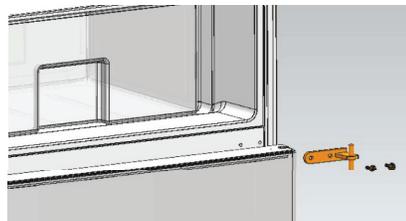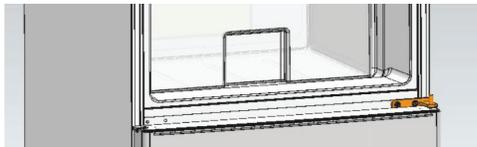

4. Lift out the freezer door and set aside.


5. Remove the feet, screws, and bottom hinge.

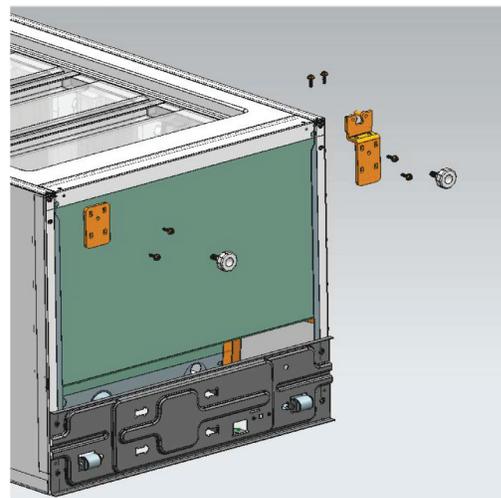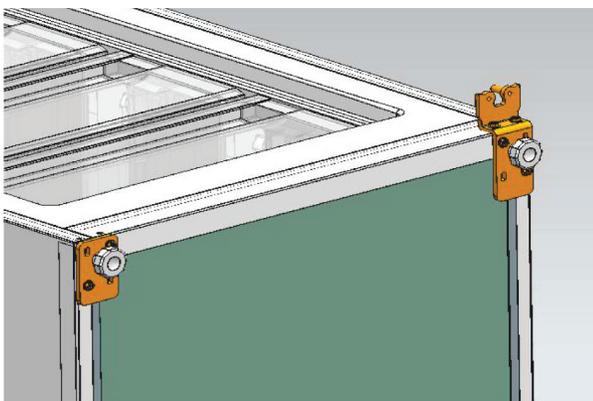

Door Reversal Instructions


Reassembling the doors on the opposite side

1. Attach the bottom hinge and feet on the left side.

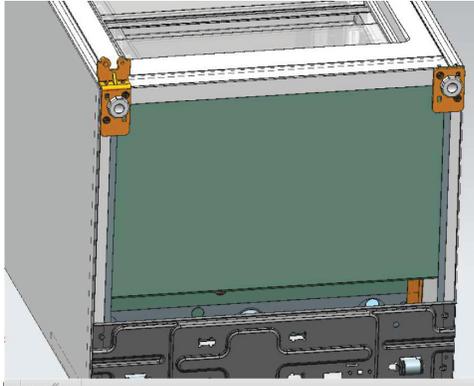


2. Install the freezer door on the bottom hinge.

3. Attach the middle hinge and screws.

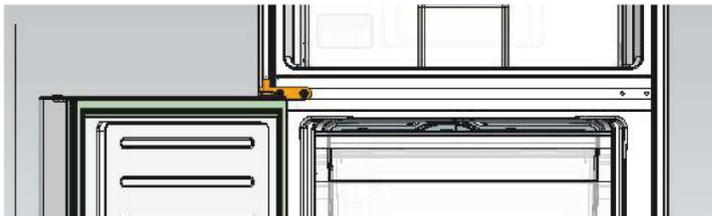

4. Install the refrigerator door on the middle hinge.

5. Replace the upper hinge, screws, and cover to complete the door reversal process.

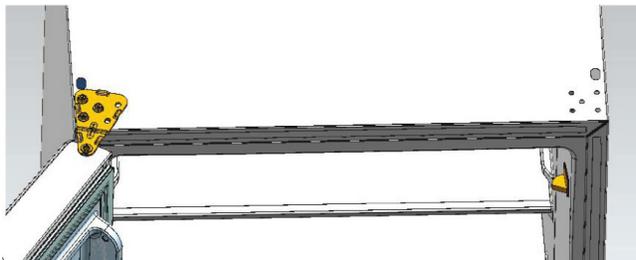

Maintenance

Cleaning

- Always unplug the unit before cleaning.
- Clean inside, behind and around the refrigerator regularly, using water and mild detergent, and a damp cloth (not wet).
- Never use boiling water, harsh cleaning chemicals or abrasive materials.
- Check and clean the door gasket regularly to ensure that the door closes and seals properly.

Water Pan Cleaning

- The water pan is located at the back of the appliance. Its function is to collect the defrost water. Usually it doesn't need special care, but if you find some water overflow or odd smell, it may need to be checked and cleaned. Pull out the power cord first. Lift the water pan up a little, and then pull it straight out carefully. (Caution: make sure the discharge pipe is not too hot). After cleaning, replace the water pan into the original position. Make sure that the pipe is on top of the water pan before you push it into the original position.

Extended Absence or Vacation

- If the unit will be switched off for a long time, the plug should be pulled out, and the unit cleaned thoroughly.
- The door must be left open and place the unit in a well ventilated area to avoid build up of odor.

Changing The Light Bulb

Before removing the light bulb, turn off the refrigerator first and then unplug the unit from the wall outlet. Failure to do so could result in electrical shock or personal injury.

- Use Phillips screwdriver to take out the screw
- Remove the light cover by pulling downwards gently
- Unscrew the bulb
- Replace with a 15 watt refrigerator bulb that is the same shape and size
- Replace the light bulb cover and tighten the screw

Troubleshooting

In most cases, when your Refrigerator fails to work, the problems arising can be easily solved without having to call for a technician. Before calling for assistance, always check these points.

Problem	Possible Cause
The unit does not work	<ul style="list-style-type: none">• Power is not on or the unit is not connected to Power.• Low Voltage.• The control knob is set at “Min”.
The unit works inefficiently	<ul style="list-style-type: none">• The control knob is set at a high temperature (Min).• Too much food or hot food is in the unit.• Door opened and closed too frequently.• There is a heat source nearby.• The unit is exposed to direct sunlight.
Noise	<ul style="list-style-type: none">• Floor is not flat, and the unit is not placed in a stable position.• Refrigerant flow and compressor working may produce some sounds which are normal.
Food frozen in refrigerator	<ul style="list-style-type: none">• The control knob is set at a low temperature (Max).• Food is near the area where cold air comes into the compartment.
Doors cannot be closed properly	<ul style="list-style-type: none">• The door is obstructed by items inside the unit.• The door gasket is not providing a good seal. Heat the gasket with a hair dryer.

The following phenomenon is normal

- The sound like a rivulet is caused by the refrigerant flowing inside of the system pipe.
- While the unit runs, heat is emitted from both sides of the cabinet.
- When the environment is too humid, the edges around door may have a little moisture. Simply wipe it with a dry cloth.

Specifications

Model No.	MDRF 359WE
Category	Refrigerator-Freezer
Refrigerating Mode	No Frost
Rated Voltage/Frequency	115V~60Hz
Rated Power	150 W
Rated Current	0.76A
Refrigerant, Amount	R600a (40g / 1.41oz)
Foaming Agent	Cyclopentane
Energy Class	E-STAR
Weight	139 lbs / 63.1 kg
Dimensions (H*W*D) inch/cm	72.8x23.2x 27 / 185x 59x 68.6
Overall Space Required In Use (H*W*D) inch/cm	73.6x25x28 / 186.9x63.5x71.1

Electrical Diagram

