

#### EN

With your inspiring rating, COSTWAY will be more consistent to offer you EASY SHOPPING EXPERIENCE, GOOD PRODUCTS and EFFICIENT SERVICE!

#### DE

Mit Ihrer inspirierenden Bewertung wird COSTWAY konsistenter sein, um Ihnen EIN SCHÖNES EINKAUFSERLEBNIS, GUTE PRODUKTE und EFFIZIENTEN SERVICE zu bieten!

#### FR

Avec votre évaluation inspirante, COSTWAY continuera à fournir une EXPÉRIENCE D'ACHAT PRATIQUE, des PRODUITS DE QUALITÉ et un SERVICE EFFICACE !

#### ES

Con su calificación inspiradora, COSTWAY será más consistente para ofrecerle EXPERIENCIA DE COMPRA FÁCIL, BUENOS PRODUCTOS y SERVICIO EFICIENTE.

#### IT

Con la tua valutazione incoraggiante, COSTWAY sarà più coerente per offrirti ESPERIENZA DI ACQUISTO FACILE, BUONI PRODOTTI e SERVIZIO EFFICIENTE!

#### PL

Dzięki twojej opinii COSTWAY będzie mógł oferować jeszcze WYGODNIEJSZE ZAKUPY, LEPSZE PRODUKTY i SPRAWNIEJSZĄ OBSŁUGĘ KLIENTA.

**US** office: Fontana

 
**UK** office: Ipswich

**AU** office: Truganina

**DE** office: Hamburg

**FR** office: Saint Vigor d'Ymonville

**PL** office: Gdańsk

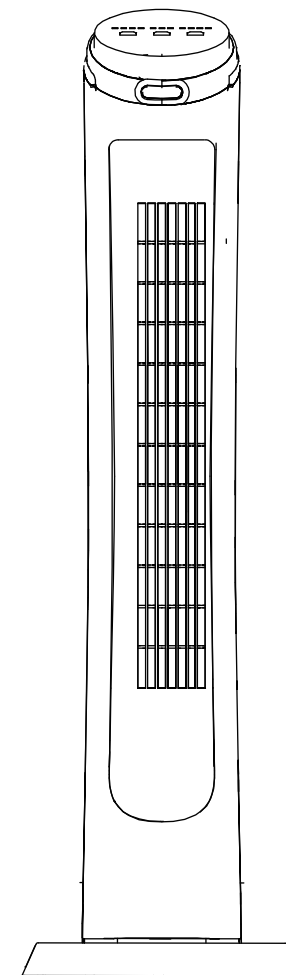

## USER'S MANUAL

### Digital Tower Fan ES10086US-BK

## PLEASE READ THIS MANUAL CAREFULLY BEFORE OPERATING THIS APPLIANCE AND RETAIN IT FOR FUTURE REFERENCE

### IMPORTANT SAFEGUARD

***When using an electrical appliance, basic safety precautions should always be observed, including the following:***

#### **READ ALL INSTRUCTIONS BEFORE USING**

 
1. The product is intended exclusively for non-commercial operation as a mobile fan.
2. The product is intended for indoor use only.
3. To reduce the risk of fire or electric shock, do not use this fan with any solid state speed control device.
4. If the power cord is damaged, stop using the product immediately. Do not use if the ON/OFF switch does not function correctly.
5. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.
6. Do not leave the fan running unattended.
7. Never insert fingers, pencils, or any other objects through the fan housing when the tower fan is running. Unplug the fan when moving it from one location to another.

8. Disconnect the fan before installing, cleaning or transporting the fan.
9. Pull the plug out if the fan is not in use, always pull out the mains plug at the plug and not by the cable.
10. To avoid product tipping over, be sure the fan is on a stable surface when in operation.
11. Never use the device in a room where there is a danger of explosion or in the vicinity of flammable liquids or gases. Do not use the fan near a window, rain may cause a electrical hazard. Never expose the product to water or other liquids.
12. Ensure that the fan is unplugged and switched off before removing the grill.
13. This product is not intended to be used by persons (including children) or who are limited in their physical, sensory or mental capacities or who lack experience and knowledge of the product unless they are supervised, or have been instructed on how to use the product, by a person responsible for their safety. Ensure children are not able to play with the device.

## TECHNICAL SPECIFICATIONS

Model No.	ES10086US-BK
Voltage	120V AC
Frequency	60Hz
Rated Power	50W


## PRODUCT OVERVIEW

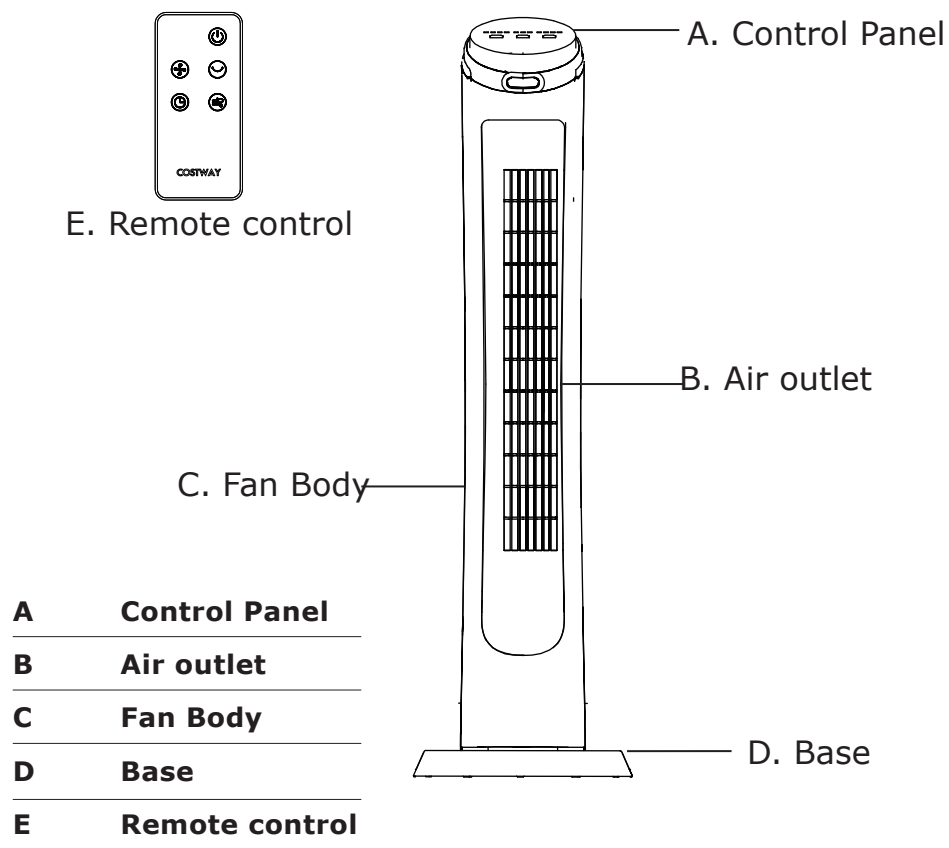


## Product Assembly

Do not operate the tower fan without the base assemblies attached to the bottom of the unit. Otherwise, it may cause a hazard.

 
1. Turn the tower fan upside down for easy assembly.

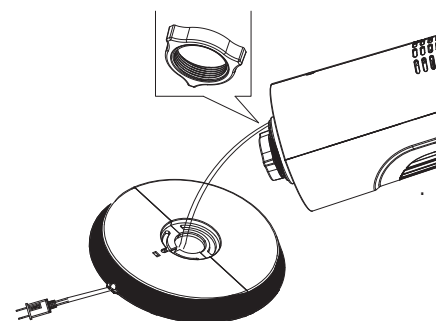

 2. Align the base mount guide peg with the guide hold located on the base. The base will only fit onto the tower fan one way. Once the base is properly aligned on the bottom of the tower fan, add the plastic nut and rotate it clockwise to secure the base.

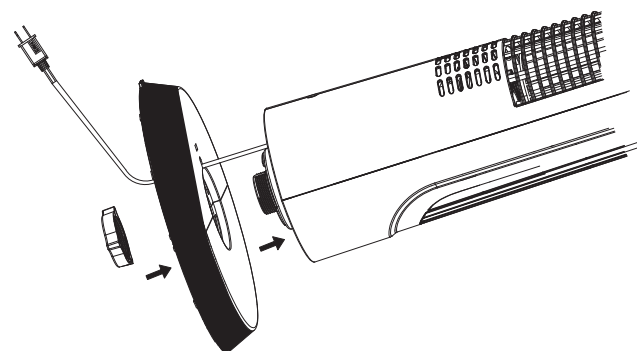

 3. Thread the power cord into the guide on the bottom of the base by gently pressing the wire into the clamps. Your tower fan is now ready for use.

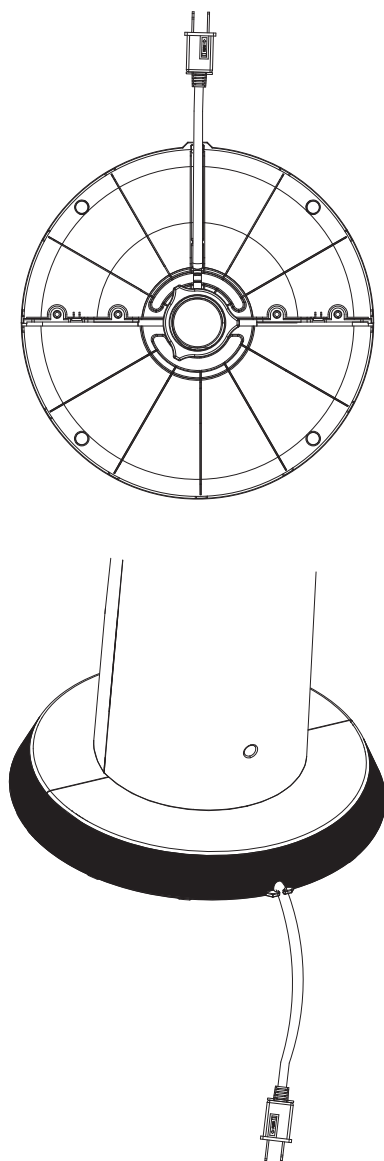

## Operation

All the features of this fan can be controlled from the control panel and remote control.

### To Turn the Fan On/Off:

Gently press the "Power" button to turn the fan on. Press a second time to turn the fan off.

### To Set the Fan Speed:

Gently press the "SPEED" button to cycle between the LOW, MEDIUM, and HIGH settings.

### Oscillating Operation:

This fan is designed to oscillate to cool a large space efficiently. To start oscillation, press the "OSCILLATE" button. To stop oscillation, press the button a second time.

### To Set the Fan Mode:

Gently press the "MODE" button to set "normal" (the wind is more stable than "nature" and "sleep"); press it twice to set "nature" mode (the gusts you feel like natural wind blows outdoor); and three times to set it to "sleeping" mode (the wind is gentle and most suitable for sleeping).

 
### To Set Timer Operation:

This fan is equipped with a timer that ranges from 0-15 hours. To set the fan to automatically turn off after a scheduled amount of time, simply press the "TIMER" button. The illuminated lights on the control panel of the fan will display.

## User Servicing Instructions

### Fuse Replacement

**NOTICE** The product requires a 2.5 A,125 V fuse.

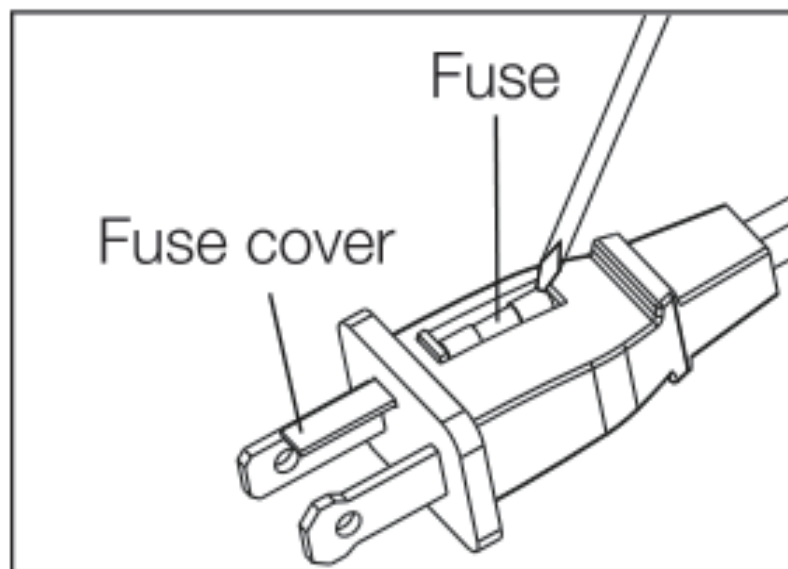

1. Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on the cord.
2. Slide open fuse access cover on top of attachment plug towards blades.
3. Remove fuse carefully by using a small screwdriver to pry the fuse out of the compartment by the metal ends of the fuse.

## Cleaning and Maintenance

**WARNING** Risk of electric shock! To prevent electric shock, unplug the product before cleaning.

**WARNING** Risk of electric shock! During cleaning do not immerse the product in water or other liquids. Never hold the product under running water.

### Cleaning

To clean the product, wipe with a soft, slightly moist cloth. Dry the product after cleaning.

Never use corrosive detergents, wire brushes, abrasive scourers, metal or sharp utensils to clean the product.

### Storage

Store the product in its original packaging in a dry area. Keep away from children and pets.

 
### Maintenance

Any other servicing than mentioned in this manual should be performed by a professional repair centre.

## TROUBLESHOOTING

Problem	Solution
The product cannot be switched on.	Check if the power plug is connected to the proper outlet.
	Check if the socket outlet works.
	Wait for the product to cool down.
	Replace the fuse in the power cord plug.
The product vibrates.	Place the product on a level surface.

## Battery Installation:

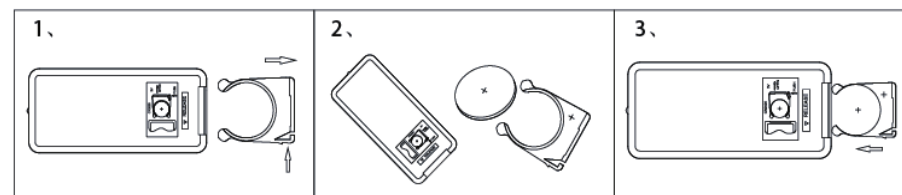

1. Pull out the remote control battery holder according to the assembly drawing on the back of the remote control.
2. Put the battery into the battery holder, pay attention to the positive and negative poles of the battery.
3. Reinstall the battery holder with the battery in the remote control.