


PACKAGE CONTENTS

- 75" Tripod Projector Screen
- Quick Setup Guide

FEATURES

- Durable, high-contrast material
- Easy to operate

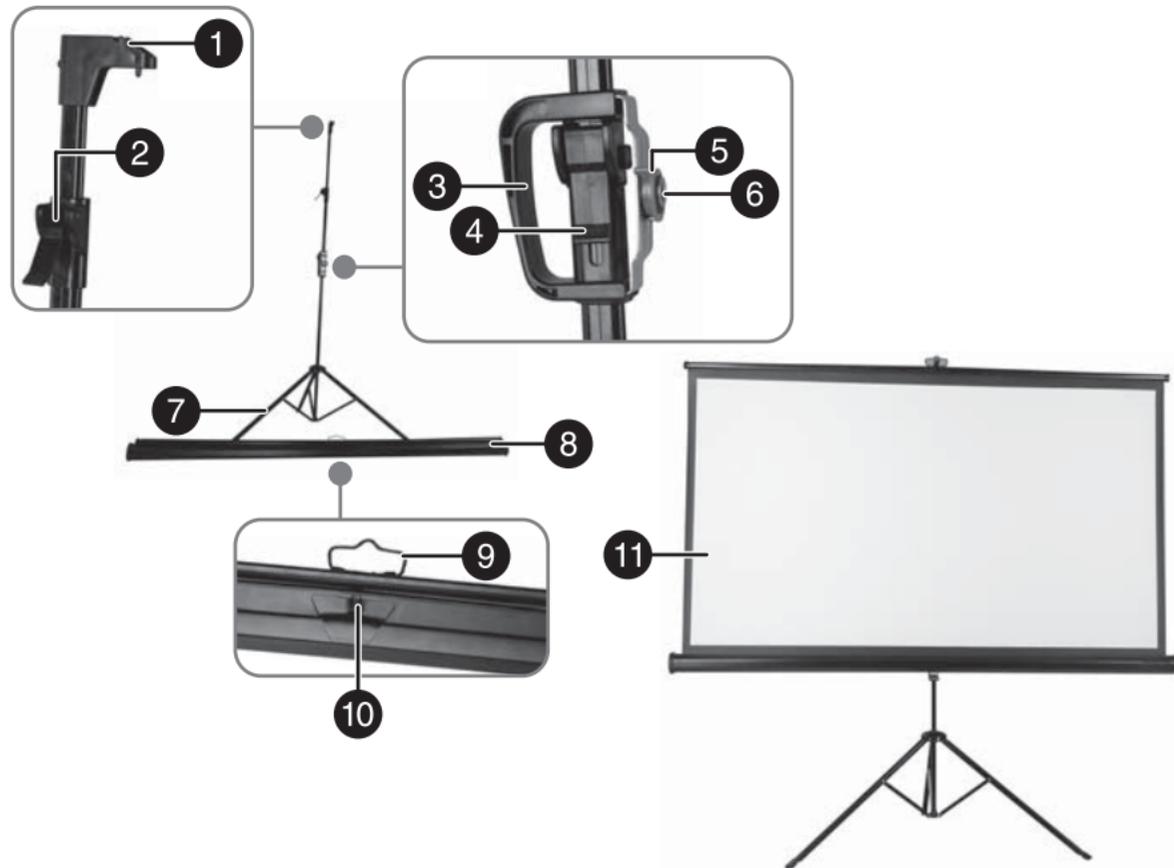

#	ITEM	DESCRIPTION
1	Screen hanger notch	Provides a notch to hang the projector screen.
2	Flip-lever center column lock	Locks or unlocks the first section of the tripod center column.
3	Screen height handle	Hold this handle to raise or lower the center column.
4	Flip-lever for the screen height handle lock	Locks or unlocks to slide up or down the screen height handle.
5	Positioning pin release lever	Push this release lever to insert or release the positioning pin in the positioning hole.
6	Positioning hole	Attaches to the positioning pin on the back of the projector screen.
7	Tripod leg	Supports the tripod and projector screen.
8	Screen enclosure	Enclosure for the screen when not in use.
9	Projector screen hanging bracket	Hang the projector screen using this bracket.
10	Positioning pin	Position projector screen by inserting it into positioning hole.
11	Projector screen	Displays pictures from the projector.

USING YOUR TRIPOD PROJECTOR SCREEN


1 Open the three legs of the tripod and stand the tripod up.




2 Loosen the flip-lever center column lock, then raise the center column so that the screen hanger notch is just below your eye-level (this position makes it easier to attach the projector screen hanging bracket), then fasten the flip-lever center column lock to secure the column in place.



- 3** Unlock the flip-lever for the screen height handle lock and slide the screen height handle to approximately your waist-level (this position makes it easier to attach the screen enclosure), then fasten the flip-lever for the screen height handle to secure it in place.

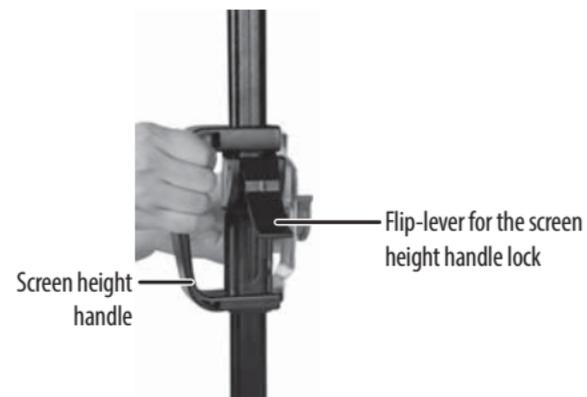

- 4** While holding the screen enclosure, push the red positioning pin release lever and insert the positioning pin into the positioning hole. When the pin is fully inserted, the positioning pin release lever will spring back into its non-released position.

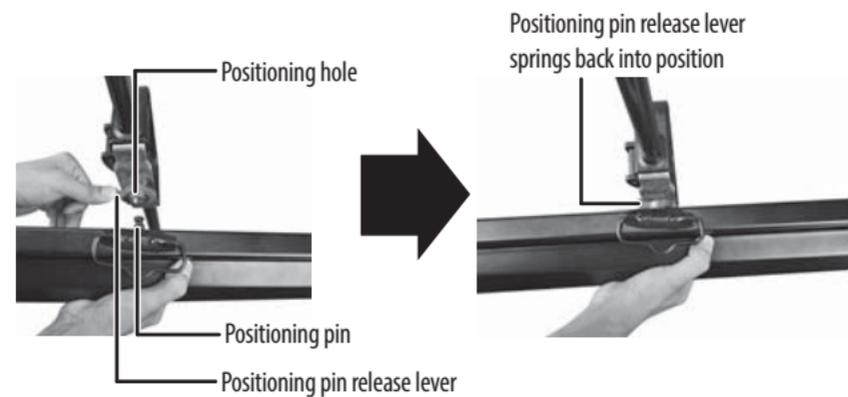

- 5** Pull out the projector screen by pulling up on the projector screen hanging bracket, then hang the projector screen hanging bracket on the screen hanger notch on top of the center column.



- 6** From the back side of the screen you can now set the height of the screen. You can set the height of the bottom edge of the screen by unlocking the flip-lever for the screen height handle and changing the position of the screen height handle. Change the height of the top edge of the screen by unlocking the flip-lever center column lock, and raising the center column.

When not in use, remove the screen enclosure from the tripod by reversing the installation steps.

REATTACHING THE SCREEN ENCLOSURE

You can reattach the screen enclosure to the disassembled tripod to conveniently carry and store the projector screen when not in use.

- 1** Extend the center column completely, then position the screen enclosure so that the hole in one end of the screen enclosure is on the same side as the screen hanger notch on the center column.
- 2** Attach the screen enclosure positioning pin to the positioning hole. Once this is done, the center column can be repositioned so that the pin below the screen hanger notch inserts into the hole on the end of the screen enclosure.

SPECIFICATIONS

Maximum operating height	87 in. (220 cm)
Minimum operating height	57 in. (144 cm)
Folded length	71 in. (180 cm)
Screen diagonal length	75 in. (190 cm)
Net weight	14.7 lbs. (6.67 kg)

ONE-YEAR LIMITED WARRANTY

Visit www.insigniaproducts.com for details.

CONTACT INSIGNIA:

For customer service, call 1-877-467-4289 (U.S. and Canada) or 01-800-926-3000 (Mexico)

www.insigniaproducts.com

INSIGNIA is a trademark of Best Buy and its affiliated companies.
 Distributed by Best Buy Purchasing, LLC
 ©2015 Best Buy. All rights reserved.
Made in China