


INCLUDED ACCESSORIES

Remote control and two AAA batteries



39" / 50"

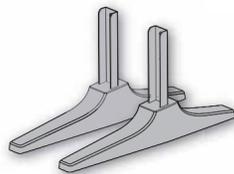

TV stands



M4 screws
(8 mm length)
(4 pcs.)

FIND YOUR USER GUIDE ONLINE!
On a computer, go to www.insigniaproducts.com, enter your model in the search box, then press **ENTER**.

Next to **Features**, click **Support & Downloads**, then next to **User Manual**, click the language you want.

STOP
Do not plug your adapter or cord in until all other devices have been connected.


Before using your new product, please read these instructions to prevent any damage.

1 START HERE

How do I attach the stands to my TV? (not for wall mounting)


You'll need: Soft surface and Phillips screwdriver

A Place your TV face-down on a cushioned, clean surface.

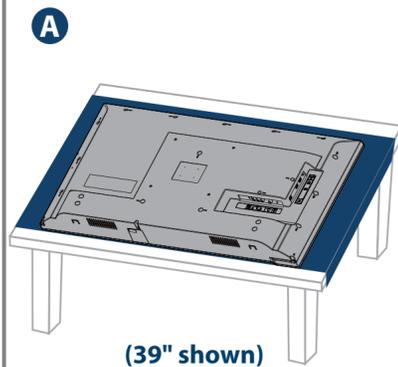

B Make sure that the arrows on the bottoms of the stands point toward the front of the TV. Align the screw holes on the TV stands with the holes on the bottom of your TV, then secure each stand with the provided screws.

B

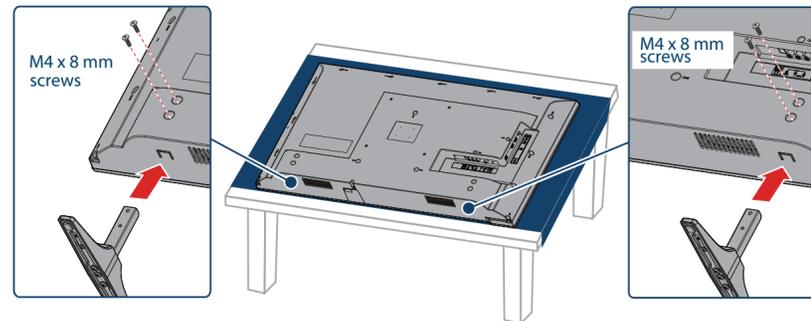

WALL MOUNT


How do I prepare my TV for wall mounting? (not for use with a TV stand)

You'll need: Soft surface and Phillips screwdriver

OR

A Carefully place your TV face-down on a cushioned, clean surface.
B See the instructions that came with your wall-mount for more information about which screws to use and how to correctly mount your TV.

A



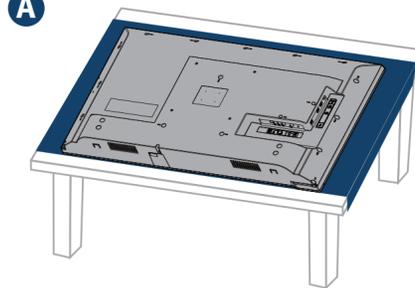


B



Your TV has four VESA mounting holes on the back. If you attach a wall-mount bracket to the back of your TV, **the bracket must be securely attached, using all four holes**. If you do not use all four mounting holes, your TV may fall and cause property damage or personal injury. See the documentation that came with your wall-mount for complete mounting instructions.

FEATURES

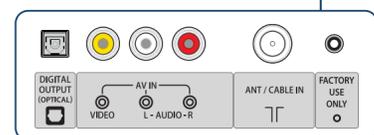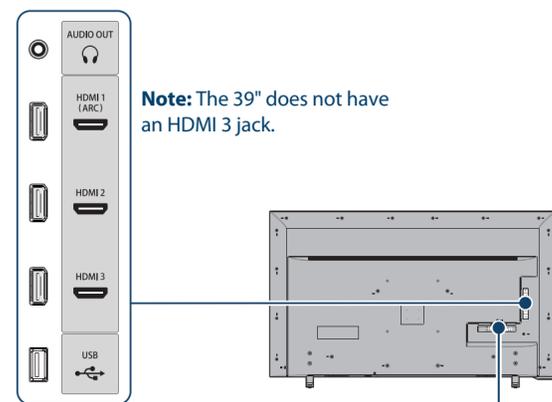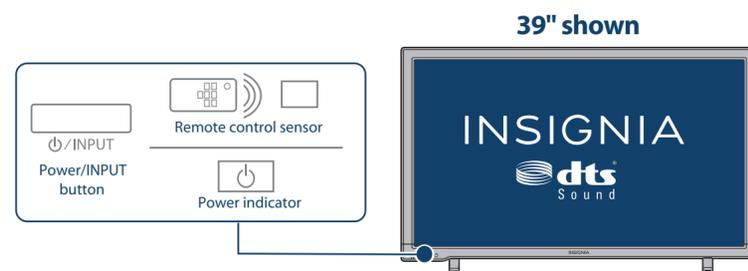


2 MAKING CONNECTIONS



How do I watch TV (cable, satellite, or antenna) or connect a device, such as a DVD or Blu-ray disc player or game console?

WHICH CABLES DO YOU HAVE?


HDMI (BEST)
Best video quality

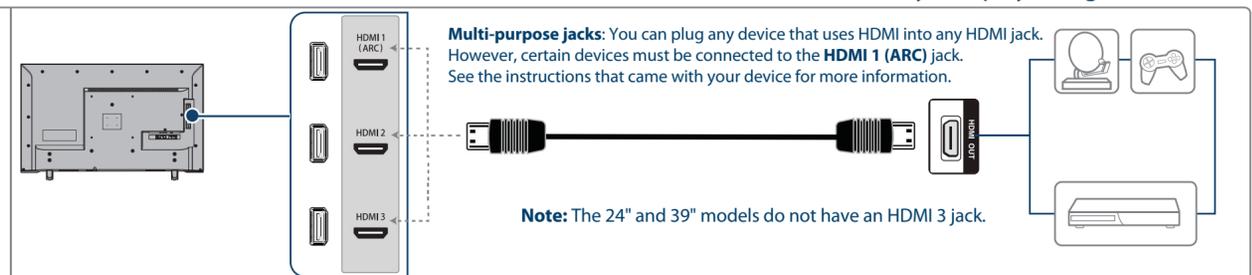

AV (GOOD)

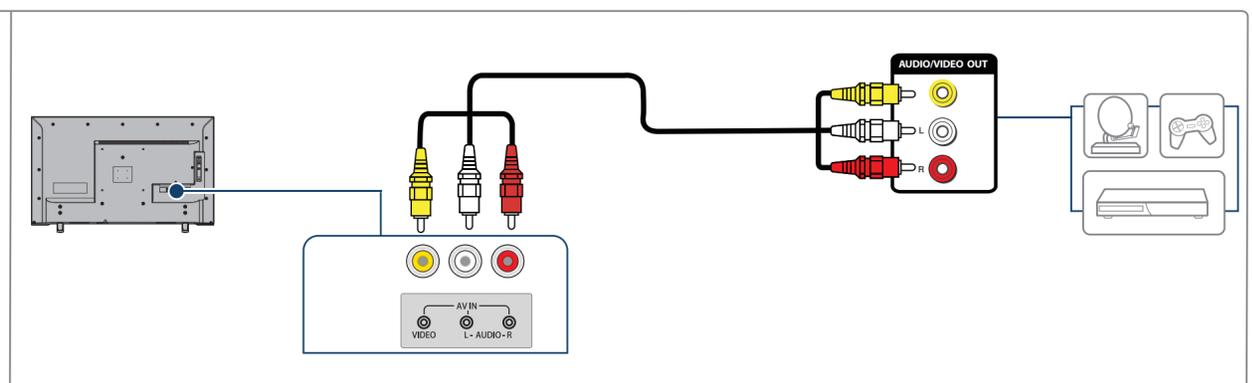 

COAXIAL (GOOD)

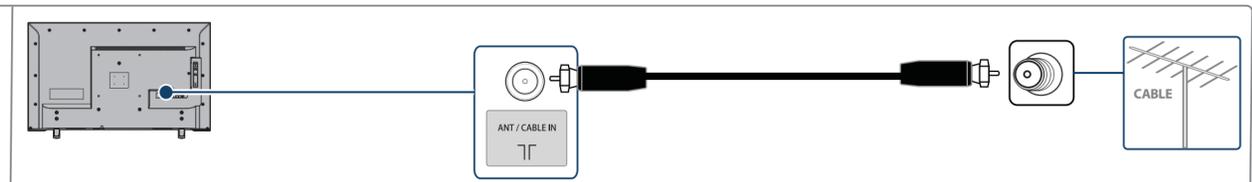

3 CONNECTING AUDIO DEVICES

How do I connect my TV to external speakers?

USING DIGITAL AUDIO On the **AUDIO** menu on your TV, select **Digital Audio Format/Audio Delay**, then set **Audio Format** to **PCM**.

39"/50"

Audio Format: Pass
Audio Delay: PCM

OR

USING ANALOG AUDIO


Note: See the instructions that came with your speakers or soundbar for more information.

39"/50"


4 TURNING ON MY TV

When can I turn on my TV?

- WHEN YOUR TV IS IN PLACE:**
- 1 Plug the power adapter or cord into a power outlet.

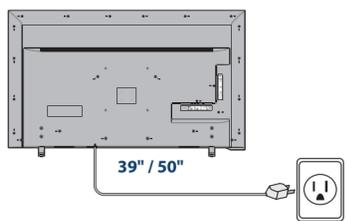

- 2 Remove the remote control cover and install the batteries.

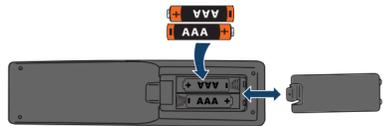

- 3 Press (power) on your remote control.
- 4 Follow the on-screen instructions.



USING YOUR REMOTE CONTROL

INPUT SOURCE

- TV
- HDMI1
- HDMI2
- HDMI3
- AV
- USB(Photos)

Note: The 39" does not have an HDMI 3 jack.

Picture Mode: Vivid
Advanced Settings: Backlight 50, Brightness 50, Contrast 60, Color 73

Power Turns your TV on or off.

Numbers Enter channel numbers or the parental controls password.

ENTER Confirms selections or changes.

EXIT Closes the TV menu.

ACC Opens the Accessibility menu.

Volume Changes the volume.

ASPECT Changes how the picture is displayed on the screen.

SLEEP Sets the sleep timer.

Media controls INlink: Control HDMI-CEC devices connected to your TV. USB: Control the photo slideshow.

INPUT Opens the **INPUT SOURCE** list.

Recall Returns to the previous channel.

FAVORITE Opens the Favorite Channel List.

Arrows Navigate in on-screen menus.

INFO* Opens a TV status banner.

CC Turns closed captioning on or off.

MUTE Mutes the sound.

Channel Changes the TV channels.

GAME Adjusts the picture for the ultimate gaming experience.

PICTURE Selects the video mode.

AUDIO Selects the audio mode.

INSIGNIA NS-RC4NA-18

I already have a universal remote control. How do I make it control this TV?

If you already have a universal remote control that you would like to program to work with your TV and don't want to use the included Insignia remote control, see the table below for common codes.

UNIVERSAL REMOTE CONTROL CODES	
AT&T U-verse	1034, 1035, 1040, 1398, 1465, 1596, 1437, 1507, 12049, 11641, 11564, 11326, 11423, 11892, 11517, 10171, 10463, 11385, 11660, 11963, 12184, 13227
Cablevision	068, 069, 078, 096, 100, 164, 168, 229, 026
Charter	2002, 1204, 1423, 1517, 0171, 1963, 0463, 1463, 0842, 1326, 167, 415, 424, 450, 456, 461, 507, 523, 567, 577, 586
Comcast	10463, 10171, 11204, 11326, 11463, 11517, 11641, 11780, 11785, 11892, 11963, 12002, 01877, 00276, 01982, 01376, 00810, 01187, 01106, 00877, 00476
Cox	1326, 1463
DirecTV	10463, 10171, 11204, 11326, 11517, 11564, 11641, 11963, 12002, 11463, 12049
Dish Network	834, 720, 222, 898, 365, 777, 754
RCA	135, 12049, 11423, 11564, 10171, 10463, 11810, 11892, 11963, 12184, 12417
Rogers	0463, 1326, 2049, 1785, 1780, 1423, 1963
Time Warner	400, 450, 461, 456, 10463, 1463, 0463
Verizon	0198, 0490

For an up-to-date list of codes for other cable providers and universal remote brands, visit www.insigniaproducts.com/remotecodes

INSIGNIA™

ONE-YEAR LIMITED WARRANTY
Visit www.insigniaproducts.com for details.

NEED ADDITIONAL HELP?
See your online *User Guide!*
This comprehensive guide includes everything from basic how-to steps to more advanced features. A copy of your *User Guide* is not provided in the box for US and Canada but is available online.

On a computer, go to www.insigniaproducts.com, enter your model in the search box, then press **ENTER**.

Next to *Features*, click **Support & Downloads**, then next to *User Manual*, click the language you want.

Check out our **Support Community** <http://community.insigniaproducts.com/> for helpful information from other Insignia TV owners.

WE'RE HERE FOR YOU
www.insigniaproducts.com
For customer service, call:
877-467-4289 (U.S./Canada)
01800-926-3000 (México)

U.S. and Canada:
INSIGNIA is a trademark of Best Buy and its affiliated companies. Registered in some countries. Distributed by Best Buy Purchasing, LLC 7601 Penn Ave South, Richfield, MN 55423 U.S.A.

Mexico:
INSIGNIA is a trademark of Best Buy and its affiliated companies. Registered in some countries. Best Buy Imports S. DE R.L. DE C.V. Avenida Santa Fe No. 440 Piso 2 Ofna 202 Y 203 P3 Y P4 Colonia Santa Fe Cuajimalpa, C.P. 05348, Delegación Cuajimalpa De Morelos, Mexico, Ciudad De México

©2017 Best Buy. All rights reserved.
Made in China