



USER'S MANUAL Ultrasonic Humidifier EP24772US

www.costway.com

THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

Please give us a chance to make it right and do better!

Contact our friendly customer service department for help first. Replacements for missing or damaged parts will be shipped ASAP!

Follow Costway

Visit us: www.costway.com













Contact Us!

Do NOT return this item.

Contact our friendly customer service department for help first.



Before You Start

🗥 Retain instructions for future reference.

↑ Separate and count all parts and hardware.

riangle Read through each step carefully and follow the proper order.

We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.

⚠ Keep all small parts and packaging materials for this product away from babies and children as they potentially pose a serious choking hazard.

CONTENTS

Safety Precautions	2
Product Introduction ······	5
Product Features	5
Component Description	5
How to use ······	6
Function Description	7
Maintenance	8
Troubleshooting and Solution	9
Power cord Precaution	10

www.costway.com

Safety Precautions

Dear users:

Hello! Thank you for using our products. In order to use the product better, and prevent personal injury and physical damage, please read carefully and obey the contents with the following symbolic marks on this manual.



All contents with such marks must be absolutely forbidden; otherwise it will damage machines or endanger personal



All contents with such marks related with the safety of products or users must be operated seriously according to the warning content.

- O Don't spray any oil paint, insecticide, ethyl alcohol, chemical agent on the surface of the machine, or it will cause surface cracks, electric shocks, fire.
- N In case of accumulation of pharmaceutical ingredients inside the machine. it will be expelled from the mist outlet with the turning on of the machine. which is bad for our health. Therefore, please change the air in the room after using of insecticide.
- O Don't use the machine in the environment full of flammable and corrosive
- Don't touch air inlet and mist outlet when the machine is in operation. Don't insert the hand or any items into air inlet and outlet in case of injury or damage to humidify.
- O Don't sit on or place something on the machine, otherwise it will cause accidental loss or injury.
- O Don't use in the bathroom or other places with water. Otherwise, it can cause fire, electric shocks, failure, etc.
- O Don't arbitrarily reform, decompose or repair the machine, otherwise it can cause fire, electric shocks, failure, etc.
- In case of damage of power cord and plug, please don't use them for other purposes, or it may cause electric shocks, fire. Please don't touch the power cord with wet hands.
- Please clean the machine and water tank regularly to ensure the function of the
- Please stop running and unplug the power plug when moving or maintaining the machine.
- Pull the power cord plug out of the socket during long periods of non-use.
- The machine should stop using and cut off power when it is smells. In avoiding of failure or fire, please contact with after-sales personnel to check the problem.
- The debris is easy to drop in the mist outlet, please check it before use and avoid children to put the debris in.
- Place the machine at least 50cm(20") away from a wall or other barriers.
- If the power line is damaged, in order to avoid danger, it must be changed by professional staff from manufacturer or its maintenance department.
- Children or disabilities must be available of using the machine under the supervision of an adult or their quardian.
- Children are not allowed to use the product as a toy. It is strictly forbidden to play on the product or artificially trample.

Product Introduction


Air

The humidifier uses ultrasonic atomization technology to atomize water into fine particles; diffusing the water mist into the purification air can effectively increase the indoor air humidity, the mist will combine with the floating smoke and dust in the air to precipitate, so that the air is more fresh creat a healthy life for you and your family.

Product features


- Lack water protection
- ◆ Touch operation control
- Sleep mode
- DC motor ,energy saving ,low noise
- ◆ Automatic humidity control ◆ Top water filling
- Ionization function
- Removable water tank
- Digital humidity display
- Timing function

Component Description

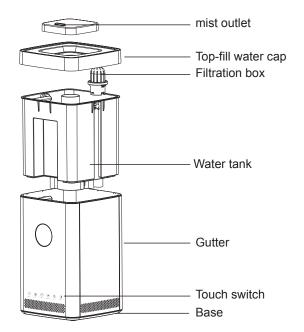

HOW TO USE

 
1. Open the package take out the product.




2. Lift up the water cap



 3. Fill the tank with water

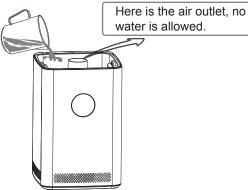





5. Plug in the power (Before connecting power, please check whether your power supply voltage is consistent with the rated power of the product.)



WARNING!

1. Turn off the machine and disconnect the power before adding the water into the water tank or removing the machine.

2. When adding water to the water tank, the water level should not exceed the round hole of the tank handle, otherwise the water will overflow and there is a risk of damage to the machine.

4

Function Description

Description of touch operation

- 1. ON/OFF:turn on /turn off the machine.
- 2 MIST: Press "MIST" button, you can choose Low fog, medium and high gear with your option.
- 3. HUMIDISTAT: the product will be in the mode of humidistat, the machine will adjust the mist according to the real indoor humidity.
- 4. TIMER:press "TIMER"button,the working time will be set to 1 h,2h...to 12h, press 3s for no timer.
- 5. ANION:press"ANION"button,turn on the anion function ,press it again to turn off the function.
- 6. SLEEP:press"SLEEP"button,all the lights will be off.

Kind reminder: If the tank is lack of water , the buzzer will sound 3 times, the humidifier will stand by and the light will be red .

The buzzer will sound for each operation.





Maintenance Instructions


- 1 Please unplug the appliance before washing.
- 2 Wash the water tank every week to keep it clean.
- (1) Add on a third of the water to the water tank.
- (2) Add some mild detergent.
- (3) Clean inside of the water tank with a towel or other cleaning tools.







- **3** Wash the atomizer sheet once a week to descale it to maintain good performance.
- 4 Do not use abrasive, corrosive or flammable detergents (such as bleach, alcohol) to clean any part of the humidifier.

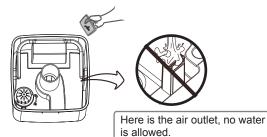



abrasive corrosive flammable

5 Clean the air inlet of the humidifier regularly to prevent accumulation of debris



Troubleshooting and Solution

Abnormal problems	Cause	Solution	
Power light is off, no wind and fog	Power is not connected	Pull out the plug and pull in again	
	Socket is not powered	Change for another socket or check whether the circuit or fuse is in use	
The odor of the mist		Open the water tank and place it in the shade for 12 hours. Wash the tank or change the water	
mist is little or no mist	No water in water tank	Add water to the water tank	
	The humidifier is not placed on a horizontal surface	Place the humidifier on a horizontal surface	
	The atomizer is dirty	Clean the atomizer according to the user manual	
	The atomizer or the fan doesn't work	Contact customer service center	
Water around the machine	The indoor humidity is too high	lower the humidity setting or turn off the machine	
The atomizer is dirty	Water is dirty or not clean enough	Use pure water	

COSTWAYwww.costway.com

Power cord Considerations



- Do not use power beyond the rated voltage(110V/60Hz) (Otherwise it will cause fire and electric shock and so on.)
- Do not process the power line arbitrarily, bend the power line forcibly, draw, twist and bundle up the power line.
- Do not let the power line approach to the high temperature objects.(If the power line is worn, fire and electric shock will occur.)
- Do not put the heavy objects on it or press. (Overloading may cause fire and electric shock and so on.)
- Do not use when the power line or power plug is worn and loose. (Otherwise it will cause fire, electric shock, short circuit and so on.)
- Do not insert and pull the power line with wet hands.
 (Otherwise it will cause electric shock and so on.)
- Do not change the power line without permission. When necessary, please contact with consumer service center.
- Clean regularly the dust on the power plug and socket.
 (Too much dust and moisture may cause defective insulation and then fire and electric shock will occur.)

MARNING

Non-professional personnel should not dismantle the machine without permission in case of electric shock danger. Pls pull out the power plug when changing or cleaning the filter set. In case of failure, please follow the troubleshooting method in the manual. If not, please contact our agent or our company.

Welcome to visit our website and purchase our quality products!

Your suggestions and comments for COSTWAY are really important to us! We sincerely solicit you to go back to our shop and leave a good rating in just a simple click. It would be quite encouraging if you could kindly do so like below:

★★★★ Great products so far

February 24, 2019

Great products so far. Fast delivery, easy setup, and working without any issues.

With your inspiring rating, COSTWAY will be more consistent to offer you EASY SHOPPING EXPERIENCE, GOOD PRODUCTS and EFFICIENT SERVICE!

US office: Fontana, California

UK office: Ipswich



- * Reward Points
- * Exclusive Customer Service
- * Personalized Recommendations
- * Permanent Shopping Cart
- * Order History



We would like to extend our heartfelt thanks to all of our customers for taking time to assemble this product and giving us valuable feedbacks.

