




32" 720p LCD HDTV

QUICK SETUP GUIDE


NS-32L430A11

Thank You

for purchasing this fine Insignia television. We hope you enjoy the quality and reliability of this product for years to come.

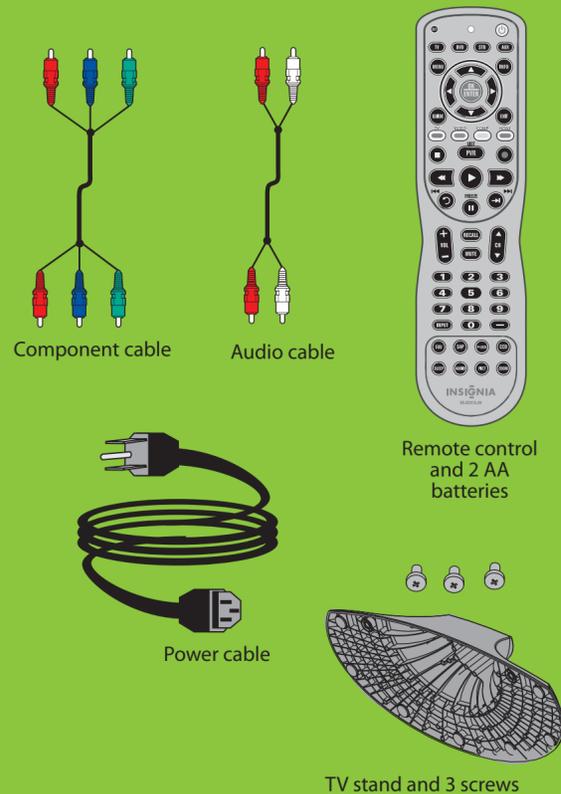


WE ARE GOING GREEN!
A copy of your User Guide is not provided in the box but is available at www.insigniaproducts.com.

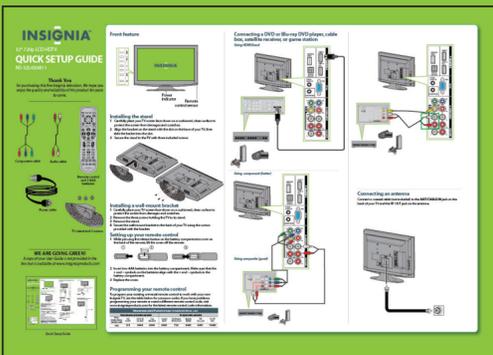


Quick Setup Guide

Front feature

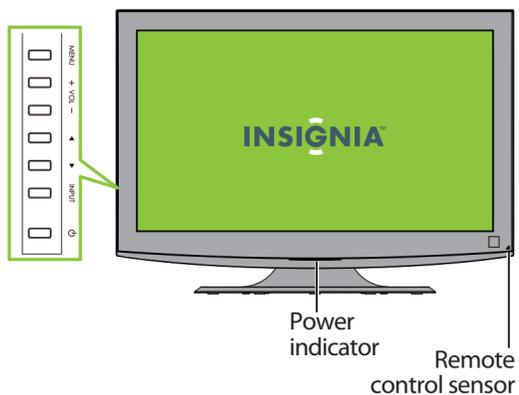

Installing the stand

- Carefully place your TV screen face-down on a cushioned, clean surface to protect the screen from damages and scratches.
- Align the bracket on the stand with the slot on the base of your TV, then slide the bracket into the slot.
- Secure the stand to the TV with three included screws.

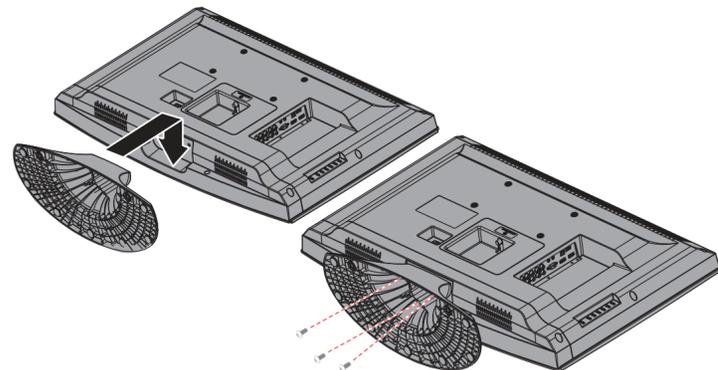

Installing a wall-mount bracket

- Carefully place your TV screen face-down on a cushioned, clean surface to protect the screen from damages and scratches.
- Remove the three screws holding the TV to its stand.
- Remove the stand.
- Secure the wall-mount bracket to the back of your TV using the screws provided with the bracket.

Setting up your remote control

- While pressing the release button on the battery compartment cover on the back of the remote, lift the cover off the remote.



- Insert two AA batteries into the battery compartment. Make sure that the + and - symbols on the batteries align with the + and - symbols in the battery compartment.
- Replace the cover.


Programming your remote control

To program your existing universal remote control to work with your new Insignia TV, see the table below for common codes. If you have problems programming your remote or need a different remote control code, visit www.insigniaproducts.com for the latest remote control code information.


Universal remote control TV codes (for all Insignia TVs manufactured after Jan. 1, 2007)							
Universal remote control makers and models				Set-top box makers and models			
Philips PHDVD5, PHSDS5, PMDVR8, PDVR8	RCA RCU807	One for All URC-6690	Sony RM-VL600	Comcast M1057	Dish Network VIP508, VIP622	Motorola DRC800	TIVO Series 3, HD DirectTV RC23
115	135	0464	8043	0463	720	0463	0091 10463

Connecting a DVD or Blu-ray DVD player, cable box, satellite receiver, or game station


Using HDMI (best)

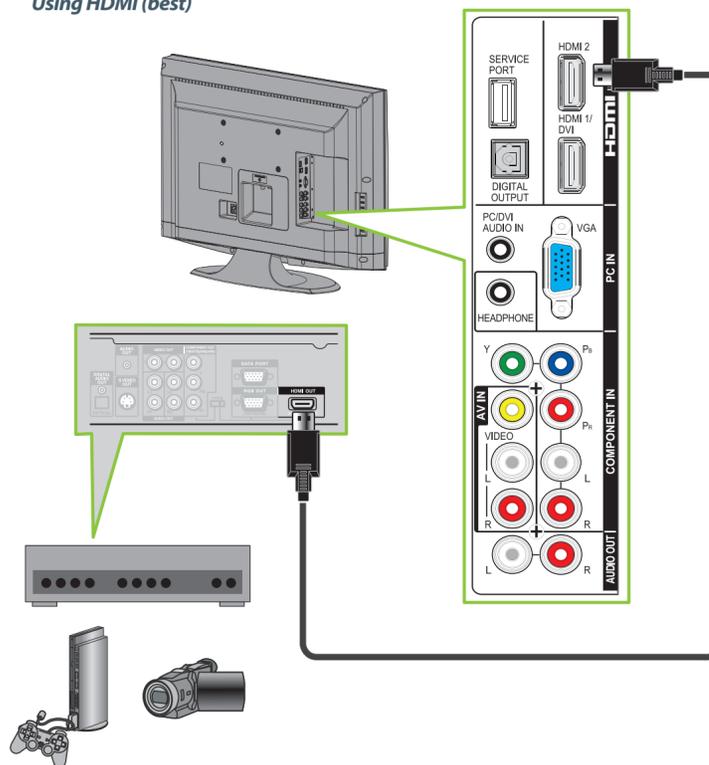

Using component (better)

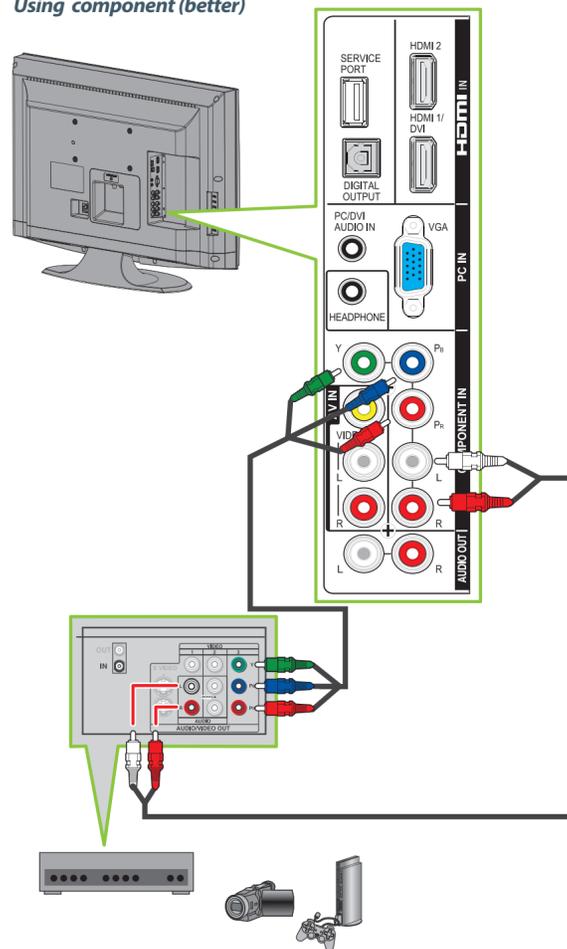


Using composite (good)

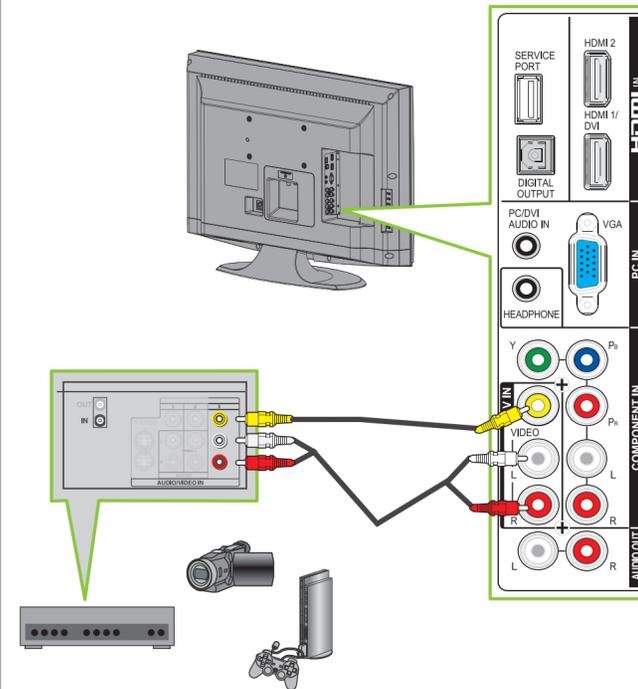


Connecting an antenna

Connect a coaxial cable (not included) to the ANT/CABLE IN jack on the back of your TV and the RF OUT jack on the antenna.

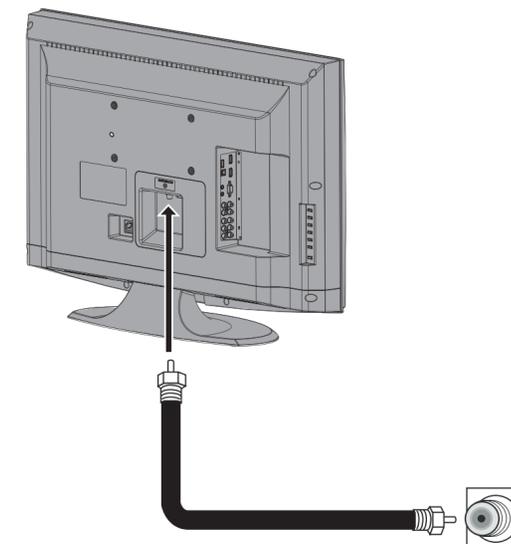


Connecting a Home Theater System

Using Digital audio

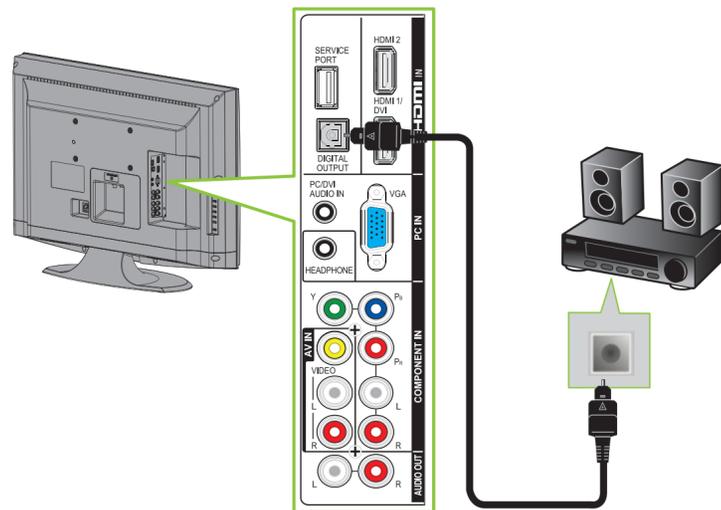


Using Analog audio

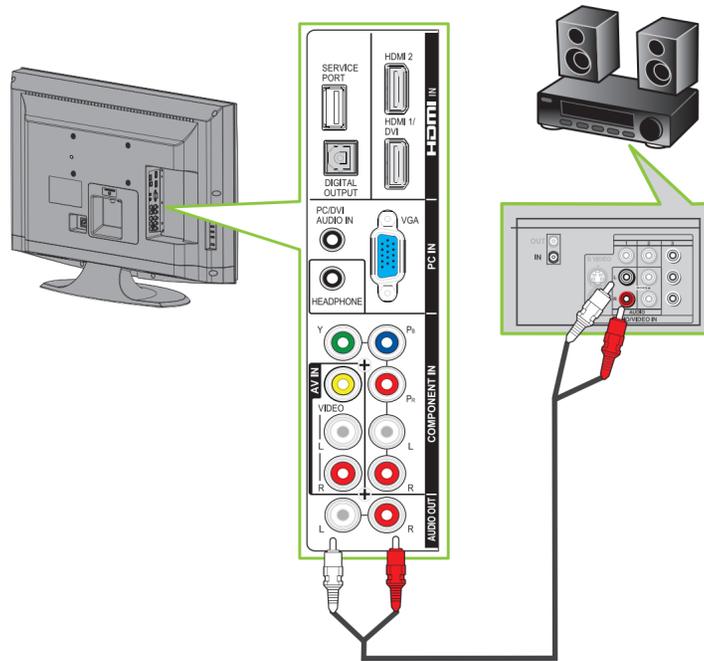



Connecting power

Plug the AC power cord into the AC IN jack on the back of your TV, then plug the other end of the cord into a power outlet.

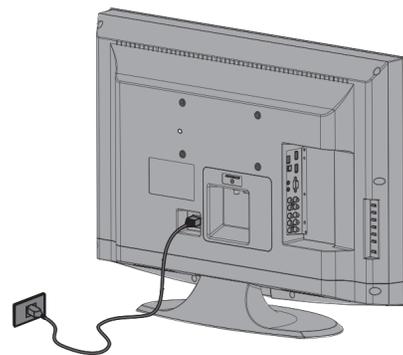

Turning on your TV for the first time

- 1 Connect the power cord to your TV and to a power outlet, then press **POWER** (power). The power indicator turns off and the *Choose your menu language* screen opens.
- 2 Press **▲** or **▼** to highlight a language, then press **OK/ENTER**. The *Time* screen opens with Mode highlighted.
- 3 Press **◀** or **▶** to select **Auto** or **Custom**. If you select **Auto**, the date and time are set automatically from a digital TV signal. If you select **Custom**, you can manually set the date and time. Press **OK/ENTER**. The *Choose your Picture Mode* screen opens.
- 4 Press **▲** or **▼** to highlight **Home** mode or **Retail** mode, then press **OK/ENTER**. If you select **Retail** mode, a message asks you to confirm your selection. Select **Yes** or **No**. **Retail** mode is not an energy-saving mode. The *Choose your TV source* screen opens.
- 5 Press **▲** or **▼** to highlight **Antenna**, **Cable**, or **Cable/Satellite box**. If you select **Antenna** or **Cable**, your TV scans for available channels. The scan may take several minutes. If you select **Cable/Satellite box**, your TV does not scan for channels.
- 6 To watch TV, press **TV** on the remote control.

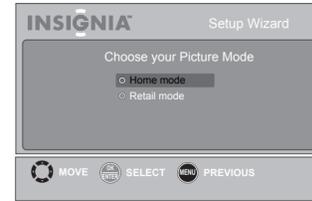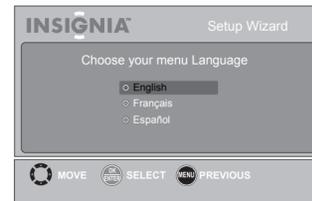

Selecting the video input source

- Press **INPUT**, press **▲** or **▼** to highlight a source, then press **OK/ENTER**. You can also press any of the video source buttons directly.

Input Source
TV
A/V
Component
HDMI 1
HDMI 2
VGA



Adjusting the volume

- Press **VOL+** or **VOL-** to change the volume.
- Press **MUTE** to turn off the sound.


Selecting a channel

- To move to a different channel in the channel list, press **CH▲** or **CH▼**.
- OR
- Enter the channel number directly using the number buttons.



Viewing channel information

- Press **INFO** to view an information banner. The information banner shows the current program information such as channel number, video input source, and resolution.

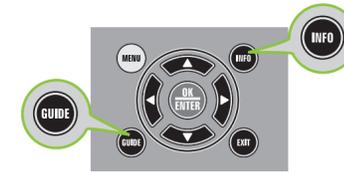

- Digital mode information—Displays the channel number, station name, channel label, broadcast program name, TV rating, signal type, audio information, resolution, CC mode, current time, and current program start and end times.
- Analog mode information—Displays channel number, channel label (if preset), signal type, audio information, and resolution.

On-screen menu overview

Picture menu




Audio menu



Channel menu



Settings menu

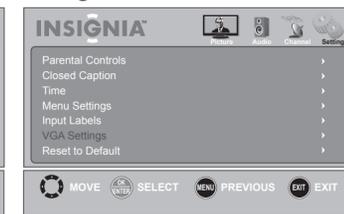

Navigating menus with your remote control

Press to open the on-screen menu or to return to the previous menu.



Press to move the cursor on the screen or to adjust a selected item.

Press to select menu options.



Press to confirm a selection or to enter a sub-menu.



Press to close the menu.



Two-year limited warranty

Visit www.insigniaproducts.com for details.

Need additional help?

See your *Online User Guide*! This comprehensive guide includes everything from basic how-to steps to more advanced features. Go to www.insigniaproducts.com to download the user guide.

Check out our *online community forum* at www.insigniaproducts.com for helpful information from other Insignia TV owners.

We're here for you

www.insigniaproducts.com

For customer service, call:

877-467-4289 (U.S./Canada markets)

Distributed by Best Buy Purchasing, LLC
7601 Penn Avenue South, Richfield, MN USA
55423-3645
RFC#BB10802114Q2

© 2010 BBY Solutions, Inc.

All rights reserved. INSIGNIA is a trademark of BBY Solutions, Inc. Registered in some countries. All other products and brand names are trademarks of their respective owners.