

INSIGNIA™

TV Stand with Gaming Nook

NS-HWD1848



Before using your new product, please read these instructions to prevent any damage.

INSIGNIA™

Contents

SAFETY INFORMATION	3
Specifications	4
Package contents	5
Parts	5
Hardware	6
Tool needed	6
Assembly instructions	7
Step 1: Setting up the base	7
Step 2: Installing the divider panels	8
Step 3: Setting up the large shelf	9
Step 4: Attaching the large shelf	10
Step 5: Attaching the sides	11
Step 6: Attaching the front edge	13
Step 7: Attaching the small divider	15
Step 8: Attaching the top	16
Step 9: Attaching the back	18
Step 10: Attaching the door	19
Step 11: Installing the small shelves	20
Step 12: Installing anti-tip hardware	21
Care and maintenance	22
ONE-YEAR LIMITED WARRANTY	23

SAFETY INFORMATION

CAUTION: This product contains small items that could be a choking hazard if swallowed. Keep these items away from young children.

CAUTION: This stand is intended only for use with a TV not weighing more than 60 lbs. (27.2 kg) and not more than 55" wide if sitting on the top shelf. Refer to instructions for details. Using with other products including products that weigh more than the maximum weight allowed, may result in instability, which may cause possible injury.

Model #: NS-HWD1848

Distributed by Best Buy Purchasing, LLC

Manufacturer: Hong Richs Furniture Viet Nam Co., LTD.

 
This TV Stand is intended for a TV NO WIDER than 55". TV should be centered and should not hang more than one-inch over either edge.

WARNING		
Please use your stand correctly and safely. Improper use can cause safety hazards or damage to your furniture or household items. Carefully read the following chart.		
Look out for:	What can happen:	How to avoid the problem:
<ul style="list-style-type: none">Children climbing on the stand.Children playing and being active near the TV.	<ul style="list-style-type: none">Risk of injury or death.A child playing with a TV can cause it to tip over.	<ul style="list-style-type: none">Never allow children to climb on or play with the stand.Do not place toys or food on the top shelves. Children may try to climb to reach them out of curiosity.
<ul style="list-style-type: none">Improper use of the stand to support TVs.TVs that are above the maximum specified weight and/or size.	<ul style="list-style-type: none">Risk of injury or death.TVs can be very heavy. <p>Note: older CRT TVs tend to be unbalanced and prone to tipping forward.</p>	<ul style="list-style-type: none">A TV must only be set on furniture specifically designed to support a television.Never use a TV that exceeds the weight ratings or size guidelines specified for the stand.
<ul style="list-style-type: none">Overloaded shelves.	<ul style="list-style-type: none">Risk of injury.Top-heavy furniture can tip over.Overloaded shelves can break.	<ul style="list-style-type: none">Never exceed the weight limits shown in the instructions.Work from the bottom to the top when loading shelves.The side shelves support up to 15 lbs. (6.8 kg) each. The large shelf supports up to 45 lbs. (20.4 kg). The top supports up to 60 lbs. (27.2 kg).
<ul style="list-style-type: none">Improperly moving the stand.	<ul style="list-style-type: none">The stand can tip over or break if improperly moved.Risk of injury.	<ul style="list-style-type: none">Unload shelves from the top to the bottom before moving the stand.Do not push the stand, especially on a carpeted floor. Have a friend help you lift the item and set it in place.Do not lift the stand using the top shelf. Lift from the frame or leg assembly.Remove the TV before moving the TV stand.

SAVE THESE INSTRUCTIONS


Specifications

Dimensions (H × W × D)	26.0 × 47.5 × 15.5 in. (66 × 120.7 × 39.4 cm)
Weight	72.6 lbs. (33 kg)
Maximum weight capacity	60 lbs. (27.2 kg)
Maximum shelf capacity	Top: 60 lbs. (27.2 kg) Large shelf: 45 lbs. (20.4 kg) Side shelves: 15 lbs. (6.8 kg)
Maximum screen size	55" diagonal

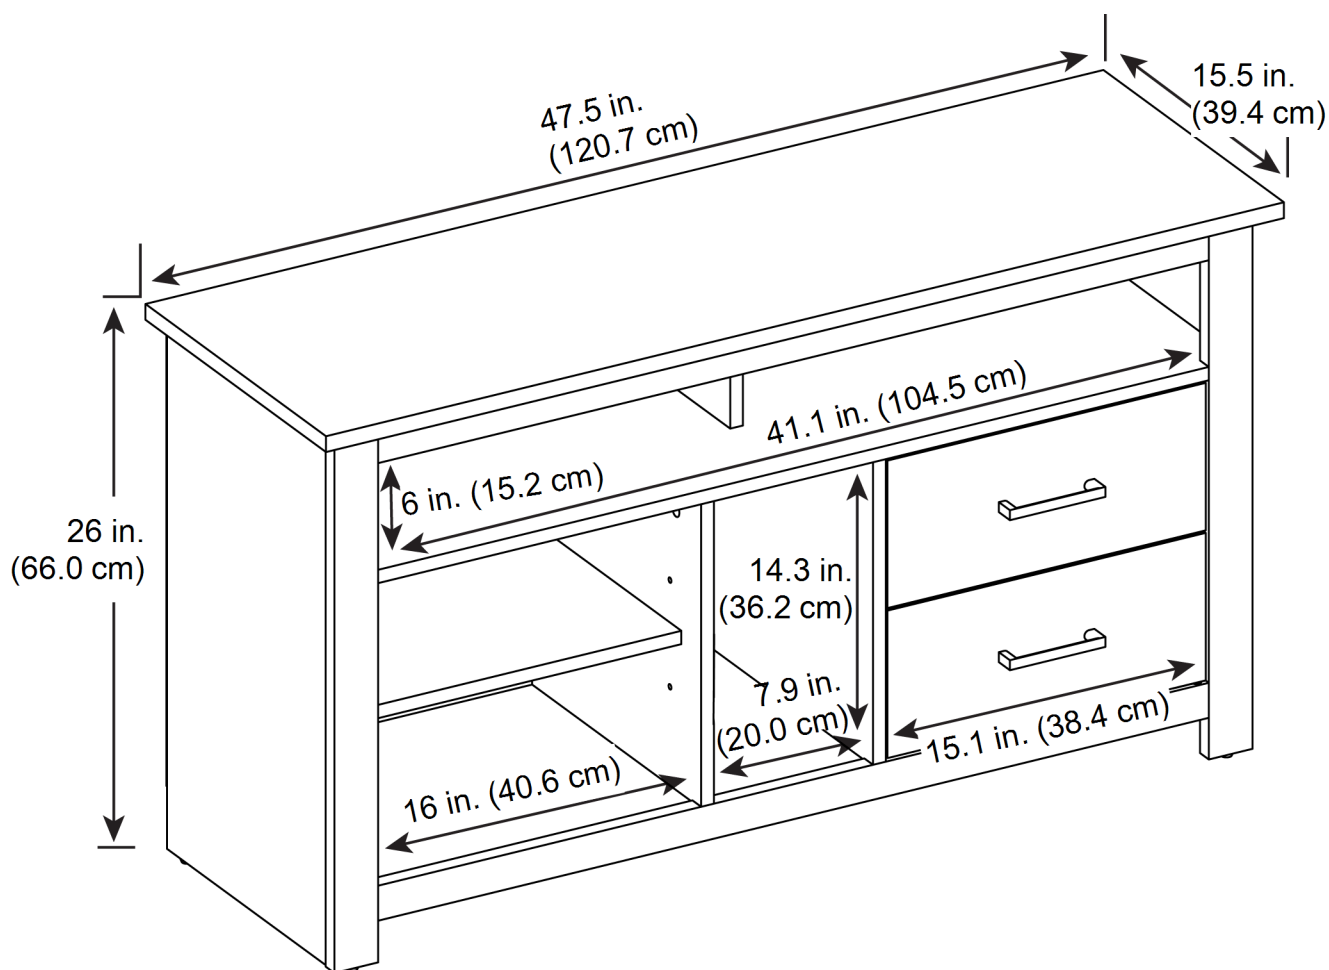


Package contents

 
Parts

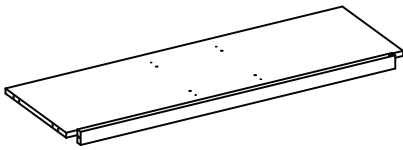


A Base

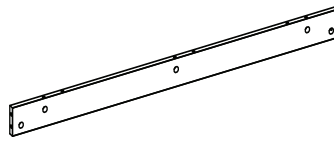 


B Back support

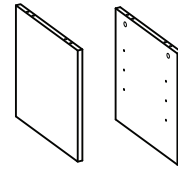 

C and D Divider panels

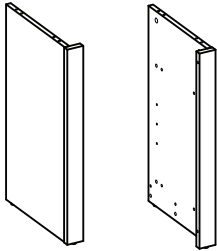 


E and F Sides

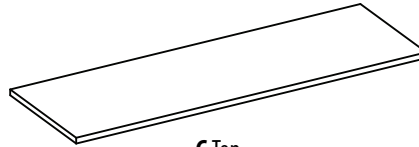 


G Top



 
H Front edge

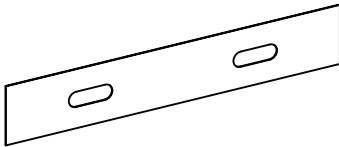


I Small back panel

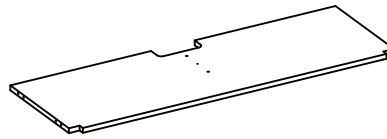 


J Large shelf

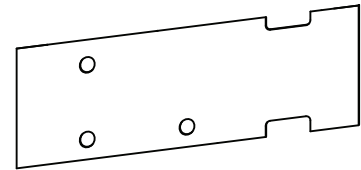 


K Large back panel

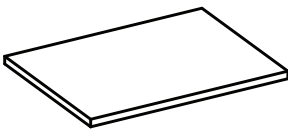 


L Small shelves (2)

 

M Small divider

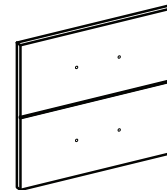 





    
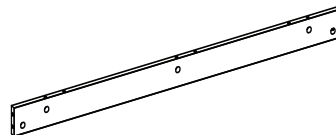 


 
 
 
 
 

 
N Door




O Center support

Hardware

LABEL	HARDWARE	QTY.
AA	 Shelf support	8
BB	 Cam screw	30
CC	 Cam lock	30
DD	 3 × 15 mm screw	36
EE	 4 × 50 mm screw	5
FF	 Dowel	41
GG	 Handle with screws	2
HH	 Right hinge pin	1

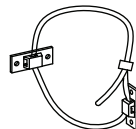LABEL	HARDWARE	QTY.
II	 Left hinge pin	1
JJ	 A3 × 15 mm screw	2
KK	 Magnetic door latch	1
LL	 Anti-tip bracket with plastic strap	2
MM	 Cable wrap	2
NN	 A4 × 13 mm screw	4
OO	 Touch up pen	1

 Tool needed




Phillips screwdriver


Assembly instructions

Step 1: Setting up the base

 - 1 Insert six wooden dowels (**FF**) into the base (**A**), then screw six cam screws (**BB**) into smaller holes with a Phillips screwdriver.

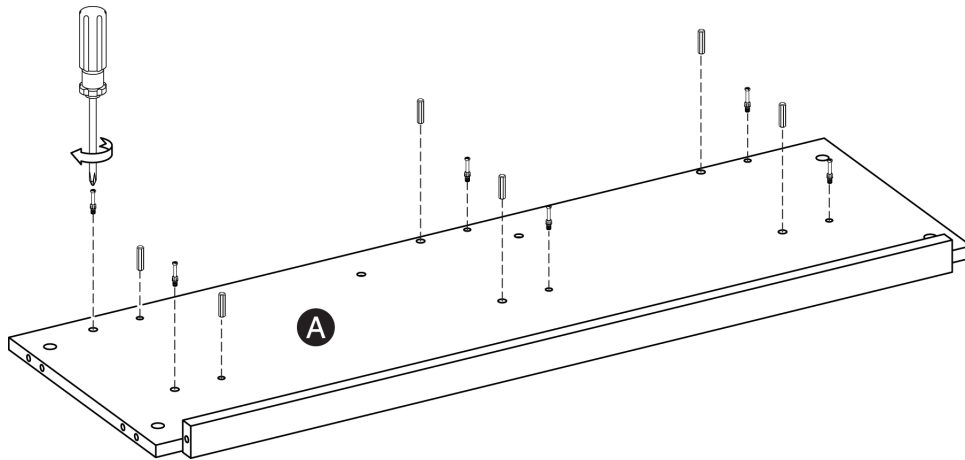

 - 2 Align support (**B**) and support (**O**) with the wooden dowels and the cam screws on the base. The cam lock holes on the sides of the supports should face the front edge of the base. Insert six cam locks (**CC**) into the cam lock holes, then use a Phillips screwdriver to secure.

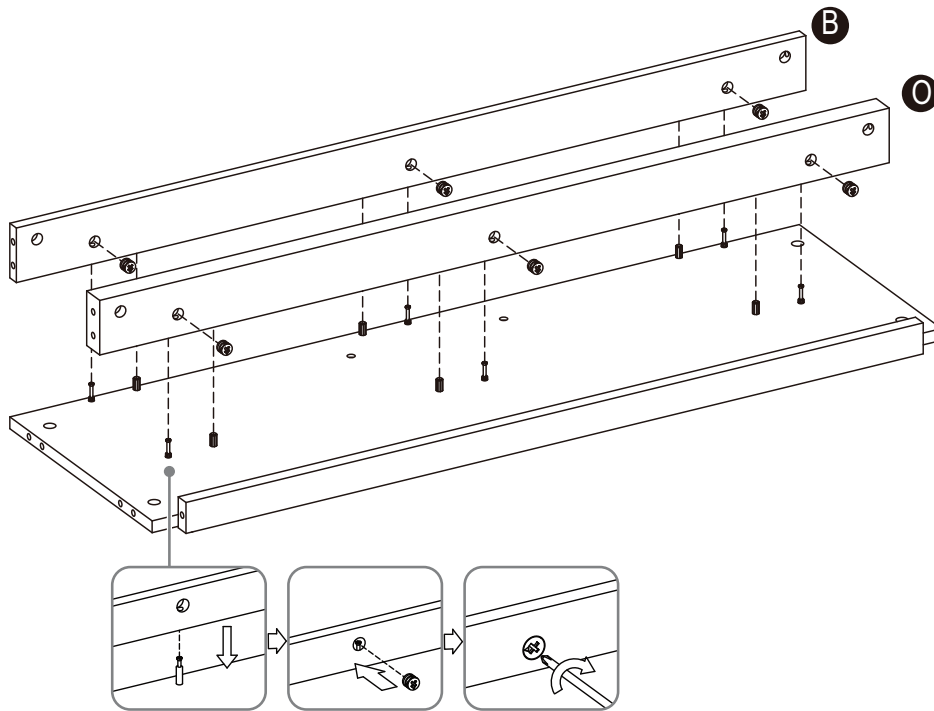

You need:



 
FF Dowel (6)



BB Cam screw (6)




CC Cam lock (6)





Phillips screwdriver

Step 2: Installing the divider panels

 - 1 Insert two wooden dowels (**FF**) into the edge of the each divider panel (**C** and **D**).

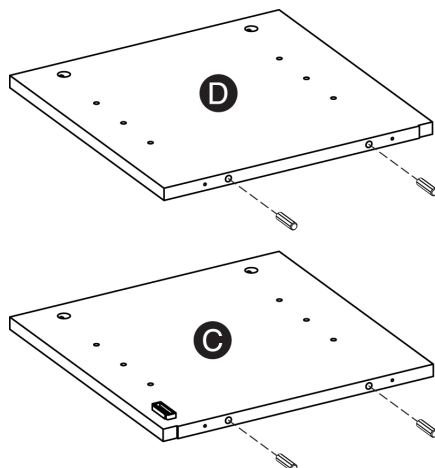


  - 2 Align the divider panels' dowels with the holes in the base. The holes on the faces of the divider panels should face outward and the holes on the edges should face down (towards the back). Insert four screws (**EE**) through the bottom of the base and into the divider panels, then tighten with a Phillips screwdriver.

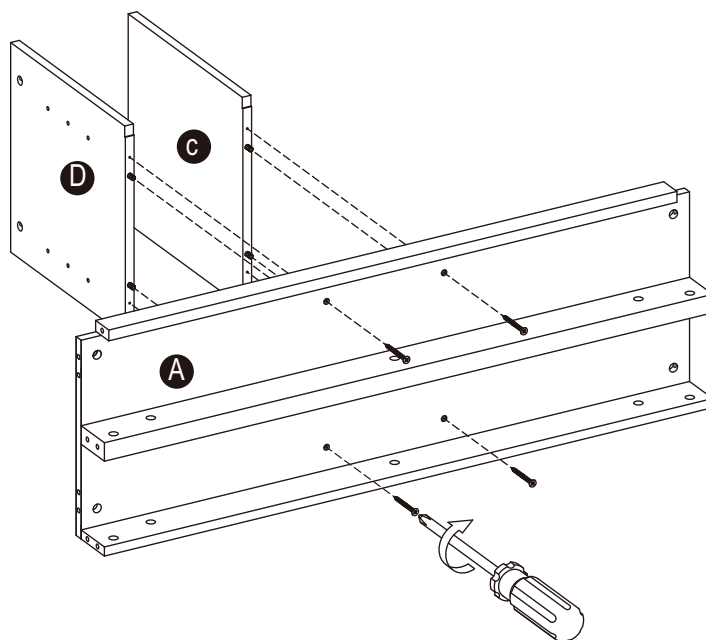
**You need:****FF Dowel (4)****EE 4 x 50 mm screws (4)****Phillips screwdriver**

Step 3: Setting up the large shelf

 - 1 Attach the magnetic catch (**KK**) to the large shelf (**J**) with two screws (**JJ**) and a Phillips screwdriver. The magnet should point out towards the edge of the shelf.

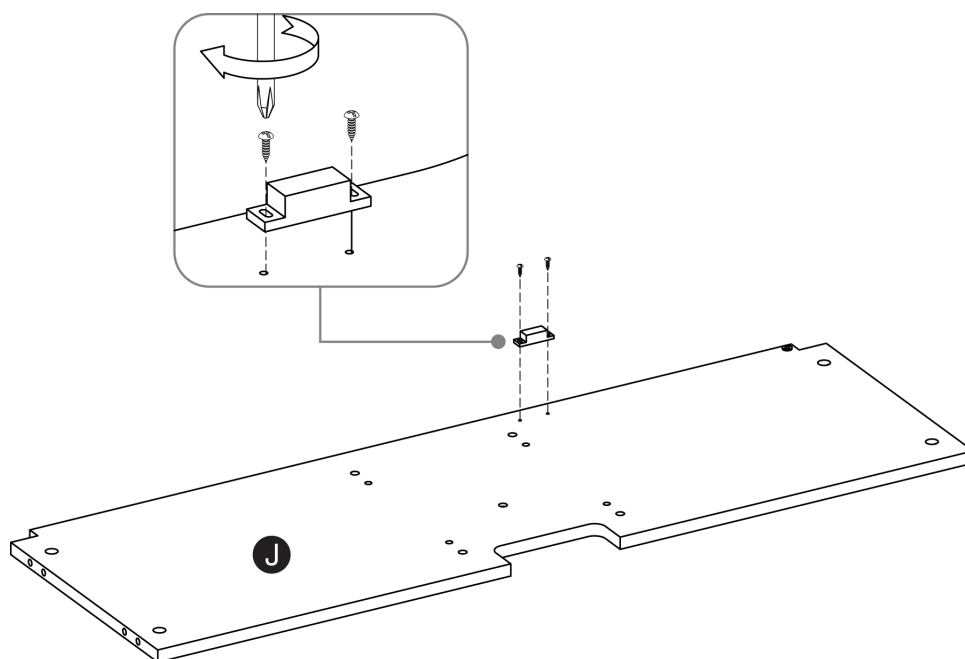

 
- 2 Insert four cam screws (**BB**) into the large shelf with a Phillips screwdriver.

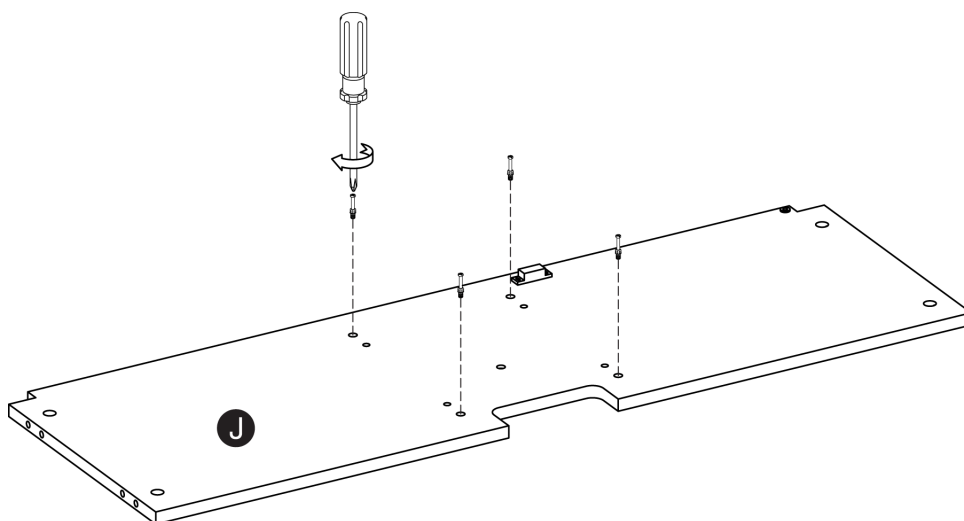

You need:



 
KK Magnetic door latch



JJ A3 x 15 mm screw (2)



 
BB Cam screw (4)





Phillips screwdriver

Step 4: Attaching the large shelf

 - 1 Insert four wooden dowels (**FF**) into the inside holes on the edges of the divider panels.

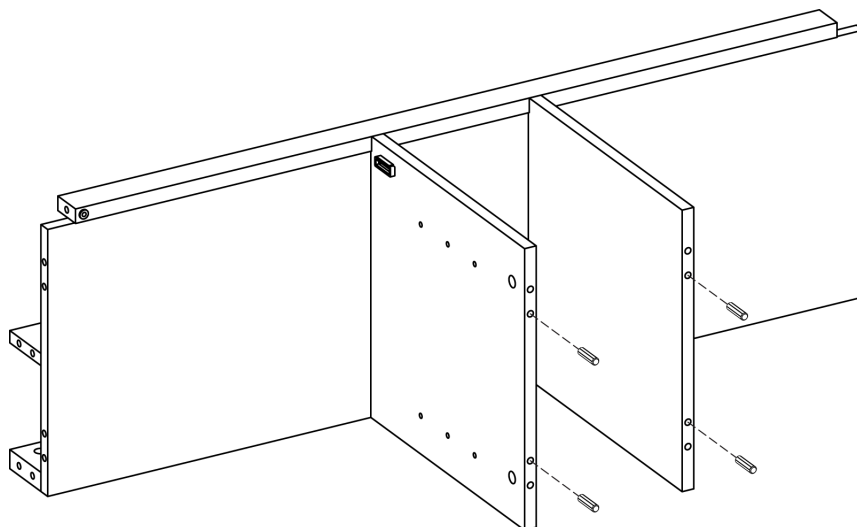


  - 2 Align the wooden dowels on the divider panels with the holes on the large shelf (**J**). Insert four cam locks (**CC**), then use a Phillips screwdriver to secure.

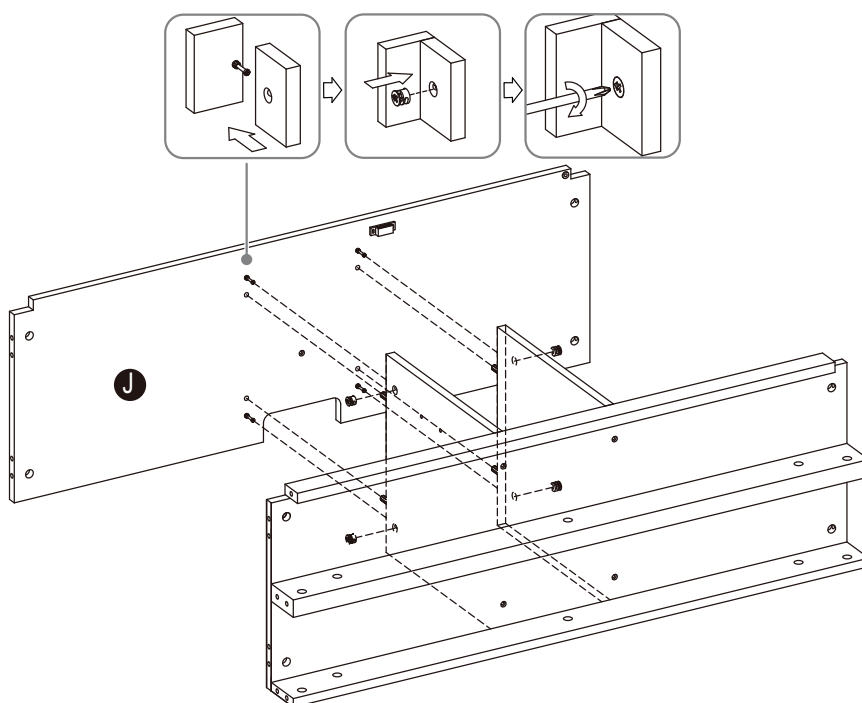
**You need:****FF Dowel (4)****CC Cam locks (4)****Phillips screwdriver**

Step 5: Attaching the sides

 
- 1 Insert 14 wooden dowels (**FF**) around the edges of the stand assembly. Do not insert dowels into the cam screw holes.

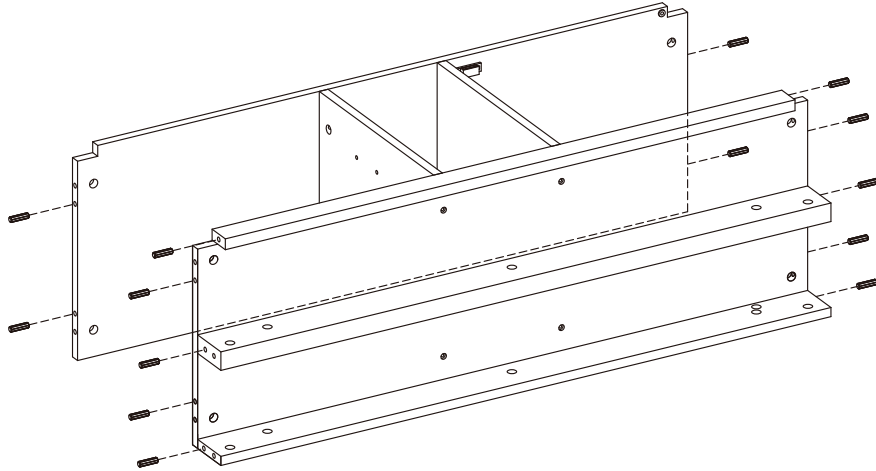

 - 2 Screw 12 cam screws (**BB**) into the sides (**E** and **F**) with a Phillips screwdriver.

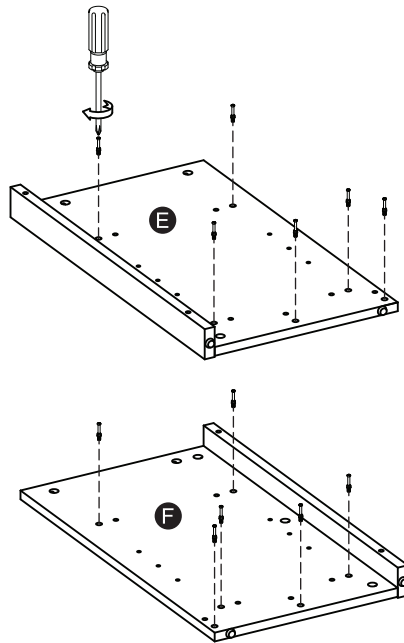

 - 3 Align the wooden dowels and cam screws on the sides and push them on.

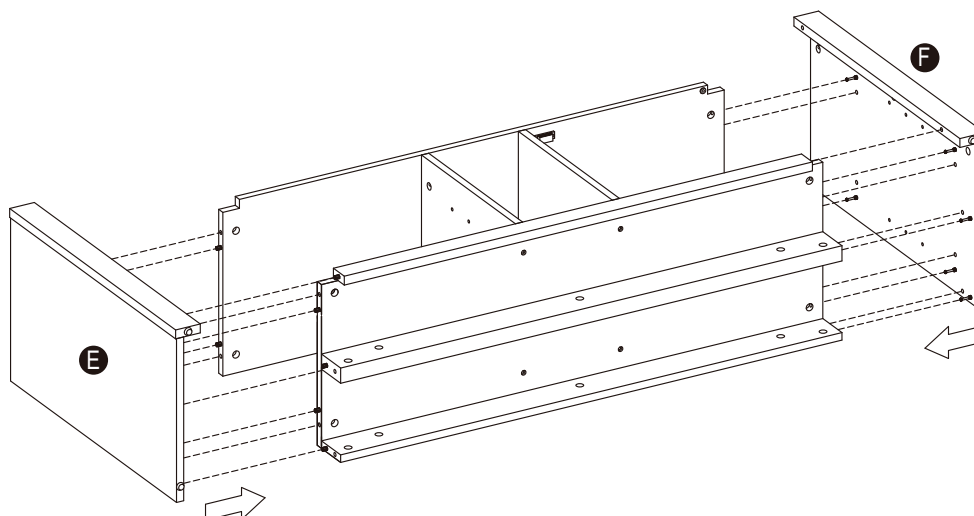


You need:



FF Dowel (14)



 
BB Cam screw (12)




Phillips screwdriver

Step 6: Attaching the front edge

 
- 1 Insert a wooden dowel (**FF**) on each side of the front edge (**H**).

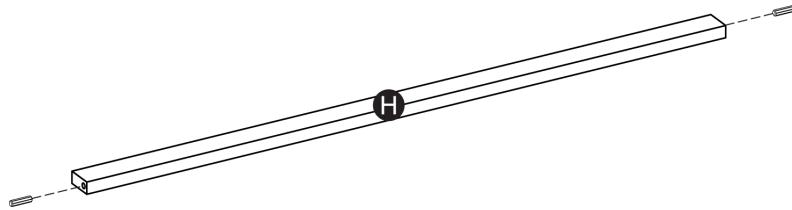

 
- 2 Insert the front edge into the holes on the corners of the sides. Make sure that the holes on the narrow side face up.

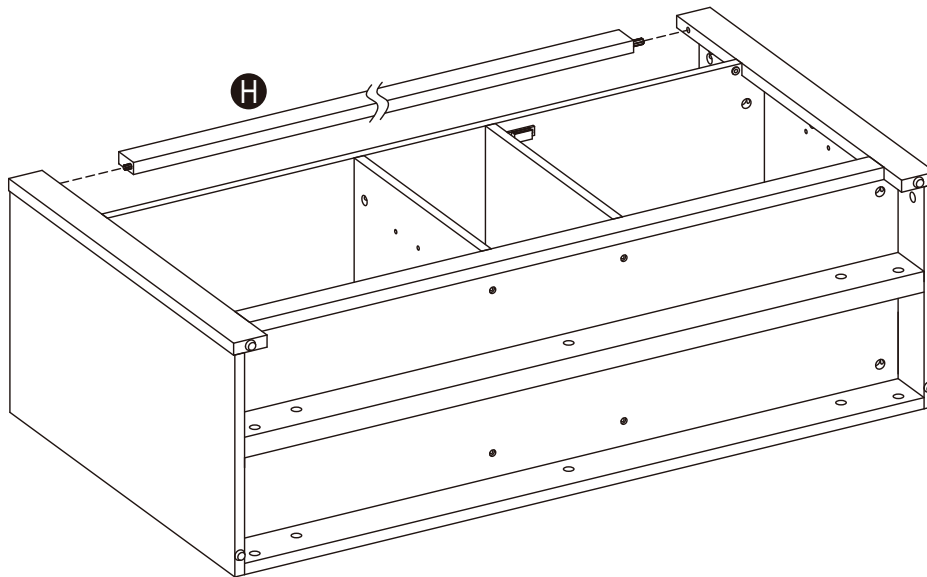

 - 3 Insert 12 cam locks (**CC**) into the stand assembly, then secure them with a Phillips screwdriver.

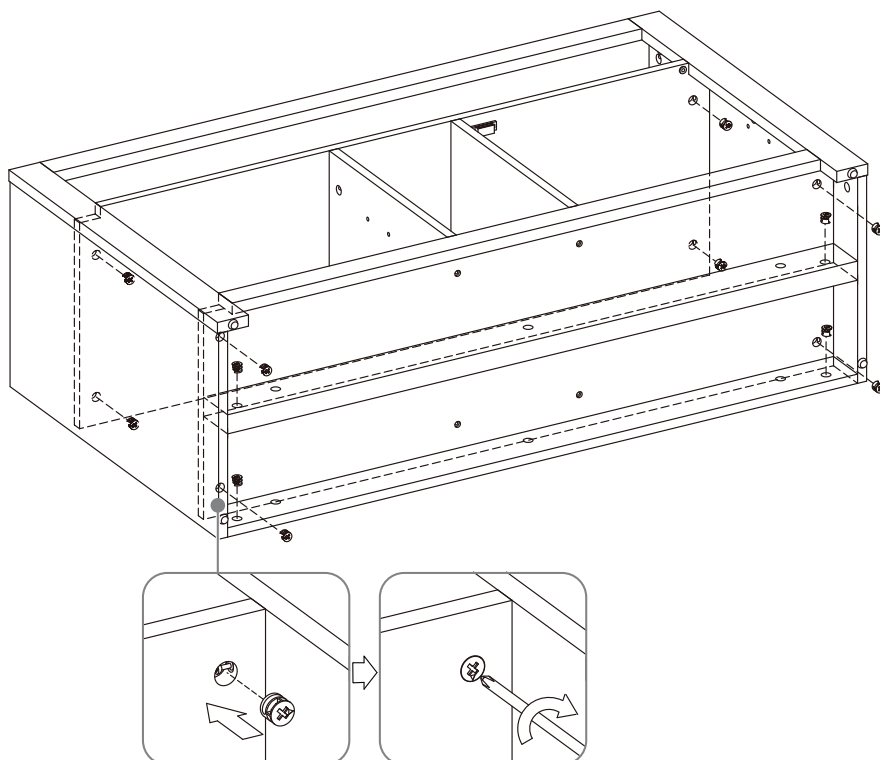

 - 4 Lift the stand upright.
- 5 Slide the swivel brackets until they align with the screw holes on the sides, then secure with two screws (**DD**) and a Phillips screwdriver.

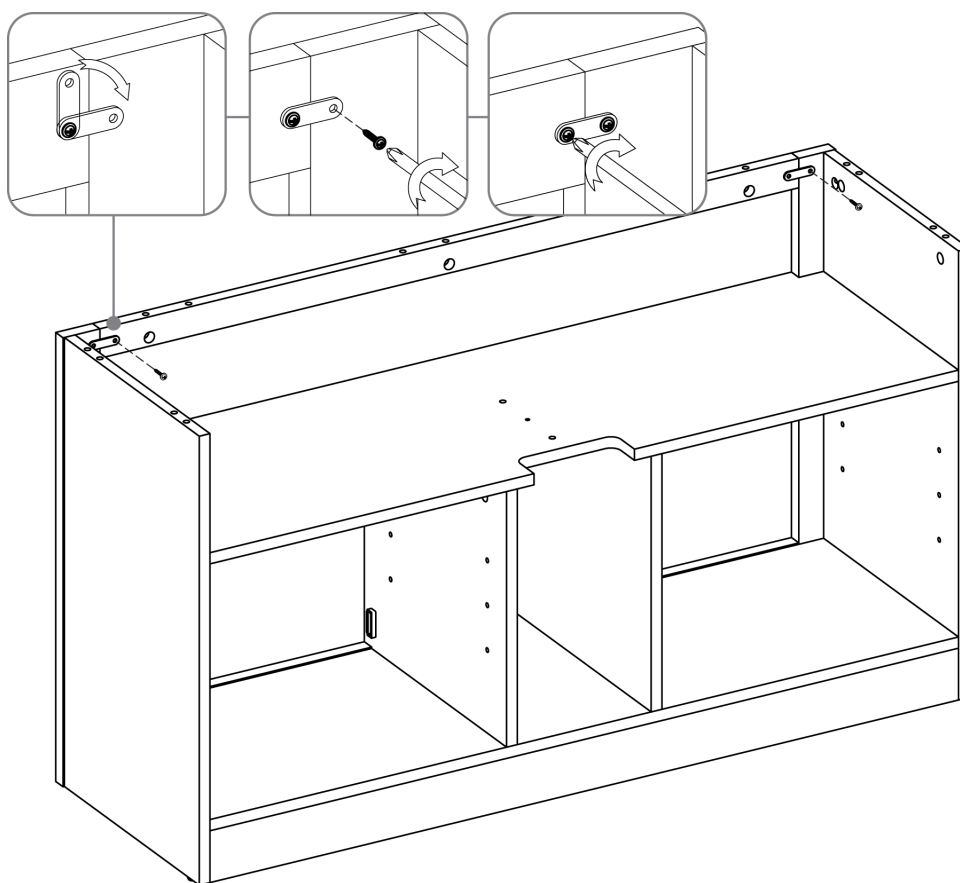


You need:




FF Dowel (2)



 CC Cam lock (12)




DD 3 x 15 mm screw (2)

 

Phillips screwdriver

Step 7: Attaching the small divider

 - 1 Insert two wooden dowels (**FF**) into the top of the large shelf.
- 2 Align the small divider (**M**) with the wooden dowels.
- 3 Insert a screw (**EE**) through the bottom of the large shelf and into the divider panel, then secure with a Phillips screwdriver.

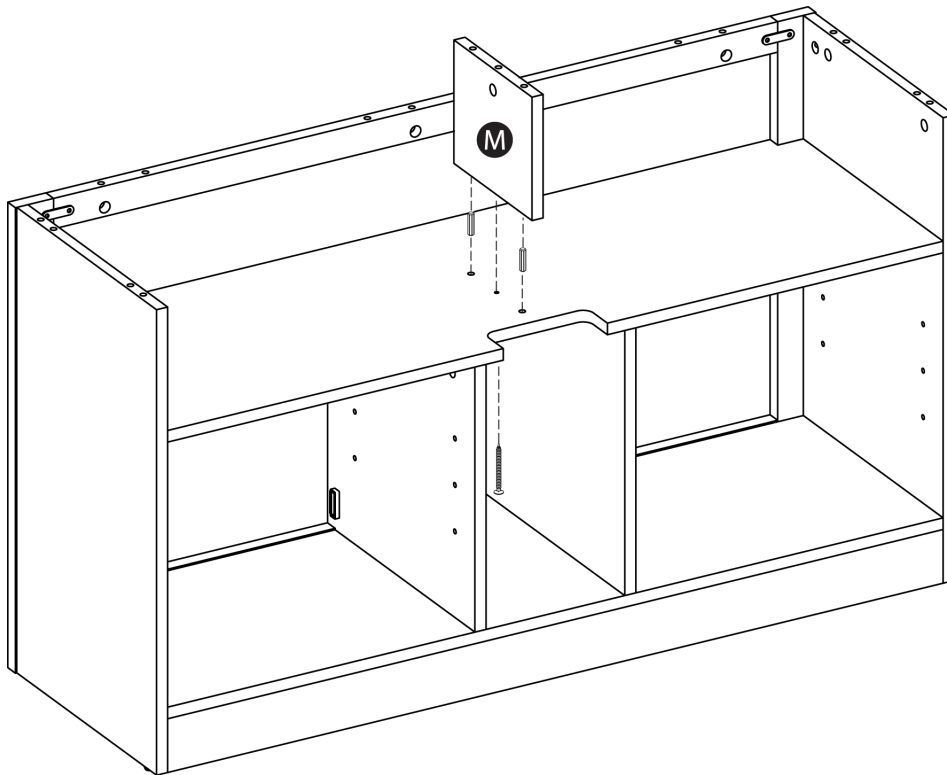


You need:



FF Dowel (2)



 
EE 4 x 50 mm screw (1)




Phillips screwdriver

Step 8: Attaching the top

 
- 1 Insert nine wooden dowels (**FF**) into the top edges of the shelf assembly.

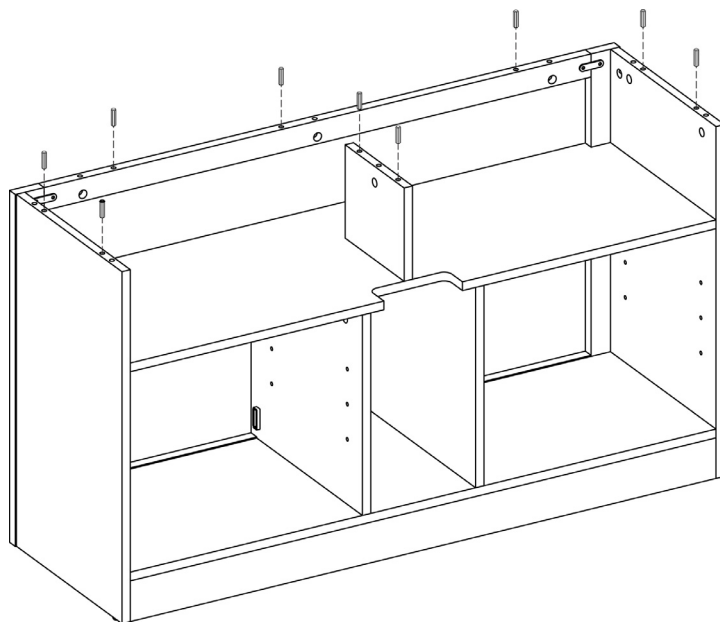

 - 2 Use a Phillips screwdriver to insert eight cam screws (**BB**) into the top (**G**).

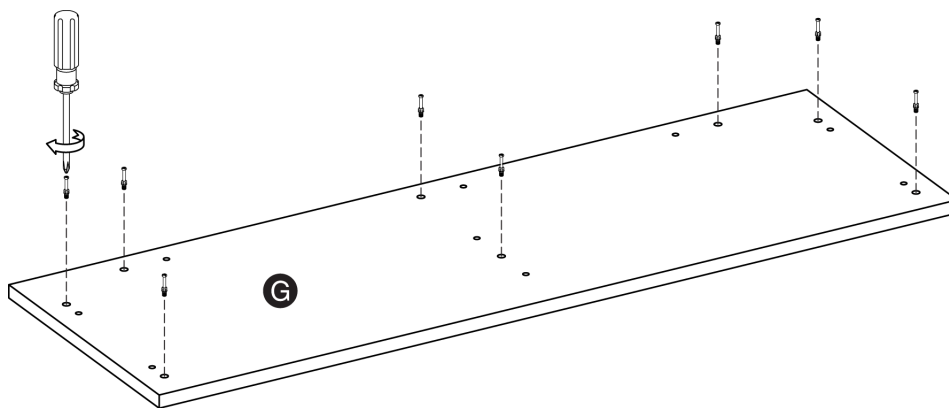

 - 3 Align the wooden dowels (**FF**) and cam screws (**BB**) on the top (**G**) with the stand assembly. Insert eight cam locks (**CC**), then use a Phillips screwdriver to secure.

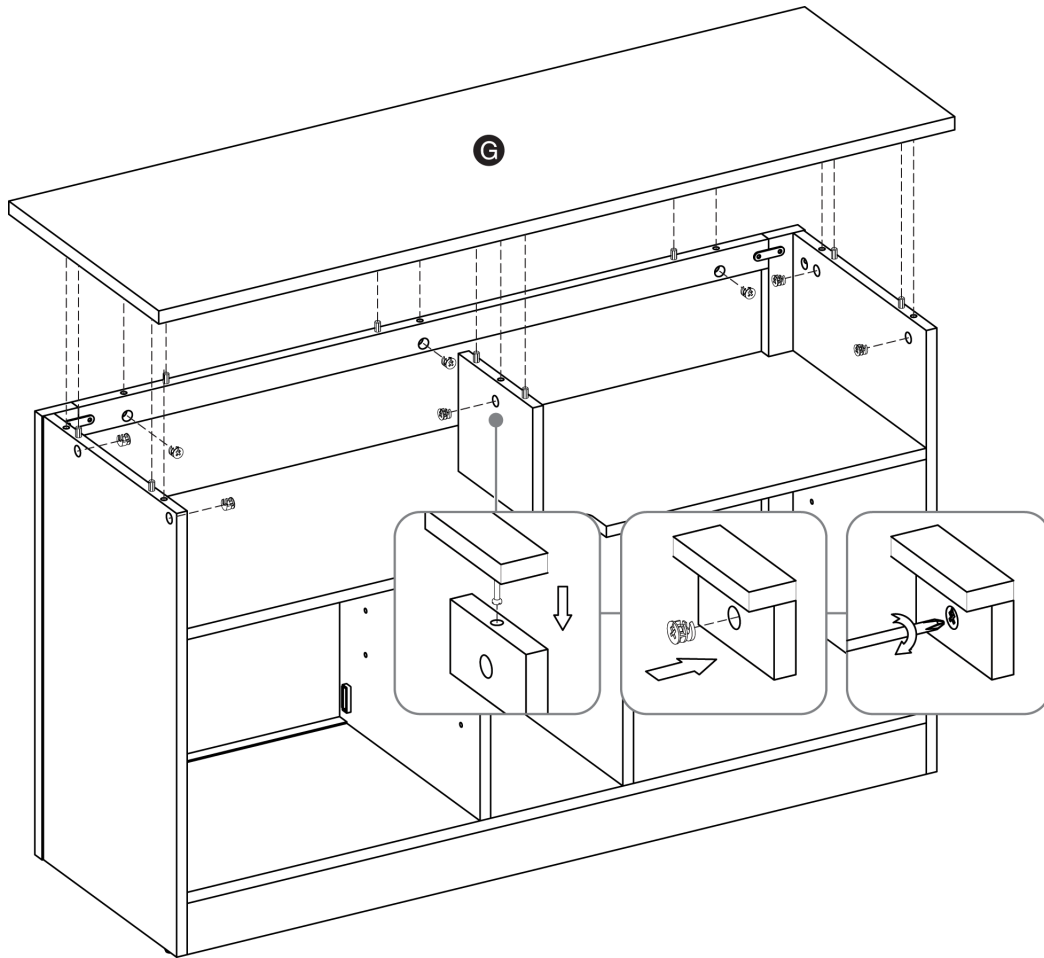

You need:



 
FF Dowel (9)



BB Cam screw (8)



CC Cam lock (8)




Phillips screwdriver


Step 9: Attaching the back

- 1 Align the screw holes on the small back panel (**I**) with the holes on the top, back edge of the stand assembly, then secure with 16 screws (**DD**) and a Phillips screwdriver.
- 2 Align the large back panel (**K**) with the small back panel, then secure with 16 screws (**DD**) and a Phillips screwdriver.



 
Note: Leave two holes open to attach the cable wrap. See step 3.

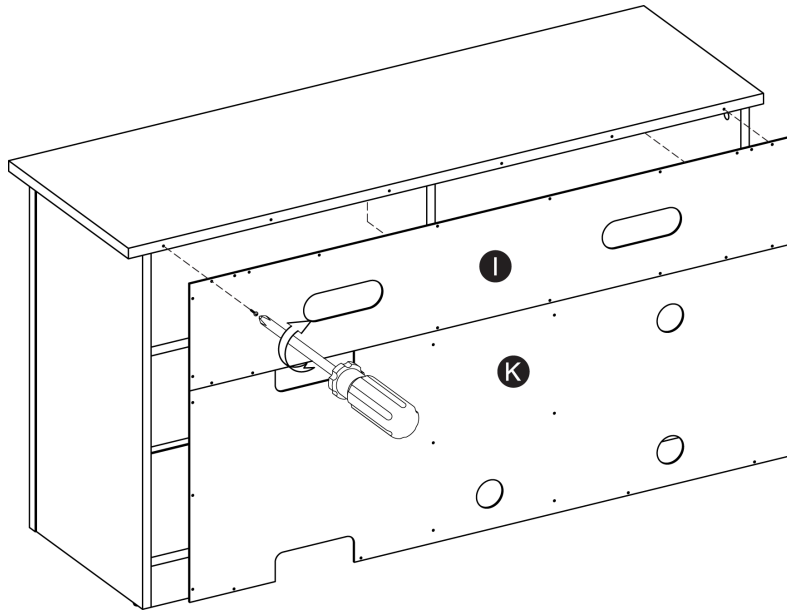

 - 3 To attach the cable wraps (**MM**), thread a screw (**DD**) through each cable wrap, then secure them to the small back panel with a Phillips screwdriver.

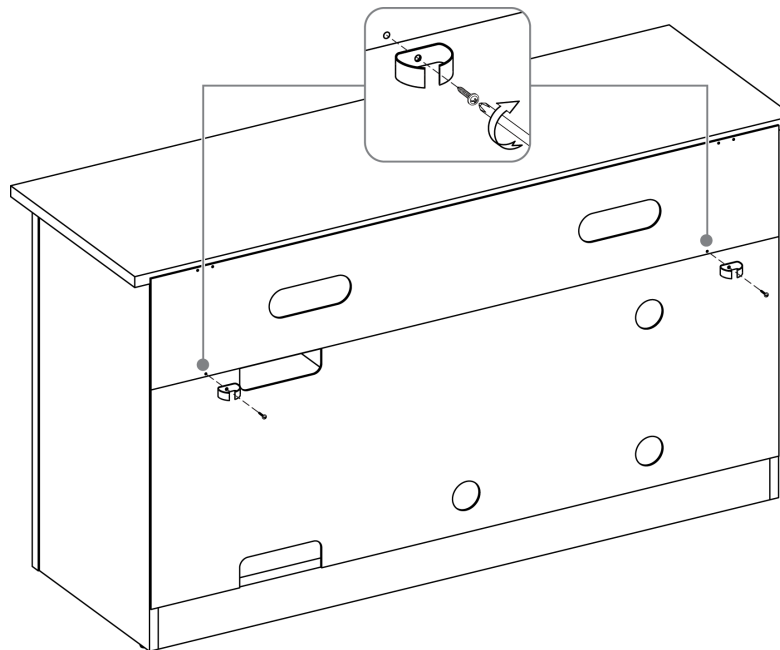


You need:

   


Step 10: Attaching the door

 
- 1 Remove the screws from the handles (**GG**), then align the handles with the holes on the door (**N**). Secure with the screws and a Phillips screwdriver.

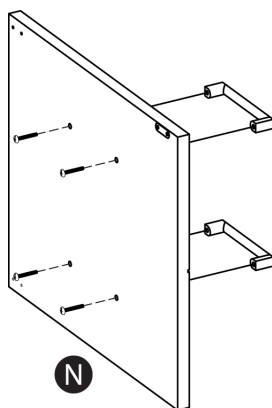

 
- 2 Insert the hinges (**HH** and **II**) into the holes, then slide the door onto the hinges. Secure the door to the hinges with four screws (**NN**).

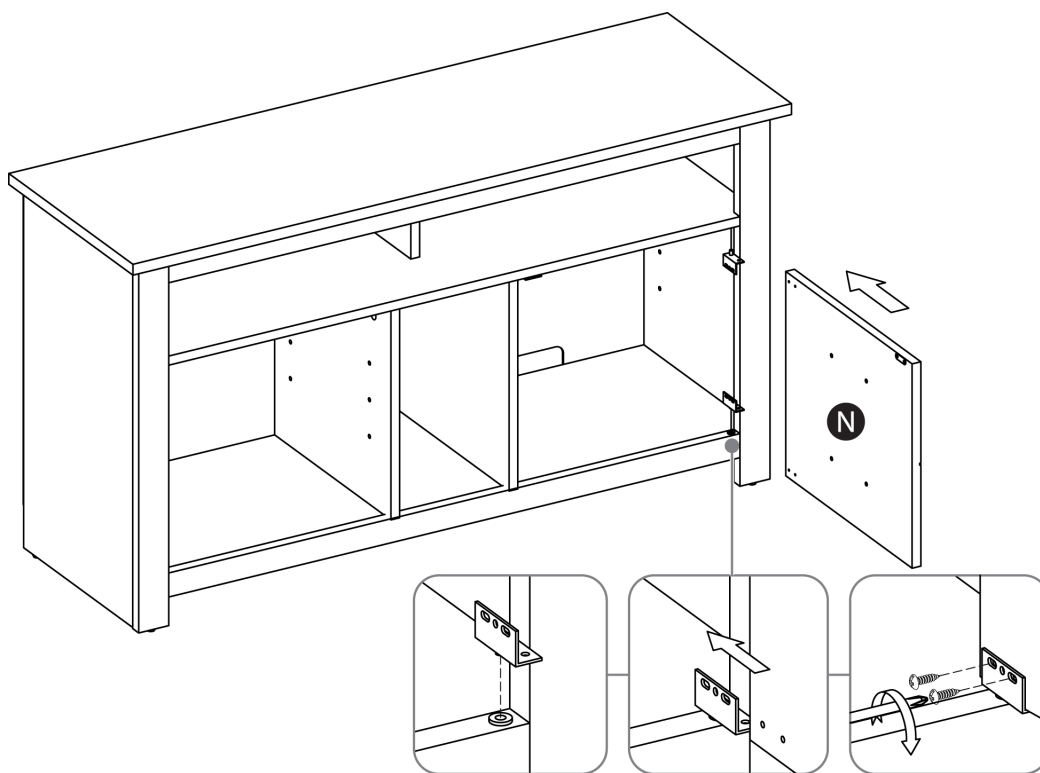


You need:

 

GG Handle with screws (2)

 


HH Right hinge pin

 

II Left hinge pin




 
NN A4 × 13 mm screw(4)



Phillips screwdriver

Step 11: Installing the small shelves

  - 1 Insert the shelf supports (**AA**) at the height that you want your shelves.
- 2 Slide the shelves (**L**) onto the shelf supports.

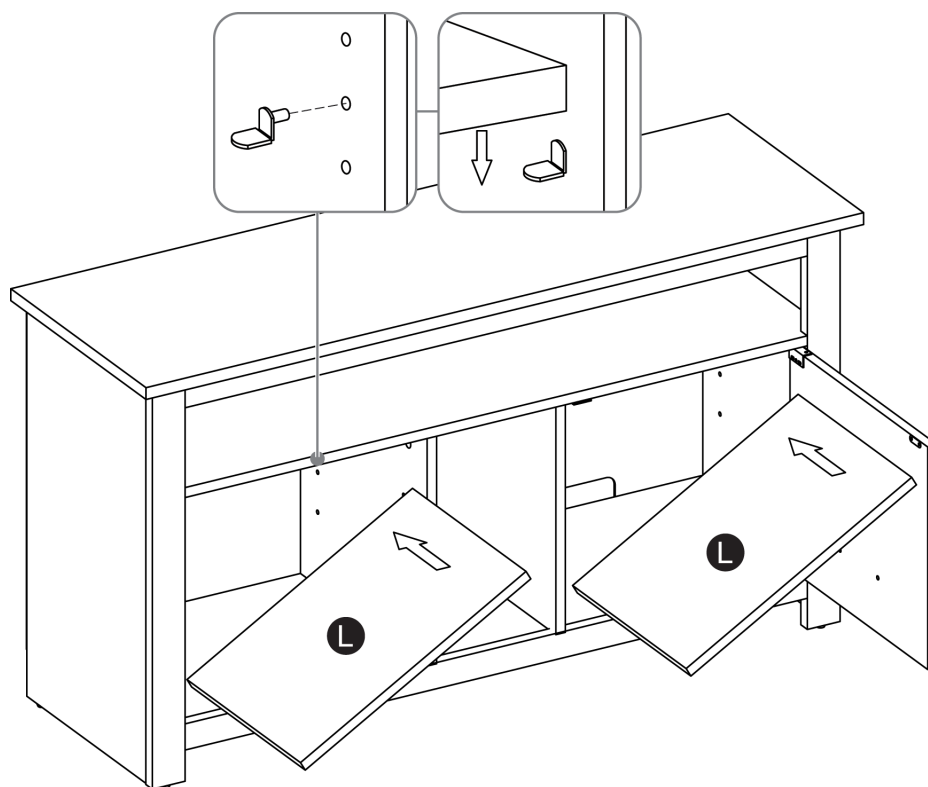
**You need:****AA Shelf support (8)**

Step 12: Installing anti-tip hardware


- 1 Align the anti-tip bracket (LL) with the two small holes in the upper-left corner of the small back panel, then secure it with the two small screws and a Phillips screwdriver.
- 2 At the location you want to place your TV stand, secure a second anti-tip bracket to your wall with the two large screws and a Phillips screwdriver. The bracket should be 26 in. (66 cm) from the floor.

Note: Attach at least one anti-tip bracket to a stud in your wall.

 
- 3 Insert the zip tie through the brackets on your TV stand and wall, then tighten it.
- 4 Repeat steps 1-3 for the upper-right corner of your TV stand.

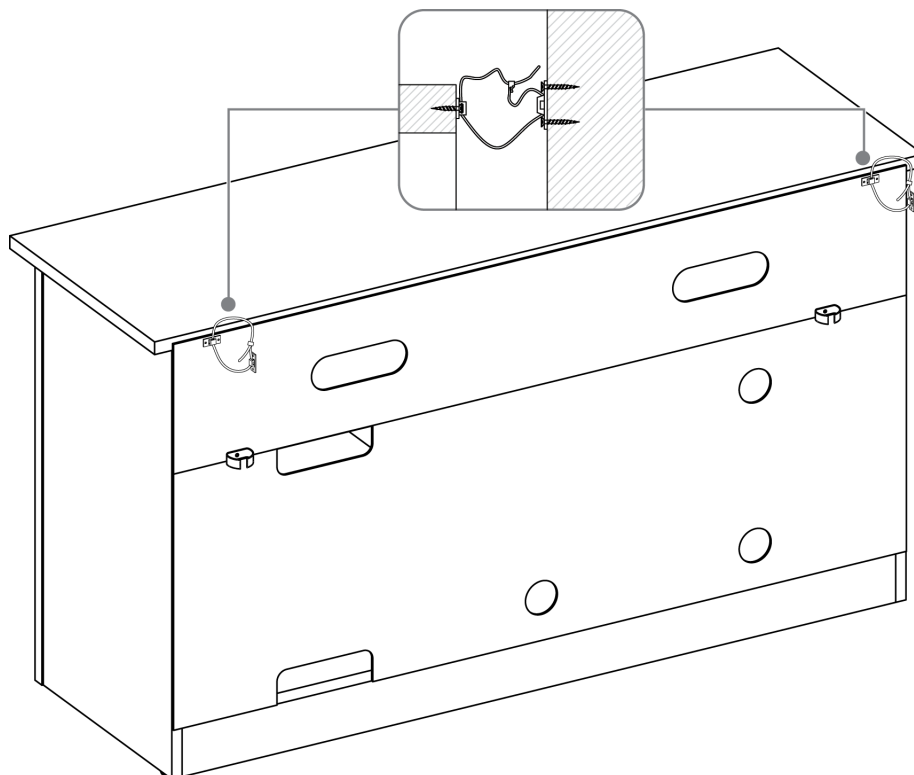

You need:

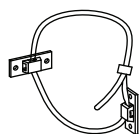 

 LL Anti-tip bracket with plastic strap (2)



Phillips screwdriver

Care and maintenance

- Use your favorite type of furniture polish.
- Do not spray directly onto the stand. Spray onto a soft cloth then wipe the stand.
- Always test any polish in a discrete location first, such as the back of the stand, to make sure that there is no adverse reaction.
- Dust frequently with a soft cloth.
- Never slide objects across surfaces. Lift objects from the top surface rather than dragging them across the finish when moving them.
- Do not expose your stand to direct sunlight, drying heat sources, or dampness.

ONE-YEAR LIMITED WARRANTY

Definitions:

The Distributor* of Insignia branded products warrants to you, the original purchaser of this new Insignia-branded product ("Product"), that the Product shall be free of defects in the original manufacture of the material or workmanship for a period of one (1) year from the date of your purchase of the Product ("Warranty Period").

For this warranty to apply, your Product must be purchased in the United States or Canada from a Best Buy branded retail store or online at www.bestbuy.com or www.bestbuy.ca and is packaged with this warranty statement.

How long does the coverage last?

The Warranty Period lasts for 1 year (365 days) from the date you purchased the Product. Your purchase date is printed on the receipt you received with the Product.

What does this warranty cover?

During the Warranty Period, if the original manufacture of the material or workmanship of the Product is determined to be defective by an authorized Insignia repair center or store personnel, Insignia will (at its sole option): (1) repair the Product with new or rebuilt parts; or (2) replace the Product at no charge with new or rebuilt comparable products or parts. Products and parts replaced under this warranty become the property of Insignia and are not returned to you. If service of Products or parts are required after the Warranty Period expires, you must pay all labor and parts charges. This warranty lasts as long as you own your Insignia Product during the Warranty Period. Warranty coverage terminates if you sell or otherwise transfer the Product.

How to obtain warranty service?

If you purchased the Product at a Best Buy retail store location or from a Best Buy online website (www.bestbuy.com or www.bestbuy.ca), please take your original receipt and the Product to any Best Buy store. Make sure that you place the Product in its original packaging or packaging that provides the same amount of protection as the original packaging.

To obtain warranty service, in the United States and Canada call 1-877-467-4289. Call agents may diagnose and correct the issue over the phone.

Where is the warranty valid?

This warranty is valid only in the United States and Canada at Best Buy branded retail stores or websites to the original purchaser of the product in the country where the original purchase was made.

What does the warranty not cover?

This warranty does not cover:

- Food, beverage, and/or medicine loss/spoilage.
- Customer instruction/education
- Installation
- Set up adjustments
- Cosmetic damage
- Damage due to weather, lightning, and other acts of God, such as power surges
- Accidental damage
- Misuse
- Abuse
- Negligence
- Commercial purposes/use, including but not limited to use in a place of business or in communal areas of a multiple dwelling condominium or apartment complex, or otherwise used in a place of other than a private home.
- Modification of any part of the Product, including the antenna
- Display panel damaged by static (non-moving) images applied for lengthy periods (burn-in).
- Damage due to incorrect operation or maintenance
- Connection to an incorrect voltage or power supply
- Attempted repair by any person not authorized by Insignia to service the Product
- Products sold "as is" or "with all faults"
- Consumables, including but not limited to batteries (i.e. AA, AAA, C etc.)
- Products where the factory applied serial number has been altered or removed
- Loss or Theft of this product or any part of the product
- Display panels containing up to three (3) pixel failures (dots that are dark or incorrectly illuminated) grouped in an area smaller than one tenth (1/10) of the display size or up to five (5) pixel failures throughout the display. (Pixel based displays may contain a limited number of pixels that may not function normally.)
- Failures or Damage caused by any contact including but not limited to liquids, gels or pastes.

REPAIR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS YOUR EXCLUSIVE REMEDY FOR BREACH OF WARRANTY. INSIGNIA SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, INCLUDING, BUT NOT LIMITED TO, LOST DATA, LOSS OF USE OF YOUR PRODUCT, LOST BUSINESS OR LOST PROFITS. INSIGNIA PRODUCTS MAKES NO OTHER EXPRESS WARRANTIES WITH RESPECT TO THE PRODUCT, ALL EXPRESS AND IMPLIED WARRANTIES FOR THE PRODUCT, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE WARRANTY PERIOD SET FORTH ABOVE AND NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, WILL APPLY AFTER THE WARRANTY PERIOD. SOME STATES, PROVINCES AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE.

Contact Insignia:

1-877-467-4289

www.insigniaproducts.com

INSIGNIA is a trademark of Best Buy and its affiliated companies.

*Distributed by Best Buy Purchasing, LLC

7601 Penn Ave South, Richfield, MN 55423 U.S.A

©2023 Best Buy. All rights reserved.

INSIGNIA™

www.insigniaproducts.com
1-877-467-4289 (U.S. and Canada)

INSIGNIA is a trademark of Best Buy and its affiliated companies.
Distributed by Best Buy Purchasing, LLC
7601 Penn Ave South, Richfield, MN 55423 U.S.A.
©2023 Best Buy. All rights reserved.

V5 ENGLISH
23-0405