

USA office: Fontana

AUS office: Truganina

GBR office: FDS Corporation Limited, Unit 4, Blackacre Road, Great Blakenham, Ipswich, Ip6 0FL, United Kingdom

If you're having difficulty, our friendly
customer team is always here to help.



USA:cs.us@costway.com
AUS:cs.au@costway.com
GBR:cs.uk@costway.com

KIDS LUGGAGE SET **TS10019**

THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION.
PLEASE READ AND KEEP FOR FUTURE REFERENCE.




Before You Start

Please read all instructions carefully and keep it for future reference.

Warnings

- Attention!** Please do not store cash or valuable items in the suitcase to prevent loss or theft.
- Attention!** Do not play on the suitcase to avoid tipping it over and causing injury to the user.
- Attention!** Please do not stand on wheels in unstable areas to avoid the suitcase tipping over or accidents.
- Attention!** Do not use casters to move the suitcase on rough roads such as stairs, in order to avoid injury to the user or overturning or damage to the suitcase.

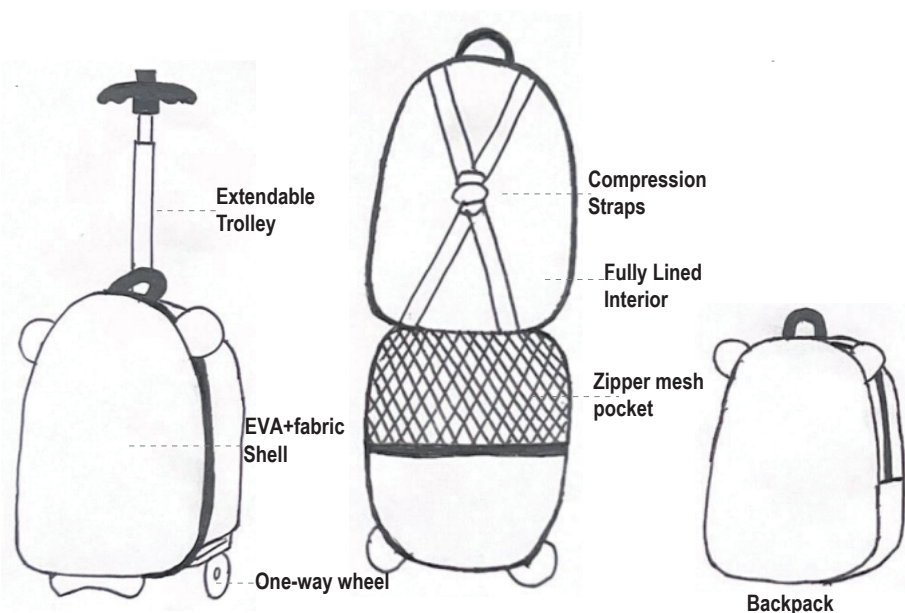

Instructions for using

1. Open the luggage: Pinch the zipper puller and open the zipper.
2. Adjust the trolley height: The top of the luggage compartment is equipped with a retractable handle, which can be pulled up or down as needed to adjust the height of the luggage compartment. Meanwhile, please ensure that the position of the handle is secure and fully locked to avoid inconvenience or accidents during use.
3. Move the luggage: Grasp the luggage handle and push the luggage forward on a flat surface. It is not recommended to drag the luggage on unflat roads to avoid damaging the luggage and wheels.
4. The interior of the luggage compartment is designed with mesh pocket and elastic bands to facilitate your reasonable planning of luggage placement and meet the storage needs of different items.
5. The length of the backpack straps can be adjustable by plastic buckle.

Product Maintenance and Care

- Clean: Use a clean and damp cloth to clean the surface of the luggage compartment, and do not use cleaning agents containing acidity or alkalinity. Do not use sharp objects to scratch the luggage, as it may scratch the appearance.
- Protection: When not in use, please store the luggage in a dry and ventilated place, away from direct sunlight and high temperature environments. Before using the luggage, please carefully check for any damage. If there are any problems, please contact after-sales service in a timely manner.

Important Warnings

- ⚠ Do Not Overload! Maximum load for luggage is 8 kgs, Maximum load for backpack and lunch bag is 2 kgs. Please pay attention to the weight limit of your luggage when boarding and taking public transportation. Overweight may cause luggage and backpack damage!
- ⚠ Fragile items! If the luggage contains fragile items, please ensure that appropriate packaging materials are used for protection to prevent damage during transportation.
- ⚠ Avoid violent handling: Please avoid throwing, bumping, or applying excessive pressure to the suitcase to avoid affecting the integrity and service life of the packaging.
- ⚠ Do not place heavy objects above the luggage: When loading or unloading luggage, please do not place heavy objects over the luggage to prevent other luggage from exerting pressure on it.