


INSIGNIA™

User Guide

64" Wood Finish TV Stand

NS-HW1764G

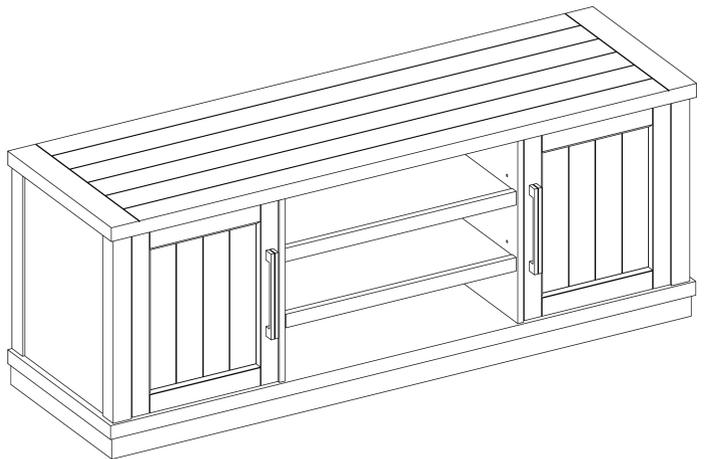


Before using your new product, please read these instructions to prevent any damage.

Table of Contents

Package contents	2
Safety information	4
Specifications	5
Assembling your TV stand	6
Attaching the doors	11
Installing the shelves	13
Leveling your TV stand	14
Care and maintenance	14
One-Year Limited Warranty	15

Package contents

 
Parts




(A) Base



 (B & C) Divider panels (2)



(D & E) Sides (2)

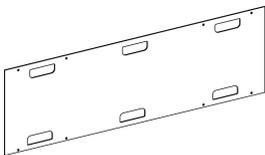

(F) Back



 
(G) Top



(H) Doors (2)




(I) Side shelves (2)




(J) Middle shelves (2)

 
Hardware

Label	Hardware	Quantity
L	 Hinges	4
K	 4 (dia.) × 22 mm screws	4
N	 8 (dia.) × 30 mm wooden dowels	16
O	 Shelf supports	16
P	 Touch-up pen	1
R	 3.5 (dia.) × 16 mm screws	8
V	 Handles	2
X	 6.3 (dia.) × 15 mm bolts	8

 Tools Needed



Phillips screwdriver

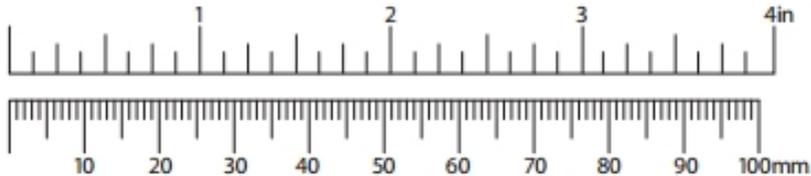

Safety information

CAUTION: This product contains small items that could be a choking hazard if swallowed. Keep these items away from young children.

CAUTION: This stand is intended only for use with a TV not weighing more than 125 lbs. (56.7 kg) and not more than 75" wide if sitting on the top shelf. Refer to instructions for details. The center shelves can only support 30 lbs. (13.6 kg) and the side shelves can only support 15 lbs. (6.8 kg). Using with other products including products that weigh more than the maximum weight allowed, may result in instability, which may cause possible injury.

Model #: NS-HW1764G

Distributed by Best Buy Purchasing, LLC

Manufacturer: Elements International Group, LLC

Manufacture date:

This TV Stand is intended for a TV **NO WIDER** than 75".

TV should be centered and should not hang more than 1-inch over either edge.

WARNING


Please use your stand correctly and safely. Improper use can cause safety hazards or damage to your furniture or household items. Carefully read the following chart.

Look out for:	What can happen:	How to avoid the problem:
<ul style="list-style-type: none"> • Children climbing on the stand. • Children will play and be active near the TV. 	<ul style="list-style-type: none"> • Risk of injury or death. • A child playing with a TV can cause it to tip over. 	<ul style="list-style-type: none"> • Never allow children to climb on or play with the stand. • Do not place toys or food on the top shelves. Children may try to climb to reach them out of curiosity.
<ul style="list-style-type: none"> • Improper use of the stand to support TVs. • TVs that are above the maximum specified weight and/or size. 	<ul style="list-style-type: none"> • Risk of injury or death. • TVs can be very heavy. Note, older CRT TVs tend to be unbalanced and prone to tipping forward. 	<ul style="list-style-type: none"> • A TV must only be set on furniture specifically designed to support a television. • Never use a TV that exceeds the weight ratings or size guidelines specified for the stand.
<ul style="list-style-type: none"> • Overloaded shelves. 	<ul style="list-style-type: none"> • Risk of injury. • Top-heavy furniture can tip over. • Overloaded shelves can break. 	<ul style="list-style-type: none"> • Never exceed the weight limits shown in the instructions. • Work from the bottom to the top when loading shelves. • The middle shelf can only support 25 lbs. and the bottom shelf can only support 50 lbs. The top can support 125 lbs.

<ul style="list-style-type: none"> Improperly moving the stand. 	<ul style="list-style-type: none"> The stand can tip over or break if improperly moved. Risk of injury. 	<ul style="list-style-type: none"> Unload shelves from the top to the bottom before moving the stand. Do not push the stand, especially on a carpeted floor. Have a friend help you lift the item and set it in place. Do not lift the stand using the top shelf. Lift from the frame or leg assembly. Remove the TV before moving the TV stand.
--	---	--


Specifications

Dimensions (H x W x D)	24.0 x 63.5 x 19.5 in. (61 x 161.3 x 49.5 cm)
Weight	123 lbs. (56 kg)
Maximum weight capacity	125 lbs.
Maximum shelf capacity	Side shelves: 15 lbs. Center shelves: 30 lbs.
Maximum screen size	75" diagonal

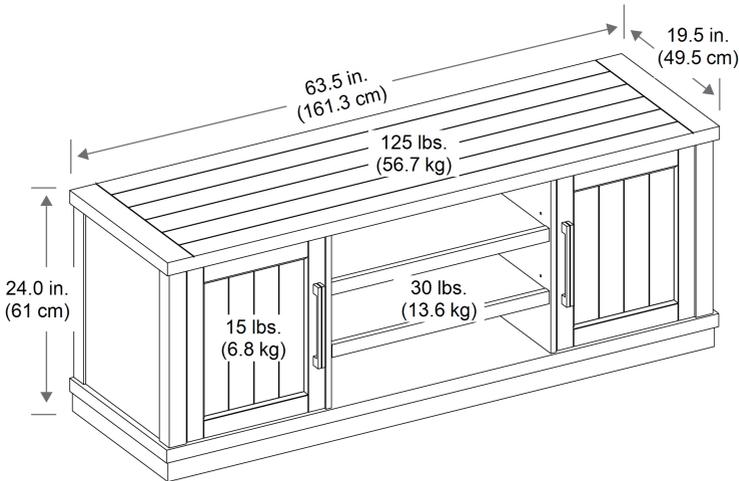


Assembling your TV stand

- 1 Insert eight wooden dowels into the base.

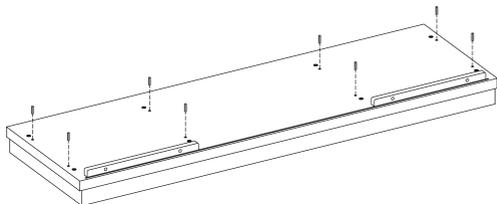

You'll need:

 


A



N (8)

- 2 Align the divider panels with the wooden dowels (the holes in the panels should face each other), then push the locks closed.

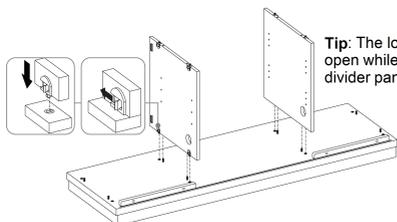


Tip: The locks should be open while aligning the divider panels.

You'll need:




B & C

- 3 Align the sides with the wooden dowels (the holes in the sides should face each other), then push the locks closed.

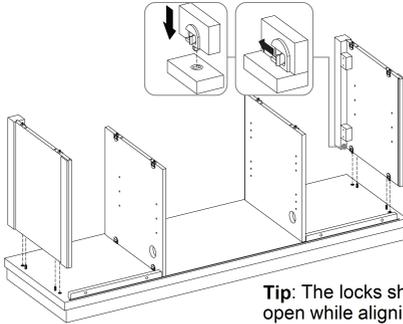


Tip: The locks should be open while aligning the sides.

 You'll need:




D & E

- 4 Slide the back into the grooves formed by the base and sides. The finished side should face the inside.

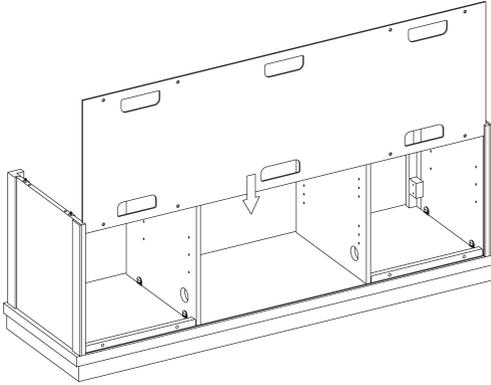


You'll need:

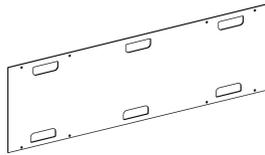

F

- 5 Insert eight wooden dowels into the divider panels and sides, then make sure that the unused locks are open.

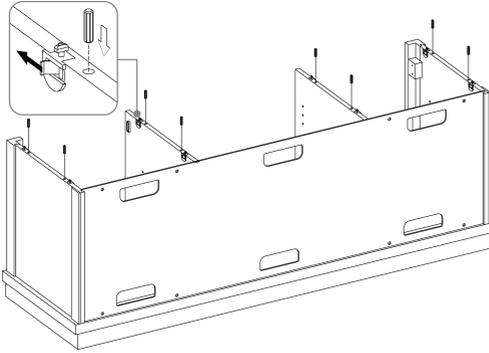


You'll need:



N (8)

- 6 Align the top with the wooden dowels (the groove should be towards the back of the stand), then push the locks closed.

Tip: If the locks won't close, remove the top and make sure that the back is correctly aligned in the groove.

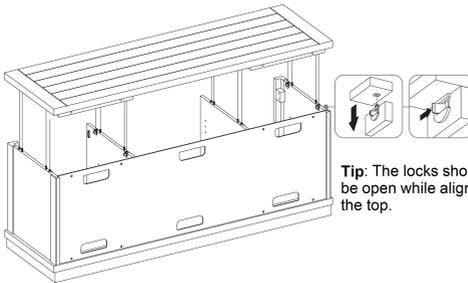


Tip: The locks should be open while aligning the top.

You'll need:



G

- 7 Screw the eight bolts into the back of the TV stand to secure it to the sides and divider panels.

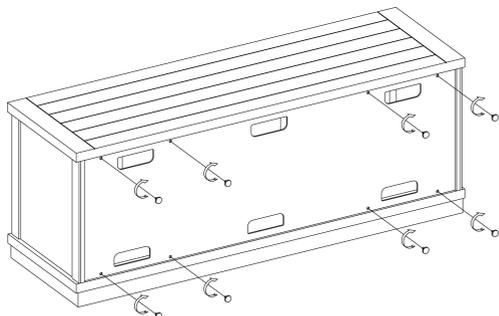

You'll need:




X (8)

- 8 See [Attaching the doors \(on the facing page\)](#) to continue assembly.

ATTACHING THE DOORS


- 1 Fit the hinges into the circular holes on the doors, align the screw holes, then use a Phillips screwdriver and two 3.5 × 16 mm screws to secure each hinge.

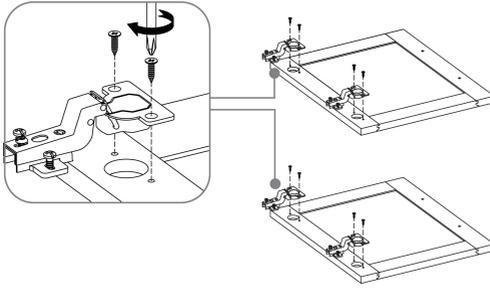

You'll need:

 H	 L (4)	 R (8)	 Phillips screwdriver
---	---	---	--

- 2 Align the handles with the holes on the front of the doors, then use a Phillips screwdriver to attach the handles with the 4 × 22 mm screws.

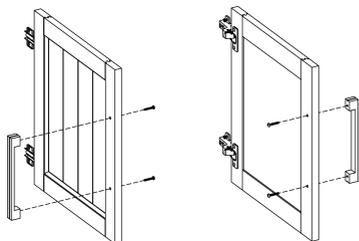

You'll need:



V (2)




K (4)



Phillips screwdriver

- 3 With the hinges in the open position, align the hinge's pre-assembled screws with the holes in the sides of the TV stand (use the middle holes), then use a Phillips screwdriver to secure.

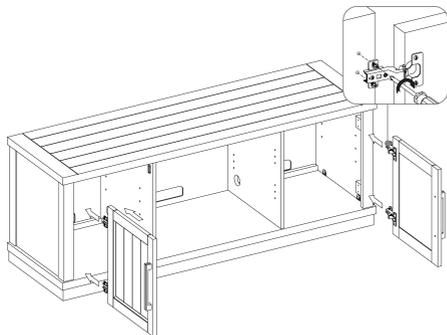

You'll need:



Phillips screwdriver

- 4 If a door is not aligned correctly, loosen or tighten the screws on the hinges to adjust their alignment.




You'll need:



Phillips screwdriver

INSTALLING THE SHELVES


- Insert the shelf supports at the height that you want your shelves, then slide the shelves into place.

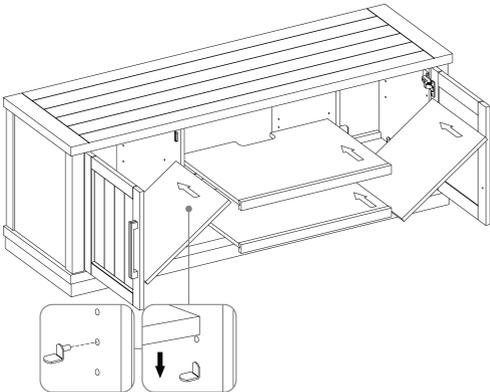

You'll need:



 O (16)




I (2)



J (2)

LEVELING YOUR TV STAND

- If your TV stand is not level, turn your stand onto its back and tighten or loosen the leveling feet on the bottom.

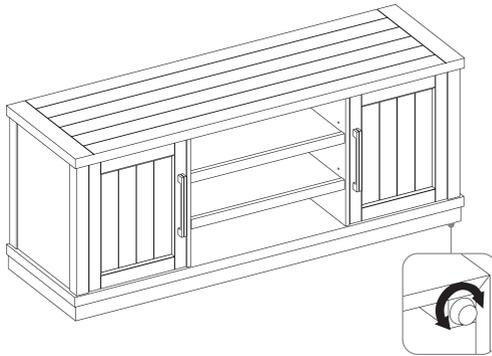

Care and maintenance

- Use your favorite type of furniture polish.
- Do not spray directly onto the stand. Spray onto a soft cloth then wipe the stand.
- Always test any polish in a discrete location first, such as the back of the stand, to make sure that there is no adverse reaction.
- Dust frequently with a soft cloth.
- Never slide objects across surfaces. Lift objects from the top surface rather than dragging them across the finish when moving them.
- Do not expose your stand to direct sunlight, drying heat sources, or dampness.

One-Year Limited Warranty

Definitions:

The Distributor* of Insignia branded products warrants to you, the original purchaser of this new Insignia-branded product ("Product"), that the Product shall be free of defects in the original manufacturer of the material or workmanship for a period of one (1) year from the date of your purchase of the Product ("Warranty Period").

For this warranty to apply, your Product must be purchased in the United States or Canada from a Best Buy branded retail store or online at www.bestbuy.com or www.bestbuy.ca and is packaged with this warranty statement.

How long does the coverage last?

The Warranty Period lasts for 1 year (365 days) from the date you purchased the Product. Your purchase date is printed on the receipt you received with the Product.

What does this warranty cover?

During the Warranty Period, if the original manufacture of the material or workmanship of the Product is determined to be defective by an authorized Insignia repair center or store personnel, Insignia will (at its sole option): (1) repair the Product with new or rebuilt parts; or (2) replace the Product at no charge with new or rebuilt comparable products or parts. Products and parts replaced under this warranty become the property of Insignia and are not returned to you. If service of Products or parts are required after the Warranty Period expires, you must pay all labor and parts charges. This warranty lasts as long as you own your Insignia Product during the Warranty Period. Warranty coverage terminates if you sell or otherwise transfer the Product.

How to obtain warranty service?

If you purchased the Product at a Best Buy retail store location, please take your original receipt and the Product to any Best Buy store. Make sure that you place the Product in its original packaging or packaging that provides the same amount of protection as the original packaging. If you purchased the Product from a Best Buy online web site (www.bestbuy.com or www.bestbuy.ca), mail your original receipt and the Product to the address listed on the web site. Make sure that you put the Product in its original packaging or packaging that provides the same amount of protection as the original packaging.

To obtain warranty service, in the United States call 1-888-BESTBUY or in Canada call 1-866-BESTBUY. Call agents may diagnose and correct the issue over the phone.

Where is the warranty valid?

This warranty is valid only in the United States and Canada at Best Buy branded retail stores or websites to the original purchaser of the product in the county where the original purchase was made.

What does the warranty not cover?

This warranty does not cover:

- Customer instruction/education
- Installation
- Set up adjustments
- Cosmetic damage
- Damage due to weather, lightning and other acts of God, such as power surges
- Accidental damage
- Misuse
- Abuse
- Negligence
- Commercial purposes/use, including but not limited to use in a place of business or in communal areas of a multiple dwelling condominium or apartment complex, or otherwise used in a place of other than a private home.
- Modification of any part of the Product, including the antenna
- Display panel damaged by static (non-moving) images applied for lengthy periods (burn-in).
- Damage due to incorrect operation or maintenance
- Connection to an incorrect voltage or power supply
- Attempted repair by any person not authorized by Insignia to service the Product
- Products sold “as is” or “with all faults”
- Consumables, including but not limited to batteries (i.e. AA, AAA, C etc.)
- Products where the factory applied serial number has been altered or removed
- Loss or Theft of this product or any part of the product
- Display panels containing up to three (3) pixel failures (dots that are dark or incorrectly illuminated) grouped in an area smaller than one tenth (1/10) of the display size or up to five (5) pixel failures throughout the display. (Pixel based displays may contain a limited number of pixels that may not function normally.)
- Failures or Damage caused by any contact including but not limited to liquids, gels or pastes.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS YOUR EXCLUSIVE REMEDY FOR BREACH OF WARRANTY. INSIGNIA SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, INCLUDING, BUT NOT LIMITED TO, LOST DATA, LOSS OF USE OF YOUR PRODUCT, LOST BUSINESS OR LOST PROFITS. INSIGNIA PRODUCTS MAKES NO OTHER EXPRESS WARRANTIES WITH RESPECT TO THE PRODUCT, ALL EXPRESS AND IMPLIED WARRANTIES FOR THE PRODUCT, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE WARRANTY PERIOD SET FORTH ABOVE AND NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, WILL APPLY AFTER THE WARRANTY PERIOD. SOME STATES, PROVINCES AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE.

Contact Insignia:

For customer service please call 1-877-467-4289

www.insigniaproducts.com

INSIGNIA is a trademark of Best Buy and its affiliated companies.

Distributed by Best Buy Purchasing, LLC

7601 Penn Ave South, Richfield, MN 55423 U.S.A.

©2016 Best Buy. All rights reserved.

Made in China

INSIGNIA™

1-877-467-4289 (U.S. and Canada)
www.insigniaproducts.com

INSIGNIA is a trademark of Best Buy and its affiliated companies.
Distributed by Best Buy Purchasing, LLC
7601 Penn Ave South, Richfield, MN 55423 U.S.A.
©2016 Best Buy. All rights reserved.
Made in China.

V1 ENG
15-0536