



CORDLESS STEAM IRON

Model: UHC-3002RW-1



Made in P.R.C

INSTRUCTIONS MANUAL

Thank you for choosing our product. This instructions manual has been prepared for you to achieve complete satisfaction and maximum performance from your product.




I. SAFETY RULES

When using electrical appliances, basic safety precautions should always be followed, including the following:


- Before using for the first time, please check if the voltage rating on the type plate corresponds to the mains voltage in your home.
- Make sure to unplug the appliance from the socket when leaving the iron even for a short while, and stand the iron on its end. Please leave the iron away from the touch of children..
- Keep the iron and its cord out of reach of children less than 8 years of age when it is energized or cooling down.
- The iron will be of high temperature when used, never touch it with hand or close to the flammable product in order to avoid the accident.
- Caution: Unplug the appliance from the socket before filling the iron with water.
- Never immerse the iron in water or other liquid.

- Deposit or Mineral in the water will lead to generate the scales and block the seam hole, therefore it is advisable to use distilled water.
- Do not use chemically descaled water
- The ejected steam is hot and therefore hazardous. Never direct the steam towards people.
- The filling aperture must not be opened during use. Instructions for the safe refilling of the water reservoir shall be given (for pressurized steam irons).
- The iron must be used and rested on a flat, stable surface.
- When placing the iron on its stand, ensure that the surface on which the stand is placed is stable.
- Keep the iron and its cord out of reach of children less than 8 years of age when it is energized or cooling down.
- Cautions of the first use:
 - * The iron has been greased, and as a result, the iron may slightly smoke when switched on for the first time. After a short while, this will cease.
 - * Before using for the first time, remove any sticker or protective foil from the soleplate. Clean the soleplate with a soft cloth.
 - * Keep the soleplate smooth: avoid hard contact with metal objects.


F1

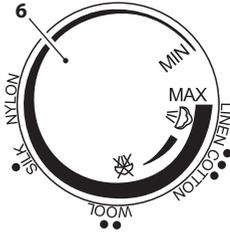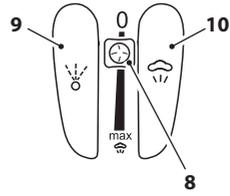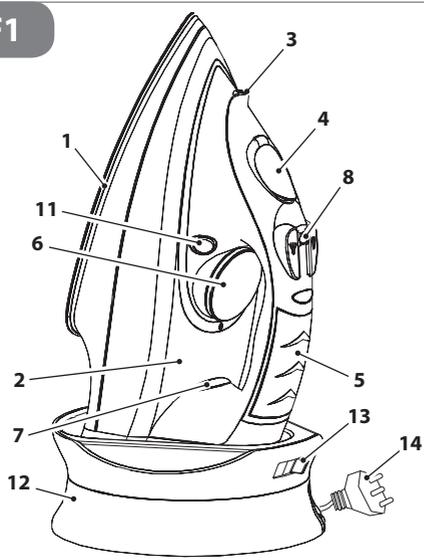

F2

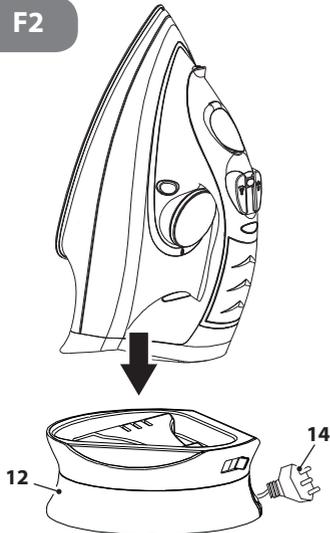

F3

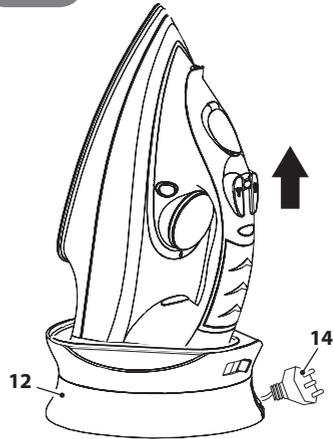

- | | | | |
|---|-------------------------------------|----|---------------------------------------|
| 1 | Plate | 8 | Steam adjustment lever |
| 2 | Water tank | 9 | Spray button |
| 3 | Spray nozzle | 10 | Supersteam button |
| 4 | Tank filling door | 11 | "SELF CLEAN" function (self-cleaning) |
| 5 | Handle | 11 | "CALC CLEAN" button (self-cleaning) |
| 6 | Plate temperature adjustment knob | 12 | Charging station |
| 7 | "Plate temperature" indicator light | 13 | Iron lock lever |
| | - on= during heating | 14 | Power cord |
| | - off= correct temperature reached | | |

APPLIANCE PREPARATION

Filling the tank (2)

- Move the lever (8) on "0".
- Open the tank filling door (4).
- Fill the tank (2) with water until the "MAX" reference indicated on it.
- Lift the steam iron tip to ease the tank (2) filling.



- Do not exceed the MAX level indicated on the tank.
- The use of distilled water is recommended.
- Do not pour perfumes, vinegar, starch, descaling agents, ironing products or any other chemical product in the tank (2).

- Close the tank filling door (4).

APPLIANCE USE

Dry ironing (without steam)

- Adjust the knob (6) on the desired temperature depending on the type of fabric to iron (see the "Plate temperature adjustment" table).
- Move the lever (8) on "0".
- Place the iron on the charging station (12) and connect the power plug to the power outlet (Fig. F2).
- As soon as the steam iron plate (1) reaches the set temperature, the indicator light (7) turns off.
- Remove the iron from the charging station (12); it is now possible to start ironing (Fig. F3).
- During ironing the indicator light (7) on the steam iron turns on and off on several occasions; this is normal.
- To switch off the appliance, rotate the knob (6) to "MIN", then disconnect the plug (14) of the charging station from the power outlet and let the iron cool down.



During ironing pauses place the steam iron in vertical position.

Spray function



- This function can be used in any moment and it doesn't affect the plate temperature.
- It could be necessary to press the button (9) more than once to spray water correctly.

- Press the spray button (9) pointing the jet as desired.
- Press the button slowly to obtain a "thicker" spray.
- Press the button quickly to vaporize the spray.

Steam ironing

- Fill the water tank (2) (see "Filling the tank" paragraph).
- Move the lever (8) on "0".
- Adjust the knob (6) on the desired temperature ("••" or "•••") depending on the type of fabric to iron (see the "Plate temperature adjustment" table).



- To use the steam to select the higher temperatures is advised.
- Avoid pointing the firsts steam jets on the fabric to iron (possible processing residues emissions).
- If the selected temperature is too low some water could drop from the plate (1).

- Place the iron on the charging station (12) and connect the power plug to the power outlet (**Fig. F2**).
- As soon as the steam iron plate (1) reaches the correct temperature, the indicator light (7) turns off.
- Adjust the steam quantity that you intend to supply (depending on the type of fabric to iron and to the set temperature) moving the lever (8) accordingly.
- Remove the iron from the charging station (12); it is now possible to start ironing (**Fig. F3**).
- During ironing the indicator light (7) on the steam iron turns on and off on several occasions; this is normal.
- The steam iron supplies steam continuously.
- Move the lever (8) on "0" or place the steam iron vertically to stop steam supply.
- To switch off the appliance, rotate the knob (6) to "MIN" and the lever (8) to "0"; then disconnect the plug (14) of the charging station from the power outlet and let the iron cool down.

Super steam

- Carry out the operations described in the previous paragraph (Steam ironing).
- Press the button (10) once to supply the supersteam.

Vertical ironing

- This appliance can be used also to iron vertically using the supersteam (button "10"). To use the appliance properly in this conditions work as described in the "Super steam" paragraph.



Supply steam keeping the steam iron 15/30 cm away from the clothing.

MAINTENANCE



- **Before starting cleaning, always disconnect the plug from the power outlet and wait for the plate to completely cool down.**
- **Never wash the appliance under running water or submerge it in water or in other liquids.**
- **Do not clean the steam iron plate (1) with corrosive or abrasive products. Use ONLY specific products commercially available.**

- For the external parts cleaning use a wet cloth.
- After every use, clean the plate (1) when it's still hot letting it slide on a wet cloth placed on the ironing board, bringing a little pressure.

SELF-CLEANING

- Fill the water tank (2) (see "Filling the tank" paragraph).
- Adjust the knob (6) on "MAX".
- Place the iron on the charging station (12) and connect the power plug to the power outlet (**Fig. F2**).
- Wait for the indicator light (7) to turn off.
- Remove the iron from the charging station (12).
- Place the steam iron horizontally on a sink.
- Keep pressed the button (11); steam and boiling water come out from the plate holes cleaning the boiler from impurities.
- Gently move the steam iron back and forth in order to let all the water come out.
- When all of the water came out release the button (11).
- Dispose the steam iron.



- **Water is at a high temperature.**
- **Wait for the steam iron plate to be cooled.**



If the water coming out is particularly dirty, repeat the operation.



DANGER: Indicates situation of imminent danger that, if not avoided, could cause serious injuries or even death. The use of this term is limited to the most extreme situations.



ATTENTION: Indicates a potentially dangerous situation that, if not avoided, could cause serious injuries (and in extreme cases death).



WARNING: Indicates a potentially dangerous situation that, if not avoided, could cause minor or moderate injuries to people or to the appliance. Moreover, it indicates incorrect operating procedures to the user.



Carefully read the instructions in this booklet, as they provide important information about safe installation, use and maintenance. Keep this booklet with care for future reference.

- Before using the appliance, make sure that it is in perfect working order from a mechanical standpoint.
- All packing elements (plastic bags, polystyrene foam, nails, etc.) are potentially dangerous and should be kept out of the reach of children.



This appliance can be used by children of 8 years of age or more and by people with reduced physical, sensory or mental faculties as well as people without the necessary experience or knowledge of it ONLY if monitored by someone responsible for their safety or if they've been educated about the safe use of the appliance and if they are aware of the risks originating from an improper use.



- **Children must not use the appliance as a toy and must not either clean or use the appliance alone unless they're of 8 years of age or more and they're assisted by an adult.**
- **Keep children less than 8 years old away from the appliance and from the power cord.**
- **Never pull the power cord or the appliance to remove the plug from the wall socket.**
- Make sure that the electrical system is equipped with a circuit breaker (lifesaver kind).
- Completely straighten the power cord before starting the appliance. Use an electric extension only if it's in perfect conditions. Make sure that the section is appropriate to the power of the appliance.
- Never leave the power cord flow on sharp edges and avoid crushing it.
- Never leave the appliance unsupervised while it's working.
- The use of any electric appliance involves compliance with certain basic rules. In particular:
 - never touch the appliance with wet or damp hands;
 - never use the appliance with bare feet;
 - never leave the appliance outdoors where it can be exposed to the weather conditions (rain, sun, etc.);
 - never let children or disabled persons use the appliance unattended.
- Turn off the appliance and do not tamper with it in any way if it becomes faulty and/or operates in an incorrect way.
- Should you decide to stop using an appliance of this type, remember to render it unusable by cutting off the power cable after having removed the plug from the power socket.



-  • **Make sure that the power cord or the steam iron do not protrude from the bearing plane in order to prevent that someone could, even inadvertently, pull them toppling the appliance.**

- **Place the appliance on an horizontal and very stable bearing plane. Make sure that the appliance is safely supported.**



- **Place the appliance far from sinks and taps.**

- **Do not spray vapour against people or animals. Burns danger!**

- Do not use the appliance in gas-filled environments.
- Clean the appliance using only water. Do not use trichloroethylene, solvents or abrasive detergents.
- Do not add water while the appliance is connected to the mains power supply;
- At first use of the appliance some noises due to expansions of its body could occur; all of the above is normal!
- At first use the appliance could release some smoke and some drops of water could come out of the plate (1). This phenomenon will be over after a few seconds.
- Do not pour corrosive or inflammables substances (like stain removers, etc.) in the tank (2) along with water;
- Do not pour vinegar, descaler substances or any liquid different from water in the tank.
- Never submerge the appliance in water or other liquids.
- Do not let the water drop on the appliance electric controls. If that happens disconnect the plug from the power outlet and wait for everything to be completely dry before using the appliance again.
- Avoid contact of the power cord with the hot plate of the steam iron (1).
- **This product is intended for domestic use only.**

-  **This appliance should be destined only for the purposes for which it has been explicitly designed, namely to iron.**

Every other use has to be considered improper and for this reason dangerous.

The manufacturer cannot be held liable for eventual damages resulting from improper, wrong and unreasonable uses.

- The manufacturer cannot be held responsible for eventual damages to people, animals or things, resulting from improper and unreasonable use and from repairs carried out by unqualified people.

TECHNICAL DATA

- Power supply:..... AC120V~60Hz
- Power: 1500W
- Non-Stick -coated plate
- Adjustable steam
- Supersteam
- "Spray" button
- "SELF CLEAN" function (self-cleaning)
- "ANTI-DRIP" function

PLATE TEMPERATURE ADJUSTMENT

Knob (6) position	Fabric type	Temperature check	Tag indication
●	<i>Acrylic/Nylon</i>	<i>Low temperature</i>	
●	<i>Silk</i>	<i>Low temperature</i>	
●●	<i>Rayon</i>	<i>Medium temperature</i>	
●●	<i>Wool</i>	<i>Medium temperature</i>	
●●●	<i>Cotton</i>	<i>Medium/high temperature</i>	
●●● MAX	<i>Linen</i>	<i>High temperature</i>	
	<i>Not ironable fabric *</i>		