

Color Pods快速指引

尺寸: 71mm*77mm

4 Reset

If only one earbud is working or the charging case cannot control the earbuds, please reset it using one of the following methods:

- Put both earbuds into the case and keep the lid closed for 10s to complete the reset.
- Put the earbuds into the case, close the lid, and press and hold the reset button of the charging case for 16s. Wait for 10s to complete the reset.
- Put the earbuds into the case, close the lid, and press and hold the reset button of the charging case for 5s to enter the shutdown interface. Tap the reset button on the right side of the screen, and wait for 10s to complete the reset.




5 Charging

Charge the case via USB-C connector. (USB-C cable included)

 Red earbud icon: Battery <20%
 Green earbud icon: Charging
 White earbud icon: Battery normal


 Red case icon: Battery <20%
 Green case icon: Charging
 White case icon: Battery normal

Don't put wet earbuds into the charging case, fully dry off the earbuds before charging.




Thank you for purchasing the TOZO authentic product. For more latest products, parts and accessories, please visit: www.tozostore.com. For any assistance please contact Email: info@tozostore.com

FC RoHS CE

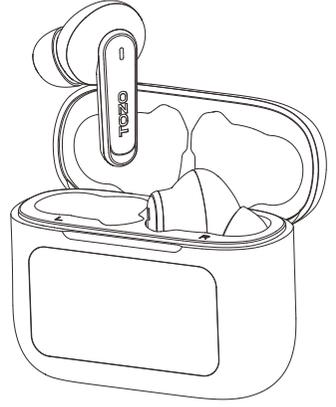Color Pods
ACTIVE NOISE CANCELLATION

Quick Guide

1 Bluetooth Pairing and Wearing

Bluetooth Pairing


- Pick up two earbuds from charging case, the white indicator will blink slowly. (pairing mode)
- Search for pairing name (TOZO Color Pods) and select it in your mobile.
- When you power on the earbuds for the first time, if you connect them to the charging case initially, you will need to disconnect the charging case from the earbuds first to release the earbuds' signal before you can connect them to your phone.

If you connect the earbuds to your phone initially, you can directly connect the charging case to the earbuds, allowing the earbuds to connect to both the charging case and the phone simultaneously.




Wearing

- Ensure the ear tip is facing downwards, and then place the earbuds into your ears.
- Rotate the earbuds towards the side of your auricle to fit snugly.

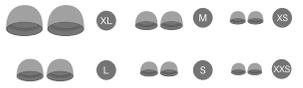

EN | JP | DE | FR | IT | ES | NL | SE

X1: Tap once X2: Tap twice X3: Tap three times Hold: Tap and hold for 2 seconds

2 Smart Touch Control

<p>X2  Previous Song 前の曲 Vorheriges lied Chanson Irécédente Canzone precedente Canción anterior Vorig nummer Foregående låt</p> <p>Hold  Volume Down 音量を下げる Lautstärke runter Baisser le volume Volume basso Bajar volumen Volume verminderen Sänk volymen</p> <p>X1  Answer 答え Antworten Réponse Rispondere Responder Antwoorden Svar</p> <p>Hold  Reject 拒絶 Ablehnen Rejeter Rifutare Rechazar Afwijzen Avvisa</p> <p>X3  Normal Mode ノーマルモード Normaler Modus Mode normal Modalità normale Modo normal Normale modus Normalt läge</p> <p>X1  Active Noise Cancellation Mode/Transparent Mode アクティブノイズキャンセリングモード/透過モード Aktiver Geräuschunterdrückungsmodus/Transparenter Modus Mode d'annulation active du bruit/Mode transparent Modalità di cancellazione attiva del rumore/Modalità trasparente Modo de cancelación activa de ruido/Modo transparente Actieve ruisonderdrückingsmodus/Transparente modus Aktivt brusreduceringsläge/Transparent läge</p>	<p>X1  Play/Pause 再生/一時停止 Spielen/Pause Jouer/Pause Giocare a/Pausa Tocar/Pausa Töneelstuk/Pauze Spela/Paus</p> <p>X2  Next Song 次の曲 Nächstes lied Chanson prochaine Canzone prossima Canción siguiente Volgende nummer Nästa låt</p> <p>Hold  Volume Up 音量を上げる Lauter Monter le son Alza il volume Sube el volumen Volume omhoog Høj volymen</p> <p>X3  Voice Assistant 音声アシスタント Sprachassistenten Assistant vocal Assistente vocale Asistente de voz Spraakassistent Röstassistent</p> <p>Hold  Hang Up 電話を切る Auflegen Raccrocher Appendere Colgar Ophangen Læg på</p>
---	--

3 Power On/Off



Power On



Power Off

EN
Power On: Take out the earbuds from the charging case, or press and hold 3 seconds.
Power Off: Place the earbuds back into the charging case, or press and hold 5 seconds.

DE
Einschalten: Entnehmen Sie die Ohrhörer aus der Ladebox oder halten Sie für 3 Sekunden gedrückt.
Ausschalten: Setzen Sie die Ohrhörer zurück in die Ladebox oder halten Sie für 5 Sekunden gedrückt.

IT
Accensione: Estrai gli auricolari dalla custodia di ricarica oppure tieni premuto per 3 secondi.
Spegnimento: Rimetti gli auricolari nella custodia di ricarica oppure tieni premuto per 5 secondi.

NL
Aanzetten: Haal de oordopjes uit de oplaadkast of houd 3 seconden ingedrukt.
Uitschakelen: Plaats de oordopjes terug in de oplaadkast of houd 5 seconden ingedrukt.

JP
電源を入れる: イヤフォンを充電ケースから取り出すか、3秒押し続けてください。
電源を切る: イヤフォンを充電ケースに戻すか、5秒押し続けてください。

FR
Allumer: Sortez les écouteurs du boîtier de charge ou maintenez-les enfoncés pendant 3 secondes.
Eteindre: Remettez les écouteurs dans le boîtier de charge ou maintenez-les enfoncés pendant 5 secondes.

ES
Encendido: Saque los auriculares del estuche de carga o manténgalos presionados por 3 segundos.
Apagado: Vuelva a colocar los auriculares en el estuche de carga o manténgalos presionados por 5 segundos.

SE
Ström på: Ta ut öronlådorna från laddningsfodralet eller håll 3 sekunder ingedrukt.
Stäng av: Placera tillbaka öronsnäckorna i laddningsfodralet eller håll ned 5 sekunder.