

Shoe Cord for Nikon Cameras RF-NIKTTL

Package contents


- NIKON Shoe Cord
- *Quick Setup Guide*

Features

- Operate your hot shoe mount flash remotely.
- Use on-camera functions without being attached to the camera.
- Ideal for most photography, especially portrait or merchandise.
- Single TTL use only.

Using your NIKON shoe cord


- 1 Turn off the camera.
- 2 Attach the mounting foot end to a tripod or other secure base.

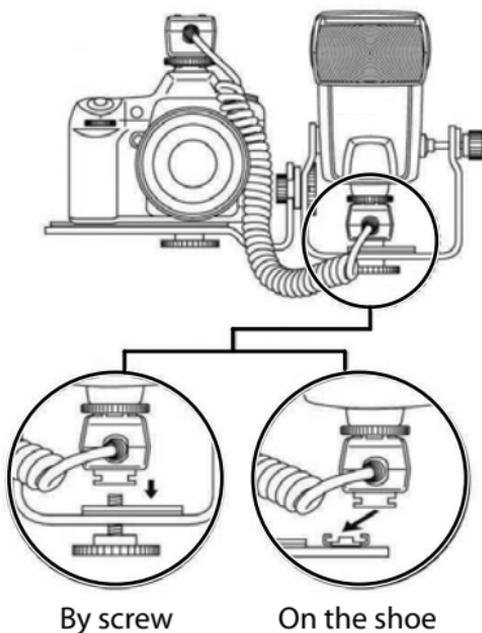


By screw

On the shoe

- 3 Attach the flash to the hot shoe on the top of the mounting foot end.

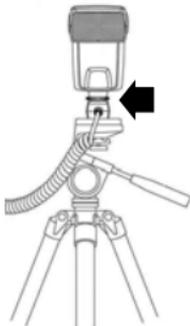

- 4 Attach the other end of the cord to the hot shoe on the top of your DSLR camera.

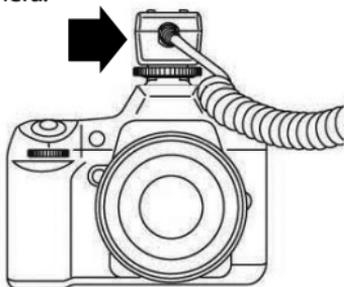

Note: The other hot shoe can be used to mount other non-TTL accessories.

- 5 Set up the camera and flash for off camera shooting.

Specifications

Model	RF-NIKTTL
Compatible camera	Nikon only
Compatible flash range	Recommended for Nikon TTL flashes. (Also works with most non-TTL flashes, but will not support advanced features.)
Cord length	9.84 ft. (3 m) (extended length)
Net weight	4.48 oz. (127 g)

One-year limited warranty

Visit www.rocketfishproducts.com for details.

Contact Rocketfish:

For customer service, call 1-800-620-2790
www.rocketfishproducts.com

© 2012 BBY Solutions, Inc. All Rights Reserved.

Distributed by Best Buy Purchasing, LLC

7601 Penn Avenue South, Richfield, MN USA 55423-3645

ROCKETFISH is a trademark of BBY Solutions, Inc. All other products and brand names are trademarks of their respective owners.