

INSIGNIA™

## USER GUIDE

# Digital Toaster Oven with Air Frying

NS-TO6SDSS0/NS-TO6SDSS0-C



Before using your new product, please read these instructions to prevent any damage.

## Contents

Introduction .....	2
IMPORTANT SAFEGUARDS .....	2
Features .....	5
Getting started .....	6
Using your toaster oven .....	8
Maintaining your toaster oven .....	12
Storing your toaster oven .....	12
Troubleshooting .....	13
Specifications .....	14
ONE-YEAR LIMITED WARRANTY .....	15

## Introduction

Congratulations on your purchase of a high-quality Insignia Six-Slice Air Fryer/Toaster/Pizza Oven. This appliance represents the state of the art in air fryer/toaster/pizza oven design and should provide you with many years of service.

## IMPORTANT SAFEGUARDS

**WARNING:** To reduce the risk of fire or electric shock, do not expose this system to rain or moisture.

When using this appliance, basic safety precautions should always be followed:

- 1 Read all instructions carefully before using your toaster oven.
- 2 To protect against any electrical hazards, DO NOT place the unit or power cord in water or other liquids.
- 3 Do not touch any hot surfaces. Use oven mitts for removing or touching any hot parts. Always place the toaster oven on heat-resistant surfaces. Use handles or knobs.
- 4 Leave about 4-6 in. (10-15 cm) of open space around the exterior of the toaster oven.

- 5 Unplug the unit from the outlet when it is not in use and before cleaning. Always allow the toaster oven to cool before attaching or removing any parts.
- 6 Use of accessory attachments is not recommended by the appliance manufacturer because they may cause injuries.
- 7 Do not let the power cord hang over the edge of a table or counter or touch a hot surface.
- 8 Do not place the toaster oven inside of a heated oven or near a hot gas or electric burner.
- 9 Do not use outdoors.
- 10 Do not use your toaster oven if the cord or plug has been damaged or after your toaster oven has malfunctioned or been damaged in any other way. Return your toaster oven to the nearest authorized service facility for repair or adjustment.
- 11 Store only the accessories that were provided inside of your toaster oven when it is not in use. Do not store any other materials.
- 12 Do not put any items on top of the toaster oven when it is in use or place the toaster oven close to curtains, draperies, walls, or other flammable materials. A fire may occur if the toaster oven is covered or touching flammable material.
- 13 Do not place any cardboard, paper, or plastic inside of the toaster oven.
- 14 Make sure that all containers placed inside of the toaster oven are not airtight and have enough room to allow for expansion of fluids.
- 15 Clean your toaster oven regularly. A buildup of grease may cause a fire.
- 16 Do not clean your toaster oven with metal scouring pads. Pieces of the pad can break off and touch electrical parts, which increases your risk of electric shock.
- 17 In order to prevent accidental burns, always use the handle and knobs to operate your toaster oven.
- 18 Do not touch the exterior of the toaster oven when it is in use. The temperature of the door or the housing may be hot.
- 19 Do not place oversized food or metal utensils inside of your toaster oven. Doing so may result in a fire or in risk of electric shock.
- 20 Do not cover the crumb tray or any other part of the toaster oven with metal foil. This will cause the toaster oven to overheat.
- 21 Use extreme caution when moving something containing hot oil or other hot liquids and when removing a tray or disposing of hot grease.

- 22 Do not allow someone with reduced physical, sensory, or mental capabilities; someone with a lack of experience and knowledge; or children to use your toaster oven unless they have been given supervision or instruction regarding use of the toaster oven by a person that is responsible for their safety.
- 23 Supervise children to make sure that they do not play with your toaster oven.
- 24 Do not use an external timer or separate remote control system with your toaster oven.
- 25 Do not touch hot surfaces to move or pickup your toaster oven, use the handles or knobs.
- 26 Press the **START/CANCEL** button before unplugging your toaster oven.
- 27 Do not use your toaster oven for anything other than its intended use.
- 28 Use extreme caution when handling objects that are not made of metal or glass.
- 29 Close supervision is necessary when any appliance is used by or near children.
- 30 To disconnect, turn any control to "off", then remove plug from wall outlet.



## **CAUTION: HOT SURFACES!**

### **HOUSEHOLD USE ONLY**

## **SAVE THESE INSTRUCTIONS**

 
A short power cord is provided to reduce the risks of becoming entangled or tripping over a long cord. An extension cord may be used if care is exercised.

- 1 If an extension cord is used, the marked electrical rating of the extension cord must be at least as great as the electrical rating of the appliance, and the longer cord should be arranged so that it will not drape over the countertop or tabletop, where it can be tripped over or pulled on by children.
- 2 The power cord should only be repaired by a qualified electrician.

- 3 This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

## Features

- Eight preprogrammed settings, including Air Fryer, Dehydrate, and Broil
- A tempered glass door so you can see the food cooking
- Convection option for faster cooking
- Digital LED display

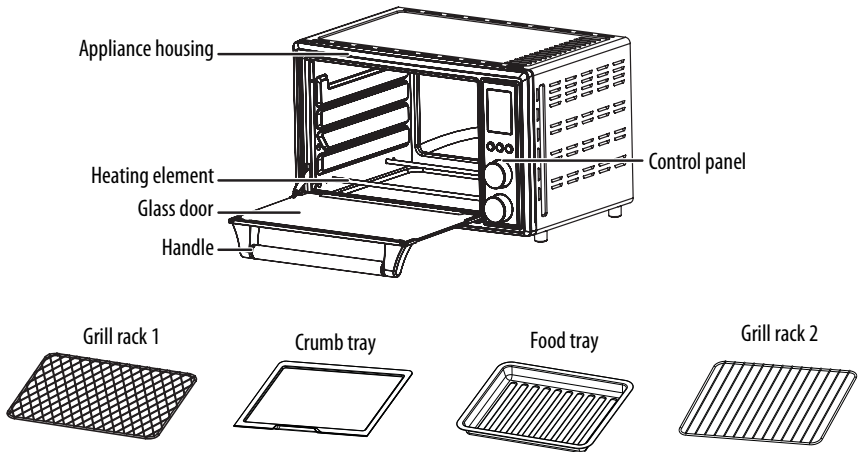

### Notes:

- The crumb tray goes under the heating elements on the bottom of the oven. The grill racks are interchangeable and can be used in either position in the oven, together or alone. The food tray sits on top of the grill racks.
- Your appliance and parts may differ slightly from the items shown above.

## Package contents

Examine the contents of the box for your toaster oven. The box should contain:

- Six-slice air fryer/toaster/pizza oven
- Crumb tray
- Food tray
- Grill rack 1
- Grill rack 2
- *User Guide*

## Getting started

If this is your first time using this appliance, be sure to:

 
- 1 Read this manual carefully before using your toaster oven.
- 2 Remove the protective film and sticker from the surface of the oven.
- 3 Open the oven door and remove all printed documents and papers from inside.
- 4 Check and clean all accessories before using.
- 5 Dry all accessories thoroughly before inserting them back into the oven.
- 6 Plug the power cord into a wall outlet.
- 7 Before using the oven for the first time, preheat it at its maximum temperature setting for 15 minutes to eliminate any manufacturing residue that may remain after shipping.

**Note:** It's normal to see some smoke coming from your toaster oven.

### **Important:**

- It is normal for drops of water and vapor to form while the oven is working.
- We recommend not attempting to cook food until it is defrosted.
- Frozen food and thick cuts of meat take longer to cook.
- Use the food tray in the oven to hold foods that are defrosting to prevent water from dripping down and damaging the heating element.
- To prevent heat from escaping, resulting in longer cooking times, do not open the glass door while cooking.
- Set the temperature higher than normal when cooking frozen or thick bread.
- To prevent excess smoking, remove as much fat as possible when cooking meat.
- To prolong the life of your oven, use a crumb tray to prevent food buildup.
- Do not attempt to cook with the door open.
- Do not place a food tray, rack, or any other items on top of the bottom heating element.

## Control panel

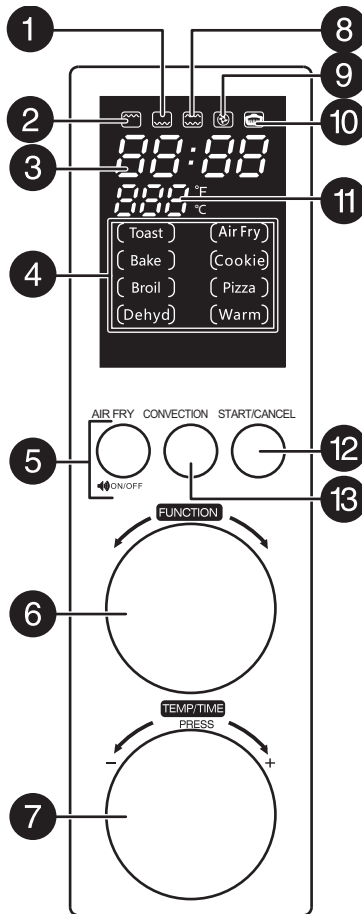

Item	Description
1	Bottom heating element indicator.
2	Top heating element indicator.
3	Time display. Shows current time and cooking time.
4	Preset function indicators (light when selected).
5	<b>AIR FRY</b> button. Turns on the air fry function. Press and hold (for 3 seconds) to turn the sound for the Function and Temp/Time control knobs on or off.


Item	Description
6	<b>FUNCTION</b> knob. Turn to select the preset function you want.
7	<b>TEMP/TIME</b> knob. Turn right (+) to increase or left (-) to decrease. Press to switch between temperature and time settings. Press and hold to change from °F to °C or from °C to °F.
8	Top and bottom heating elements indicator.
9	Convection heat and air fry indicator.
10	Warming indicator (the warming indicator and the (Warm) light go on when Warm is selected).
11	Temperature display. Shows the temperature of the oven in °F or °C.
12	<b>START/CANCEL</b> button. Press to start or stop cooking.
13	<b>CONVECTION</b> button. Turns on the convection function. <b>Note:</b> When using the convection setting, the oven automatically adjusts the internal cooking temperature to account for the convection setting.

## Using your toaster oven

 **Note:** When using the convection setting, the oven automatically adjusts the internal cooking temperature to account for the convection setting.

### Using your toaster oven’s trays and grill racks

- **Crumb tray:** Place the crumb tray under the heating elements on the bottom of the oven.
- **Grill racks (1 & 2):** Place the grill rack in either the upper or lower position in the oven. They are interchangeable and can be used together or alone.
- **Food tray:** Place the food tray on top of one of the grill racks.

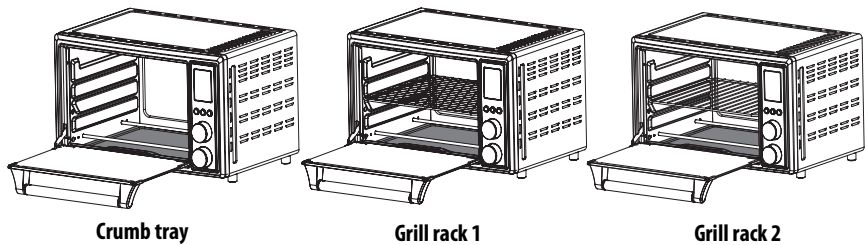



## Making toast in your toaster oven (top element)

- 1 Turn the **FUNCTION** knob until the “Toast” indicator lights.

**Note:** The temperature and time settings and convection fan are not available when the toast function is selected.

- 2 Rotate the **TEMP/TIME** knob to change the baking level shown on the flashing display. You can select one of six levels (L1 to L6 - lightest to darkest).
- 3 Press the **TEMP/TIME** knob to set the number of slices of toast you plan to cook, then turn the knob to select the number of slices (1 to 6).

**Note:** Repeatedly pressing the **TEMP/TIME** knob switches between the baking level and the number of slices settings.

- 4 Press the **START/CANCEL** button to begin toasting. Press the **START/CANCEL** button to cancel.

## Air frying in your toaster oven (both elements and fan)

- 1 Select the air fry function by pushing the **AIR FRY** button or by turning the **Function** knob.
- 2 Turn the **TEMP/TIME** knob to set the cooking temperature.
- 3 Press the **TEMP/TIME** knob, then turn the knob to set the cooking time.

**Notes:**

- You can't change the cooking temperature or cooking time while the oven is cooking.
- The convection setting is not available when you select the air fry function.

- 4 Press the **START/CANCEL** button to begin cooking. Press the **START/CANCEL** button again to cancel.

## Baking in your toaster oven (both elements and fan)

- 1 Turn the **FUNCTION** knob until the “Bake” indicator lights.
- 2 Turn the **TEMP/TIME** knob to set the cooking temperature.
- 3 Press the **TEMP/TIME** knob, then turn the knob to set the cooking time.

**Notes:**

- You can't change the cooking temperature or cooking time while the oven is cooking.
- The convection fan is set by default. Push the **Convection** button to turn the fan on or off.

- 4 Press the **START/CANCEL** button to begin cooking. Press the **START/CANCEL** button again to cancel.

### Broiling in your toaster oven (both elements)

- 1 Turn the **FUNCTION** knob until the "Broil" indicator lights.
- 2 Turn the **TEMP/TIME** knob to set the broiling time.

**Notes:**

- Cooking temperature is not adjustable when using the broiling function.
- You can't change the cooking temperature or cooking time while the oven is cooking.
- The convection fan is set by default. Push the **Convection** button to turn the fan on or off.

- 3 Press the **START/CANCEL** button to begin cooking. Press the **START/CANCEL** button again to cancel.

### Cooking pizza in your toaster oven (both elements and fan)

- 1 Turn the **FUNCTION** knob until the "Pizza" indicator lights.
- 2 Turn the **TEMP/TIME** knob to set the cooking temperature.
- 3 Press the **TEMP/TIME** knob, then turn the knob to set the cooking time.

**Notes:**

- You can't change the cooking temperature or cooking time while the oven is cooking.
- The convection fan is set by default. Push the **Convection** button to turn the fan on or off.

- 4 Press the **START/CANCEL** button to begin cooking. Press the **START/CANCEL** button again to cancel.

### Warming in your toaster oven (bottom elements and fan)

- 1 Turn the **FUNCTION** knob until the "Warm" indicator lights.
- 2 Turn the **TEMP/TIME** knob to set the cooking temperature.
- 3 Press the **TEMP/TIME** knob, then turn the knob to set the cooking time.

**Notes:**

- You can't change the cooking temperature or cooking time while the oven is cooking.
- The convection fan is set by default. Push the **Convection** button to turn the fan on or off.

- 4 Press the **START/CANCEL** button to begin cooking. Press the **START/CANCEL** button again to cancel.

### Dehydrating in your toaster oven (top element and fan)

- 1 Turn the **FUNCTION** knob until the “Dehyd” indicator lights.
- 2 Press the **TEMP/TIME** knob, then turn the knob to set the time.

**Notes:**

- You can’t change the cooking temperature or cooking time while the oven is on.
- The convection fan is set by default. Push the **Convection** button to turn the fan on or off.

- 3 Press the **START/CANCEL** button to begin cooking. Press the **START/CANCEL** button again to cancel.

### Baking cookies in your toaster oven (both elements and fan)

- 1 Turn the **FUNCTION** knob until the “Cookie” indicator lights.
- 2 Turn the **TEMP/TIME** knob to set the cooking temperature.
- 3 Press the **TEMP/TIME** knob, then turn the knob to set the cooking time.

**Notes:**

- You can’t change the cooking temperature or cooking time while the oven is cooking.
- The convection fan is set by default. Push the **Convection** button to turn the fan on or off.

- 4 Press the **START/CANCEL** button to begin cooking. Press the **START/CANCEL** button again to cancel.

### Using convection in your toaster oven (both elements and fan)

- 1 Select the convection function by pushing the **CONVECTION** button.
- 2 Turn the **TEMP/TIME** knob to set the cooking temperature.

**Note:** When using the convection setting, the oven automatically adjusts the internal cooking temperature to account for the convection setting.

- 3 Press the **TEMP/TIME** knob, then turn the knob to set the cooking time.

**Notes:**

- You can’t change the cooking temperature or cooking time while the oven is cooking.
- The convection fan is set by default and can’t be turned off.

- 4 Press the **START/CANCEL** button to begin cooking. Press the **START/CANCEL** button again to cancel.

### Turning your toaster oven's sound on or off

- Press and hold **AIR FRY** for 3 seconds to turn the sound for the **Function** and **Temp/Time** control knobs on or off.

## Maintaining your toaster oven

- 1 Always unplug the oven and wait until it cools down before cleaning.
- 2 Move your oven to a solid, well ventilated place and remove the trays/racks from the oven.
- 3 Wipe the surfaces of your oven and the trays/racks with a damp sponge or soft cloth dipped in mild soapy water.

#### **CAUTION:**

- Do not use hard brushes or abrasive cleaners, polishes, or pads which may damage the surfaces of your oven.
- Do not use poisonous or corrosive materials such as gasoline or paint thinner.

- 4 Dry everything thoroughly before replacing the trays/racks in the oven.
- 5 Move the oven back to its original position and plug it in.

## Storing your toaster oven

- Before storing your toaster oven, position the power cord in its storage position at the back of the oven.
- To avoid damaging or breaking of the power cord, do not apply pressure on it when putting it into a box.
- Do not store the oven when it is still hot/warm.
- Do not wrap the power cord around the unit.

# Troubleshooting

Check this list for a possible solution before calling for service.

Problem	Solution
Overcooked /Undercooked foods	You may have to adjust the time and temperature to the desired cooking level.
	Because your toaster oven is smaller than your regular oven, it heats up faster and generally cooks quicker.
	You may need to adjust the racks/trays to achieve the cooking level.
	If you use your toaster oven several times in a row, the additional items may be browner because your toaster oven is already hot. Adjust the toaster oven settings.
Burnt food smell	Prior to using your oven for the first time, we recommend that you heat it to 450° for 15 minutes to eliminate any manufacturing residue that may remain after shipping.
	You may have food build-up inside the oven, on heating elements, or in the crumb tray. See "Maintaining your toaster oven" on page 12.
Your oven does not turn on or stay on	Your oven may be unplugged. Plug the oven into a 120-volt AC electrical outlet.
	If the electrical circuit is overloaded with other appliances, your toaster oven may not operate properly. Your toaster oven should be operated on an electrical circuit that is separate from other operating appliances.
Only one heating element is heating up	Function setting selection determines which heating elements will operate. Make sure that you have selected the correct function.
Heating elements do not stay on	Heating elements turn on and off to maintain the temperature you selected. This is normal. Function setting selection determines which heating elements will operate. Make sure that you have selected the correct function. Heating elements may not glow when heating.

Problem	Solution
My toaster oven smokes	A small amount of smoke is normal for the first couple of times your toaster oven is used. If your toaster oven continues to smoke, unplug it, let it cool, then empty the crumb tray. Stop using your toaster oven and contact an authorized service representative if your toaster still continues to smoke.

Any other servicing should be performed by an authorized service representative.

## Specifications

External dimensions (H x W x D)	11.2 × 16.3 × 18.3 in. (28.5 × 41.4 × 46.4 cm)
Internal dimensions (H x W x D)	9.6 × 13.0 × 13.2 in. (24.3 × 32.9 × 33.5 cm)
Rated power	1,800 W
Rated voltage	120 V
Volume (dry)	5.7 gallons (25 Liters)
Power cord length	31.5 in. (.8m), at least 23.6 in. (.6m) would expose outside
Certifications	UL-certified, cUL-certified
Temperature range	130 to 450°F

# ONE-YEAR LIMITED WARRANTY

## **Definitions:**

The Distributor\* of Insignia branded products warrants to you, the original purchaser of this new Insignia-branded product ("Product"), that the Product shall be free of defects in the original manufacturer of the material or workmanship for a period of one (1) year from the date of your purchase of the Product ("Warranty Period").

For this warranty to apply, your Product must be purchased in the United States or Canada from a Best Buy branded retail store or online at [www.bestbuy.com](http://www.bestbuy.com) or [www.bestbuy.ca](http://www.bestbuy.ca) and is packaged with this warranty statement.

## **How long does the coverage last?**

The Warranty Period lasts for 1 year (365 days) from the date you purchased the Product. Your purchase date is printed on the receipt you received with the Product.

## **What does this warranty cover?**

During the Warranty Period, if the original manufacture of the material or workmanship of the Product is determined to be defective by an authorized Insignia repair center or store personnel, Insignia will (at its sole option): (1) repair the Product with new or rebuilt parts; or (2) replace the Product at no charge with new or rebuilt comparable products or parts. Products and parts replaced under this warranty become the property of Insignia and are not returned to you. If service of Products or parts are required after the Warranty Period expires, you must pay all labor and parts charges. This warranty lasts as long as you own your Insignia Product during the Warranty Period. Warranty coverage terminates if you sell or otherwise transfer the Product.

## **How to obtain warranty service?**

If you purchased the Product at a Best Buy retail store location or from a Best Buy online website ([www.bestbuy.com](http://www.bestbuy.com) or [www.bestbuy.ca](http://www.bestbuy.ca)), please take your original receipt and the Product to any Best Buy store. Make sure that you place the Product in its original packaging or packaging that provides the same amount of protection as the original packaging.

To obtain warranty service, in the United States and Canada call 1-877-467-4289. Call agents may diagnose and correct the issue over the phone.

## **Where is the warranty valid?**

This warranty is valid only in the United States and Canada at Best Buy branded retail stores or websites to the original purchaser of the product in the country where the original purchase was made.

## **What does the warranty not cover?**

This warranty does not cover:

- Customer instruction/education
- Installation
- Set up adjustments
- Cosmetic damage
- Damage due to weather, lightning, and other acts of God, such as power surges
- Accidental damage
- Misuse
- Abuse
- Negligence
- Commercial purposes/use, including but not limited to use in a place of business or in communal areas of a multiple dwelling condominium or apartment complex, or otherwise used in a place of other than a private home.
- Modification of any part of the Product, including the antenna

- Display panel damaged by static (non-moving) images applied for lengthy periods (burn-in).
- Damage due to incorrect operation or maintenance
- Connection to an incorrect voltage or power supply
- Attempted repair by any person not authorized by Insignia to service the Product
- Products sold “as is” or “with all faults”
- Consumables, including but not limited to batteries (i.e. AA, AAA, C etc.)
- Products where the factory applied serial number has been altered or removed
- Loss or Theft of this product or any part of the product
- Display panels containing up to three (3) pixel failures (dots that are dark or incorrectly illuminated) grouped in an area smaller than one tenth (1/10) of the display size or up to five (5) pixel failures throughout the display. (Pixel based displays may contain a limited number of pixels that may not function normally.)
- Failures or Damage caused by any contact including but not limited to liquids, gels or pastes.

REPAIR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS YOUR EXCLUSIVE REMEDY FOR BREACH OF WARRANTY. INSIGNIA SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, INCLUDING, BUT NOT LIMITED TO, LOST DATA, LOSS OF USE OF YOUR PRODUCT, LOST BUSINESS OR LOST PROFITS. INSIGNIA PRODUCTS MAKES NO OTHER EXPRESS WARRANTIES WITH RESPECT TO THE PRODUCT, ALL EXPRESS AND IMPLIED WARRANTIES FOR THE PRODUCT, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE WARRANTY PERIOD SET FORTH ABOVE AND NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, WILL APPLY AFTER THE WARRANTY PERIOD. SOME STATES, PROVINCES AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE.

Contact Insignia:

**1-877-467-4289**

[www.insigniaproducts.com](http://www.insigniaproducts.com)

INSIGNIA is a trademark of Best Buy and its affiliated companies.

\*Distributed by Best Buy Purchasing, LLC

7601 Penn Ave South, Richfield, MN 55423 U.S.A.

©2021 Best Buy. All rights reserved.



INSIGNIA™

[www.insigniaproducts.com](http://www.insigniaproducts.com)

1-877-467-4289 (U.S. and Canada) or 01-800-926-3000 (Mexico)

INSIGNIA is a trademark of Best Buy and its affiliated companies.

Distributed by Best Buy Purchasing, LLC

7601 Penn Ave South, Richfield, MN 55423 U.S.A.

©2021 Best Buy. All rights reserved.

V6 ENGLISH  
21-0238