

INSIGNIA™

Metal Ceramic Heater

NS-HTMCSL6



Before using your new product, please read these instructions to prevent any damage.

Insignia Metal Ceramic Heater

Contents

- Introduction 2
- IMPORTANT INSTRUCTIONS 2
- Features 5
 - Package contents 5
 - Main features - Front 5
 - Control dials 6
 - Main features - Back 6
- Using your heater 7
- Cleaning and maintaining your heater 7
 - Safety features 7
- Troubleshooting 8
- Specifications 9
- ONE-YEAR LIMITED WARRANTY - INSIGNIA 11

Introduction

Congratulations on your purchase of a high-quality Insignia product. Your NS-HTMCSL6 represents the state of the art in portable heater design and is designed for reliable and trouble-free performance.

IMPORTANT INSTRUCTIONS

CAUTION

RISK OF ELECTRIC SHOCK

DO NOT OPEN



This symbol indicates that dangerous voltage constituting a risk of electric shock is present within your heater.



This symbol indicates that there are important operating and maintenance instructions in the literature accompanying your heater.

When using the heater, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- 1** Read all instructions before using this heater.
- 2** This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces.
- 3** Use handles when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 m) from the front of the heater and keep them away from the sides and rear.
- 4** Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
- 5** Always unplug heater when not in use.
- 6** Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Discard heater, or return to authorized service facility for examination and/or repair.
- 7** Do not use outdoors.
- 8** This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate heater where it may fall into a bathtub or other water container.
- 9** Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
- 10** To disconnect heater, turn controls to off, then remove plug from outlet.
- 11** Prior to cleaning or other maintenance, the appliance must be disconnected from the supply mains.
- 12** Connect to properly grounded outlets only.
- 13** Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- 14** To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- 15** A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.
- 16** Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- 17** Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).

- 18 This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 19 Children should be supervised to ensure that they do not play with the heater.
- 20 CAUTION—some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.
- 21 WARNING: In order to avoid overheating, do not cover the heater.
- 22 This heater draws up to 1500 W during operation. To prevent overloading a circuit, do not plug the heater into a circuit that already has other appliances working.
- 23 It is normal for the plug to feel warm to the touch, however, a loose fit between the wall outlet and plug may cause overheating and distortion of the plug. Contact a qualified electrician to replace loose or worn outlets.
- 24 The output of this heater may vary and its temperature may become intense enough to burn exposed skin. Use of this heater is not recommended for persons with reduced sensitivity to heat or an inability to react to avoid burns.
- 25 Don't leave the heater on unattended.
- 26 Do not spray pesticide or any other flammable spray around the heater. It could damage the heater.
- 27 Stop using the heater and unplug it immediately if any unusual smell or sounds come from the heater.
- 28 Do not cover the heater when in use or when not allowed to cool completely.

SAVE THESE INSTRUCTIONS



WARNING

Electric Shock Hazard

Failure to follow these instructions can result in electric shock, fire, or death.


Features

- PTC ceramic heating element - changes the power automatically based on ambient temperature
- Low and High power settings
- Fan with oscillating sweep to distribute heat quickly and evenly
- Double over-heating protection
- Tip-over safety protection
- Compact design with an easy-carry handle for portability


Package contents

- Metal ceramic heater
- *User Guide*


Main features - Front

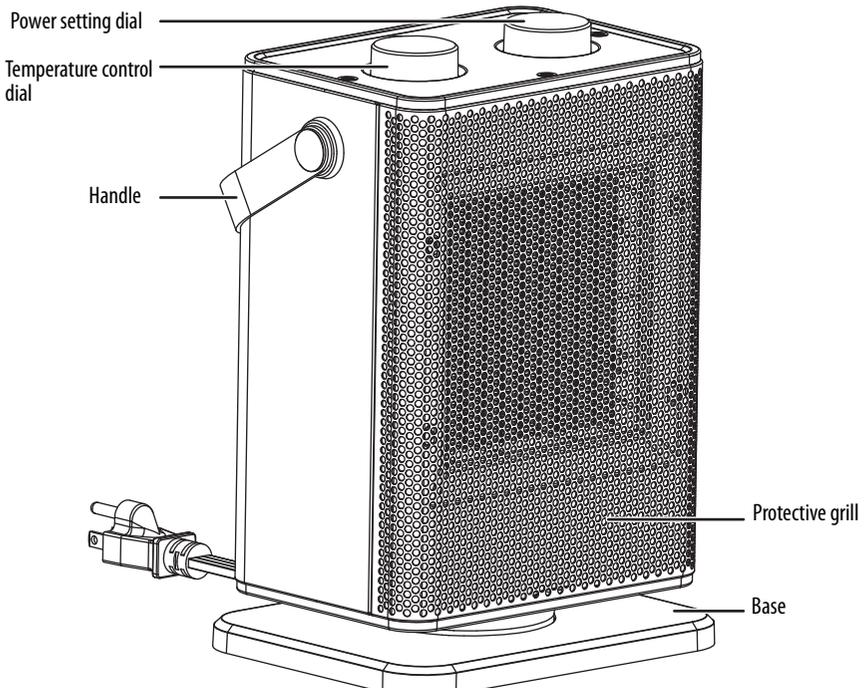

Control dials

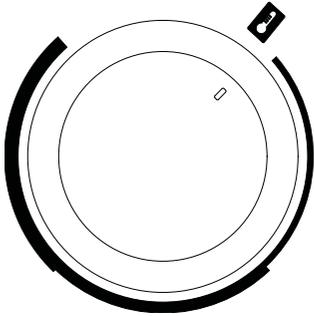


Temperature control dial

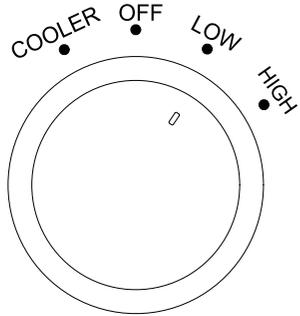

Power setting dial

Main features - Back

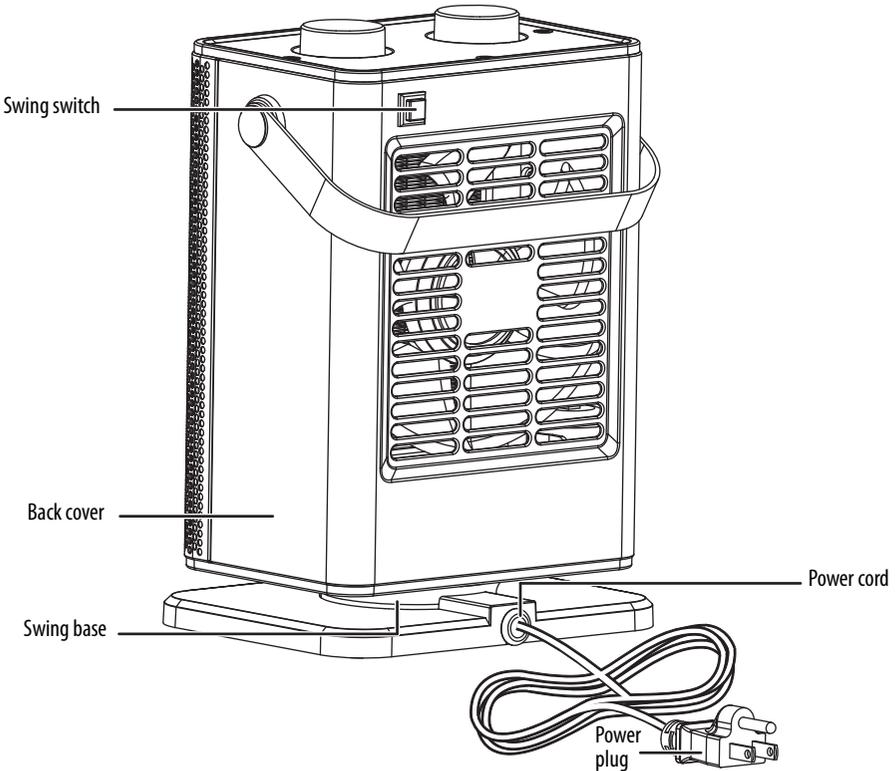

Using your heater

Caution

Never leave an operating heater unattended.

- 1 Make sure that neither the heater nor the power cord has been damaged in any way during transportation.
- 2 Place the heater on a firm, level surface, at least three feet (0.9 m) away from any wall or other objects such as furniture, curtains, plants, or combustible material.
- 3 Fully unwrap the power cord and plug it into a standard wall plug (120 VAC~60 Hz).
- 4 Rotate the power setting dial to one of the following settings:
 - HIGH : 1500 watts to quickly warm the room
 - LOW : 900 watts to slowly warm the room or maintain the temperature
 - COOLER: Circulates the air in the room. No heat.
- 5 Rotate the temperature control dial to the heat level you want. The heater and power indicator turn on.
When the chosen setting is reached, the heater and the power indicator turn off.
- 6 Press the swing switch to start the oscillating fan to circulate the heat.

Cleaning and maintaining your heater

- Always remove the plug from the wall socket and allow the heater to cool before cleaning.
- Wipe the heater with a soft, damp cloth. Use a mild detergent if necessary.
- Vacuum the grill with your vacuum's brush attachment every few weeks for optimal performance.
- If the heater will not be used for an extended period of time, store it in a dry place.

Safety features

The heater is equipped with an over-heat device, which causes the unit to stop operating in the event that the internal temperature exceeds the normal operating temperature.

If the heater shuts down:

- 1 Turn off and unplug the heater.
- 2 Wait for at least 10 minutes until the heater cools.

- 3 Plug the heater into the power outlet and then turn it on. The heater resumes its normal operation.

Note

This heater includes a safety tip-over protection feature which turns the heater off in case it is tipped over. If, at any time, the heater does tip over, put the heater back in the upright position.

Troubleshooting

Caution

Do not try to repair your heater yourself. Doing so invalidates the warranty.

Problem	Possible cause	Possible solution
Your heater shuts off unexpectedly or fails to operate	There is no power.	Make sure that the heater is plugged in and that the electrical outlet is working.
	The set temperature is lower than the current room temperature.	Set the desired temperature higher than the current temperature to restart the heater.
	Room temperature has reached the temperature set on the temperature control dial.	<ul style="list-style-type: none"> • This is normal. The heater restarts when room temperature is lower than the set temperature. • Adjust the temperature control dial setting if it's not set to your desired temperature.
	One of the safety protection devices was activated to prevent overheating.	<ol style="list-style-type: none"> 1. Place the heater in an upright position. 2. Check for any obstructions. If you find an obstruction, turn the heater off. 3. Unplug the heater and wait at least 10 minutes for it to cool down. 4. Carefully remove the obstruction. Plug the heater in and restart it as described in "Using your heater" on page 7. 5. If you still notice the same problem, remove the plug from the wall and have the heater checked by an authorized service person.
The room is not warm enough	The room is too large or a window is open.	<ul style="list-style-type: none"> • Turn on the main heat source for the room. • Use more portable heaters. • Close the window.
	The temperature is set too low.	<ul style="list-style-type: none"> • Increase the temperature setting.
	The power setting is too low.	<ul style="list-style-type: none"> • Select a higher power setting.

Specifications

Dimensions (WxDxH)	7.6 x 5.7 x 10.5 in. (194.0 x 145.0 x 266.0 mm)
Weight	5.3 lbs. (2.4 kg)
Power requirements	120 V~60 Hz
Noise level	≤ 50dB at 3 ft. (1 m)
Wattage	900 W and 1500 W

ONE-YEAR LIMITED WARRANTY - INSIGNIA

Definitions:

The Distributor* of Insignia branded products warrants to you, the original purchaser of this new Insignia-branded product ("Product"), that the Product shall be free of defects in the original manufacturer of the material or workmanship for a period of one (1) year from the date of your purchase of the Product ("Warranty Period").

For this warranty to apply, your Product must be purchased in the United States or Canada from a Best Buy branded retail store or online at www.bestbuy.com or www.bestbuy.ca and is packaged with this warranty statement.

How long does the coverage last?

The Warranty Period lasts for 1 year (365 days) from the date you purchased the Product. Your purchase date is printed on the receipt you received with the Product.

What does this warranty cover?

During the Warranty Period, if the original manufacture of the material or workmanship of the Product is determined to be defective by an authorized Insignia repair center or store personnel, Insignia will (at its sole option): (1) repair the Product with new or rebuilt parts; or (2) replace the Product at no charge with new or rebuilt comparable products or parts. Products and parts replaced under this warranty become the property of Insignia and are not returned to you. If service of Products or parts are required after the Warranty Period expires, you must pay all labor and parts charges. This warranty lasts as long as you own your Insignia Product during the Warranty Period. Warranty coverage terminates if you sell or otherwise transfer the Product.

How to obtain warranty service?

If you purchased the Product at a Best Buy retail store location, please take your original receipt and the Product to any Best Buy. Make sure that you place the Product in its original packaging or packaging that provides the same amount of protection as the original packaging. If you purchased the Product from a Best Buy online web site (www.bestbuy.com or www.bestbuy.ca), mail your original receipt and the Product to the address listed on the web site. Make sure that you put the Product in its original packaging or packaging that provides the same amount of protection as the original packaging.

To obtain warranty service, in the United States call 1-888-BESTBUY or Canada call 1-866-BESTBUY. Call agents may diagnose and correct the issue over the phone.

Where is the warranty valid?

This warranty is valid only in the United States and Canada at Best Buy branded retail stores or websites to the original purchaser of the product in the county where the original purchase was made.

What does the warranty not cover?

This warranty does not cover:

- Customer instruction/education
- Installation
- Set up adjustments
- Cosmetic damage
- Damage due to weather, lightning, and other acts of God, such as power surges
- Accidental damage
- Misuse
- Abuse
- Negligence
- Commercial purposes/use, including but not limited to use in a place of business or in communal areas of a multiple dwelling condominium or apartment complex, or otherwise used in a place of other than a private home.
- Modification of any part of the Product, including the antenna

- Display panel damaged by static (non-moving) images applied for lengthy periods (burn-in).
- Damage due to incorrect operation or maintenance
- Connection to an incorrect voltage or power supply
- Attempted repair by any person not authorized by Insignia to service the Product
- Products sold “as is” or “with all faults”
- Consumables, including but not limited to batteries (i.e. AA, AAA, C etc.)
- Products where the factory applied serial number has been altered or removed
- Loss or Theft of this product or any part of the product
- Display panels containing up to three (3) pixel failures (dots that are dark or incorrectly illuminated) grouped in an area smaller than one tenth (1/10) of the display size or up to five (5) pixel failures throughout the display. (Pixel based displays may contain a limited number of pixels that may not function normally.)
- Failures or Damage caused by any contact including but not limited to liquids, gels or pastes.

REPAIR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS YOUR EXCLUSIVE REMEDY FOR BREACH OF WARRANTY. INSIGNIA SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, INCLUDING, BUT NOT LIMITED TO, LOST DATA, LOSS OF USE OF YOUR PRODUCT, LOST BUSINESS OR LOST PROFITS. INSIGNIA PRODUCTS MAKES NO OTHER EXPRESS WARRANTIES WITH RESPECT TO THE PRODUCT, ALL EXPRESS AND IMPLIED WARRANTIES FOR THE PRODUCT, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE WARRANTY PERIOD SET FORTH ABOVE AND NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, WILL APPLY AFTER THE WARRANTY PERIOD. SOME STATES, PROVINCES AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE.

Contact Insignia:

For customer service please call 1-877-467-4289

www.insigniaproducts.com

INSIGNIA is a trademark of Best Buy and its affiliated companies.

Registered in some countries.

Distributed by Best Buy Purchasing, LLC

7601 Penn Ave South, Richfield, MN 55423 U.S.A.

©2015 Best Buy. All rights reserved.

Made in China

INSIGNIA™

www.insigniaproducts.com

1-877-467-4289 (U.S. and Canada) or 01-800-926-3000 (Mexico)

INSIGNIA is a trademark of Best Buy and its affiliated companies.

Registered in some countries.

Distributed by Best Buy Purchasing, LLC

7601 Penn Ave South, Richfield, MN 55423 U.S.A.

©2015 Best Buy. All rights reserved.

Made in China.

V2 ENGLISH
15-0333