

Congratulations on your purchase of one of the highest performing water filters on the market today. Insignia filters use a high-grade coconut carbon that has 50% more micro-pores than standard carbon. They also use fewer high-compression binders, giving you the best water filtration possible.

PACKAGE CONTENTS

- Refrigerator filter(s) (1 or 2 pack)
- *Quick Setup Guide*



*Actual product may vary slightly from what is pictured

GENERAL INSTALLATION GUIDELINES

- It is normal for black carbon fines (particles) to appear on the outside of your filter. This happens when the filter is jarred in shipping. It is safe, simply wipe it off.
- **The filter connectors are larger to prevent leaks. You might have to twist the filter hard to make sure the connection is secure.**

Before using your new product, please read these instructions to prevent any damage.

INSTALLING THE WATER FILTER

Carefully remove the plastic cap from the new filter before installation

- 1 YOU MUST SOAK your new filter in water for 15 minutes prior to installing it in your refrigerator to remove air from the carbon block.**
- 2 Twist the old filter a quarter-turn counter-clockwise.
- 3 Pull the filter straight out and discard.
- 4 Push the new filter into the refrigerator until it stops.
- 5 Twist the filter a quarter-turn clockwise.
- 6 Please make sure the indicator arrows on the new filter are lined up with the indicator arrow on the refrigerator after installation.
- 7 Run about two to three gallons of water through your refrigerator's water dispenser to remove air and loose carbon pieces. The water may be cloudy and sputter until the air is removed.
- 8 Reset your "change filter" indicator (if your refrigerator has one). See below.

RESETTING YOUR CHANGE FILTER INDICATOR

Note: These are the most common filter reset instructions. If the instructions don't work for your refrigerator brand, see the documentation that came with your refrigerator.

REFRIGERATOR BRAND	INSTRUCTIONS
Samsung	Press and hold the ICE TYPE and CHILD LOCK buttons for three seconds. The water filter indicator should turn green. Note: Only hold these buttons for three seconds. Holding these buttons for five seconds cancels the reset. If you cancel the reset, repeat the procedure.

TROUBLESHOOTING

PROBLEM	SOLUTION
My refrigerator is not dispensing water	<ul style="list-style-type: none">• Make sure that you soaked your filter in water for 15 minutes before installing.• Make sure that the filter is securely connected to the receiver. Do not use tools to tighten the filter in place.• Make sure that the water line to the refrigerator is turned on. The valve must be completely open for the refrigerator to receive water.• Make sure that the refrigerator door is closed or the dispenser will not work.
My water dispenser is dripping	<ul style="list-style-type: none">• A few drops are normal. If the water is dripping constantly, have a service technician check your refrigerator's water valve.
My water is cloudy or contains black carbon pieces	<ul style="list-style-type: none">• Cloudy water is caused by microscopic air bubbles. Run two to three gallons of water from your dispenser to clear the air bubbles out.• Black carbon pieces in the water are normal and appear with all carbon filters. Run two to three gallons of water through your dispenser to remove loose carbon pieces.
My new filter is making noises or sputtering	<ul style="list-style-type: none">• Make sure that you soaked your filter in water for 15 minutes before installing.• Noises and sputtering are caused by trapped air pockets. Run two to three gallons of water from your dispenser to push the air out.
My water tastes bad	<ul style="list-style-type: none">• If you do not use your water dispenser for more than four days, run two gallons of water through the dispenser before using it.• Make sure that you replace your filter every three to six months to prevent bacteria growth.

STORAGE AND MAINTENANCE

- Replace your filter every three to six months to prevent bacteria and fungus growth in your filter, supply lines, and storage tank.
- Stored filters do not expire. Keep your unused filters in a cool, dark, and dry place until you need them.
- If you do not use your water dispenser for more than four days, run two gallons of water before using it to prevent bad tasting water.

ONE-YEAR LIMITED WARRANTY

For complete warranty, visit www.insigniaproducts.com.

CONTACT INSIGNIA

1-877-467-4289 (U.S. and Canada) or 01-800-926-3000 (Mexico)
www.insigniaproducts.com

CERTIFICATIONS:



REPLACEMENT
ELEMENT

Tested and Certified by NSF International in Model EFF-60275 against NSF/ANSI Standard 42 for the reduction of chlorine, taste and odor.

INSIGNIA is a trademark of Best Buy and its affiliated companies.

Distributed by Best Buy Purchasing, LLC

©2018 Best Buy. All rights reserved.

Made in China