


Quickstart Guide




Power

On both the soundbar and the subwoofer, plug the power cord (included) into the DC input on the back of the unit and a standard wall outlet.

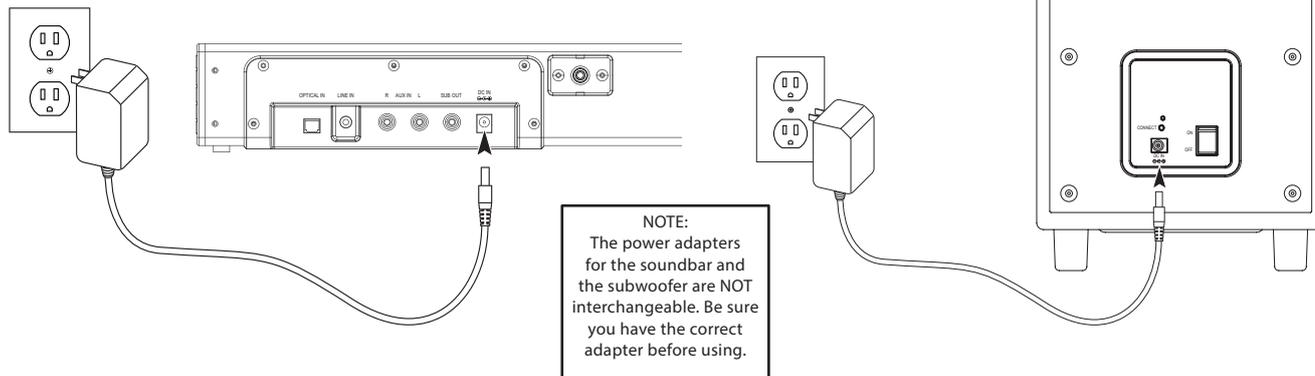

Remote Batteries

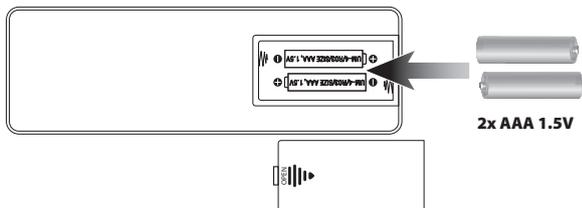

Connecting the Wireless Subwoofer


1. With the soundbar and subwoofer powered ON, press and hold the **Source/Connect button on the soundbar** until the **Power LED** begins flashing red.
2. Press the **Connect button on the subwoofer** until the **Connect LED** on the subwoofer begins flashing.
3. The units are connected when both LEDs turn solid. When audio is played through any source, the speaker will automatically use the connected subwoofer.

NOTE: To reduce unwanted vibration, try placing the subwoofer on a solid or padded surface, such as the floor or carpet.

Quickstart Guide




Connecting to a TV

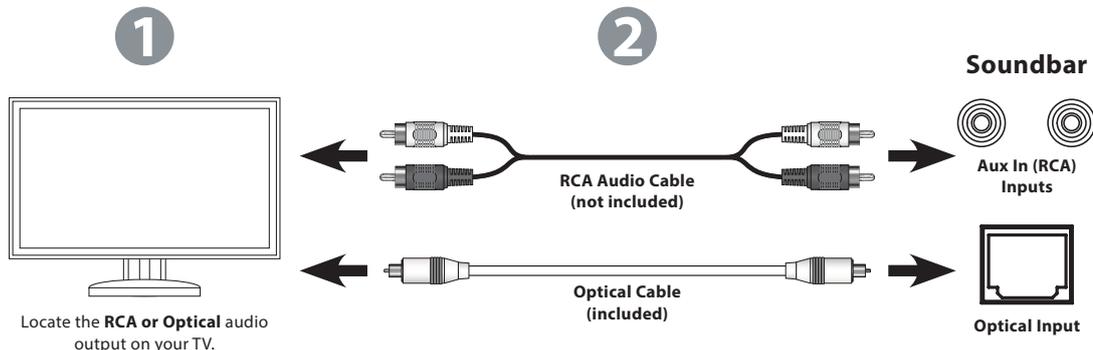

Set soundbar media source to match your chosen audio connection.

You can set the source using the remote or the controls on the soundbar.

Connecting to a DVD player, Gaming Console, or other device

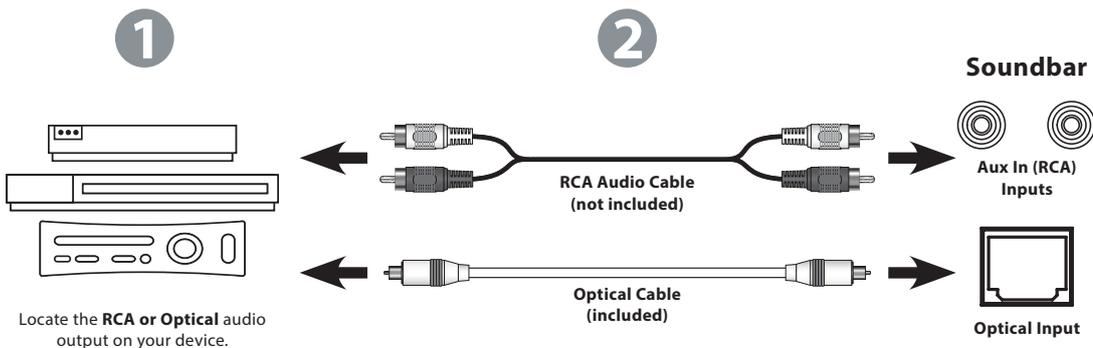

Set soundbar media source to match your chosen audio connection.

You can set the source using the remote or the controls on the soundbar.